

EPSON STYLUS™ PHOTO RX700 Series

Start Here


Unpacking

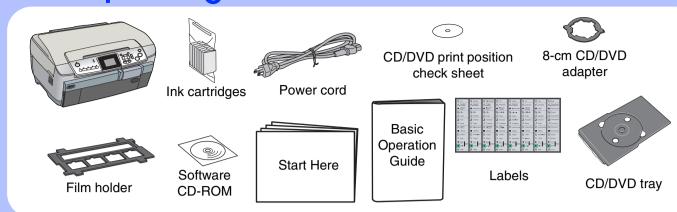


2. Removing All Tape and Applying the Label

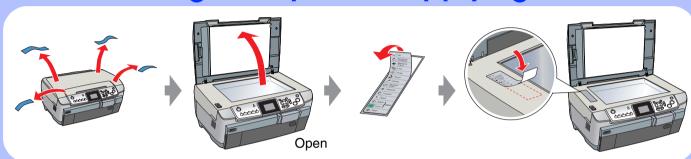


3. Unlocking and Turning On

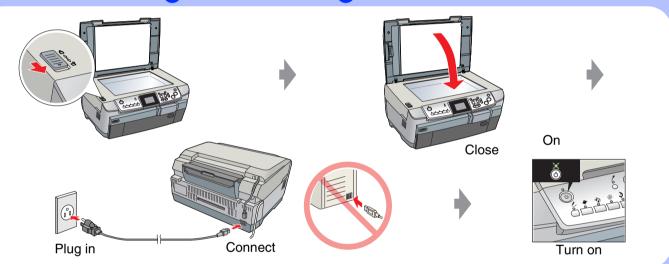

Selecting a Language

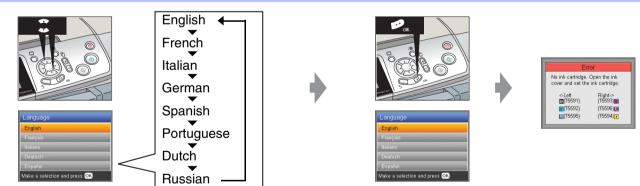


5. Installing Ink Cartridges

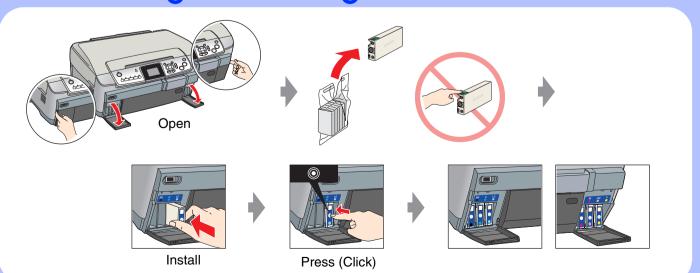


6. Ink Charging




7. Loading Paper

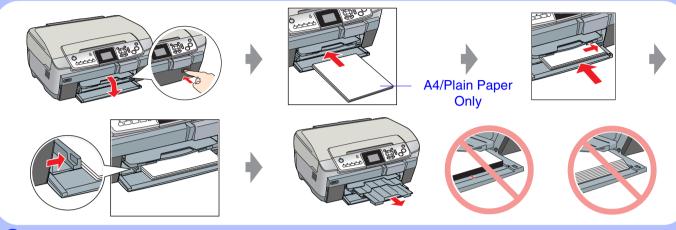



Making a Test Copy

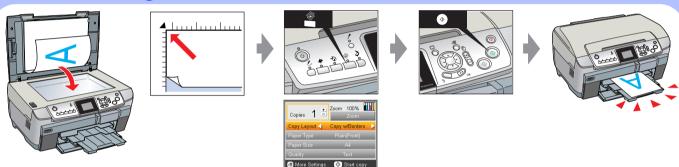

Connecting to a Computer and Installing the Software

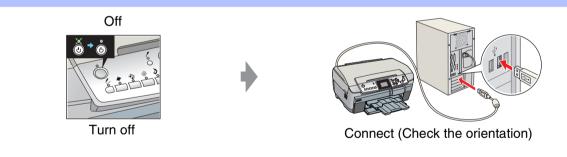

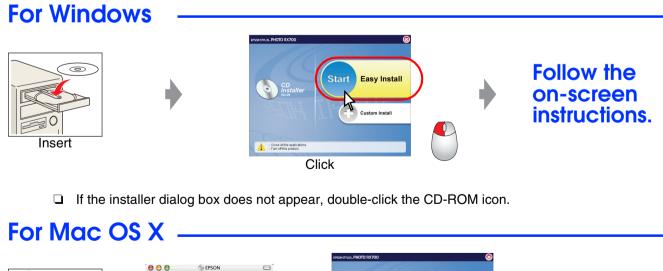

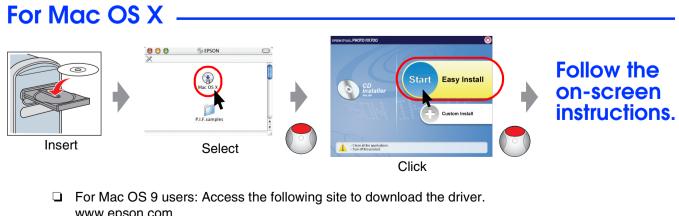

Troubleshooting



securely.



- Slide the transportation clamp to the unlocked
- Open the cartridge cover and make sure the ink cartridges were securely inserted until they clicked into place.
- Before loading the paper, remove the paper from the sheet feeder, Fan the stack of paper, then tap it on a flat surface to even the edges.



cable correctly. Make sure that the printer driver and scanner driver have been installed correctly.


Connect the USB

Features

Copying





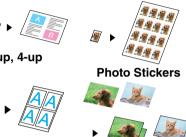


Copy Photo

For more information on using the copy functions, see the Basic Operation

Direct Printing and Scanning

Sheet

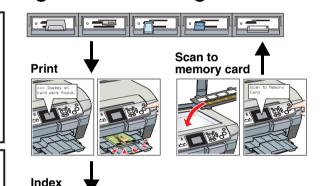

Print directly from a memory card. (See the Basic Operation Guide.)

The built-in memory card slot allows

you to do the following:

- ☐ Scan and save an image directly to a memory card. (See the Basic Operation Guide.)
- ☐ Transfer the data stored on a memory card to your computer.
- (See the online User's Guide.)








Scanning

2500

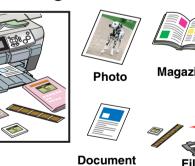





You can use EPSON File Manager to scan images quickly and easily, then attach them to e-mail, make copies, and so on.

Printing





postcards, and posters









Getting

Information

More

User's Guide

