 
 
 
 
 
 
 


 
 
 


 
 
 
 
 
# EPSON STYLUS PHOTO RX520 Icon list

## Error Message







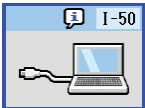
Display	Meaning
	<b>Ink end.</b> Change the empty ink cartridges.
	<b>The ink cartridge is not installed or not installed correctly.</b> Install the ink cartridge correctly.
	<b>Paper out.</b> No paper is loaded in the sheet feeder.
	<b>Paper is jammed.</b> Clear paper jam, then press the <b>Start</b> button.
	<b>Index sheet error.</b> Position the index sheet correctly.
	<b>Index sheet error.</b> Fill in the ovals correctly.

Display	Meaning
	<b>Index sheet error.</b> The index sheet does not match the photos on the memory card. Check the memory card.
	<b>Pre-scanning error.</b> Check photo placement.
	<b>Pre-scanning error.</b> Check film placement.
	<b>Not enough ink to perform head cleaning.</b> Replace with new ink cartridges.
	<b>Mechanical error.</b> Call for service.
	<b>Waste ink pad saturated.</b> Call for service.




## Warning Message

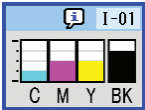Display	Meaning
	<b>Waste ink pad almost full.</b> Call for service.
	<b>No photo data on the memory card.</b> Check data on the memory card.
	<b>Memory card error.</b> Check the memory card.
	<b>Cannot recognize camera.</b> Check connection.
	<b>Paper thickness lever position error.</b> Set the paper thickness lever correctly.

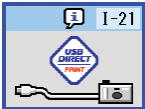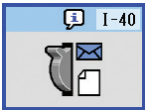




## Information

Display	Meaning
	<b>Ink level information.</b>
	<b>Insert a memory card.</b>
	<b>PictBridge camera connected.</b>
	<b>USB DIRECT camera connected.</b>
	<b>Paper thickness lever was changed.</b>
	
	<b>PC connected.</b>



## Common Icons



Display	Meaning
	<b>Ink low indicator.</b>
	<b>Ink low indicator (when printing).</b>
 Printing	<b>Copying/printing a color copy.</b>

## Copy Mode Icons









Display	Meaning
	<b>Copies.</b>
	<b>Color copying.</b>
	<b>B &amp; W copying.</b>
 Printing	<b>Copying a B &amp; W copy.</b>
	<b>Fit to page.</b>

## Memory Card Mode Icons





 



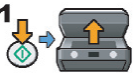
Display	Meaning
	<b>Print All.</b>
	<b>Print index sheet.</b>


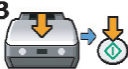
 




Display	Meaning
	<b>Print from index sheet.</b> Place the index sheet and then press the <b>Start</b> button.
 DPOF	<b>DPOF data found.</b>

## Film/Photo Mode Icons

Display	Meaning
	<b>Pre-scanning.</b>
	<b>Copy Photograph.</b>
	<b>Color negative film.</b>
	<b>Color positive film.</b>
	<b>Slides.</b>
	<b>Black and White negative film.</b>
	<b>Restoration on.</b>
	<b>Restoration is on for this photo.</b>

## Setup/Utilities Mode Icons

Display	Meaning	
 Check Ink Levels	<b>Check ink levels.</b> Press the <b>Start</b> button to enter this mode.	
 Clean Print Head	<b>Clean print head.</b> Press the <b>Start</b> button to enter this mode.	
 Check Ink Nozzles	<b>Check ink nozzles.</b> Press the <b>Start</b> button to enter this mode.	
	 Printing	<b>Printing nozzle check pattern.</b>
 Align Print Head	<b>Align print head.</b> Press the <b>Start</b> button to enter this mode.	
	 Printing	<b>Printing head alignment set pattern.</b>
		<b>Set head alignment.</b>
 Change Cartridges	<b>Change Cartridges.</b> Press the <b>Start</b> button to enter this mode.	
	<b>1</b> 	<b>Press the Start button, and then open the scanner unit.</b>

Display	Meaning	
	<b>2</b> 	<b>Change ink cartridges.</b>
	<b>3</b> 	<b>Close the scanner unit, and then press the Start button.</b>
 Auto Correct	<b>Auto correct.</b> Press the <b>Start</b> button to enter this mode.	
	OFF	<b>Off</b>
	P.I.M.	<b>Print Image Matching</b>
	PhotoEnhance	<b>PhotoEnhance</b>
	Exif	<b>Exif</b>
 Copy Quality	<b>Copy quality.</b> Press the <b>Start</b> button to enter this mode.	
		<b>Normal</b>
		<b>Draft</b>
		<b>Photo quality</b>