


EPSON STYLUS™ PHOTO R340 Series

Start Here




Printed in XXXXXX XX.XX-XX XXX


1. Unpacking

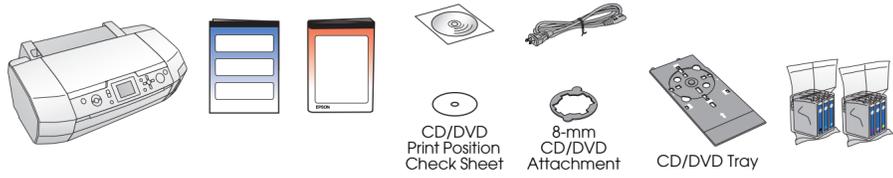



2. Removing Protective Tape

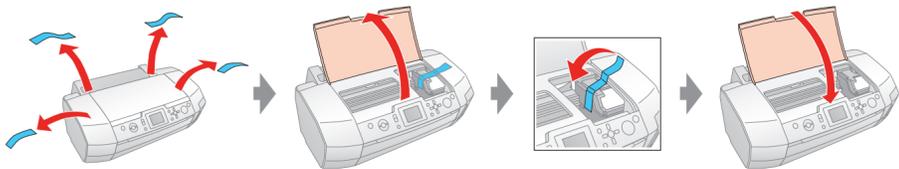


3. Plugging in the Printer

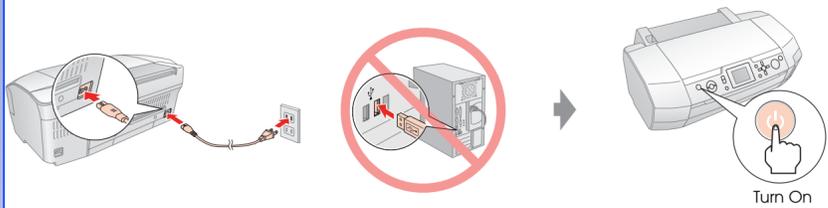

4. Installing the Ink Cartridge

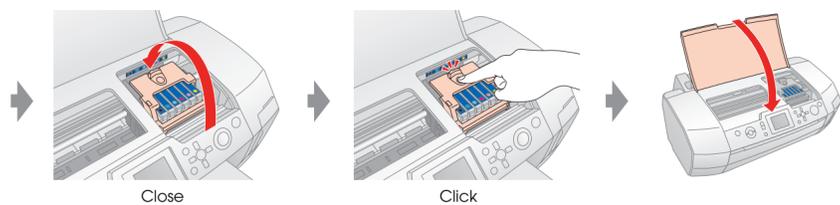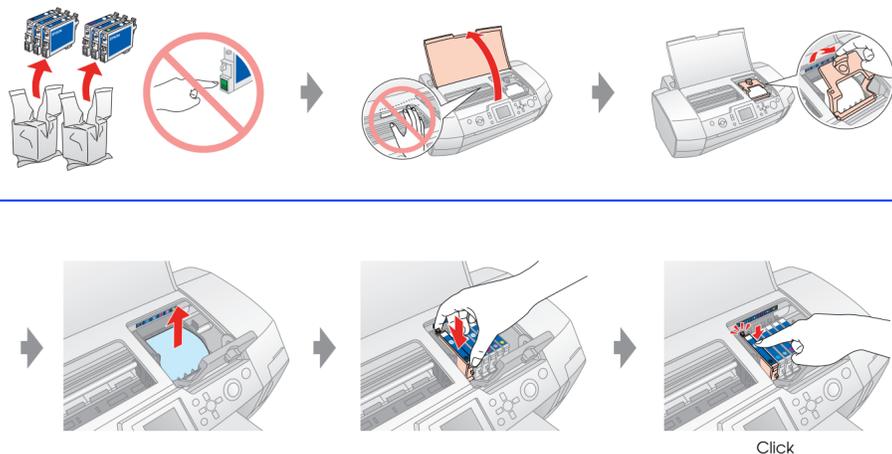


5. Ink Charging

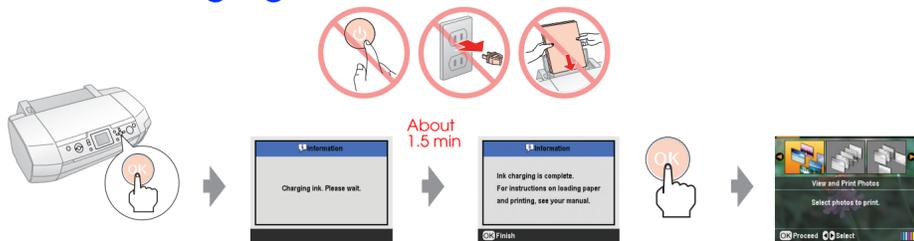

Note:
The ink cartridges first installed in your printer will partly be used to charge the print head. Subsequent ink cartridges will last for their full rated life.

6. Connecting to a Computer with a USB Cable

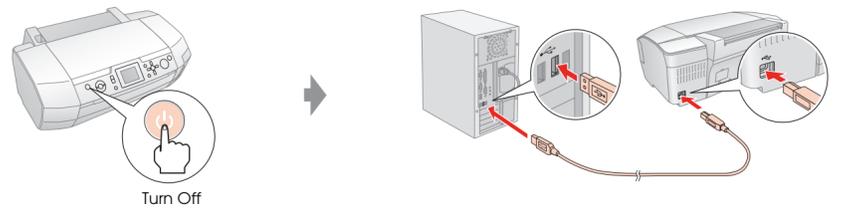

7. Installing the Software

For Windows




❑ No dialog box? → Double-click CD-ROM icon.

For Mac OS X



❑ For Mac OS 9, download the driver. → <http://www.epson.com>

8. Loading Paper

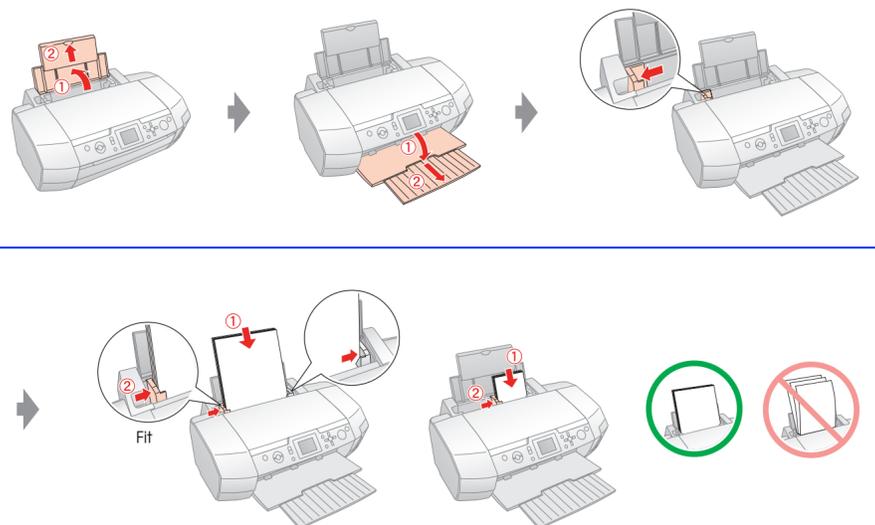

9. Getting More Information

