



EpsonNet 802.11b/g Wireless and 10/100 Base Tx Ext. Print Server

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

EPSON Scan is based in part on the work of the Independent JPEG Group.

Easy Install and EpsonNet Config incorporate compression code from the Info-ZIP group. There are no extra charges or costs due to the use of this code, and the original compression sources are freely available from <http://www.info-zip.org> on the Internet.

EPSON[®] and EPSON ESC/P[®] are registered trademarks and EPSON Stylus[™], EPSON AcuLaser[™], and EPSON ESC/P 2[™] are trademarks of Seiko Epson Corporation.

Speedo[™], Fontware[™], FaceLift[™], Swiss[™], and Dutch[™] are trademarks of Bitstream Inc.

AOSS[™] is a trademark of Buffalo, Inc.

CG Times[®] and CG Omega[®] are registered trademarks of Miles, Inc.

Univers[®] is a registered trademark of Linotype AG and/or its subsidiaries.

Antique Olive[™] is a trademark of Fonderie Olive.

Albertus[™] is a trademark of Monotype Corporation plc.

Coronet[™] is a trademark of Ludlow Industries (UK) Ltd.

Arial[®] and Times New Roman[®] are registered trademarks of Monotype Corporation plc.

User's Guide

Sun, Sun Microsystems, the Sun Logo, and the Java logo are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

HP® and HP LaserJet® are registered trademarks of Hewlett-Packard Company.

Microsoft®, Windows®, and Windows NT® are registered trademarks of Microsoft Corporation.

Macintosh®, AppleTalk®, EtherTalk®, Rendezvous® are registered trademarks of Apple Computer, inc.

Adobe™ and PostScript™ are trademarks of Adobe Systems Incorporated, which may be registered in certain jurisdictions.

This product Includes software developed by the University of California, Berkeley, and Its contributors.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

Copyright © 2005 Seiko Epson Corporation. All rights reserved. Introduction

For European Users

This device complies with EU directives, 89/336/EEC.

Contents

Introduction

About Your Network Interface	8
About This Guide	9
Important safety instructions	10
Operating Environment	11
Features of the Network Interface	14
Network Interface Operation	16
The IEEE 802.11g Communication Standard	20
Wireless Environment	21
Terms and Concepts	23

Chapter 1 Installing Components and Setting Up the Network Interface

Overview	27
Selecting a Printing Method	29
Printing from Windows	29
Printing from Macintosh	30
Features of the printing methods	30
Installing Components on Your Computer	33
About installing components on your computer	33
Windows XP	33
Windows Me/98/95	36
Windows 2000	39
Windows Server 2003	42
Windows NT 4.0	45
Macintosh	49
How to Set Up the Network Interface	50
Configuring the network interface for Windows	50
Setting for printing and scanning	62
Configuring the network interface for Macintosh	63
Installing the Printer Driver	77

About installing the printer driver	77
Windows XP.	77
Windows Me/98/95.	85
Windows 2000	89
Windows Server 2003	96
Windows NT 4.0	103
Macintosh	107
Setting the Scanner Driver	109

Chapter 2 About the Software

Overview	112
EpsonNet Config for Windows	114
About EpsonNet Config for Windows.	114
System Requirements	114
Installing EpsonNet Config for Windows	115
Accessing the EpsonNet Config for Windows User's Guide	117
EpsonNet Config for Macintosh.	118
About EpsonNet Config for Macintosh.	118
System Requirements	118
Installing EpsonNet Config for Macintosh	119
Accessing the EpsonNet Config for Macintosh User's Guide	120
EpsonNet Config with Web Browser	121
About EpsonNet Config with Web Browser	121
Configuring the Network Interface Using EpsonNet Config with Web Browser	122
Opening Screen	127
Title Frame	128
Menu Frame	128
Information Frame	130
Configuration - Network Screens	132
Wireless (Infrastructure).	132
Wireless (Ad Hoc).	136
Ethernet.	137
TCP/IP	138
AppleTalk.	140

MS Network	141
IPP	141
SNMP	142
Printing Control	143
Timeout	143
Time	144
Configuration - Optional Screens	145
Administrator	145
Reset	146
Password	146
EpsonNet Print.	147
About EpsonNet Print	147
System Requirements.	147
Installing EpsonNet Print	148
For Windows XP/2000/Server 2003/NT 4.0 Users	149
For Windows Me/98/95 Users	158
Configuring the Printer Port.	165
EpsonNet Internet Print	167
About EpsonNet Internet Print	167
System Requirements.	168
Installing EpsonNet Internet Print.	168
Setting Up Your Device Using EpsonNet Internet Print	169
Status Alert Window	178
EpsonNet WebManager	179
About EpsonNet WebManager	179
System Requirements.	179
EpsonNet WebManager Functions	181
EpsonNet WebManager Operating Structure	182
Installing EpsonNet WebManager.	184
Starting EpsonNet WebManager	184
Opening the Online Guide	186
EpsonNet SetupManager	187
About EpsonNet SetupManager	187
System Requirements.	188
Installing EpsonNet SetupManager.	190
Accessing the User's Guide for EpsonNet SetupManager	191

Chapter 3 **Tips for Administrator**

Settings for NetWare Users	192
Introduction to NetWare Settings	192
Using the NDPS Gateway	193
Settings for UNIX Users	194
Introduction to UNIX Settings	194
lpr filters	194
Setting Up Different UNIX Systems Using the lpr Command	195
Using the ftp Command	201
Tips	203
Instructions on Using DHCP	203
Setting an IP Address Using the arp/ping Command	204
Instructions on Using a Dial-Up Router	207
Function of Universal Plug and Play	208
Uninstalling Software	208

Chapter 4 **Problem Solver**

General Problems	210
Problems Specific to Your Network Environment	216
Windows Me/98/95 environment	216
Windows XP/2000/NT environment	217
Macintosh environment	219
NetWare environment	219
Initializing the Network Interface	220
Restrictions on EPSON Status Monitor 3	221
For the ink jet printer or all-in-one	221
For the laser printer	227

Chapter 5 **Specifications**

Network Interface Specification	229
Wireless Network Interface Specification	229
Electrical Specifications	230
Standards and Approvals	231

Reliability232
Environmental232
Regulatory Approvals for AC Adapter (A351H)233

Appendix A Supported Devices

Index

Introduction

About Your Network Interface

The EpsonNet Wireless 802.11b/g and 10/100 Base Tx Ext. Print Server is an external network interface that connect to the USB port of an Epson device (such as a printer or all-in-one). These network interfaces allow you to create a wireless or wired connection respectively, between the Epson device and a local area network.

When connected to a wireless network, a radio signal is transmitted over the network whenever you send a job to the device. Then the device prints or scans the file when the network interface receives the radio signal directly from a computer or from an access point.

This network interface is Wi-Fi certified for interoperability with other 802.11-compliant products when connected to wireless networks.

Because the network interface supports multiple protocols and automatically detects protocols on your network, you can print from Microsoft® Windows®, Apple® Macintosh®, UNIX®, and IBM® OS/2 applications.

Use Easy Install to easily configure the network interface for use on a TCP/IP network. If you are using Windows computer, you can also set up the computer for printing and scanning with the software.

Use EpsonNet Config, the configuration utility provided with your product, to quickly and easily configure the network interface to use a range of protocols such as TCP/IP, NetBEUI, AppleTalk®, IPP, and SNMP.

Note:

The EpsonNet Config utility configures the network interface to work only with protocols that exist on your network. This does not imply that you can use all of the above mentioned protocols on your wired or wireless network, or operating system. The protocols that the network interface can use may vary depending on the operating system and the network configuration.

About This Guide

This *User's Guide* contains information about using the network interface on a network. It includes how to set up the network interface, install the configuration software, and modify network settings of your device and computer.

For information about your device, see the manual shipped with the device.

Note:

- ❑ *This guide is written for network administrators, and many of the steps included here require detailed network knowledge and administrator rights.*
- ❑ *The term “network administrator” refers to the person responsible for maintaining the network. “Administrator” is synonymous with “Supervisor” in this guide.*
- ❑ *The term “network interface” refers to the EpsonNet Wireless 802.11b/g and 10/100 Base Tx Ext. Print Server in this guide.*
- ❑ *The term “device” refers to the printer or all-in-one that is supported by the network interface.*
- ❑ *Some screen shots in this guide may list a device name other than your device. This difference does not alter the instructions.*

Important safety instructions

Read all of these instructions and save them for later reference.

- ❑ *Do not install or uninstall the network interface with wet hands.*
- ❑ *Be careful not to drop or crush the network interface when installing.*
- ❑ *Keep the network interface away from humidity and dust.*
- ❑ *Do not allow children to handle the network interface.*
- ❑ *When installing or uninstalling the network interface, be sure to remove the USB cable, turn off your device, and then unplug the AC adapter to avoid electric shock.*
- ❑ *Avoid using the network interface if there is smoke, strange smell, or strange sound; otherwise this could cause fire or electric shock. Instead, immediately turn off the device, unplug the AC adapter, and then contact your Epson dealer. Do not repair it yourself because this is dangerous.*
- ❑ *Do not disassemble or modify the network interface unless specifically instructed in the guide. This could cause injury, electric shock, or fire.*
- ❑ *If you use this product in places where the use of electronic devices is limited, such as in airplanes or hospitals, follow all instructions in those places.*
- ❑ *Do not use this product inside medical facilities or near medical equipment. Radio waves from this product may adversely affect the operation of electrical medical equipment.*
- ❑ *Keep this product at least 22 cm away from cardiac pacemakers. Radio waves from this product may adversely affect the operation of cardiac pacemakers.*

- ❑ *Do not use this product near automatically controlled devices such as automatic doors or fire alarms. Radio waves from this product may adversely affect these devices, and could lead to accidents due to malfunction.*
- ❑ *Do not use aerosol products that contain flammable gases inside or around this product. Doing so may cause fire.*

Warnings, Cautions, and Notes



Warnings

must be followed carefully to avoid bodily injury.



Cautions

must be observed to avoid damage to your equipment.

Notes

contain important information and useful tips on the operation of this product.

Operating Environment

Printing environments

The network interface receives print jobs in the following environments.

Operating systems	Version	Protocol
Windows XP (Home, Professional)	-	TCP/IP (using LPR, Standard TCP/IP Port, or EpsonNet Print)
		IPP
Windows Me	-	TCP/IP (using EpsonNet Print)
		IPP
		NetBEUI

Operating systems	Version	Protocol
Windows 98/95	-	TCP/IP (using EpsonNet Print)
		IPP (using EpsonNet Internet Print)
		NetBEUI
Windows 2000 (Professional, Server)	-	TCP/IP (using LPR, Standard TCP/IP Port, or EpsonNet Print)
		IPP
		NetBEUI
Windows Server 2003	-	TCP/IP (using LPR, Standard TCP/IP Port, or EpsonNet Print)
		IPP
WindowsNT4.0with Service Pack 5 or higher	-	TCP/IP (using LPR or EpsonNet Print)
		IPP (using EpsonNet Internet Print)
		NetBEUI
Macintosh	Mac OS X 10.2.4 or later	AppleTalk TCP/IP Rendezvous
	Mac OS X 10.2 or later	AppleTalk TCP/IP
	Mac 9.1 or later	AppleTalk
NetWare	5.x/6.x	LPR (Using NDPS Gateway)
OS/2 (OS/2 Warp Connect, OS/2 Warp Server)	V3 V4	TCP/IP (lprportd) NetBEUI

Operating systems	Version	Protocol
UNIX	Sun OS 4.1.4 or later: SPARC	lpr, ftp
	SunSoft Solaris 2.4 or later: SPARC and x86 SCO UNIX 4.2 or later	
	SCO UnixWare 2.01 or later	
	HP/UX 9.05 or later	
	IBM AIX 3.2.5 or later and 4.1.3 or later	

Note:

- Only the Intel version of Windows NT is supported.*
- The multi-user environment of Mac OS 9 is not supported.*
- If you use the device in a dial-up router environment, you must set an IP address for the device. Make sure the IP address is suitable for the segment; incorrect IP address may generate unexpected dial-up.*
- See the manual shipped with your device for information on the supported operating system of the device.*

Scanning environments

The network interface supports EPSON Scan via TCP/IP and allows network scanning when it is connected to the all-in-one. The supported operating systems are Windows XP/Me/98/2000 and Mac OS X/9.

Network Storage environments

The network interface supports sharing memory via SMB when it is connected to the all-in-one. See your device's manual for details about the supported operating systems.

Features of the Network Interface

Features

- ❑ Supports the network storage function.
- ❑ Supports multiple protocols, such as TCP/IP, NetBEUI, AppleTalk, and IPP.
- ❑ Supports DHCP.
- ❑ Supports Automatic Private IP Addressing (APIPA) that assigns an IP address automatically to the network interface even if there is no DHCP server on your network.
- ❑ Supports the Dynamic DNS function.
- ❑ Supports Rendezvous on Mac OS X 2.4 or higher.
- ❑ Supports SNMP and MIB.
- ❑ Supports NTP (Network Time Protocol).

Features when using Wireless connection


- ❑ Meets the IEEE 802.11b/g (2.4 GHz) communication standard.
- ❑ Prints or scans via wireless network, and connects directly via a network interface.
- ❑ Supports both the ESS (Infrastructure) mode and the IBSS (Ad Hoc) mode.
- ❑ Supports the roaming function.
- ❑ Supports 64-bit/128-bit WEP Key and WPA2-PSK(TKIP, AES).
- ❑ Communicates with up to 13 or 14 channels.
- ❑ Communicates with any Wi-Fi certified products.
- ❑ Uses communication speeds at 11/5.5/2/1 Mbps for 802.11b, 54/48/36/24/18/12/9/6 Mbps for 802.11g, or automatically changes the speed according to the radio waves.

Features when using 10/100 Base EtherNet connection

- ❑ Supports 10/100 Base full/half duplex, 100 Base-TX full/half duplex, 10 Base-T full/half duplex.

Network Interface Operation

The status LEDs and status sheet provide you with important information about the operation and configuration of the network interface.

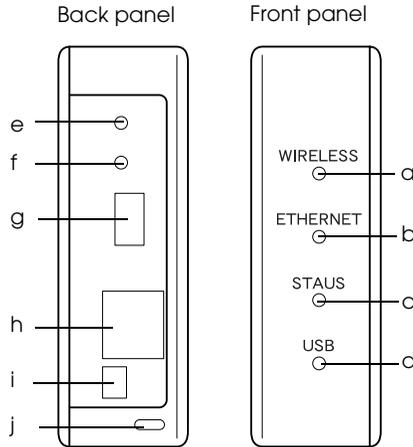

- a. WIRELESS light
- b. ETHERNET light
- c. STATUS light
- d. USB light
- e. SW1 switch
- f. SW2 switch
- g. USB downstream connector
- h. RJ-45 connector
- i. DC-IN connector
- j. Security lock

a./b./c./d. Status LEDs

The network interface has four lights (WIRELESS, ETHERNET, STATUS, and USB), which indicate the current operating status of the network interface when you first turn on the device, during normal operation, and when errors occur. The WIRELESS and ETHERNET lights are green. The STATUS and USB lights have three colors (red, green, and orange).

The status LEDs indicate the network interface status, as follows:

Network interface status	WIRELESS	ETHERNET	STATUS	USB
Initializing	Off	Off	Off	Green flashing
Wireless communication is available.	On	Off	Off	Green
Ethernet communication is available.	Off	On	Off	Green
No communication is available.	-	-	Red	-
Ready (100M link or 54M link)	-	-	Green	-
Ready (10M link or less than 48M link)	-	-	Orange	-
Printer communication is not available.	-	-	-	Red
Printer communication is available.	-	-	-	Green

Network interface status	WIRELESS	ETHERNET	STATUS	USB
Firmware update mode	-	-	-	Red and green lights flashing alternately
Error status	-	-	-	Red flashing
AOSS is available	On	Off	Orange flashing	Orange flashing
AOSS is not available	On	Off	Red flashing	Red flashing

Note:

A hyphen indicates any one of the following statuses: On/Off/Flashing.

e. SW1 switch

The first time you use the network interface after installing or reinstalling it, plug the power cord of the network interface into a wall outlet while holding down the SW1 switch for about twenty seconds to initialize the network interface.

Before you start configuring the network interface, be sure to press and hold down the SW1 switch on the network interface to print a status sheet. A status sheet provides important information about the network interface, such as MAC address, SSID, device settings, and the device’s current status. Press the SW1 switch once to print a simple status sheet, or twice to print a full status sheet. You cannot print a status sheet when the STATUS light is red.

Note:

If the device does not print a status sheet, make sure the device is online and no print jobs are being processed, then wait a minute. If it still does not print a status sheet, turn the device off, and then turn it back on again. The status sheet can be printed one minute after the device finishes warming up.



Caution:

After turning off the device wait until the WIRELESS light and ETHERNET light go out before turning it back on; otherwise the network interface may not work correctly.

f. SW2 switch

Press the SW2 switch once to enter the AOSS mode. For details, see the documentation provided with your access point.

Note:

You can use this switch only when the access point you use is compatible with AOSS.

g. USB downstream connector

This connector is used to connect a USB cable to the device to enable communication with the device.

h. RJ-45 connector

This connector is used to connect an Ethernet cable to the network. You can use this cable for both 10 Base-T and 100 Base-TX.



Caution:

You must use a Category 5 shielded twisted-pair cable to connect the network interface to prevent malfunction.

i. DC-IN connector

This is an external power supply connector for the AC adapter shipped with the network interface. Plug or unplug the power cord of the network interface from a wall outlet to turn the network interface on or off.

j. Security lock

You can pass a commercially available theft-prevention cable through the security lock hole to secure the network interface to a table or pillar. This network interface is compatible with the Microsaver Security System manufactured by Kensington.

The IEEE 802.11g Communication Standard

The network interface supports the IEEE 802.11b/g communication standard. It is compatible with other IEEE 802.11b/g compliant products.

An IEEE 802.11b/g WLAN (wireless local area network) operates within the 2.4 GHz ISM band. It divides the 2.4 GHz into 13 or 14 channels using Direct-Sequence Spread Spectrum (DSSS), and uses Carrier Sense Multiple Access with Collision Avoidance (CSMA/CA) to avoid packet collision. Both CSMA/CA with ACK and CSMA/CA with RTS/CTS are supported.

Wi-Fi certification




This wireless network interface is Wi-Fi certified by the Wi-Fi Alliance (WFA). The WFA certification ensures full product interoperability with other Wi-Fi certified products. For more information on other Wi-Fi certified products, go to <http://www.wi-fi.org>.

Wireless Environment

Operating modes

You can configure the network interface for the Infrastructure mode or the Ad Hoc mode.


In the **Infrastructure mode**, both wireless and wired computers can communicate through an access point to send data to the network interface.

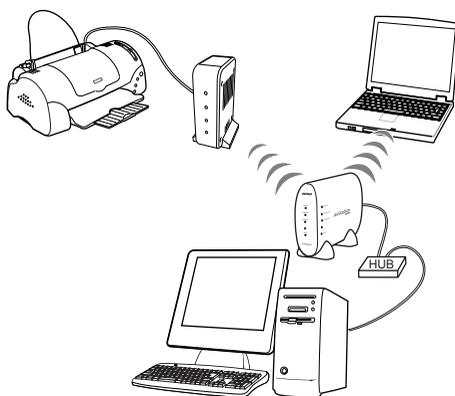

Note:

Some access points or routers support only the TCP/IP protocol. If you use this product with a protocol other than TCP/IP, make sure the protocols are supported by the access point or router.

In the **Ad Hoc mode**, a network interface and computers wirelessly communicate directly with each other, without using an access point.

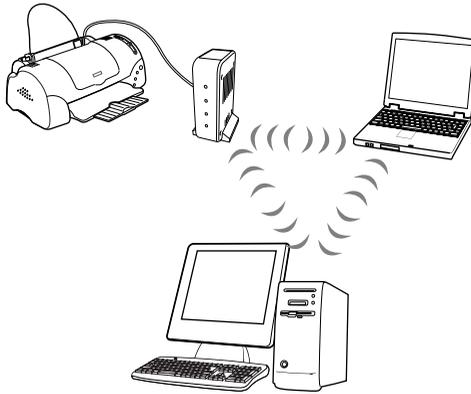

Security

WEP (Wired Equivalent Privacy) is a security protocol for wireless network. Data is encrypted using the WEP Key providing the security of your wireless network. You must set the same WEP Key to the network interface and the access point.

The network interface supports a 64-bit or 128-bit encryption key, and you can use either hexadecimal or ASCII characters.

WPA-PSK (TKIP) is a Wi-Fi security with a strong encryption algorithm as well as user authentication. It provides a high security that user data remains protected and that only authorized users may access the network.

WPA2-PSK (AES) is an encryption format that combines AES (Advanced Encryption Standard), the newer format of WPA-PSK (TKIP) and has the stronger encryption.

Note:

The wireless transmission speed is reduced when WEP, WPA-PSK(TKIP), or WPA2-PSK (AES) is enabled because time is required for encryption and decryption.

SSID is a unique identifier to specify a wireless LAN. All devices and access points connected to a specific wireless LAN must use the same SSID to communicate with devices on the wireless LAN. If the wireless LAN access point and the PC do not share the same SSID they will not be able to communicate with each other.

Radio signal range

The data transfer rate of the network interface depends on the environment where the network interface is located.

Note:

The wireless transmission speed decreases as the distance between the network interface and the computer or the access point increases.

Terms and Concepts

2.4 GHz range -- the frequency spectrum assigned by the organization such as IC to WLAN systems.

Access point -- a device which connects wireless LAN terminals to a network, relaying signals between wireless devices or serving as a bridge between wired and wireless networks.

Ad Hoc mode -- a mode that allows wireless LAN terminals to communicate directly with each other without using a wireless LAN access point.

AES -- Advanced Encryption Standard, an encryption standard for WPA that is replacing WEP. AES provides stronger encryption than TKIP.

AOSS (AirStation One-touch Secure System) -- a technology that makes configuring connection and security settings during wireless network setup easier. For details on AOSS, see the Buffalo, Inc. website at <http://www.buffalotech.com/>.



Configuration -- a prepared set of conditions for proper operation of a device. Configuring the network interface is to prepare it to work with protocols available on a network.

DHCP -- a dynamic host configuration protocol. It is a protocol that assigns dynamic IP addresses to devices on a network.

EAP -- Extensible Authentication Protocol, authentication protocol used in the IEEE 802.1x standard.

EtherTalk -- the communication protocol of AppleTalk governing Ethernet transmissions.

ftp -- a TCP/IP application protocol for file transfer.

IEEE 802.1x -- an IEEE standard that provides authentication for wired/wireless networks. IEEE 802.11b and IEEE 802.11g are standards for the 2.4 GHz range of WLANs.

Infrastructure mode -- a wireless network mode. It allows both wireless and wired computers to send print jobs to the device through an access point.

lpd -- a TCP/IP remote printing protocol application.

Open system authentication -- a wireless access point authentication protocol under which the wireless node submits an authentication request to the wireless access point which accepts the connection, essentially without authenticating it.

Pre-Shared key -- the basic key used to generate the encryption keys used by WPA-PSK (TKIP/AES).

Print queue -- a location where a print job is stored as a file, until the network interface sends the job to the assigned device.

Protocol -- a rule that controls how data or information is exchanged through a network. Computers and software cannot communicate with each other using different protocols.

Roaming -- the ability to move the wireless station from one access point to another without losing the connection or interrupting the service.

Security type -- allows selections of a security level in infrastructure mode appropriate to the user environment.

SSID (or ESSID) -- Service Set Identifier (or Extended Service Set Identifier), a unique identifier to specify a WLAN. All devices and access points connected to a specific WLAN must use the same SSID. An ESSID is used for the network that extends among multiple access points.

TCP/IP -- Transmission Control Protocol/Internet Protocol, a layer of protocols that provides communications between nodes on a network.

TKIP -- Temporal Key Integrity Protocol, an encryption standard for WPA that is replacing WEP. A distinctive feature is that the shared key is changed at specified intervals.

WEP -- Wired Equivalent Privacy, a security protocol for WLANs defined in the IEEE 802.11b/g standard. WEP provides security by encrypting data over radio waves.

WEP key -- a shared key algorithm for encrypting data
Transmitted packets are encrypted with a shared key called the WEP key. Decryption of encrypted packets by the recipient requires the same WEP key that was used for transmission.

WLAN -- Wireless Local Area Network.

WPA-PSK(TKIP/AES) -- a Wi-Fi encryption protocol with a stronger encryption algorithm than WEP. The devices and access points have to share the Pre-Shared key. The protocol that uses AES is called WPA2-PSK and has the stronger encryption than TKIP.

Installing Components and Setting Up the Network Interface

Overview

This section describes the general procedure on how to set up the network interface for use on a network and how to set up printing and scanning via a wireless network.

1. Check the network interface operation.

Check the functions and operations of the network interface, such as status LEDs, SW1 switch/SW2 switch, USB downstream connector, DC-IN connector, RJ45 connector and security lock. See the *Setup Guide* for details.

2. Select a printing method.

Select a printing method appropriate for your network environment and operating system. If you are not sure, see “Printing from Windows” on page 29 or “Printing from Macintosh” on page 30 for details.

3. Install EpsonNet Print. (For Windows Me/98 only)

Note:

You have to install EpsonNet Print for the Windows Me/98 environment. See “Installing EpsonNet Print” on page 148 for more information about the installation procedure. Be sure to restart the computer after installing the software.

4. Install the necessary components on the computer.

Make sure the necessary components (such as TCP/IP, NetBEUI, etc.) are installed on the computer, and network settings (such as the IP address, subnet mask, etc.) of the computer are set. See “About installing components on your computer” on page 33 for details.

5. If necessary, install the printer driver.

Install the printer driver from the CD-ROM that comes with the device. See “About installing the printer driver” on page 77 for details.

6. Insert the Software CD-ROM in the CD-ROM drive to configure the network interface

Connect the network interface to the network. For Windows users, see “Configuring the network interface for Windows” on page 50 for details. For Macintosh users, see “Configuring the network interface for Macintosh” on page 63 for details.

7. If necessary, modify the network settings of the network interface using EpsonNet Config.

Modify the network interface for TCP/IP, AppleTalk, MS Network, etc. using EpsonNet Config. For Windows users, see “About EpsonNet Config for Windows” on page 114 for details. For Macintosh users, see “About EpsonNet Config for Macintosh” on page 118.

Selecting a Printing Method

This section contains information to help you select a printing method.

Printing from Windows

Check if there is a Windows XP/2000/Server 2003/NT print server on your network, and then use the suggestions below.

Note:

Only the recommended printing methods are introduced here. See “Features of the printing methods” on page 30 for information on additional methods.

If no Windows XP/2000/Server 2003/NT print server exists

Use a printing method appropriate to your operating system:

- ❑ For Windows Me/98/95
We recommend TCP/IP printing via EpsonNet Print. See “About EpsonNet Print” on page 147.
- ❑ For Windows XP/2000/Server 2003/NT
We recommend TCP/IP printing via LPR. See “Windows XP” on page 77, “Windows 2000” on page 89, “Windows Server 2003” on page 96, or “Windows NT 4.0” on page 103.

If a Windows XP/2000/Server 2003/NT print server exists

On the server, set the printer to connect with LPR and turn it into a shared printer. Your clients can then print to this shared printer.

Printing from Macintosh

Mac OS X 10.2 or later

- Rendezvous (Mac OS X 10.2.4 or later)
- EPSON TCP/IP
- EPSON AppleTalk

Mac OS 9

- AppleTalk

Features of the printing methods

This section describes features of the printing methods available for you to choose.

LPR (TCP/IP) printing

Advantages

- No computer as a network interface is required.
- No special utility for Windows XP/2000/Server 2003/NT is required.
- You can see the device status using EPSON Status Monitor 2 or 3.
- For Windows XP/2000/Server 2003/NT, you can create a print log using the event viewer.
- You can print via a router.

Disadvantages

- You need to set up TCP/IP.
- For Windows Me/98/95, EpsonNet Print must be installed on all computers to use for printing.

Internet printing

Advantages

- No proxy server (computer) is required.
- You can print to the device over the Internet.

Disadvantages

- EPSON Status Monitor 2 or 3 cannot be used.
- TCP/IP and DNS settings are required.
- For Windows Me/98/95, EpsonNet Internet Print must be installed on all computers used for printing.
- For Windows XP/2000/Server 2003, you cannot share the Internet printer.

Microsoft Network Shared printing

Advantages

- Easy to set up (IP address is not required if NetBEUI protocol is installed).
- No computer as a network interface is required.
- No special print utility is required.

Disadvantages

- ❑ EPSON Status Monitor 2 or 3 cannot be used.
- ❑ You cannot print via a router.
- ❑ It takes a longer time to start printing because more time is required to search for a network device.

Installing Components on Your Computer

About installing components on your computer

Before configuring the network interface and printing or scanning from the computer, you need to install the necessary components (such as TCP/IP, NetBEUI, etc.) and assign an IP address and subnet mask for your computer. For printing, you have to select the protocol depending on the printing method you want to use. For scanning, you have to install TCP/IP protocol. See the section appropriate for your operating system.

“Windows XP” on page 33

“Windows Me/98/95” on page 36

“Windows 2000” on page 39

“Windows Server 2003” on page 42

“Windows NT 4.0” on page 45

“Macintosh” on page 49

Note:


For Windows Server 2003 or Windows NT4.0, you cannot scan via network interface.

Windows XP

For Windows XP, use the following procedure to install the necessary components.

Note:

- ❑ *The Windows XP CD-ROM may be required during the installation.*
 - ❑ *When using TCP/IP or IPP for printing, you need to set the IP address, the subnet mask, and the default gateway of the computer.*
1. Click Start, highlight Control Panel, and then click Network and Internet Connections. Select Network Connections.
 2. Under LAN or High-Speed Internet, click the Local Area Connection icon.
 3. Under Network Tasks, click Change settings of this connection.
 4. Check if the following necessary components are in the list. If they are already installed, see “How to Set Up the Network Interface” on page 50.

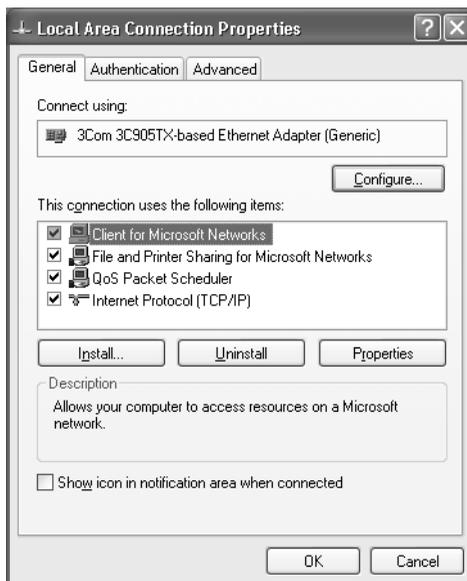

The following table lists the components required for configuring the network interface with EpsonNet Config. For information on EpsonNet Config, see “About EpsonNet Config for Windows” on page 114.

EpsonNet Config's setting screens	Necessary components
TCP/IP, AppleTalk, IPP, SNMP (IP trap)	Internet Protocol (TCP/IP)
MS Network	Internet Protocol (TCP/IP)

The following table lists the components required for network printing.

Printing method	Necessary components
LPR or Internet printing	Internet Protocol (TCP/IP)
Microsoft Network Shared printing	Internet Protocol (TCP/IP) Client for Microsoft Networks
Printing via NetWare server	Latest Novell Client downloaded from the Novell Web site

- If the necessary components are not in the list, click Install to install them, as described below.

For LPR or Internet printing:

Internet Protocol (TCP/IP) is installed by default. You cannot add or delete it.

For Microsoft Network Shared printing:

Select Client and then click Add. Select Client for Microsoft Networks and then click OK.

For printing via NetWare server:

Download the latest Novell Client from the Novell Web site and install it on the computer. See the Novell Web site for detailed information.

6. **For LPR, Internet, or Microsoft Network Shared printing:**
Double-click Internet Protocol (TCP/IP) on the Local Area Connection Properties dialog box to open the Internet Protocols (TCP/IP) Properties dialog box. Set the IP address, the subnet mask, etc. and then click OK.
7. Restart the computer.

The necessary components are now installed.


Windows Me/98/95

For Windows Me/98/95, use the following procedure to install the necessary components.

Note:

- The Windows Me/98/95 CD-ROM may be required during the installation.*
 - When using TCP/IP or IPP for printing, you need to set the IP address, the subnet mask, and the default gateway of the computer.*
1. Click Start, point to Settings, and then select Control Panel.

2. Double-click the Network icon. Check if the following necessary components are in the list of installed network components on the Configuration menu. If they are already installed, see “How to Set Up the Network Interface” on page 50.

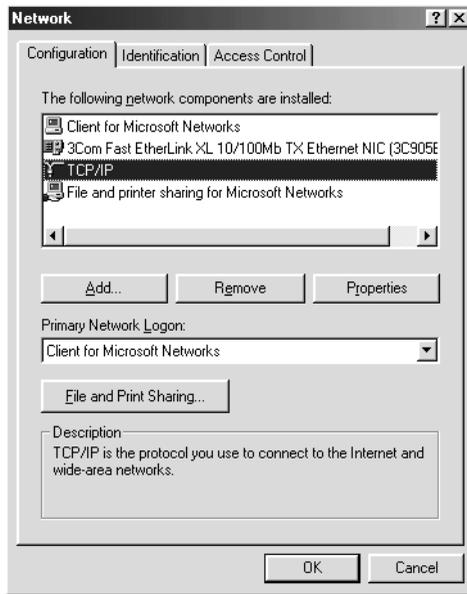

The following table lists the components required for configuring the network interface with EpsonNet Config. For information on EpsonNet Config, see “About EpsonNet Config for Windows” on page 114.

EpsonNet Config's setting screens	Necessary components
TCP/IP, AppleTalk, IPP, SNMP (IP trap)	TCP/IP
MS Network	NetBEUI or TCP/IP

The following table lists the components required for network printing.

Printing method	Necessary components
LPR or Internet printing	TCP/IP
Microsoft Network Shared printing	TCP/IP or NetBEUI Client for Microsoft Networks
Printing via NetWare server	Latest Novell Client downloaded from the Novell Web site

3. If the necessary components are not in the list, click Add to install them, as described below.

For LPR or Internet printing:

Select Protocol and then click Add. Select Microsoft from the Manufacturers list and TCP/IP from the Network Protocols list. Then click OK.

For Microsoft Network Shared printing:

To use TCP/IP, see the description described earlier to install TCP/IP.

To use NetBEUI, select Protocol and then click Add. Select Microsoft from the Manufacturers list and NetBEUI from the Network Protocols list. Then click OK.

Select Client and then click Add. Select Microsoft from the Manufacturers list and Client for Microsoft Networks from the Network Clients list. Then click OK.

For printing via NetWare server:

Download the latest Novell Client from the Novell Web site and install it on the computer. See the Novell Web site for detailed information.

4. **For LPR, Internet, Microsoft Network Shared printing:**
Double-click TCP/IP on the Configuration menu to open the TCP/IP Properties dialog box. Set the IP address, the subnet mask, etc. and then click OK.

5. Restart the computer.

The necessary components are now installed.


Windows 2000

For Windows 2000, use the following procedure to install the necessary components.

Note:

- ❑ *The Windows 2000 CD-ROM may be required during the installation.*
 - ❑ *When using TCP/IP or IPP for printing, you need to set the IP address, the subnet mask, and the default gateway of the computer.*
1. Click Start, point to Settings, and then select Network and Dial-up Connections. The Network and Dial-up Connections screen appears.
 2. Right-click the desired network connection and then select Properties.

3. Check if the following necessary components are in the list. If they are already installed, see “How to Set Up the Network Interface” on page 50.

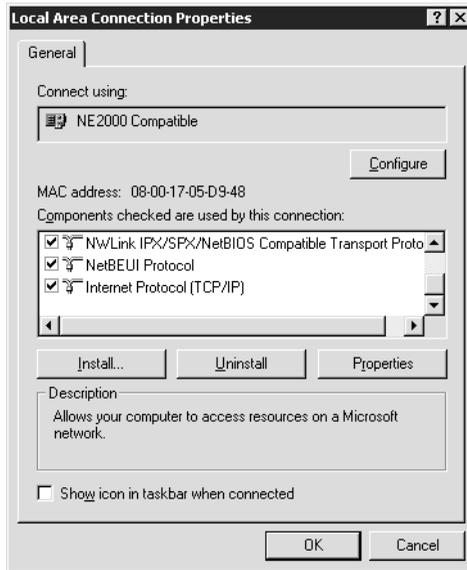

The following table lists the components required for configuring the network interface with EpsonNet Config. For information on EpsonNet Config, see “About EpsonNet Config for Windows” on page 114.

EpsonNet Config's setting screens	Necessary components
TCP/IP, AppleTalk, IPP, SNMP (IP trap)	Internet Protocol (TCP/IP)
MS Network	NetBEUI or Internet Protocol (TCP/IP)

The following table lists the components required for network printing.

Printing method	Necessary components
LPR or Internet printing	Internet Protocol (TCP/IP)
Microsoft Network Shared printing	Internet Protocol (TCP/IP) or NetBEUI Client for Microsoft Networks
Printing via NetWare server	Latest Novell Client downloaded from the Novell Web site

4. If the necessary components are not in the list, click Install to install them, as described below.

For LPR or Internet printing:

Select Protocol and then click Add. In the Select Network Protocol dialog box, select Internet Protocol (TCP/IP) and then click OK.

For Microsoft Network Shared printing:

To use Internet Protocol, see the description described earlier to install Internet Protocol (TCP/IP).

To use NetBEUI, select Protocol and then click Add. Select NetBEUI Protocol and then click OK.

Select Client and then click Add. Select Client for Microsoft Networks and then click OK.

For printing via NetWare server:

Download the latest Novell Client from the Novell Web site and install it on the computer. See the Novell Web site for detailed information.

5. **For LPR, Internet, or Microsoft Network Shared printing:** Double-click Internet Protocol (TCP/IP) on the Configuration menu to open the TCP/IP Properties dialog box. Set the IP address, the subnet mask, etc. and then click OK.

6. Restart the computer.

The necessary components are now installed.


Windows Server 2003

For Windows Server 2003, use the following procedure to install the necessary components.

Note:

- The Windows Server 2003 CD-ROM may be required during the installation.*
 - When using TCP/IP or IPP for printing, you need to set the IP address, the subnet mask, and the default gateway of the computer.*
1. Click Start, point to Control Panel, and then select Network Connections. Click Local Area Connections.
 2. Click the Properties button.

3. Check if the following necessary components are in the list. If they are already installed, see “How to Set Up the Network Interface” on page 50.

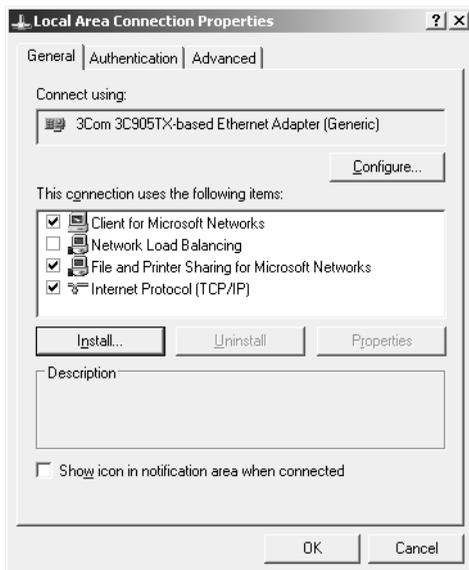

The following table lists the components required for configuring the network interface with EpsonNet Config. For information on EpsonNet Config, see “About EpsonNet Config for Windows” on page 114.

EpsonNet Config's setting screens	Necessary components
TCP/IP, AppleTalk, IPP, SNMP (IP trap)	Internet Protocol (TCP/IP)
MS Network	Internet Protocol (TCP/IP)

The following table lists the components required for network printing.

Printing method	Necessary components
LPR or Internet printing	Internet Protocol (TCP/IP)
Microsoft Network Shared printing	Internet Protocol (TCP/IP) Client for Microsoft Networks
Printing via NetWare server	Latest Novell Client downloaded from the Novell Web site

4. If the necessary components are not in the list, click Install to install them, as described below.

For LPR or Internet printing:

Internet Protocol (TCP/IP) is installed by default. You cannot add or delete it.

For Microsoft Network Shared printing:

Select Client and then click Add. Select Client for Microsoft Networks and then click OK.

For printing via NetWare server:

Download the latest Novell Client from the Novell Web site and install it on the computer. See the Novell Web site for detailed information.

5. **For LPR, Internet, or Microsoft Network Shared printing:** Double-click Internet Protocol (TCP/IP) in the Local Area Connection Properties dialog box to open the Internet Protocols (TCP/IP) Properties dialog box. Set the IP address, the subnet mask, etc. and then click OK.
6. Restart the computer.

The necessary components are now installed.


Windows NT 4.0

For Windows NT 4.0, use the following procedure to install the necessary components.

Note:

- The Windows NT 4.0 CD-ROM may be required during the installation.*
 - When using TCP/IP or IPP for printing, you need to set the IP address, the subnet mask, and the default gateway of the computer.*
1. Click Start, point to Settings, and then select Control Panel.
 2. Double-click the Network icon in the Control Panel, and then select the Protocols tab from the Network dialog box.

3. Check if the following necessary components are in the list. If they are already installed, see “How to Set Up the Network Interface” on page 50.

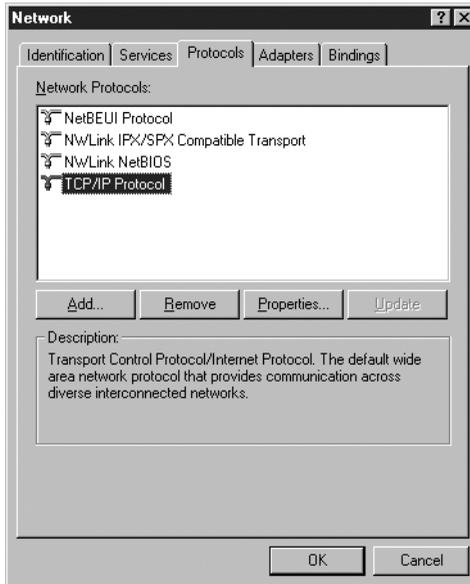

The following table lists the components required for configuring the network interface with EpsonNet Config. For information on EpsonNet Config, see “About EpsonNet Config for Windows” on page 114.

EpsonNet Config's setting screens	Necessary components
TCP/IP, AppleTalk, IPP, SNMP (IP trap)	TCP/IP
MS Network	NetBEUI or TCP/IP

The following table lists the components required for network printing.

Printing method	Necessary components
LPR or Internet printing	Protocols menu: TCP/IP Services menu: Microsoft TCP/IP Printing
Microsoft Network Shared printing	Protocols menu: TCP/IP or NetBEUI Services menu: Workstation
Printing via NetWare server	Latest Novell Client downloaded from the Novell Web site

4. If the necessary components are not in the list, click Add to install them, as described below.

For LPR or Internet printing:

Select the Protocols tab and then click Add. Select TCP/IP Protocol from the list and then click OK. Set the IP address, the subnet mask, etc. and then click OK.

Select the Services tab and then click Add. Select Microsoft TCP/IP Printing from the list and then click OK.


For Microsoft Network Shared printing:

To use TCP/IP, see the description described earlier to install TCP/IP.

To use NetBEUI, select the Protocols tab and then click Add. Select NetBEUI Protocol from the list and then click OK. Select the Services tab and then click Add. Select Workstation from the list and then click OK.

For printing via NetWare server:

Download the latest Novell Client from the Novell Web site and install it on the computer. See the Novell Web site for detailed information.

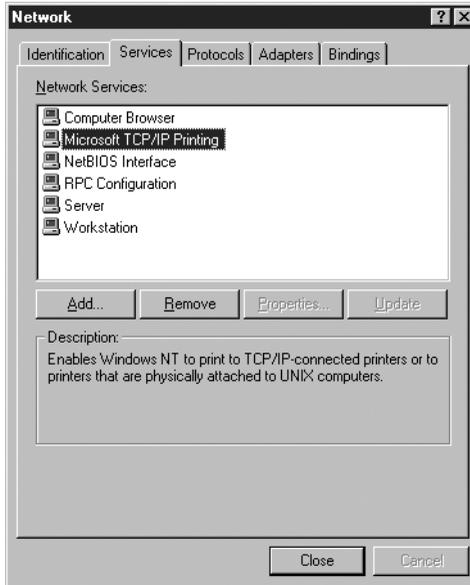

5. Restart the computer.

The necessary components are now installed.

Macintosh

To assign an IP address, subnet mask, etc. to your Macintosh, follow the steps below.

Note:

To print using the AppleTalk protocol and configure the network interface with EpsonNet Config, select Built-in Ethernet on the AppleTalk Control Panel. Then configure the network interface with EpsonNet Config. For information on EpsonNet Config, see "About EpsonNet Config for Macintosh" on page 118.

Mac OS X

1. From the Apple menu, select System Preferences.
2. Open the Network control panel. Click the TCP/IP tab.
3. Select Built-in Ethernet from the Show pull down menu.
4. Assign an IP address and other settings if necessary.
5. Click the Apply Now button to save any changes.

Mac OS 9

1. From the Apple menu, select Control Panel, and then TCP/IP.
2. Set Connect via to Ethernet.
3. Assign an IP address and other settings if necessary.
4. Close the dialog box to save any changes.

How to Set Up the Network Interface

Configuring the network interface for Windows

Follow the steps below to connect the network interface to the network.

Note:


- Make sure that the device driver is installed on your computer before following the steps below. See the manual shipped with your device for instructions on how to install the printer driver.*
 - You have to install EpsonNet Print for the Windows Me/98 environment beforehand. See "Installing EpsonNet Print" on page 148 for more information about the installation procedure. Be sure to restart the computer after installing the software.*
 - Depending on the settings of the network interface, some dialog boxes in the following steps may not be displayed.*
1. Insert the Software CD-ROM into the CD-ROM drive.

If the Installer dialog box does not appear automatically, double-click EPSetup.exe on the CD-ROM.

2. Click Next on the CD Installer screen.



3. Read the license agreement, and then click Agree.

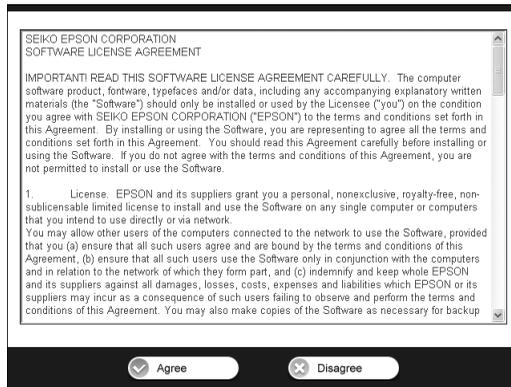


4. Select Easy Install: Start.



5. Select Network Interface Setting, and then click Next.

Note:


You can display the online help for the settings for each screen by pressing the Information button.

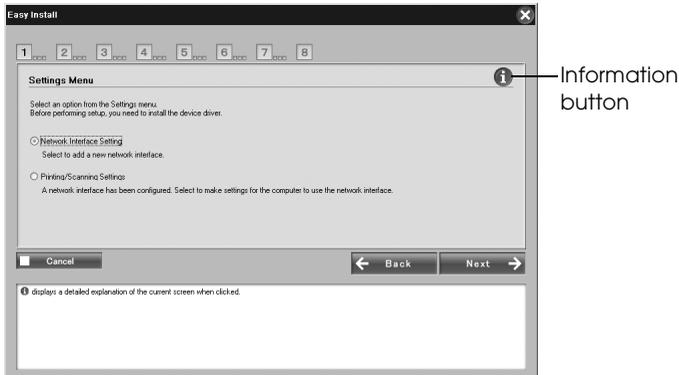

Note:

If you have already configured the network interface and want to set up the computer for printing and scanning, click Printing/Scanning Settings and go to step 8.


6. Select the setting method for the computer and network interface and then click Next.

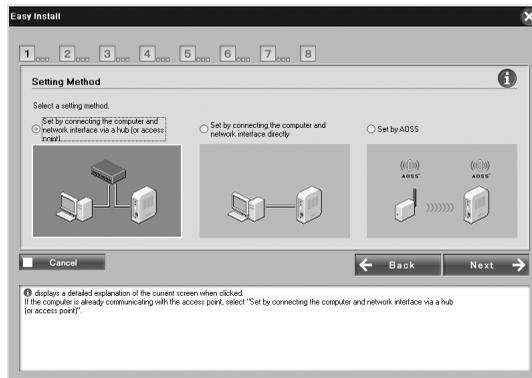

Note:

You can select Set by AOSS only when you use an access point manufactured by Buffalo, Inc. that supports AOSS.

7. Follow the instructions on the screen to connect the cable to the network interface and then to turn it on.

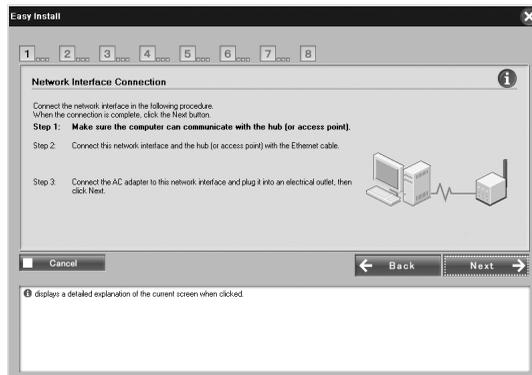

Note for Windows XP Service Pack 2 users:

If the following screen appears, click the Unblock button; otherwise the device is not listed on the screen of Easy Install.




8. Select the target device on which the network interface is installed, and then click Next.




Note:

- ❑ If you want to search for the target device again, click the  button.
- ❑ Changing Sorting Method will change the sorting method for devices displayed on screen.
- ❑ If you selected Printing/Scanning Settings in step 5, go to “Setting for printing and scanning” on page 62 after this step.


- Click Next to configure the wireless settings.
If you do not want to configure the wireless settings, click Skip and go to step 12.

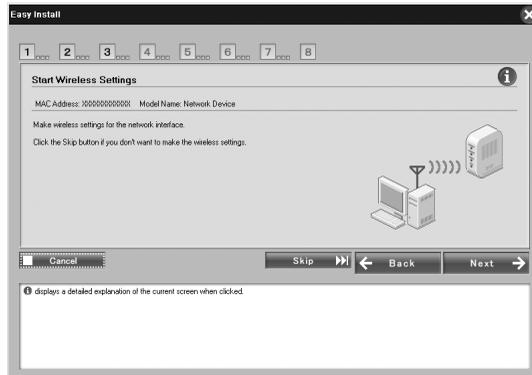


- Select SSID from the drop-down list, and then click Next.

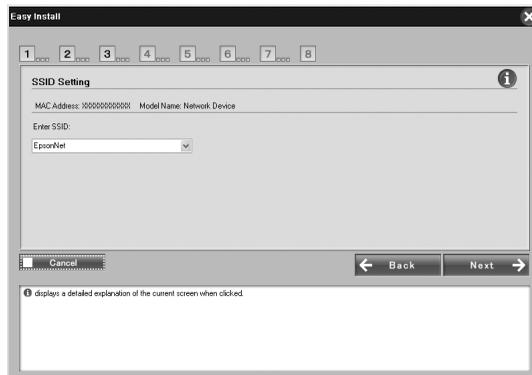


11. Select the security mode, and then click Next.

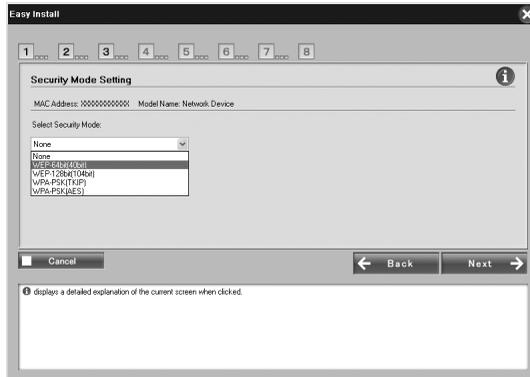


When you select WEP-64 bit (40 bit) or WEP-128 bit (104 bit), the WEP Key Settings screen appears. Enter the WEP Keys settings, and then click Next.

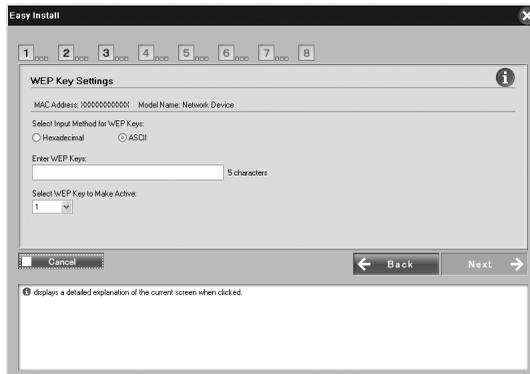


When you select WPA-PSK (TKIP) or WPA-PSK (AES), the WPA Configuration screen appears. Enter the password twice, and then click Next.

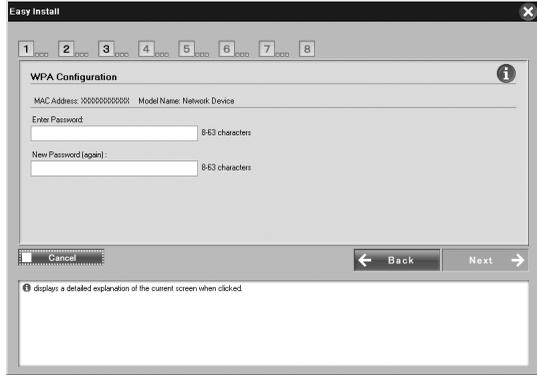


12. Click Next to set an IP address.
If you do not want to set an IP address, click Skip and go to step 14.

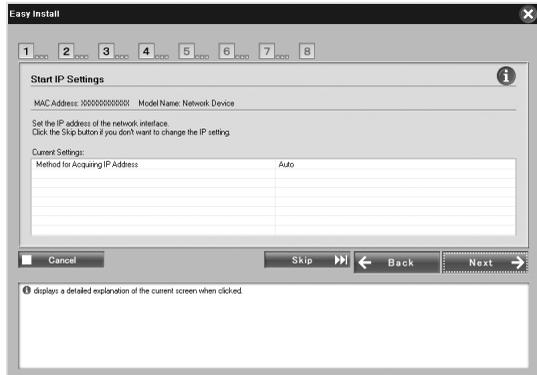


13. Select Auto or Manual to assign the IP address to the network interface.

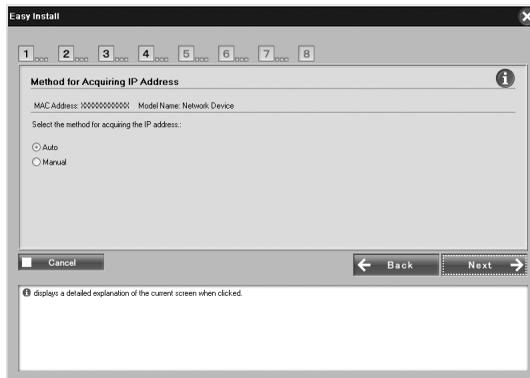

When you select Manual, you must enter the IP address, subnet mask, and default gateway. And then click Next.

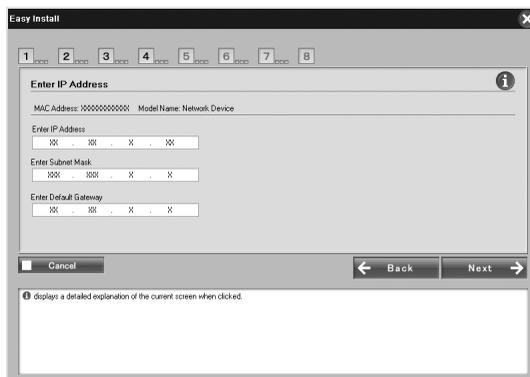


14. Select the access right of the memory slots in the printer or all-in-one, and then click Next.

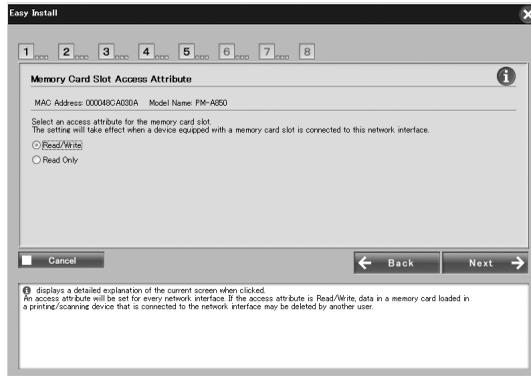

Note:

If the connected printer or all-in-one does not have memory slots, this screen is not displayed.


15. Confirm the settings you selected in the previous dialog box, and then click Next.

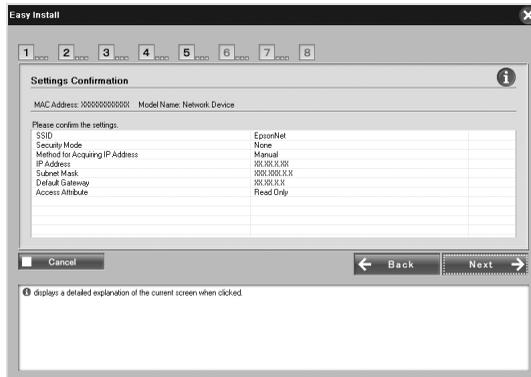

Note:

When the password screen appears, input the login password for the computer.


16. When the setting transmission is completed, select the network interface connection.

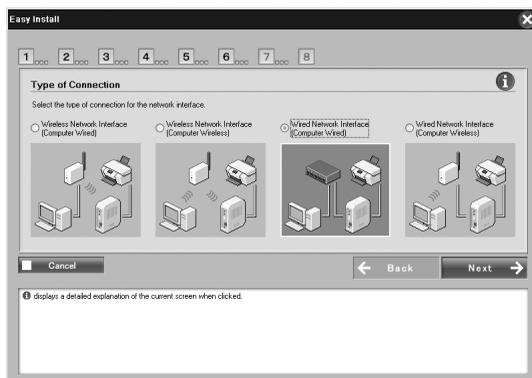

17. Follow the instructions on the screen to connect the cable to the printer or all-in-one and then to turn it on.



18. If the installation is complete, the Complete Setting network I/F screen appears. Click Skip to finish the installation. If you want to set up the computer for printing and scanning, click Next and go to “Setting for printing and scanning” on page 62.

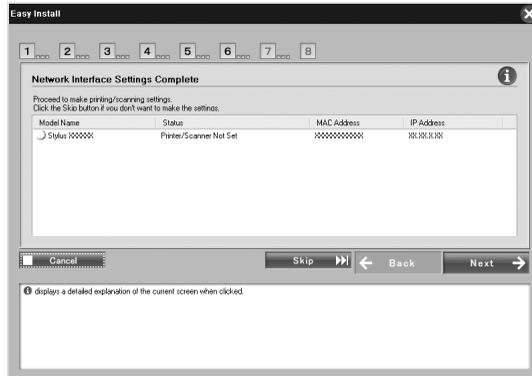

If the installation fails, an error message will be displayed. If an error message appears, read the content of the message and try again.


Note:

If your printer or all-in-one connected to this network interface has a memory card slot, unplug the network interface's AC adapter from the electrical outlet after completing setup, and then plug it back in to enable the Access Attribute setting for the memory card slot.


Setting for printing and scanning

You can set up the computer for printing and scanning. The procedures below appear automatically after the network interface is configured.


1. Enter the printer name and select the Set as default printer check box if necessary, and then click Next.

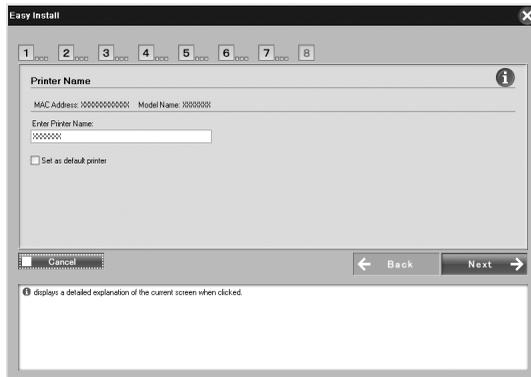

2. Follow the instructions on the screen to install the necessary applications, and then click Next.

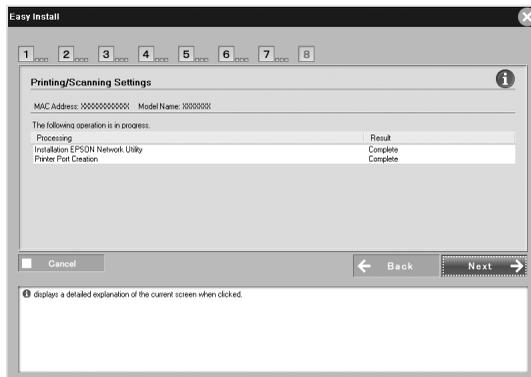

3. If you want to print the test page, click **Yes**, otherwise select **NO**, and then click **Next**.

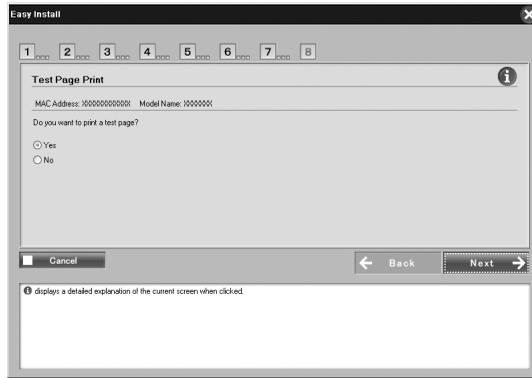

4. Click **Next** to complete the configuration.

Note:

- ❑ *If the installation fails, an error message will be displayed. If an error message appears, read the content of the message and try again.*
- ❑ *If the error message indicating the port is invalid appears in the test print, restart the computer after the settings are complete and print the test page from the printer's property's window.*

Configuring the network interface for Macintosh

Follow the steps below to connect the network interface to the network.

Note:

This section explains the instructions for Mac OS X. The instructions are almost the same for Mac OS 9.

1. Insert the Software CD-ROM into the CD-ROM drive.

If the Installer dialog box does not appear automatically, double-click the EPSON CD-ROM icon on the desktop.


2. Double-click the appropriate OS icon in the EPSON folder.



3. Click Next on the CD Installer screen.



4. Read the license agreement, and then click Agree.

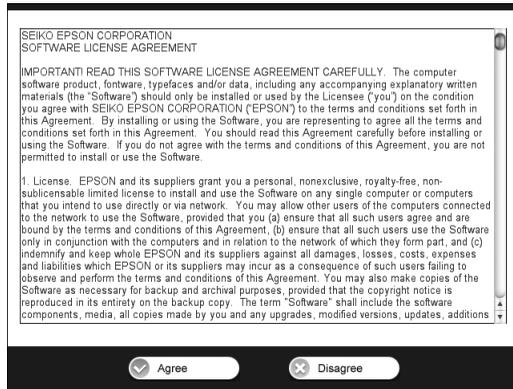

5. Select Easy Install: Start, and then click Next.




6. Select Network Interface Settings, and then click Next.

Note:

You can display the online help for the settings for each screen by pressing the Information button.




7. Select the setting method for the computer and network interface, and then click Next.

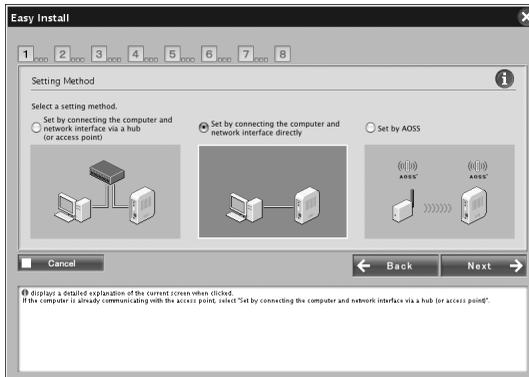

Note:

You can select Set by AOSS only when you use an access point manufactured by Buffalo, Inc. that supports AOSS.

- Follow the instructions on the screen to connect the cable to the network interface and then to turn it on.

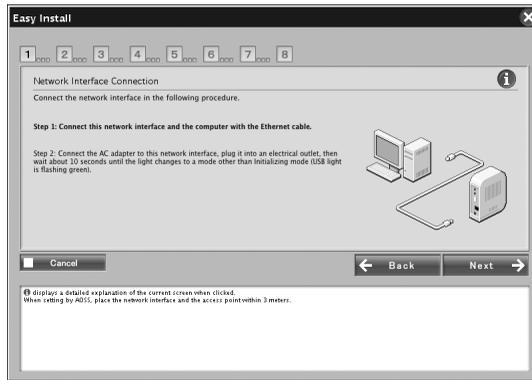


- Select the target device on which the network interface is installed, and then click Next.




Note:

- If you want to search for the target device again, click the  button.
- Changing Sorting Method will change the sorting method for devices displayed on screen.


10. Click **Next** to configure the wireless settings.
If you do not want to configure the wireless settings, click **Skip** and go to step 13.

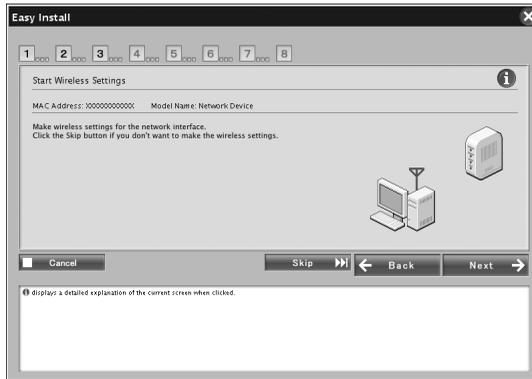


11. Select **SSID** from the drop-down list, and then click **Next**.

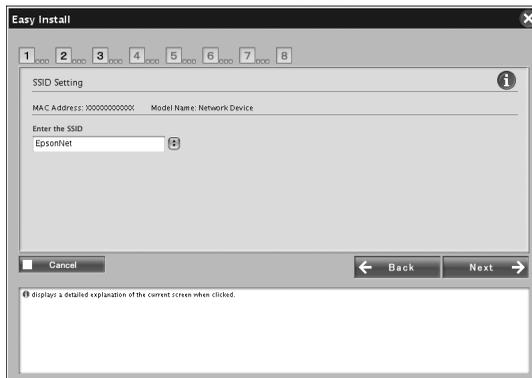


12. Select the security mode, and then click Next.

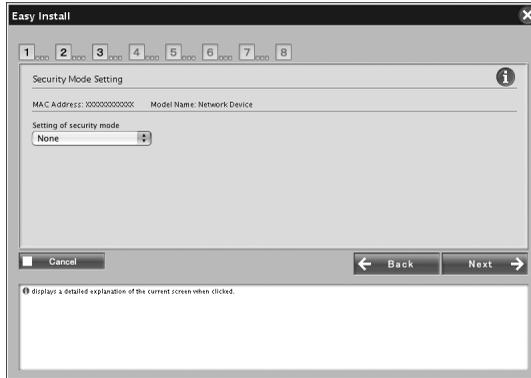


When you select WEP-64 bit (40 bit) or WEP-128 bit (104 bit), the WEP Key Settings screen appears. Enter the WEP Keys settings, and then click Next.

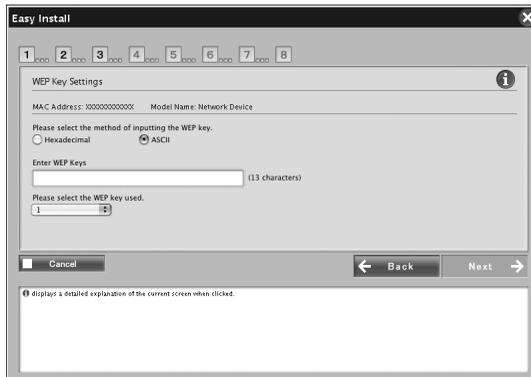


When you select WPA-PSK (TKIP) or WPA-PSK (AES), the WPA Configuration screen appears. Enter the password twice, and then click Next.

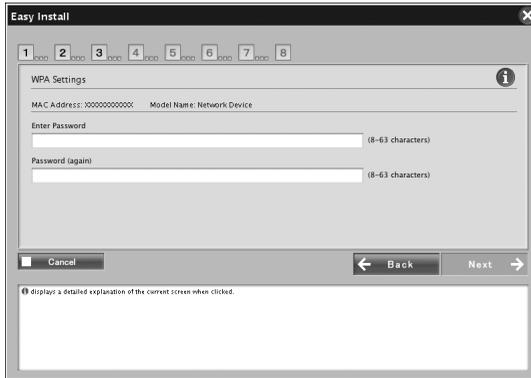


13. Click Next to set an IP address.
If you do not want to set an IP address, click Skip and go to step 15.

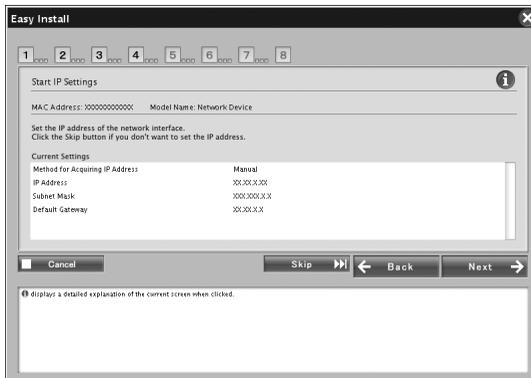


14. Select Auto or Manual to assign the IP address to the network interface.

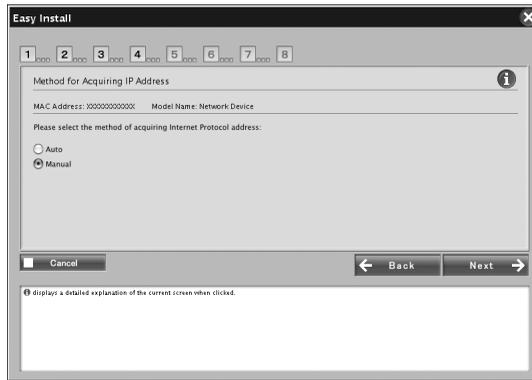

When you select Manual, you must enter the IP address, subnet mask, and default gateway. And then click Next.

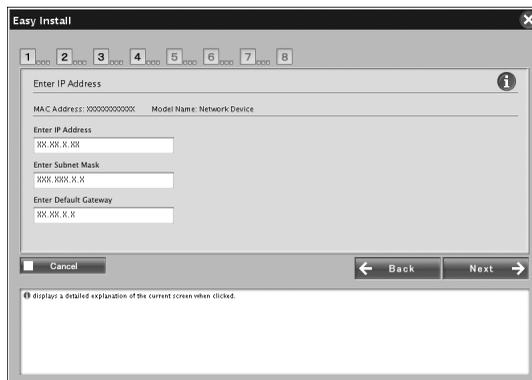

15. Set the AppleTalk entity type, and then click Next.

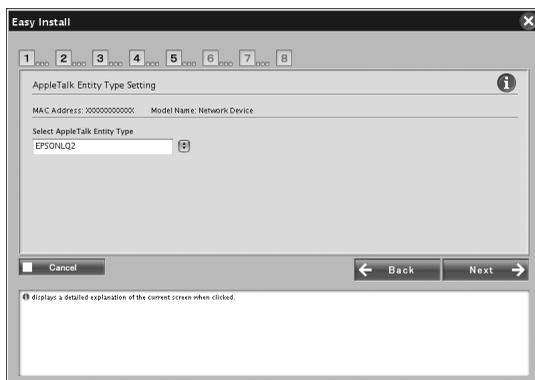

Note:

For the AppleTalk entity type appropriate for your printer or all-in-one, see “Supported Devices” on page 234.


16. Select the access right of the memory slots in the printer or all-in-one, and then click Next.



Note:

If the connected printer or all-in-one does not have memory slots, this screen is not displayed.


17. Confirm the settings you selected in the previous dialog box, and then click Next.

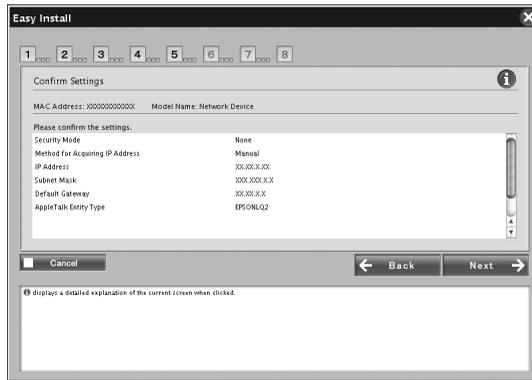


Note:

When the password screen appears, input the login password for the computer.


18. When the setting transmission is completed, select the network interface connection.

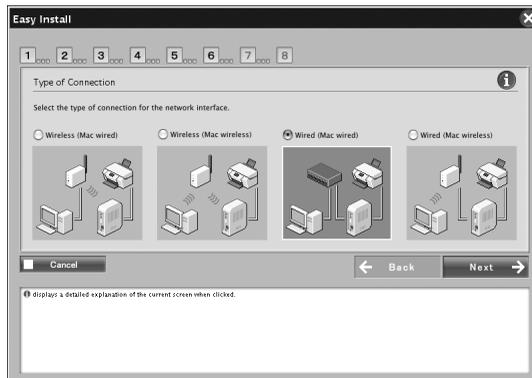

19. Follow the instruction on the screen to connect the cable to the printer or all-in-one and then to turn it on.

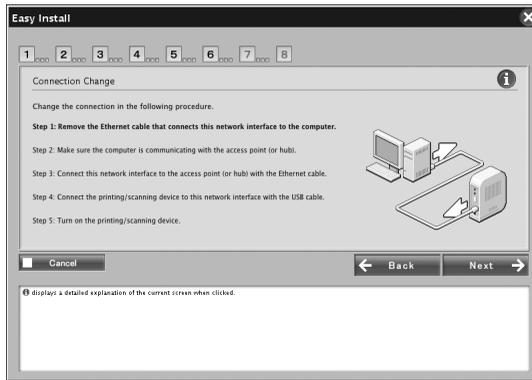

20. If the installation is complete, the Complete the Network I/F Setting screen appears. Click Skip to finish the installation.

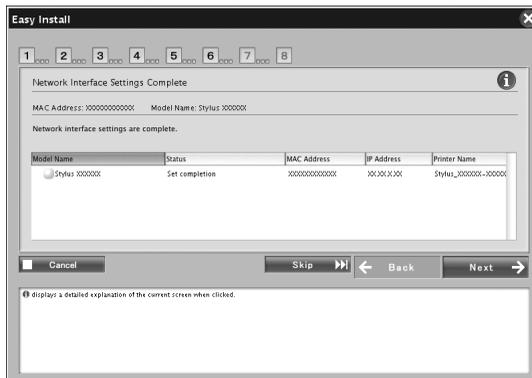

Note:

- ❑ *You cannot set up the computer for printing or scanning with this software. See “Setting up the printer” on page 75 or “Setting the Scanner Driver” on page 109 to set up the computer.*

- ❑ *If your printer or all-in-one connected to this network interface has a memory card slot, unplug the network interface’s AC adapter from the electrical outlet after completing setup, and then plug it back in to enable the Access Attribute setting for the memory card slot.*

Setting up the printer

The printer driver must be installed on the computer before you can set up the printer. See the device’s manual for information on installing the printer driver.

Mac OS X

1. Open the Applications folder.
2. Open the Utilities folder.
3. Open Print Center (for Mac OS X 10.2 or below) or Printer Setup Utility (for Mac OS X 10.3), and then click Add.
4. Select Rendezvous from the drop-down list.
5. Select the printer model from the list.
6. Click Add.

Mac OS 9

1. Open Chooser from the Apple menu.
2. Click the printer icon.
3. Select the zone containing the printer.
4. Select the printer name from the list.
5. Make sure AppleTalk is active.
6. Close Chooser.

Now you can use the device on the network.

Installing the Printer Driver

About installing the printer driver

To print to the network device, you need to install the printer driver on the computer. See the section appropriate for your operating system.

“Windows XP” on page 77

“Windows Me/98/95” on page 85

“Windows 2000” on page 89

“Windows Server 2003” on page 96

“Windows NT 4.0” on page 103

“Macintosh” on page 107

Windows XP

For Windows XP, the printer driver installation procedure differs depending on the printing method you prefer. Epson recommends printing with EpsonNet Print. See “For Windows XP/2000/Server 2003/NT 4.0 Users” on page 149.

LPR printing


Note:

If you are using EpsonNet Print, the setup procedure is different. See "About EpsonNet Print" on page 147 for details.


1. Click Start, click Control Panel, click Printers and Other Hardware, and then click Printers and Faxes.
2. Under Printer Tasks, click Add a printer to start the Add Printer wizard, and then click Next.
3. Click Local printer attached to this computer, clear the Automatically detect and install my Plug and Play printer check box, and then click Next.

Note:


You must clear the Automatically detect and install my Plug and Play printer check box because the device is attached directly to the network, not to a Windows XP computer.

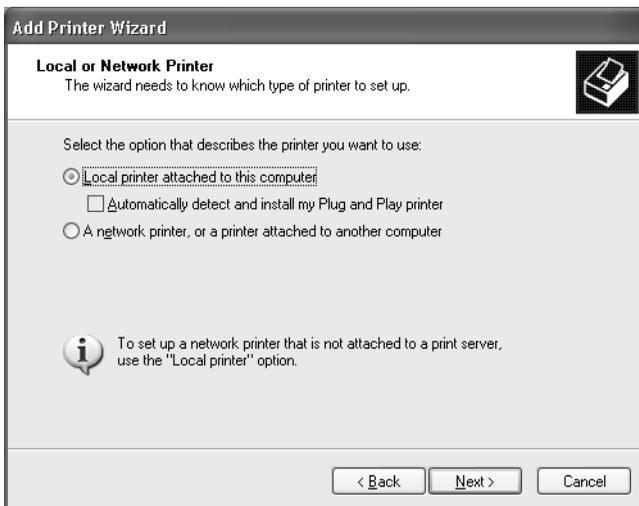


4. Select the Create a new port radio button, and then select Standard TCP/IP Port from the list. Then click Next.

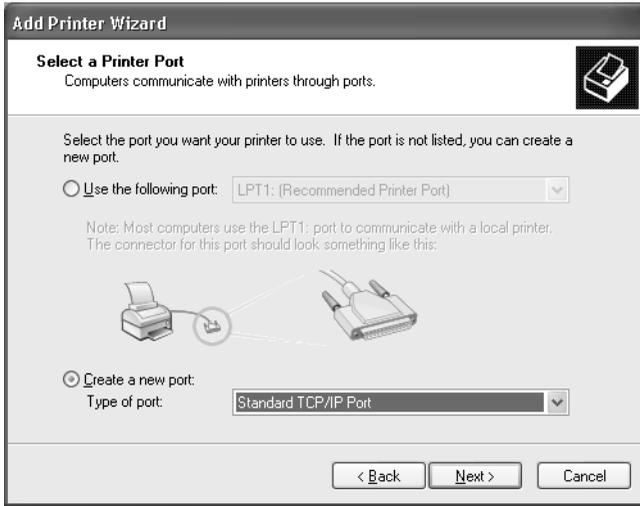


5. From the Welcome Screen, click Next.

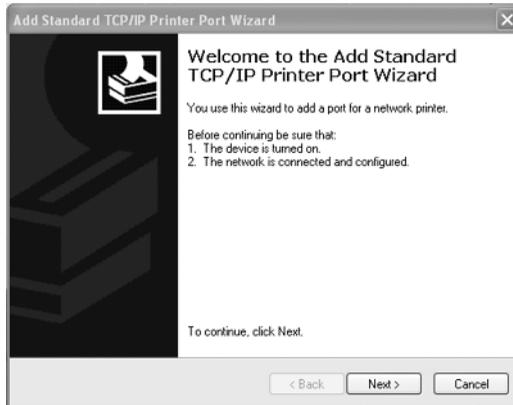

6. Enter the IP address of the network interface and then click Next.

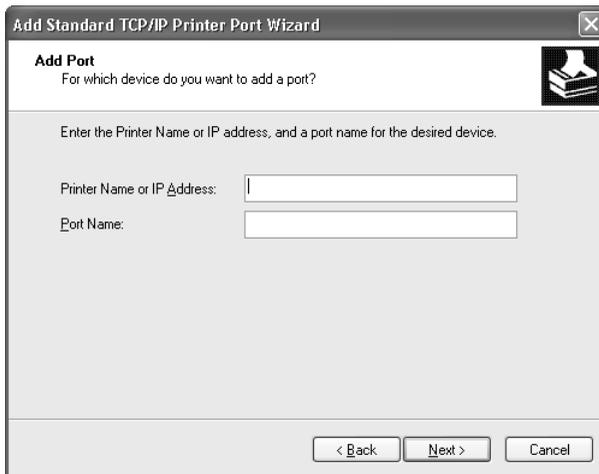

7. If an error occurs, the following dialog box appears. Select the Standard radio button and then select EPSON Network Printer. Click Next.

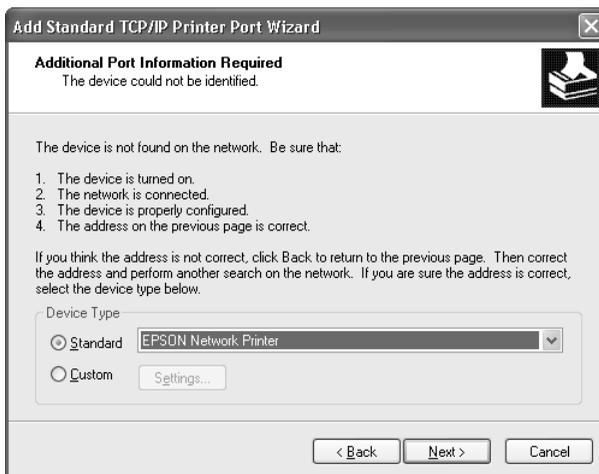


8. Click Finish.
9. See “Installing a printer driver” on page 83 to install the printer driver.

Internet printing

1. Click Start, click Control Panel, click Printers and Other Hardware, and then click Printers and Faxes.
2. Under Printer Tasks, click Add a printer to start the Add Printer wizard, and then click Next.
3. Click A network printer, or a printer attached to another computer, and then click Next.
4. Select the Connect to a printer on the Internet or on a home or office network radio button.
5. Enter the URL of the target device using the format below. The URL should be same as the URL you set on EpsonNet Config’s IPP configuration page.

http://IP address of network interface:631/Printer name

Example: http://192.168.100.201:631/EPSON_IPP_Printer

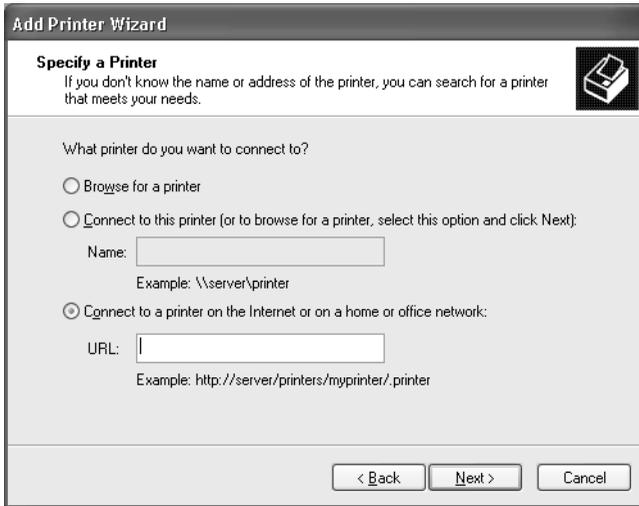

Note:

To check the IP address of the network interface, use *EpsonNet Config*. See “About EpsonNet Config for Windows” on page 114 for details.

6. Follow the on-screen instructions to set up the device. See “Installing a printer driver” on page 83 if necessary.

Microsoft Network Shared printing

1. Click Start, click Control Panel, click Printers and Other Hardware, and then click Printers and Faxes.
2. Under Printer Tasks, click Add a printer to start the Add Printer wizard, and then click Next.
3. Click A network printer, or a printer attached to another computer, and then click Next.

4. Select the Browse for a printer radio button, and then click Next.
5. Enter the following in the Printer box or select the device you want to use from the Shared printers list box, and then click Next.

\\NetBIOS name of network interface\Device name of network interface

6. Follow the on-screen instructions to set up the device. See “Installing a printer driver” on page 83 if necessary.

Installing a printer driver

1. Insert the Software CD-ROM shipped with the device.
2. Close the EPSON Software Installation screen if it appears.
3. Click the Have Disk button. The Install From Disk dialog box appears.
4. Click Browse.
5. Select the CD-ROM drive for Drives, and double-click the WINXP_2K folder. Click Open.
6. Click OK in the Install From Disk dialog box.
7. Select the model name of the device, and then click Next.

Note:

If the Add Printer wizard prompts you to select either Keep existing driver or Replace existing driver, be sure to select the Replace existing driver radio button.

8. Click Finish and follow the on-screen instructions to complete the setup.

When you print using Microsoft Network Shared printing in the Windows XP/2000/Server 2003/NT environment, see “Using the NET USE command” on page 84 for more details.

Installing the network plug-in

Follow the steps below after installing the printer driver. You can use EPSON Status Monitor 3 via the wireless network.

1. Insert the Software CD-ROM in the CD-ROM drive.

If the Installer dialog box appears automatically, click the Exit button.

2. Double-click the CD-ROM drive.
3. In the COMMON folder, open the AddNet folder.
4. Double-click SETUP.EXE. Follow the on-screen instructions.

Using the NET USE command

If you are running Windows XP/2000/Server 2003/NT and using NetBIOS to connect to the device, we recommend that you use the NET USE command, as follows:

1. Click Start, click Control Panel, click Network and Internet Connections, and then select Network Connections.
2. Under LAN or High-Speed Internet, click the Local Area Connection icon.
3. Under Network Tasks, click Change settings of this connection.
4. Check that Client for Microsoft Networks is installed. If it is not installed, click Install to install it.
5. Run the command prompt and enter the following command.

NET USE *printer port: \\NetBIOS name of network interface\Device name of network interface*

Selecting the port

1. Click Start, click Control Panel, click Printers and Other Hardware, and then click Printers and Faxes.
2. Right-click the printer icon and then select Properties.
3. Click the Ports tab and then select the port you have set with the NET USE command.

Windows Me/98/95

For Windows Me/98/95, the printer driver installation procedure differs depending on the printing method you prefer. Epson recommends printing with EpsonNet Print. See “For Windows Me/98/95 Users” on page 158.

LPR printing

Since Windows Me/98/95 does not support LPR, standard TCP/IP printing cannot be used. However, you can print via TCP/IP using the EpsonNet Print utility included on the Software CD-ROM. First, install EpsonNet Print. Then, install the printer driver. See “About EpsonNet Print” on page 147 for more details.

Internet printing (Windows 98/95)

Internet printing is possible by using the EpsonNet Internet Print utility included on the Software CD-ROM. First, install EpsonNet Internet Print. Then, install the printer driver and set the printer port. See “About EpsonNet Internet Print” on page 167 for more details.

Internet printing (Windows Me)

Installing the IPP client

The IPP client must be installed on your computer. Follow the steps below to install it.

1. Insert the Windows Me CD-ROM.
2. Select the add-ons folder, and then select the IPP folder.
3. Double-click wpnpins.exe. Then follow the on-screen instructions.
4. Click OK to restart your computer.

Setting up the device

Connect your computer to a device through IPP.

1. Click Start, point to Settings, and then select Printers.
2. Double-click Add Printer, and then click Next.
3. Select the Network Printer radio button, and then click Next.
4. Type the URL of the device, and then click Next.

http://IP address of network interface:631/printer name

Example: **http://192.168.100.201:631/EPSON_IPP_Printer**

Note:


To check the IP address of the network interface, use EpsonNet Config. See "About EpsonNet Config for Windows" on page 114 for details.

5. See "Installing a printer driver" on page 88 to install the printer driver.

Microsoft Network Shared printing

1. Click Start, point to Settings, and then select Printers.
2. Double-click Add Printer, and then click Next.
3. Select the Network Printer radio button, and then click Next.
4. Click Browse, and then select the network path from the list. If you cannot browse, enter the following in the Network path or queue name box.

\\NetBIOS name of network interface\
Device name of network interface

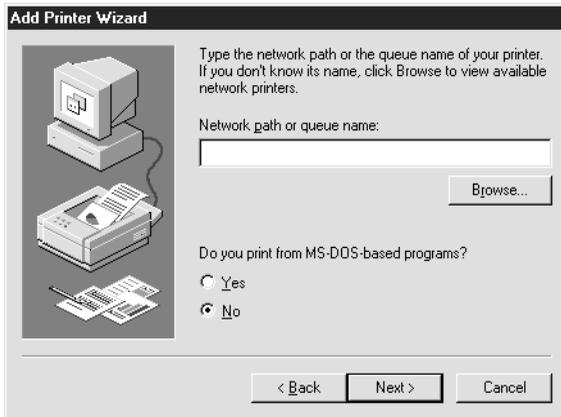

5. The Add Printer wizard appears. Click Next.
6. See "Installing a printer driver" on page 88 to install the printer driver.

Installing a printer driver

1. Insert the Software CD-ROM shipped with the device.
2. Close the EPSON Software Installation screen if it appears.
3. Click the Have Disk button. The Install From Disk dialog box appears.
4. Click Browse.
5. Select the CD-ROM drive for Drives, and then double-click the WIN9X folder. Click OK.
6. Click OK in the Install From Disk dialog box.
7. Select the model name of the device, and then click Next.

Note:

If the Add Printer wizard prompts you to select either Keep existing driver or Replace existing driver, be sure to select the Replace existing driver radio button.

8. Click Finish and follow the on-screen instructions to complete the setup.

When you print using Microsoft Network Shared printing in the Windows XP/2000/Server 2003/NT environment, see “Using the NET USE command” on page 89 for more details.

Installing the network plug-in

Follow the steps below after installing the printer driver. You can use EPSON Status Monitor 3 via the wireless network.

1. Insert the Software CD-ROM in the CD-ROM drive.

If the Installer dialog box appears automatically, click the Exit button.

2. Double-click the CD-ROM drive.
3. In the COMMON folder, open the AddNet folder.
4. Double-click SETUP.EXE. Follow the on-screen instructions.

Using the NET USE command

If you are running Windows XP/2000/Server 2003/NT and using NetBIOS to connect to the device, we recommend that you use the NET USE command, as follows:

1. Right-click the Network Neighborhood icon or My Network Places icon and then select Properties.
2. Check that Client for Microsoft Networks is in the Components list. If it is not installed, click Add to install it.
3. Run the command prompt and enter the following command.

NET USE printer port: \\NetBIOS name of network interface\Device name of network interface

Selecting the port

1. Click Start, point to Settings, and then select Printers.
2. Right-click the printer icon and select Properties.
3. Click the Details tab and select the port you have set with the NET USE command.

Windows 2000

For Windows 2000, the printer driver installation procedure differs depending on the printing method you prefer. Epson recommends printing with EpsonNet Print. See “For Windows XP/2000/Server 2003/NT 4.0 Users” on page 149.

LPR printing


Note:

If you are using EpsonNet Print, the setup procedure is different. See "About EpsonNet Print" on page 147 for details.


1. Click Start, point to Settings, and then select Printers.
2. Double-click Add Printer to start the Add Printer wizard, and then click Next.
3. Click Local printer, clear the Automatically detect and install my Plug and Play printer check box, and then click Next.

Note:


You must clear the Automatically detect and install my Plug and Play printer check box because the device is attached directly to the network, not to a Windows 2000 computer.

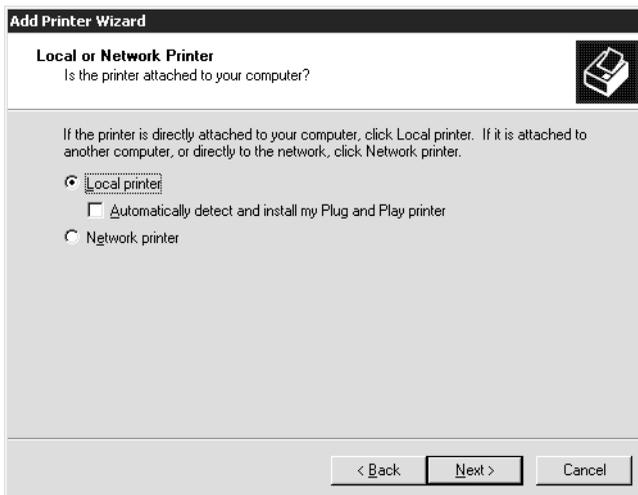


4. Select the Create a new port radio button, and then select Standard TCP/IP Port from the list. Then click Next.

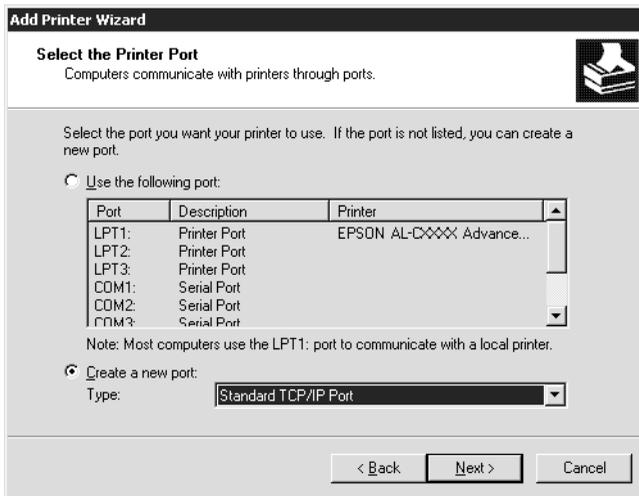

5. Enter the IP address of the network interface and then click Next.

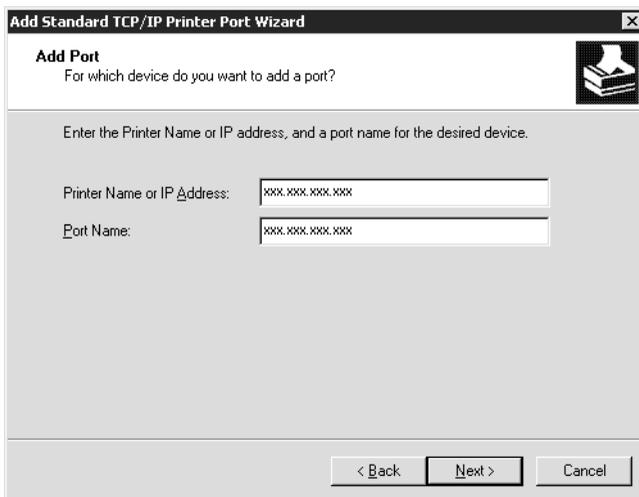

6. If an error occurs, the following dialog box appears. Select the Standard radio button and then select EPSON Network Printer. Click Next.

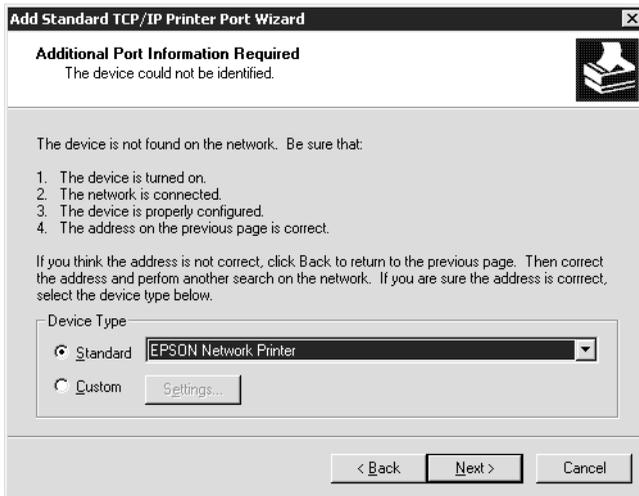

7. Click Finish.
8. See “Installing a printer driver” on page 94 to install the printer driver.

Internet printing

1. Click Start, point to Settings, and then select Printers.
2. Double-click Add Printer to start the Add Printer wizard, and then click Next.
3. Select the Network printer radio button and then click Next.
4. Select the Connect to a printer on the Internet or on your intranet radio button.
5. Enter the URL of the target printer using the format below. The URL should be same as the URL you set on EpsonNet Config's IPP configuration page.

http://IP address of network interface:631/Printer name

Example: **http://192.168.100.201:631/EPSON_IPP_Printer**

Note:

To check the IP address of the network interface, use EpsonNet Config. See "About EpsonNet Config for Windows" on page 114 for details.

6. Follow the on-screen instructions to set up the printer. See "Installing a printer driver" on page 94 if necessary.

Microsoft Network Shared printing

1. Click Start, point to Settings, and then select Printers.
2. Double-click Add Printer to start the Add Printer wizard, and then click Next.
3. Select the Network printer radio button and then click Next.
4. Select the Type the printer name, or click Next to browse for a printer radio button.

5. Enter the following in the Name box or click Next to browse for a device.

\\NetBIOS name of network interface\Device name of network interface

6. Follow the on-screen instructions to set up the device. See “Installing a printer driver” on page 94 if necessary.

Installing a printer driver

1. Insert the Software CD-ROM shipped with the device.
2. Close the EPSON Software Installation screen if it appears.
3. Click the Have Disk button. The Install From Disk dialog box appears.
4. Click Browse.
5. Select the CD-ROM drive for Drives, and double-click the WINXP_2K or WIN2000 folder. Click Open.
6. Click OK in the Install From Disk dialog box.
7. Select the model name of the device, and then click Next.

Note:

If the Add Printer wizard prompts you to select either Keep existing driver or Replace existing driver, be sure to select the Replace existing driver radio button.

8. Click Finish and follow the on-screen instructions to complete the setup.

When you print using Microsoft Network Shared printing in the Windows XP/2000/Server 2003/NT environment, see “Using the NET USE command” on page 95 for more details.

Installing the network plug-in

Follow the steps below after installing the printer driver. You can use EPSON Status Monitor 3 via the wireless network.

1. Insert the Software CD-ROM in the CD-ROM drive.

If the Installer dialog box appears automatically, click the Exit button.

2. Double-click the CD-ROM drive.
3. In the COMMON folder, open the AddNet folder.
4. Double-click SETUP.EXE. Follow the on-screen instructions.

Using the NET USE command

If you are running Windows XP/2000/Server 2003/NT and using NetBIOS to connect to the device, we recommend that you use the NET USE command, as follows:

1. Right-click the My Network Places icon and then select Properties.
2. Right-click the Local Area Connections icon and then select Properties.
3. Check that Client for Microsoft Networks is in the Components list. If it is not installed, click Install to install it.
4. Run the command prompt and enter the following command.

NET USE *printer port*: \\NetBIOS name of network interface\Device name of network interface

Selecting the port

1. Click Start, point to Settings, and then select Printers.
2. Right-click the printer icon and then select Properties.
3. Click the Ports tab and then select the port you have set with the NET USE command.

Windows Server 2003

For Windows Server 2003, the printer driver installation procedure differs depending on the printing method you prefer. Epson recommends printing with EpsonNet Print. See “For Windows XP/2000/Server 2003/NT 4.0 Users” on page 149.

LPR printing


Note:

If you are using EpsonNet Print, the setup procedure is different. See “About EpsonNet Print” on page 147 for details.


1. Click Start, and then select Printers and Faxes.
2. Double-click the Add Printer icon to start the Add Printer wizard, and then click Next.
3. Click Local printer attached to this computer, clear the Automatically detect and install my Plug and Play printer check box, and then click Next.

Note:

You must clear the Automatically detect and install my Plug and Play printer check box because the device is attached directly to the network, not to a computer.

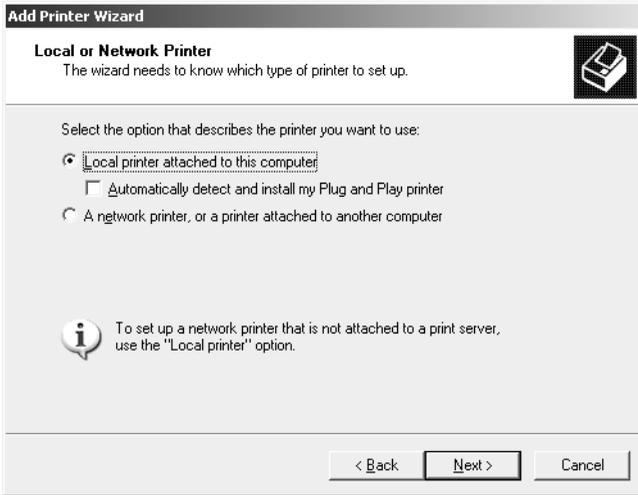

4. Select the Create a new port radio button, and then select Standard TCP/IP Port from the list. Click Next.

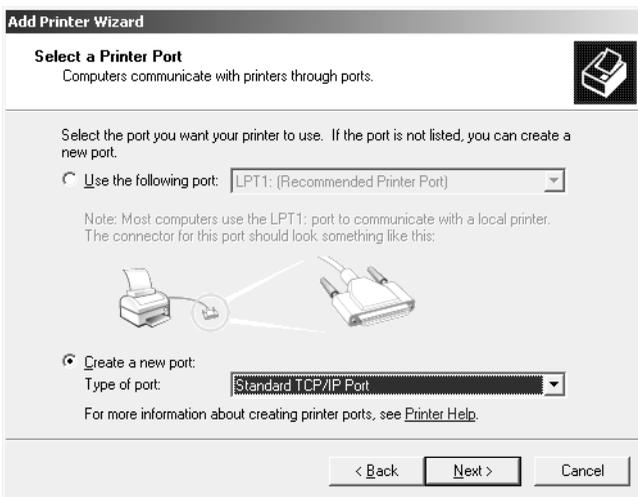

5. When Add Standard TCP/IP Printer Port Wizard dialog box appears, click Next.
6. Enter the IP address of the network interface and then click Next.

Add Standard TCP/IP Printer Port Wizard

Add Port
For which device do you want to add a port?

Enter the Printer Name or IP address, and a port name for the desired device.

Printer Name or IP Address:

Port Name:

< Back **Next >** Cancel

7. If an error occurs, the following dialog box appears. Select the Standard radio button and then select EPSON Network Printer. Click Next.



8. Click Finish.
9. See “Installing a printer driver” on page 101 to install the printer driver.


Internet printing

1. Click Start, and then select Printers and Faxes.
2. Double-click the Add Printer icon to start the Add Printer wizard, and then click Next.
3. Select A network printer, or a printer attached to another computer, and then click Next.
4. Select the Connect to a printer on the Internet or on a home or office network radio button.

5. Enter the URL of the target device using the format below. The URL must be the same URL you set on EpsonNet Config's IPP configuration page.

http://IP address of network interface:631/Printer name

Example: http://192.168.100.201:631/EPSON_IPP_Printer

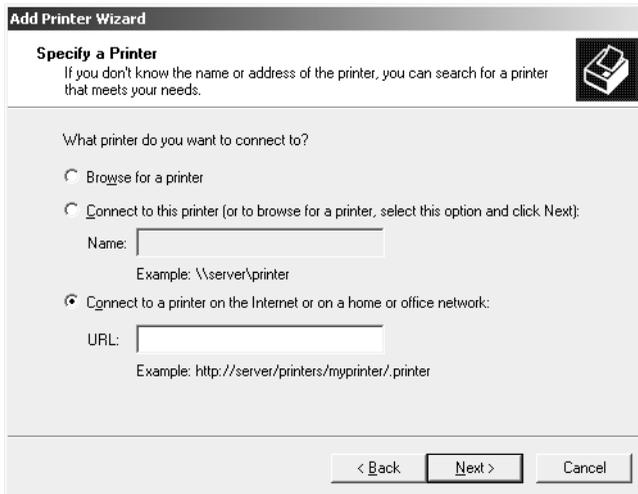

Note:

To check the IP address of the network interface, use EpsonNet Config. See "About EpsonNet Config for Windows" on page 114 for details.

6. Follow the on-screen instructions to set up the device. See "Installing a printer driver" on page 101 if necessary.

Microsoft Network Shared printing

1. Click Start, and then select Printers and Faxes.
2. Double-click the Add Printer icon to start the Add Printer wizard, and then click Next.
3. Click A network printer, or a printer attached to another computer, and then click Next.
4. Select the Browse for a printer radio button, and then click Next.
5. Enter the following in the Printer box or select the device you want to use from the Shared printers list box. Click Next.

\\NetBIOS name of network interface\Device name of network interface

6. Follow the on-screen instructions to set up the device. See “Installing a printer driver” on page 101 if necessary.

Installing a printer driver

1. Insert the Software CD-ROM shipped with the device.
2. Close the EPSON Software Installation screen if it appears.
3. Click the Have Disk button. The Install From Disk dialog box appears.
4. Click Browse.
5. Select the CD-ROM drive for Drives, and then double-click the WinXP_2K or WIN2000 folder. Click Open.
6. Click OK in the Install From Disk dialog box.
7. Select the model name of the device, and then click Next.

Note:

If the Add Printer wizard prompts you to select either Keep existing driver or Replace existing driver, be sure to select the Replace existing driver radio button.

8. Click Finish and then follow the on-screen instructions to complete the setup.

When you print using Microsoft Network Shared printing in the Windows XP/2000/Server 2003/NT environment, see “Using the NET USE command” on page 102 for more details.

Using the NET USE command

If you are running Windows XP/2000/Server 2003/NT and using NetBIOS to connect to the device, we recommend that you use the NET USE command, as follows:

1. Click Start, point to Control Panel, and then select Network Connections. Click Local Area Connections.
2. Click the Properties button.
3. Check that Client for Microsoft Networks is installed. If necessary, click Install to install it.
4. Run the command prompt and then enter the following command.

NET USE *printer port:* \\NetBIOS name of network interface\Device name of network interface

Selecting the port

1. Click Start, and then select Printers and Faxes.
2. Right-click the printer icon and then select Properties.
3. Click the Ports tab and then select the port you have set using the NET USE command.

Windows NT 4.0

For Windows NT 4.0, the printer driver installation procedure differs depending on the printing method you prefer. Epson recommends printing with EpsonNet Print. See “For Windows XP/2000/Server 2003/NT 4.0 Users” on page 149.

LPR printing

Note:


If you are using EpsonNet Print, the setup procedure is different. See “About EpsonNet Print” on page 147 for details.

1. Click Start, point to Settings, and then select Printers.
2. Double-click the Add Printer icon.
3. Select the My Computer radio button, and then click Next.
4. Click Add Port in the Add Printer wizard dialog box.
5. Select LPR Port from the Available Printer Port list, and then click New Port.

Note:

You cannot use the Lexmark TCP/IP Network Port with the network interface.

6. Enter the IP address of the network interface in the first text box and the device name in the second text box. Click OK.

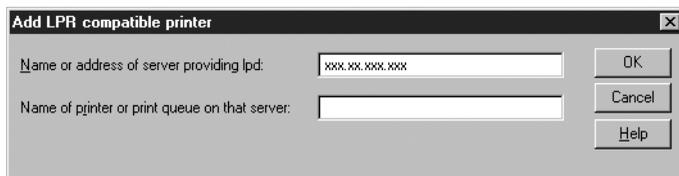

7. In the Printer Ports dialog box, click Close.
8. In the Add Printer Wizard dialog box, click Next.
9. See “Installing a printer driver” on page 105 to install the printer driver.

Internet printing

1. Click Start, point to Settings, and then select Printers.
2. Double-click Add Printer to start the Add Printer wizard, and then click Next.
3. Select the Network printer radio button and then click Next.
4. Select the Connect to a printer on the Internet or on your intranet radio button.
5. Enter the URL of the target device using the format below. The URL should be same as the URL you set on EpsonNet Config’s IPP configuration page.

http://IP address of network interface:631/Printer name

Example: **http://192.168.100.201:631/EPSON_IPP_Printer**

Note:

To check the IP address of the network interface, use EpsonNet Config. See “About EpsonNet Config for Windows” on page 114 for details.

Follow the on-screen instructions to set up the device. See “Installing a printer driver” on page 94 if necessary.

Microsoft Network Shared printing

1. Click Start, point to Settings, and then select Printers.
2. Double-click Add Printer.
3. Select the Network printer server radio button and then click Next. The Connect to Printer dialog box appears.
4. Select the device you want to configure from the Shared Printers list. If you cannot select the device, enter the following in the Printer box:

\\NetBIOS name of network interface\Device name of network interface

5. Click OK.
6. Follow the on-screen instructions to set up the device. See “Installing a printer driver” on page 105 if necessary.

Installing a printer driver

1. Insert the Software CD-ROM shipped with the device.
2. Close the EPSON Installation Program screen if it appears.
3. Click the Have Disk button. The Install From Disk dialog box appears.
4. Click Browse.
5. Select the CD-ROM drive for Drives, and then double-click the WINNT40 folder. Click Open.
6. Click OK in the Install From Disk dialog box.
7. Select the model name of the device, and then click Next.

Note:

If the Add Printer wizard prompts you to select either Keep existing driver or Replace existing driver (recommended), be sure to select the Replace existing driver radio button.

8. Follow the on-screen instructions to complete the setup.

When you print using Microsoft Network Shared printing in the Windows XP/2000/Server 2003/NT environment, see “Using the NET USE command” on page 106 for more details.

Using the NET USE command

If you are running Windows XP/2000/Server 2003/NT and using NetBIOS to connect to the device, we recommend that you use the NET USE command, as follows:

1. Check that the following services are installed.
Right-click the Network Neighborhood icon on the desktop and select Properties. Click the Services tab and check that Server or Workstation is listed.
2. If it is not installed, click Add.
3. Run the command prompt and enter the following command.

NET USE *printer port: \\NetBIOS name of network interface\Device name of network interface*

Selecting the port

1. Click Start, point to Settings, and then select Printers.
2. Right-click the printer icon and then select Properties.
3. Click the Ports tab and then select the port you have set using the NET USE command.

Macintosh

Follow the steps below to set a device.

Note:

Make sure that the printer driver is installed on your Macintosh before following the steps below. See the manual shipped with your device for instructions on how to install the printer driver.

Mac OS X

Rendezvous printing

1. Open the Applications folder.
2. Open the Utilities folder.
3. Open Print Center (for Mac OS X 10.2 or below) or Printer Setup Utility (for Mac OS X 10.3), and then click Add.
4. Select Rendezvous from the drop-down list.
5. Select the device model from the list.
6. Click Add.

TCP/IP printing

1. Open the Applications folder.
2. Open the Utilities folder.
3. Open Print Center (for Mac OS X 10.2 or below) or Printer Setup Utility (for Mac OS X 10.3), and then click Add.
4. Select EPSON TCP/IP from the drop down list.
5. Select the printer model from the list.

6. Click Add.

AppleTalk printing

1. Open the Applications folder.
2. Open the Utilities folder.
3. Open Print Center (for Mac OS X 10.2 or below) or Printer Setup Utility (for Mac OS X 10.3), and then click Add.
4. Select EPSON AppleTalk from the drop down list.
5. Select the zone from the drop down list.
6. Select the printer name from the list.
7. Click Add.

Mac OS 9

AppleTalk printing

1. Open Chooser from the Apple menu.
2. Click the printer icon.
3. Select the zone containing the printer.
4. Select the printer name from the list.
5. Make sure AppleTalk is active.
6. Close Chooser.

Setting the Scanner Driver

You can scan images via a network. For details on the scanning function, see the documentation shipped with your device or the online help for EPSON Scan.

Note:

- ❑ *If the network connection is interrupted while starting up EPSON Scan, quit EPSON Scan and restart it after a short time. If you cannot restart EPSON Scan, turn the all-in-one off and on once and then restart EPSON Scan.*
- ❑ *Windows Server 2003 and Windows NT4.0 does not support this function.*

1. **Windows**

Click Start, point to All Programs (for Windows XP users) or Programs (for Windows Me/98/2000 users) and EPSON Scan, and then select EPSON Scan Settings.

Mac OS X

Double-click the Macintosh HD icon. In the Applications folder, double-click the Utilities folder. Then double-click the EPSON Scan Settings icon.



EPSON Scan Settings

Mac OS 9

Click the Apple menu, point to Control Panels, and then select EPSON Scan Settings.


The EPSON Scan Settings dialog box appears.

2. Select the model of your device from the Select Scanner drop-down list.


3. Select the Network radio button.



For Macintosh Users:
Click Add button, then Add screen appears.
Select the IP address and click OK button.

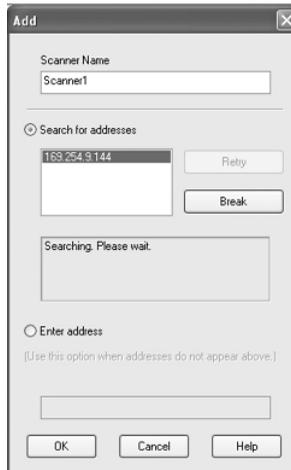

- Click the Test button on the EPSON Scan Settings screen. Make sure the device in the Scanner Status text box is available for use on the network.

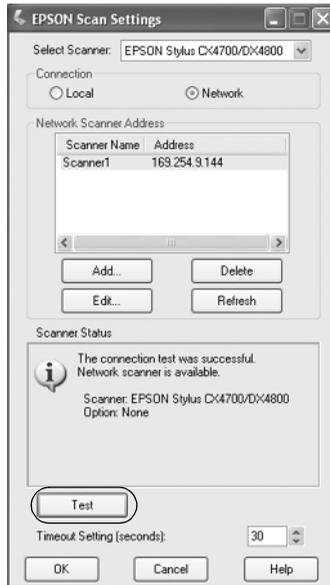

Note:

If the network connection fails, see EPSON Scan Troubleshooting Assistant.

- Click OK.

About the Software

Overview

The software described below are provided with the network interface on the CD-ROM. They are very useful when you set up the network interface and configure and modify the settings of the network interface. For more information on how to use them, see the documentation or online help for each software.

- ❑ **EpsonNet Config for Windows** is a Windows-based configuration utility for administrators that allows you to configure the network interface for various protocols such as TCP/IP, MS Network, AppleTalk, IPP, and SNMP. See “About EpsonNet Config for Windows” on page 114.
- ❑ **EpsonNet Config for Macintosh** is a Macintosh-based configuration utility for administrators that allows you to configure the network interface for various protocols such as TCP/IP, AppleTalk, and IPP. See “About EpsonNet Config for Macintosh” on page 118.
- ❑ **EpsonNet Config with Web Browser** is a Web-based configuration utility that allows you to configure the network interface for various protocols such as Wireless, TCP/IP, AppleTalk, MS Network, IPP, and SNMP. See “About EpsonNet Config with Web Browser” on page 121.
- ❑ **EpsonNet Print** is a utility that enables TCP/IP printing for Windows. (Windows XP/2000/Server 2003/NT 4.0 also support OS standard LPR printing.) See “About EpsonNet Print” on page 147.

- ❑ **EpsonNet Internet Print** is a utility that supports printing across the Internet using Internet Printing Protocol for Windows 98/95/NT 4.0. See “About EpsonNet Config for Windows” on page 114.
- ❑ **EpsonNet WebManager** is a Web-based utility that helps network administrators to easily manage network devices. See “About EpsonNet WebManager” on page 179.
- ❑ **EpsonNet SetupManager** is a utility that provides a simple printer installation and configuration tool for network administrators, and an easy network printer installation process for clients. See “About EpsonNet SetupManager” on page 187.

EpsonNet Config for Windows

About EpsonNet Config for Windows

EpsonNet Config for Windows is a Windows-based configuration software for administrators to configure the network interface for Wireless, TCP/IP, AppleTalk, MS Network, IPP, and SNMP.

Note:

- ❑ *Be sure to use EpsonNet Config included on the Software CD-ROM shipped with this product.*

- ❑ *EpsonNet Config installed on Windows XP/Server 2003 does not support NetBEUI as a search protocol because officially the NetBEUI protocol is not supported on Windows XP/Server 2003.*

System Requirements

The following table lists the system requirements of EpsonNet Config.

Operating systems	Windows XP Home Edition/Professional Windows Me Windows 98/98 Second Edition Windows 2000 Server/Professional Windows NT 4.0 Windows Server 2003
Hard disk drive space	10 MB

Installing EpsonNet Config for Windows

Follow the steps below to install EpsonNet Config on your computer to configure the network interface.

Note:

If you add or delete protocols or services from your operating system after installing EpsonNet Config, EpsonNet Config may not work correctly. If this happens, uninstall EpsonNet Config and then install it again.

1. Insert the Software CD-ROM into the CD-ROM drive.
2. The Software Installation screen opens automatically.

If the Software Installation screen does not appear, double-click EPSetup.exe on the CD-ROM

3. Click Next on the CD Installer screen.
4. Select Install Network Utility, and then select EpsonNet Config.
5. Make sure that all applications are closed, and then click the Next button in the InstallShield Wizard screen.
6. Read the license agreement, and then click the Yes button.
7. Follow the on-screen instructions to complete the installation.

Note for Windows XP Service Pack 2 users:


If the following screen appears after you start EpsonNet Config, click the Unblock button; otherwise the devices are not listed on the screen of EpsonNet Config.



Accessing the EpsonNet Config for Windows User's Guide

The *EpsonNet Config for Windows User's Guide* contains detailed information on EpsonNet Config. Follow the steps below to access the *EpsonNet Config User's Guide*.

1. Click Start, point to All Programs (for Windows XP/Server 2003 users) or Programs (for Windows Me/98/95/2000/users), and then select EpsonNet. Click EpsonNet Config to start it.

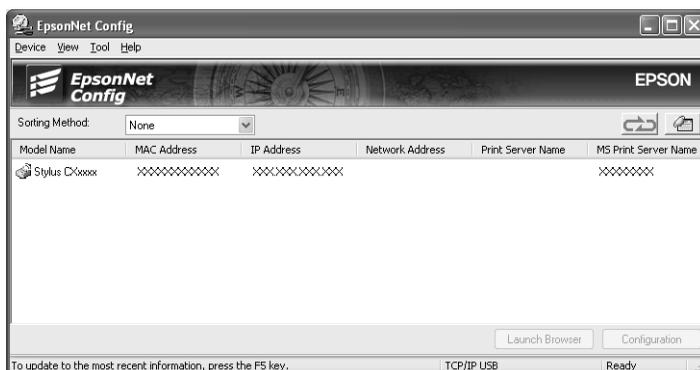

2. From the Help menu, select EpsonNet Config Help.

The *EpsonNet Config User's Guide* appears. By clicking the links on the left side of the screen, you can get information on using EpsonNet Config.

EpsonNet Config for Macintosh

About EpsonNet Config for Macintosh

EpsonNet Config for Macintosh is a Macintosh-based configuration software for administrators that allows you to configure the network interface for TCP/IP, AppleTalk, SNMP, and IPP.

Note:

Be sure to use EpsonNet Config included on the Software CD-ROM shipped with this product.

System Requirements

The following table lists the system requirements of EpsonNet Config.

Operating systems	Mac OS 10.x/9.x
Models	PowerPC Macintosh
Hard disk drive space	10 MB

Installing EpsonNet Config for Macintosh


Follow the steps below to install EpsonNet Config to configure the network interface.

1. Insert the Software CD-ROM into the CD-ROM drive.
2. Double-click the EPSON CD-ROM icon.
3. Double-click the appropriate OS icon in the EPSON folder.
4. Click Next on the CD Installer screen.
5. Select Install Network Utility, and then select EposonNet Config.
6. Click the Continue button.
7. Read the license agreement, and then click the Accept button.
8. Select Easy Install from the drop-down list and click the Install button.
9. Follow the on-screen instructions to complete the installation.
10. Restart your computer.

Accessing the EpsonNet Config for Macintosh User's Guide

The *EpsonNet Config for Macintosh User's Guide* contains detailed information on EpsonNet Config. Follow the steps below to access the *EpsonNet Config User's Guide*.

1. Double-click the Macintosh HD icon. In the Applications folder, double-click the EpsonNet folder, and then double-click the EpsonNet Config folder. Finally, double-click the EpsonNet Config icon.

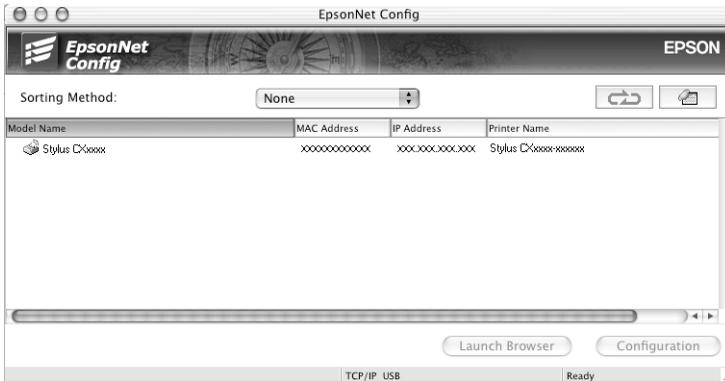

2. From the Help menu, select EpsonNet Config Help.

The *EpsonNet Config User's Guide* appears. By clicking the links on the left side of the screen, you can get information on using EpsonNet Config.

EpsonNet Config with Web Browser

About EpsonNet Config with Web Browser

EpsonNet Config with Web Browser is a Web-based utility designed to configure the network interface for use on a network.

By typing the IP address of the network interface for the URL in your browser, you can start EpsonNet Config to allow you to configure the network interface for Wireless, TCP/IP, AppleTalk, MS Network, IPP, and SNMP.

Supported Web browser

- Microsoft Internet Explorer version 4.0 or later
- Netscape Communicator version 4.0 or later
- Netscape Navigator version 3.02 or later
- Apple Safari 1.2 or later

About Web browser setting

When running EpsonNet Config with Web Browser, be sure to disable the proxy server to use the utility through the Internet. If you use Internet Explorer as the web browser, use the following steps to clear the Access the Internet using a proxy server check box. For other web browsers, see the documentation or online help of your web browser.

1. Start up Internet Explorer.
2. Select Internet Options from the Tool menu.
3. Click the Connections tab.

4. Click the LAN Settings button.
5. Clear the Use a proxy server for your LAN (These settings will not apply to dial-up or VPN connections). check box.

Configuring the Network Interface Using EpsonNet Config with Web Browser

After you have assigned an IP address to the network interface using Easy Install, EpsonNet Config for Windows or Macintosh, or the arp/ping command, you can configure the network interface using EpsonNet Config with Web Browser.

Note:

- A Web browser must be installed on your computer.*
- TCP/IP must be correctly set for the computer and the network interface.*
- Do not run both EpsonNet Config for Windows or Macintosh and EpsonNet Config with Web Browser at the same time.*
- Your browser may restrict some characters you can use. For details, see your browser or operating system documentation.*

Follow the steps below to change the IP address using EpsonNet Config with Web Browser.

1. Turn on the device.
2. Run EpsonNet Config with Web Browser using one of the following ways.
 - Run EpsonNet Config for Windows or Macintosh. Select the device you want to configure from the list and then click Launch Browser.

- ❑ Open your browser, and then type in the IP address of the network interface directly. Do not run EpsonNet Config for Windows or Macintosh.

http://*/IP address of network interface/*

Example: http://192.168.100.201/

Note:

To check the IP address of the network interface, use EpsonNet Config. For details, see “About EpsonNet Config for Windows” on page 114 for Windows users, or “About EpsonNet Config for Macintosh” on page 118 for Macintosh users.

3. Click TCP/IP under Network on the Configuration menu to display the TCP/IP setting screen.

Note:

If you want to configure a protocol other than TCP/IP, see “Configuration - Network Screens” on page 132.

4. Select a method for acquiring the IP address. When you select Auto, an IP address is automatically assigned to the network interface via DHCP. If you want to set the IP address manually, select Manual.

Note:

- ❑ *The network administrator must check any changes made to the IP address settings.*
- ❑ *When Auto is selected, an IP address can be acquired via DHCP. To use the DHCP server, make sure it is installed on your computer and correctly configured. See your operating system’s online help for detailed instructions.*
- ❑ *If Set Using Automatic Private IP Addressing (APIPA) is enabled, a private IP address is automatically assigned to the network interface even when there are no DHCP servers on your system or your network.*

❑ *If the Dynamic DNS function is not supported, we recommend that you select Manual and then enter an IP address. This is because if you select Auto, the IP address of the network interface changes every time you turn on the device so that you need to change the printer port setting accordingly.*

5. To assign an IP address manually, enter the IP address, the subnet mask, and the default gateway. Be sure the IP address does not conflict with any other devices on the network.

Note:

If there is a server or a router functioning as a gateway, enter the IP address of the server or the router for the gateway address. If there is no gateway, leave the default values there.

6. If you want to get a private address between 169.254.1.1 and 169.254.254.254 automatically when an IP address cannot be obtained by the DHCP server, select Enable for Set Using Automatic Private IP Addressing (APIPA); otherwise, select Disable.
7. When setting an IP address using the ping command, select Enable for Set Using PING. Select Disable when setting an IP address with EpsonNet Config; this prevents any unexpected change of the IP address.

Note:

Be sure to select Disable when not using ping; this prevents an unexpected change of the IP address by EpsonNet WebManager.

8. Select Enable for Acquire DNS Server Address Automatically if you want to acquire the DNS server address using the DHCP server.

If you want to enter the DNS server address manually, select Disable and then enter the IP address of the DNS server.

9. Select Enable for Acquire Host Name and Domain Name Automatically if you want to acquire the host name and the domain name using the DHCP server.

If you want to specify manually, enter the host name and the domain name in the text boxes.

10. Select Enable for Register Network Interface Address to DNS Server if you want to register the host name and domain name to the DNS server through the DHCP server that supports Dynamic DNS.

If you want to register the host name and the domain name directly to the DNS server, select Enable for Register Network Interface Address Directly to DNS Server.

11. Select Enable or Disable for Use Universal Plug and Play. Select Enable if you want to use the Universal Plug and Play function on Windows Me or future operating systems.

12. Change the default Universal Plug and Play device name, if desired. This device name is used for Windows that supports the Universal Plug and Play function.

13. Mac OS X only:

Select Enable or Disable for Use Rendezvous. If you select Enable, enter the Rendezvous Name and the Rendezvous Printer Name. If your network environment supports DHCP, you can use the device on the network just by enabling this setting.

14. Click Submit and then enter the password to update the settings. For more information on setting the password, see "Password" on page 146.

Note:

If you have set the Administrator Name in the Administrator screen, enter the administrator name for the user name.


15. If the message "Configuration change is complete!" appears on your screen, the update is complete. Do not exit the Web browser and do not send a job to the device until this message appears. Follow the on-screen instructions to reset the device.

Note:

- ❑ *Since the new IP address is assigned after the device is reset, you need to restart EpsonNet Config with Web Browser by entering the new IP address.*
- ❑ *Only changes on the page where you press the Submit button take effect.*

Opening Screen

Any user can access the following screen by typing the IP address of the network interface for the URL in your browser. The opening screen consists of the Title frame, the Menu frame, and the Information frame.

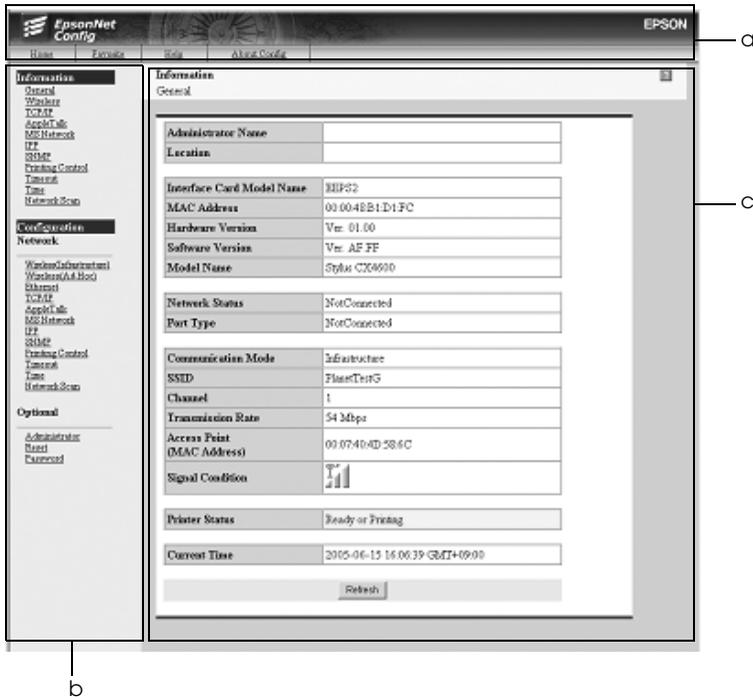

- a. Title Frame
- b. Menu Frame
- c. Information Frame

Title Frame

The Title frame is displayed on the top of the web browser. The following links are provided on the Title frame.

Home	Links to the opening screen.
Favorite	Links to a Web site previously defined by the administrator.
Help	Links to Help.
About Config	Links to the copyright and version information for EpsonNet Config.
EPSON logo	Links to the Epson Web site (http://www.epson.com).

Menu Frame

The Menu frame is displayed on the left of the web browser. The following links are provided on the Menu frame.

Information	
General	Displays the basic information about the network interface.
Wireless	Displays Information about Wireless.
TCP/IP	Displays settings for TCP/IP.
AppleTalk	Displays settings for AppleTalk.
MS Network	Displays settings for Microsoft Network.
IPP	Displays settings for IPP.
SNMP	Displays settings for SNMP.
Printing Control	Displays settings for Printing Control.
Timeout	Displays settings for Timeout.
Time	Displays settings for Time.

Network Scan*	Displays Information about Network Scan.
Configuration - Network	
Wireless (Infrastructure)	Displays Information about Infrastructure.
Wireless (Ad Hoc)	Displays Information about Ad Hoc.
Ethernet	Configure the desired Ethernet settings.
TCP/IP	Configure the desired settings/method for TCP/IP.
AppleTalk	Configure the desired settings for AppleTalk.
MS Network	Configure the desired settings for Microsoft Network.
IPP	Configure the desired settings for IPP.
SNMP	Configure the desired settings for SNMP.
Printing Control	Configure the desired settings for Printing Control
Timeout	Configure the desired settings for Timeout
Time	Configure the desired settings for Time.
Network Scan*	Configure the desired settings for Network Scan.
Configuration - Optional	
Administrator	Enter the name of the administrator and a link to a favorite Web site.
Reset	Resets the device and returns to the default settings.
Password	Set the password to protect settings.

* The Network Scan menu appears only when a connected all-in-one supports network scan.

Information Frame

On the Information frame, the contents of the item selected on the Menu frame are displayed.

General

Items	Explanations
Administrator Name	Displays the administrator name of the device.
Location	Displays the location of the device.
Interface Card Model Name	Displays the model of the network interface.
MAC Address	Displays the MAC address of the network interface. You can distinguish the network interface by its MAC address.
Hardware Version	Displays the hardware version of the network interface.
Software Version	Displays the software version of the network interface.
Model Name	Displays the product name of the device attached to the network interface.
Network Status	Displays the data transmission rate and communication mode.
Port Type	Displays the current conditions.
Communication Mode	A wireless LAN mode: Infrastructure or Ad Hoc.
SSID	SSID (or ESSID) of the access point or wireless LAN.
Channel	Channel used on the network interface for the Ad Hoc mode.
Transmission Rate	Displays the transmission rate.
Access Point (MAC Address)	Access point used for wireless LAN in the Infrastructure mode.

Signal Condition	Condition of the radio wave, as follows: Three antennas: Excellent Two antennas: Good One antenna: Poor None: No connection
Printer Status	The background color of the text box indicates the device's status. Green indicates that the device is idle or printing. Yellow indicates that either the paper or toner is low. Red indicates that either the paper or toner is completely out, the device is offline, there is a paper jam, the cover is open, or an error has occurred.
Current Time	Displays the current time.
Refresh button	Displays the latest information on the device status. Since the device status is not updated automatically, click the button to display the latest information of the device.

Configuration - Network Screens

Wireless (Infrastructure)

Security Mode (None) Settings

Wireless Basic Settings

Items	Explanations
Operation Mode	Select the operation mode from the list.
SSID (1-32 characters)	Enter the SSID (or ESSID) of the access point or wireless LAN (up to 32 characters).

Detailed Settings

Items	Explanations
AP Density	To get a continuous connection at the same access point, select Low. If you select High, roaming among access points is made easier. The network interface switches to other access points if they have better transmission conditions.

Security Mode (WEP) Settings

Wireless Basic Settings

Items	Explanations
Operation Mode	Select the operation mode from the list.
SSID (1-32 characters)	Enter the SSID (or ESSID) of the access point or wireless LAN (up to 32 characters).

Security Settings

Items	Explanations
WEP Authentication Method	Select an authentication algorithm: Open System, Shared Key, or Auto. (This item is not available when WPA-Persona (TKIP) is selected for the security level.)
Security Level	Select the security level from the list. Note: If you are using EpsonNet 802.11g Wireless Ext. Print Server in the Ad Hoc mode, you cannot use WPA-Personal (TKIP) for the security level.

WEP Settings

Items	Explanations
Input using hex	Enables or disables the function to set the WEP Key in hexadecimal.
WEP Key 1 to 4	When you select 64 bit(40 bit) for the length, you can set up to 4 WEP Keys. When you select 128 bit(104 bit), you can set only one WEP Key. For 64 bit and ASCII, enter 5 characters. For 64 bit and Hex, enter 10-digit numeric sequence. For 128 bit and ASCII, enter 13 characters. For 128 bit and Hex, enter 26-digit numeric sequence. Note: The WEP Key disappears after the network interface is configured. Therefore, do not forget the WEP Key you have set.
Active WEP Key	Select one WEP Key as an active key before enabling use of encryption.

Detailed Settings

Items	Explanations
AP Density	To get a continuous connection at the same access point, select Low. If you select High, roaming among access points is made easier. The network interface switches to other access points if they have better transmission conditions.

Security Mode (WPA) Settings

Wireless Basic Settings

Items	Explanations
Operation Mode	Select the operation mode from the list.
SSID (1-32 characters)	Enter the SSID (or ESSID) of the access point or wireless LAN (up to 32 characters).

WPA-PSK Settings

Items	Explanations
Security Mode	Select the security level from the list. Note: If you are using EpsonNet 802.11g Wireless Ext. Print Server in the Ad Hoc mode, you cannot use WPA-Personal (TKIP) for the security level.
Password (8-63 characters)	Enter the password for WPA-Personal authentication (8 to 63 characters).
Password (again)	Enter the password again.

Detailed Settings

Items	Explanations
AP Density	To get a continuous connection at the same access point, select Low. If you select High, roaming among access points is made easier. The network interface switches to other access points if they have better transmission conditions.

Security Mode (LEAP) Settings

Wireless Basic Settings

Items	Explanations
Operation Mode	Select the operation mode from the list.
SSID (1-32 characters)	Enter the SSID (or ESSID) of the access point or wireless LAN (up to 32 characters).

LEAP Settings

Items	Explanations
EAP Account	Enter the EAP Account.
EAP Password (max 32 characters)	Enter the password for EAP authentication (max 32 characters).
Re-input EAP Password	Enter the password again.

Detailed Settings

Items	Explanations
AP Density	To get a continuous connection at the same access point, select Low. If you select High, roaming among access points is made easier. The network interface switches to other access points if they have better transmission conditions.

Wireless (Ad Hoc)

Security Mode (None) Settings

Wireless Basic Settings

Items	Explanations
Operation Mode	Select the operation mode from the list.
SSID (1-32 characters)	Enter the SSID (or ESSID) of the access point or wireless LAN (up to 32 characters).
Channel	When the mode is Ad Hoc, select the channel used on the network interface.

Security Mode (WEP) Settings

Wireless Basic Settings

Items	Explanations
Operation Mode	Select the operation mode from the list.
SSID (1-32 characters)	Enter the SSID (or ESSID) of the access point or wireless LAN (up to 32 characters).
Channel	When the mode is Ad Hoc, select the channel used on the network interface.

Security Settings

Items	Explanations
WEP Authentication Method	Select an authentication algorithm: Open System, Shared Key, or Auto. (This item is not available when WPA-Personal (TKIP) is selected for the security level.)
Security Level	Select the security level from the list. Note: If you are using EpsonNet 802.11g Wireless Ext. Print Server in the Ad Hoc mode, you cannot use WPA-Personal (TKIP) for the security level.

WEP Settings

Items	Explanations
Input using hex	Enables or disables the function to set the WEP Key in hexadecimal.
WEP Key 1 to 4	<p>When you select 64 bit(40 bit) for the length, you can set up to 4 WEP Keys. When you select 128 bit(104 bit), you can set only one WEP Key.</p> <p>For 64 bit and ASCII, enter 5 characters. For 64 bit and Hex, enter 10-digit numeric sequence.</p> <p>For 128 bit and ASCII, enter 13 characters. For 128 bit and Hex, enter 26-digit numeric sequence.</p> <p>Note: The WEP Key disappears after the network interface is configured. Therefore, do not forget the WEP Key you have set.</p>
Active WEP Key	Select one WEP Key as an active key before enabling use of encryption.

Ethernet

Items	Explanations
Speed/Duplex Setting	Select the data transmission rate and communication mode. If you do not know it, select Auto.
Port Type	Select the port type.

TCP/IP

IP Address Settings

Items	Explanations
Method for Acquiring the IP Address	Select a method for acquiring IP addresses. If Auto is selected, an IP address is assigned via DHCP. To use the DHCP server, make sure it is installed on your computer and correctly configured. See your operating system's online help for detailed instructions. To set the IP address manually, select Manual.
IP Address	Enter an IP address for the network interface. Be sure the IP address does not conflict with any other devices on the network.
Subnet Mask	Set the subnet mask.
Default Gateway	Set the gateway address if needed.
Set Using Automatic Private IP Addressing (APIPA)	Select Enable to get a private address between 169.254.1.1 and 169.254.254.254 automatically when an IP address cannot be obtained by the DHCP server; otherwise, select Disable.
Set Using PING	Enables or disables IP address setting using the ping command.

DNS Server Address Settings

Items	Explanations
Acquire DNS Server Address Automatically	Select either Enable or Disable to acquire the DNS server address from the DHCP server.
DNS Server Address	Enter the DNS server address. When the DHCP server does not respond even if Enable is selected for Acquire DNS server address automatically, the DNS server address set here is used.

Host Name and Domain Name Settings

Items	Explanations
Acquire Host Name and Domain Name Automatically	Select either Enable or Disable to acquire the host name and domain name from the DHCP server.
Host Name	Enter the host name supported by Dynamic DNS (between 2 and 63 characters). The total number of characters of the host name and the domain name must not exceed 251.
Domain Name	Leave it blank or enter two or more characters of the domain name. The total number of characters of the host name and the domain name must not exceed 251.
Register Network Interface Address to DNS Server	Select Enable if you want to send the host name and the domain name to the DHCP server that supports Dynamic DNS update to request for DNS dynamic updates.
Register Network Interface Address Directly to DNS Server	Select Enable if you want to directly send the host name and the domain name to the DNS server that supports Dynamic DNS update to request DNS dynamic updates. When Disable is selected for Register network interface Address to DNS server, this item is also disabled.

Universal Plug and Play Settings

Items	Explanations
Use Universal Plug and Play	Enables or disables Universal Plug and Play.
Device Name	Enter the device name (between 2 and 63 characters).

Bonjour (Rendezvous) Settings

Items	Explanations
Use Bonjour	Select either Enable or Disable to use Bonjour.
Bonjour Name	Enter the Bonjour name.
Bonjour Printer Name	Enter the printer name for Bonjour.

AppleTalk

Items	Explanations
Use AppleTalk	Enables or disables AppleTalk.
Printer Name	Enter the name of the device attached to the network interface (up to 32 characters).
Zone Name	Enter the network zone name (up to 32 characters). To have the zone selected automatically, select Auto for the Network Number Set and enter an asterisk (*) in this text box.
Entity Type	Displays the entity type of the device. Set an entity type appropriate for your printer or all-in-one. For details, see "Supported Devices" on page 234.
Network Number Set	Select Auto or Manual. Usually Auto is recommended.
Network Number for Manual Mode(0-65534)	Enter the network number when you select Manual for Network Number Set.

MS Network

Items	Explanations
Use Microsoft Network Shared Printing	Enables or disables the Microsoft network shared printing.
Host Name	Enter the host name (up to 15 characters).
Workgroup Name	Enter the workgroup name or domain name (up to 15 characters).
Printer Share Name	Enter the file share name (up to 12 characters). LPT "X" or COM cannot be used. ("X" represents a number, either 0 or larger.)
File Share Name	Enter the file share name.
File Share Mode	Select the access attribute.

IPP

You must make the following settings before setting up the device for Internet Printing on Windows XP/Me/2000/Server 2003 or using EpsonNet Internet Print on Windows 98/95/NT 4.0. See "About EpsonNet Internet Print" on page 167 for more information.

Items	Explanations
IPP URL	Displays the device's URL for Internet Printing. Format: http://IP address of network interface:631/printer name set below Example: http://192.168.100.201:631/EPSON_IPP_Printer
Printer Name	Enter the name of a device to use for Internet Printing (up to 127 characters). Example: EPSON_IPP_Printer

Items	Explanations
Location	Enter the name of the device's physical location (up to 64 characters).

SNMP

Community

Items	Explanations
Read Only	The word "public" always appears.
Read/Write	Enter the Read/Write community name (up to 32 characters).

IP Trap

Items	Explanations
Trap	Enables or disables the trap.
Address	Enter the IP address of the network interface to which the trap is sent.
Community	Enter the community name (up to 32 characters).
Port Number	Enter the port number of the receive host, in decimal (between 0 and 65535).

Printing Control

Printing Control Settings

Items	Explanations
Printing Control	Enables or disables the printing control.
Printer Access Control	Select Allow or Deny. Selecting Allow permits the network access from the IP addresses registered on the printer access control list. On the other hand, selecting Deny blocks the network access from the IP addresses registered on the printer access control list.
Printer Access Control List	Enter the IP address ranges by which the network access is restricted.

Timeout

Printing

Items	Explanations
LPR(0-3600)	Set the length of time for LPR before a timeout occurs (between 0 and 3600 seconds). Enter 0 not to apply the timeout.
RAW(Port9100) (0-3600)	Set the length of time for RAW(Port9100) before a timeout occurs (between 0 and 3600 seconds). Enter 0 not to apply the timeout.
IPP(0-3600)	Set the length of time for IPP before a timeout occurs (between 0 and 3600 seconds). Enter 0 not to apply the timeout.

Time

Items	Explanations
Time	Displays the current time. Click the Get Time button to reload the display. When the time server is enabled, time is acquired from the time server.

Manual Settings

If the network interface has RTC (Real Time Clock), you can set the time manually.

Items	Explanations
Date (YYYY-MM-DD)	Enter the year, month, and day.
Time (HH:MM:SS)	Enter the hour, minutes, and seconds.
Time Difference (HH:DD)	Enter the difference between time at the present location and Greenwich Mean Time (GMT).
Apply button	Applies the settings.

Time Server Settings

Items	Explanations
Time Server	Select either Enable or Disable to synchronize time with the time server.
Time Server Address	Enter the IP address of the time server.
Synchronize Interval (1-10080)	Enter the time interval in minutes for automatic time synchronization.
Time Difference (GMT+/-HH:MM)	Enter the difference between the time at the present location and Greenwich Mean Time (GMT).
Time Server Status	Displays the connection status with the time server.
Apply button	Applies the settings.

Network Scan

Items	Explanations
Use Network Scan	Enable or Disable the network scan.

Configuration - Optional Screens

Administrator

You can link to the Web site specified on this screen when you click Favorite (the name can be changed) in Index.

Items	Explanations
Administrator Name	Enter the name of the administrator (up to 255 characters).
Location	Enter the location of the device (up to 255 characters).

Favorite

Items	Explanations
Favorite Name	Enter the link item name (up to 20 characters) that will be displayed in the Index menu.
Favorite URL	Enter a URL (up to 64 characters).
Description	Enter any comments for the URL above (up to 64 characters).

Note:

Links to ftp are not supported.

Reset

You can reset the network interface or return the settings to the default values.

Items	Explanations
Reset button	Turns the power off and on again. Click this button to make the changes take effect.
Return to Default button	Returns the network interface to the default settings.

Password

The password set here protects the settings. You will be asked for the password when you update or change the settings on each setting screen. Passwords are case sensitive. No password is set by default.

Items	Explanations
Old Password	Enter the current password.
New Password	Enter the new password (up to 20 characters).
New Password (again)	Enter the new password again to confirm.

Note:

- ❑ *The same password is used for EpsonNet Config for Windows and Macintosh, and EpsonNet Config with Web Browser.*
- ❑ *If you forget your password, you need to initialize the network interface. See "Initializing the Network Interface" on page 220 for instructions.*

EpsonNet Print

About EpsonNet Print

EpsonNet Print is a utility program that provides peer to peer printing to Epson devices on the TCP/IP network.

By using EpsonNet Print, you can find a device located in the same segment or beyond a router. You can select LPR standard printing, LPR enhanced printing, or High-speed printing.

System Requirements

EpsonNet Print supports the following environments.

Operating systems	Windows XP (with Service Pack 1 or higher) Windows Me, 98, 98 Second Edition Windows 95 OSR2 (with Internet Explorer version 5.0 or higher) Windows 2000 (with Service Pack 4 or higher) Windows NT 4.0 (with Service Pack 6 or higher) Windows Server 2003
CPU	Pentium II 400 MHz or better recommended
Memory	64 MB or more
Hard disk space	20 MB or more
Display	800 × 600 screen resolution, 256 color or more

Installing EpsonNet Print

Follow the steps below to install EpsonNet Print. Be sure to install it on a computer connected to the network.

1. Insert the Software CD-ROM into the CD-ROM drive.
2. The Software Installation screen opens automatically.

If the Software Installation screen does not appear, double-click EPSetup.exe on the CD-ROM.
3. Click **Next** on the CD Installer screen.
4. Select **Install Network Utility**, and then select **EpsonNet Print**.
5. Make sure that all applications are closed, and then click the **Next** button.
6. Read the license agreement, and then click the **Yes** button.
7. Follow the on-screen instructions to complete the installation.

The installation is complete. You can add a new port for the printer with using EpsonNet Print.

- ❑ For Windows XP/2000/NT 4.0/Server 2003 users, see “For Windows XP/2000/Server 2003/NT 4.0 Users” on page 149.
- ❑ For Windows Me/98/95 users, see “For Windows Me/98/95 Users” on page 158.

For Windows XP/2000/Server 2003/NT 4.0 Users

Follow the steps below to add a port using the Add Printer Wizard.

- ❑ If you want to add a port for a device with its IP address assigned automatically by the DHCP server or router, see “Adding a port for a device assigned with a dynamic IP address” on page 149.
- ❑ If you want to add a port for a device with its IP address assigned manually, see “Adding a port for a device assigned with a static IP address” on page 154.

Note:

- ❑ *Be sure that the computer is connected to the network and TCP/IP is correctly set.*
- ❑ *A valid IP address must be assigned to the network interface.*

Adding a port for a device assigned with a dynamic IP address

1. **For Windows XP:** Click Start and then Printers and Faxes. Under Printer Tasks, click Add a printer to start the Add Printer Wizard.

For Windows 2000: Click Start, point to Settings, and then select Printers. Double-click Add Printer in the Printers folder to start the Add Printer Wizard.

For Windows Server 2003: Click Start and then Printers and Faxes. Double-click Add Printer in the Printers folder to start the Add Printer Wizard.

For Windows NT 4.0: Click Start, point to Settings, and then select Printers. Double-click the Add Printers icon.

2. Click Next.

3. **For Windows XP/Server 2003:** Click Local printer attached to this computer, clear the Automatically detect and install my Plug and Play printer check box, and then click Next. Select the Create a new port radio button, and then select EpsonNet Print Port from the list. Click Next.

Note for Windows XP Service Pack 2 users:


If the following screen appears, click the Unblock button, and then click the Search Again button to search the devices.



For Windows 2000: Click Local printer, clear the Automatically detect and install my Plug and Play printer check box, and then click Next. Select the Create a new port radio button, and then select EpsonNet Print Port from the list. Click Next.

For Windows NT 4.0: Select the My Computer radio button, and then click Next. Click the Add Port button in the Add Printer wizard dialog box. Select EpsonNet Print Port from the Available Printer Port list, and then click the New Port button.

4. Select the target device, and then click Next.

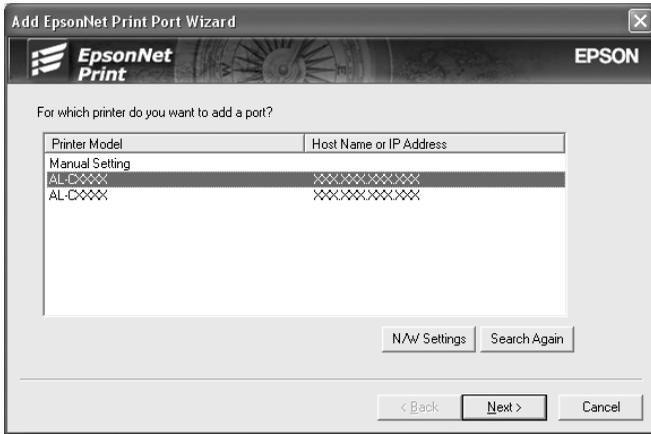

Note:

- ❑ *If the target device is not in the list, click the Search Again button to search the devices using new parameters.*
- ❑ *Each column can be sorted in ascending or descending order by clicking the column header. However, Manual Setting is always displayed on the top of the list regardless of sorting.*

- ❑ *If you want to search devices in other segments, click the N/W Settings button. Select the Specific Network Segments check box, and then enter the network address and subnet mask of the network segment for the search. Then click the Add button. You can also specify Time Before Declaring Communication Error.*

Search Settings [X]


Specific Network Segments

Network Address:	Subnet Mask:	
<input type="text"/>	<input type="text"/>	Add
Network Address	Subnet Mask	Remove

Time Before Declaring Communication Error: sec

OK Cancel

5. Confirm the information about the device's port you want to configure, and then click Finish.

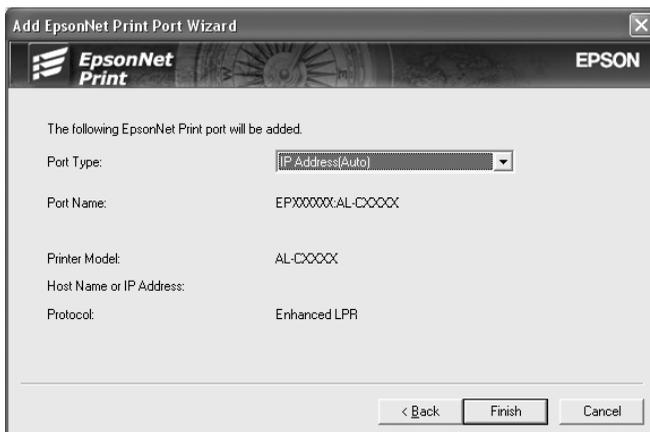

Items	Explanations
Port Type	<p>The following items are listed in the pull-down menu, and you can select the port type you need.</p> <p>IP Address(Auto): Configure the port automatically. If the IP address of the device is acquired automatically and the computer and the device are in the same segment, you can select this port type.</p> <p>IP Address(Manual): Use the device's IP Address for the port name.</p> <p>HostName (DNS): Use the device's host name registered in the DNS server for the port name.</p> <p>MS Network: Use the NetBIOS name registered in the device for the port name.</p>

Items	Explanations
The port Information	The following items are displayed: - Port Name (automatically assigned according to the selected port type.) - Printer Model - Host Name or IP Address (automatically assigned according to the selected port type) - Protocol
Finish button	Register the port information to the system and close the Add EpsonNet Print Port Wizard.
Back button	Go back to the device list window.
Cancel button	Close the Add EpsonNet Print Port Wizard.

The new printer port is created in your computer. To install the printer driver, see “Installing the Printer Driver” on page 157.

Adding a port for a device assigned with a static IP address

1. **For Windows XP:** Click Start and then Printers and Faxes. Under Printer Tasks, click Add a printer to start the Add Printer Wizard.

For Windows 2000: Click Start, point to Settings, and then select Printers. Double-click Add Printer in the Printers folder to start the Add Printer Wizard.

For Windows Server 2003: Click Start and then Printers and Faxes. Double-click Add Printer in the Printers folder to start the Add Printer Wizard.

For Windows NT 4.0: Click Start, point to Settings, and then select Printers. Double-click the Add Printers icon.


2. Click Next.

3. **For Windows XP/Server 2003:** Click Local printer attached to this computer, clear the Automatically detect and install my Plug and Play printer check box, and then click Next. Select the Create a new port radio button, and then select EpsonNet Print Port from the list. Click Next.


For Windows 2000: Click Local printer, clear the Automatically detect and install my Plug and Play printer check box, and then click Next. Select the Create a new port radio button, and then select EpsonNet Print Port from the list. Click Next.

For Windows NT 4.0: Select the My Computer radio button, and then click Next. Click the Add Port button in the Add Printer wizard dialog box. Select EpsonNet Print Port from the Available Printer Port list, and then click the New Port button.


4. Select Manual Setting from the list, and then click Next.

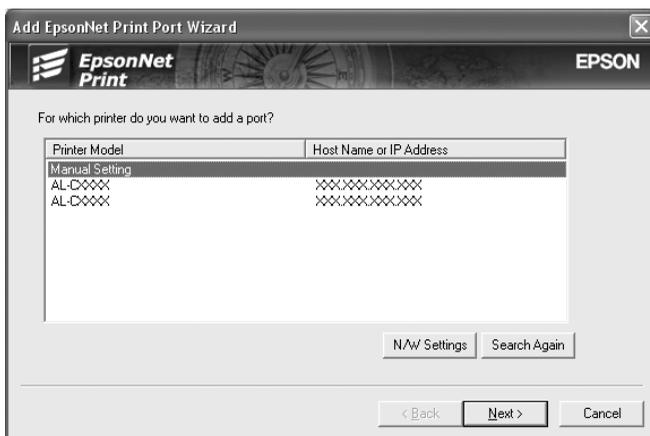

5. Enter the device's name and the port name is automatically entered to the Port Name edit box. Then click Next.

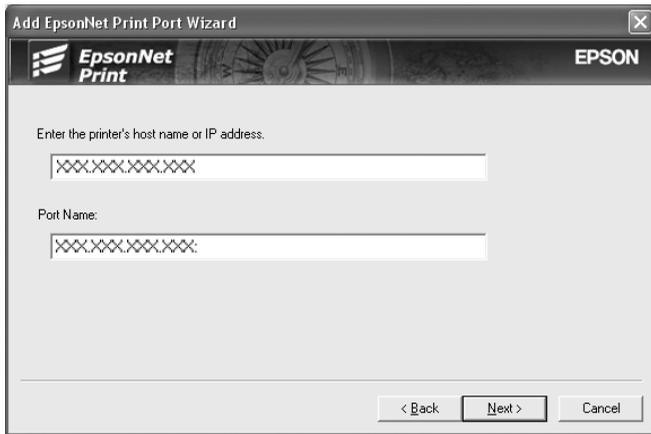

6. Confirm the information about the device's port you want to configure, and then click Finish.

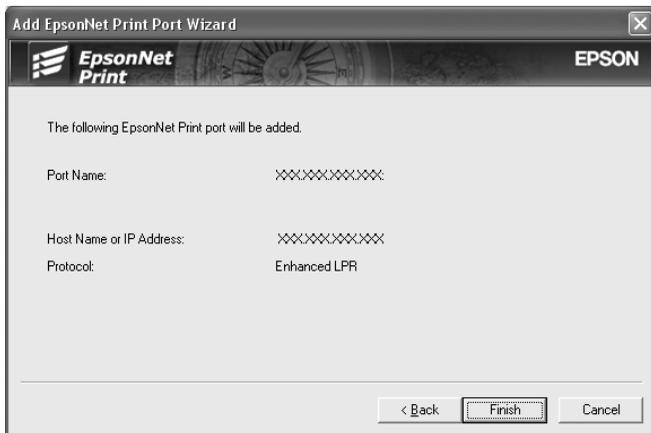

Items	Explanations
The port Information	The following items are displayed. - Port Name - Host Name or IP Address - Protocol
Finish button	Register the port information to the system and close the Add EpsonNet Print Port Wizard.
Back button	Go back to the device list window.
Cancel button	Close the Add EpsonNet Print Port Wizard.

The new printer port is created in your computer. To install the printer driver, see “Installing the Printer Driver” on page 157.

Installing the Printer Driver

Install the printer driver that comes with your device.

Note:

Some buttons in these steps may be slightly different depending on your operating system.

1. Insert the Software CD-ROM shipped with the device.
2. Close the EPSON Installation Program screen if it appears.
3. Click the Have Disk button. The Install From Disk dialog box appears.
4. Click Browse.
5. Select the CD-ROM drive for Drives, and double-click the appropriate folder for your operating system. Click OK.
6. Click OK in the Install From Disk dialog box.

7. Select the model name of the device, and then click Next.

Note:

If the Add Printer wizard asks you to select either Keep existing driver or Replace existing driver, be sure to select the Replace existing driver radio button. Click Next.

8. Click Finish and follow the on-screen instructions to complete the setup.

The printer is now ready for peer-to-peer printing. To configure the printer port, see “Configuring the Printer Port” on page 165.

For Windows Me/98/95 Users

Follow the steps below to add a port using the Add Printer Wizard.

- If you want to add a port for the device with its IP address assigned automatically from the DHCP server or router, see “Adding a port for a device assigned with a dynamic IP address” on page 159.
- If you want to add a port for the device with its IP address assigned manually, see “Adding a port for a device assigned with a static IP address” on page 162.


Note:

- Be sure that the computer is connected to the network and TCP/IP is correctly set.*
- Be sure that the driver of the target device is installed on the computer.*
- A valid IP address must be assigned to the network interface.*

Adding a port for a device assigned with a dynamic IP address

Install the printer driver before adding a port for the device. See the manual shipped with your device for instructions on how to install the printer driver.

1. Click Start, point to Settings, and then select Printers.
2. Right-click the target device icon, and then select Properties.
3. Click the Details tab, and then click the Add Port button. Select the Other radio button, and then select EpsonNet Print Port. Click OK.
4. Select the target device, and then click Next.

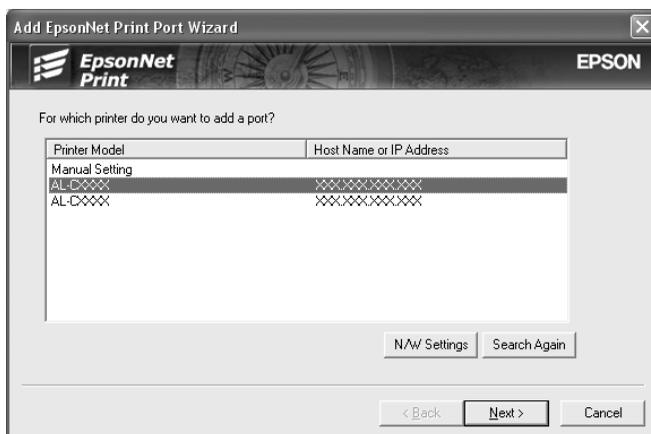


Note:

- ❑ If the target device is not in the list, click the Search Again button to search the devices using new parameters.
- ❑ Each column can be sorted in ascending or descending order by clicking the column header. However, Manual Setting is always displayed on the top of the list regardless of sorting.

- ❑ *If you want to search devices in other segments, click the N/W Settings button. Select the Specific Network Segments check box, and then enter the network address and subnet mask of the network segment for the search. Then click the Add button. You can also specify Time Before Declaring Communication Error.*

The image shows a 'Search Settings' dialog box. It features a checkbox for 'Specific Network Segments'. Below this checkbox is a table with two columns: 'Network Address' and 'Subnet Mask'. To the right of the table are 'Add' and 'Remove' buttons. At the bottom of the dialog, there is a label 'Time Before Declaring Communication Error:' followed by a text box containing the number '6' and the unit 'sec'. At the very bottom are 'OK' and 'Cancel' buttons.

5. Confirm the information about the device's port you want to configure, and then click Finish.

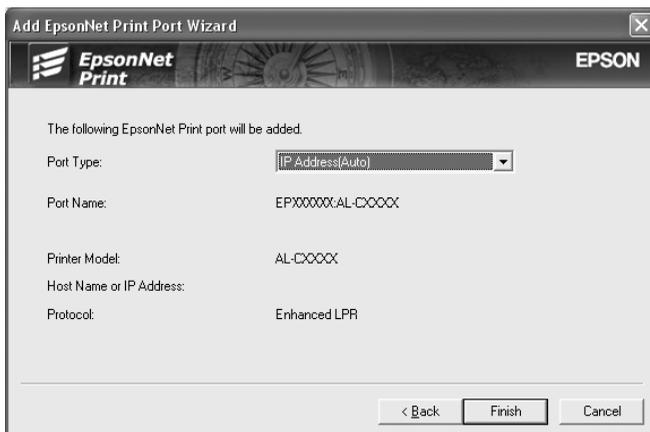

Items	Explanations
Port Type	<p>The following items are listed in the pull-down menu, and you can select the port type you need.</p> <p>IP Address(Auto): Configure the port automatically. If the IP address of the device is acquired automatically and the computer and the device are in the same segment, you can select this port type.</p> <p>IP Address(Manual): Use the device's IP Address for the port name.</p> <p>HostName (DNS): Use the device's host name registered in the DNS server for the port name.</p> <p>MS Network: Use the NetBIOS name registered in the device for the port name.</p>

Items	Explanations
The port Information	The following items are displayed: - Port Name (automatically assigned according to the selected port type) - Printer Model - Host Name or IP Address (automatically assigned according to the selected port type) - Protocol
Finish button	Register the port information to the system and close the Add EpsonNet Print Port Wizard.
Back button	Go back to the device list window.
Cancel button	Close the Add EpsonNet Print Port Wizard.


The printer is now ready for peer-to-peer printing. To configure the printer port, see “Configuring the Printer Port” on page 165.

Adding a port for a device assigned with a static IP address


Install the printer driver before adding a port for the device. See the manual shipped with your device for instructions on how to install the printer driver.

1. Click Start, point to Settings, and then select Printers.
2. Right-click the target device icon, and then select Properties.
3. Click the Details tab, and then click the Add Port button. Select the Other radio button, and then select EpsonNet Print Port. Click OK.


4. Select Manual Setting from the list, and then click Next.

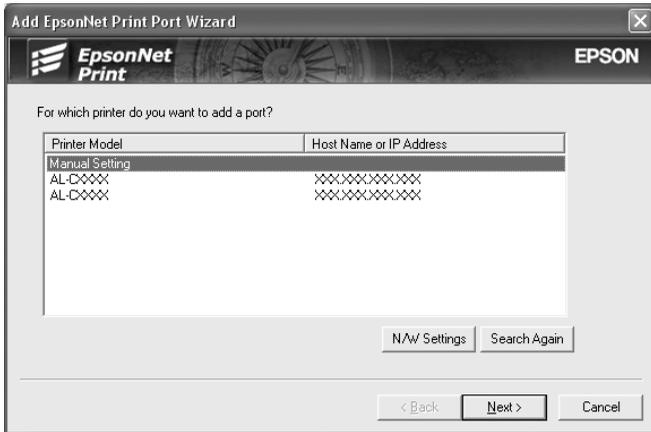

5. Enter the device's name and the port name is automatically entered to the Port Name edit box. Then click Next.

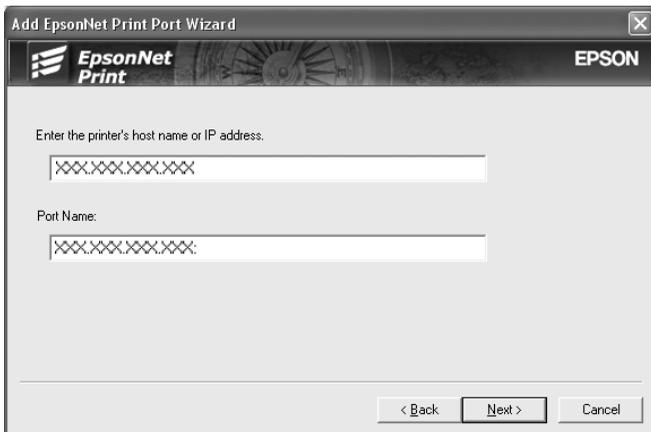

6. Confirm the information about the device's port you want to configure, and then click Finish.

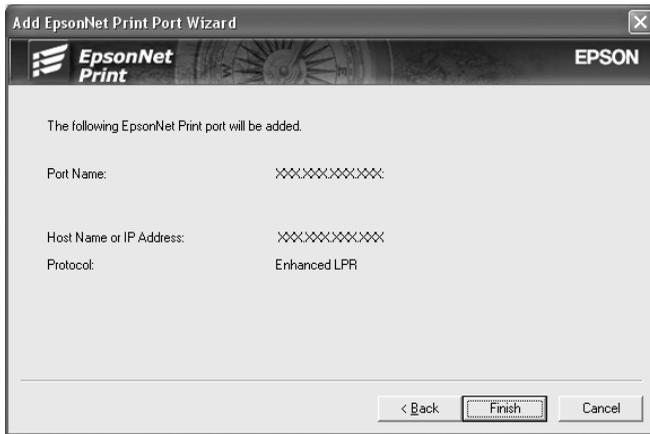

Items	Explanations
The port Information	The following items are displayed: - Port Name - Host Name or IP Address - Protocol
Finish button	Register the port information to the system and close the Add EpsonNet Print Port Wizard.
Back button	Go back to the device list window.
Cancel button	Close the Add EpsonNet Print Port Wizard.

The printer is now ready for peer-to-peer printing. To configure the printer port, see “Configuring the Printer Port” on page 165.

Configuring the Printer Port

Follow the steps below to configure the printer port. The printing speed differs depending on your selection.

1. **For Windows Me/98/95/2000/NT 4.0:** Click Start, point to Settings, and then select Printers.


For Windows XP/Server 2003: Click Start and then Printers and Faxes.

2. Right-click the target device, and then click Properties.

3. **For Windows Me/98/95:** Click the Details tab, and then click the Port Settings button.

For Windows XP/Server 2003/2000/NT 4.0: Click the Ports tab, and then click the Configure Port button.

4. Make the appropriate settings for the desired port.

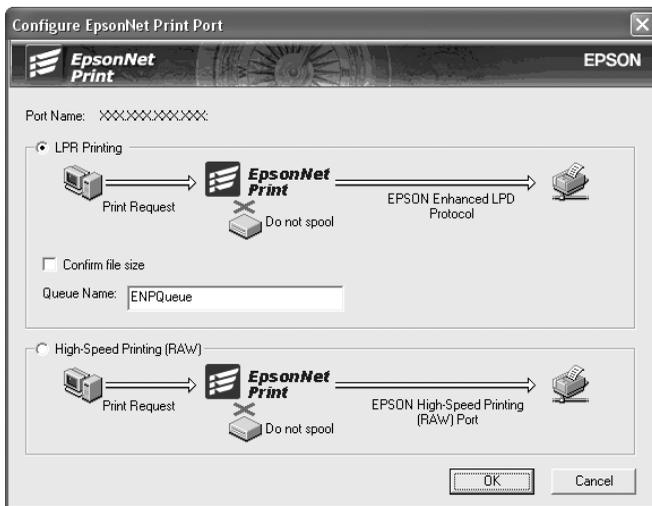

LPR enhanced printing:

Select the LPR Printing radio button, and specify the queue name (up to 32 characters). LPR enhanced printing sends a print job to the target network device without spooling all of the print data. LPR enhanced printing is faster than LPR standard printing.

LPR standard printing:

Select the Confirm file size check box, and specify the queue name (up to 32 characters). Print data is spooled by the computer before being sent to the target network device.

Note:

When the print data size exceeds 20 MB, we recommend that you use LPR enhanced printing

High-Speed printing:

Select the High-Speed Printing (RAW) radio button. The Epson high-speed printing port sends a print job to the target network device without spooling all of the print data. High-Speed printing is faster than the other two printing methods.

5. Click OK.

If you select the High-Speed Printing (RAW) radio button and if the printer does not support High-Speed printing, an error message appears. Follow the message to remedy the problem.

EpsonNet Internet Print

About EpsonNet Internet Print

EpsonNet Internet Print is a utility program that supports printing across the Internet using Internet Printing Protocol (IPP). Since the network interface supports IPP, Internet printing is possible using this utility. You can print or make printer settings from Windows 98/95/NT 4.0 systems that can access the Internet. You can also print via a proxy server using this utility.

Before using the EpsonNet Internet Print utility, be sure to read the Readme.txt file found in the EpsonNet Internet Print folder. This file contains the latest information on the EpsonNet Internet Print.

Note:

- ❑ *EPSON Status Monitor is a utility program that monitors your device and gives you information about its current status. Because this utility does not support IPP, devices connected to the Internet cannot be monitored with EPSON Status Monitor. If you use EpsonNet Internet Print on a computer which has EPSON Status Monitor installed, a communication error message may appear when you view printer properties. To avoid this, click the Optional Settings tab in the target printer's properties dialog box and click the Update the Printer Option Information Manually radio button.*
- ❑ *For Windows XP/Me/2000, use the OS standard IPP client for the Internet printing.*

System Requirements

Operating systems

- ❑ Windows 98, Windows 95, or Windows NT 4.0 Server and Workstation
- ❑ An Intel x86 series or compatible processor

Supported products

- ❑ Epson network interfaces that support IPP (EpsonNet Internet Print comes with Epson network interface products that support IPP)

Installing EpsonNet Internet Print

Follow the steps below to install EpsonNet Internet Print.

1. Insert the Software CD-ROM into the CD-ROM drive.
2. The Software Installation screen opens automatically.

If the Software Installation screen does not appear, double-click EPSetup.exe on the CD-ROM.
3. Click **Next** on the CD Installer screen.
4. Select **Install Network Utility**, and then select **EpsonNet Internet Print**.
5. Make sure that all applications are closed, and then click the **Next** button.
6. Read the license agreement, and then click the **Agree** button. If necessary, select the model of your printer.
7. Follow the on-screen instructions to complete the installation.

8. Restart the computer after installation is complete.

Setting Up Your Device Using EpsonNet Internet Print

EpsonNet Internet Print supports printing across the Internet using Internet Printing Protocol. Follow the steps below to set up the device.


Note:

Before following the steps below, you must make the appropriate IPP settings in EpsonNet Config. See the EpsonNet Config User's Guide or "IPP" on page 141 for instructions on setting up IPP. In the steps below, you will be asked for the IPP URL you set in the IPP setting screen in EpsonNet Config.

Windows 98/95

1. Make sure that TCP/IP is correctly installed and setup in the computer and a valid IP address is set for the computer and device.
2. Make sure that the IPP settings in EpsonNet Config are correct. See the *EpsonNet Config User's Guide* or "IPP" on page 141 for instructions on settings for IPP.
3. To start EpsonNet Internet Print, click Start, point to Programs and then EpsonNet Internet Print, then click Add EpsonNet Internet Print Port.

- The following screen appears. The address you set here becomes the port for Internet printing. Make the settings described below.

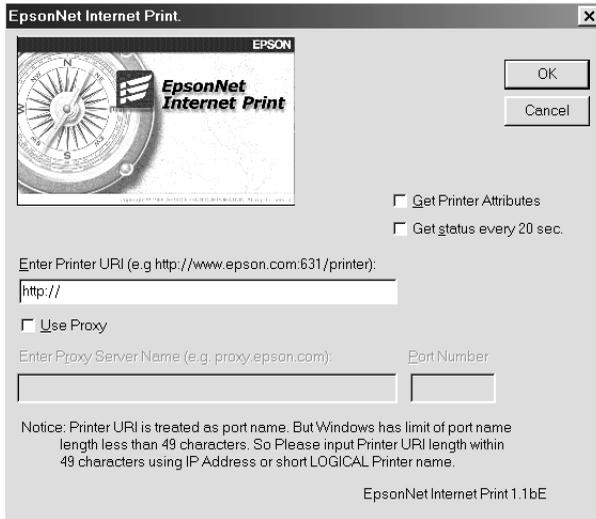

Enter Printer URI:

Enter the target device's URI up to 49 characters. The URI you set here must be same as the IPP URL you have set for the IPP setting screen in EpsonNet Config. Do not use the following characters; | \ [] { } < > # " ' `

Format: **http://**IP address of device:**631**/printer name

Example: **http://**192.168.100.201:**631**/EPSON_IPP_Printer

Use Proxy:

When using the proxy server, select this box and enter the Proxy Server Name and Port Number. All communication is done via the proxy server.

Enter Proxy Server Name:

Enter the proxy server name or the IP address of the proxy server. You can enter up to 256 characters, but only 127 characters are valid. Do not use the following characters; | \ [] { } < > # " `

Port Number:

Enter the port number of the proxy server (from 0 to 65535).

Get Printer Attributes:

When you select this box and click OK, EpsonNet Internet Print communicates with the device and acquires information, so it may take a few minutes before a message appears. This setting is available only when creating a port.

Get status every 20 sec.:

Select this box when you want to receive printer status updates at regular intervals (every 5 seconds during printing and every 20 seconds when idle). If you select this box, a message will appear if an error occurs during printing. You can also check the printer status by double-clicking the printer icon.

OK button:

Saves the settings.

Cancel button:

Cancels any changes.

Note:

- The settings you make above can be changed from the printer driver. In the printer Properties dialog box, click the Details tab, and click the Port Settings button to change the settings.*
- Be aware that when connecting to the Internet using a dial-up router and selecting the Get status every 20 sec check box, you may be charged for the extra line connection.*

- ❑ *When you check the Get Printer Attributes check box and click OK, an error message may appear. Be sure that the device power is on, and the device is correctly connected on the network.*
- ❑ *If the device power is off or there is a problem on the network, the Get status every 20 sec check box is automatically cleared. If this happens, make sure that the device power is on and the device is correctly connected on the network, and then select the Get status every 20 sec check box again.*

5. Click OK to save settings.
6. When a message appears saying the settings are correctly configured, click OK to start the Add Printer Wizard. Click Next.

Note:

If you click Cancel and then later want to add the device, start the Add Printer Wizard and follow the steps below.


7. Click the Local printer radio button and click Next.

8. Select the printer driver and click Next.

If the following dialog box appears, select Replace existing driver and click Next.



9. Select the port added by EpsonNet Internet Print in the previous section. Click Next.

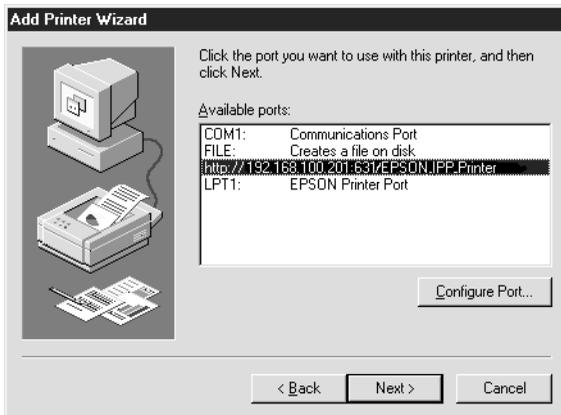

10. Follow the on-screen instructions to install the printer driver.

11. If a dialog box instructing you to install EPSON Status Monitor 2 or EPSON Status Monitor 3 appears, click Cancel and terminate the installation.


Note:

- ❑ *If you delete the port which you set above from the Details tab of the printer properties, you cannot reuse the deleted port name as a new port name (the printer URI) until you restart the computer.*
- ❑ *If you are using EPSON Status Monitor 3 and printing with EpsonNet Internet Print, the message "A communication error has occurred." appears. You can get rid of this message by clearing the Monitor the Printing Status check box in the Utility menu of the printer properties.*


Windows NT 4.0

1. Be sure that TCP/IP is correctly installed and setup in the computer and a valid IP address is set for the computer and device.
2. Make sure that the IPP settings in EpsonNet Config are correct. See the *EpsonNet Config User's Guide* or "IPP" on page 141 for instructions on settings for IPP.
3. Click Start, point to Settings, and then select Printers.
4. Double-click the Add Printer icon and click Next.
5. Click the My Computer radio button and click Next.

- Click the Add Port button, and select EPSON IPP Port from the list. Then click the New Port button.

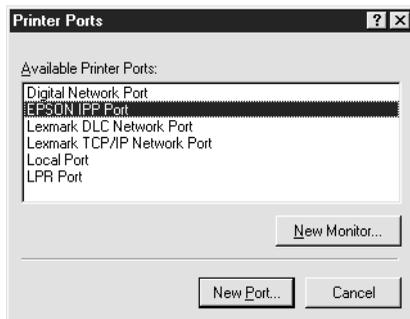

- The following screen appears. The address you set here becomes the port for Internet printing. Make the settings described below.

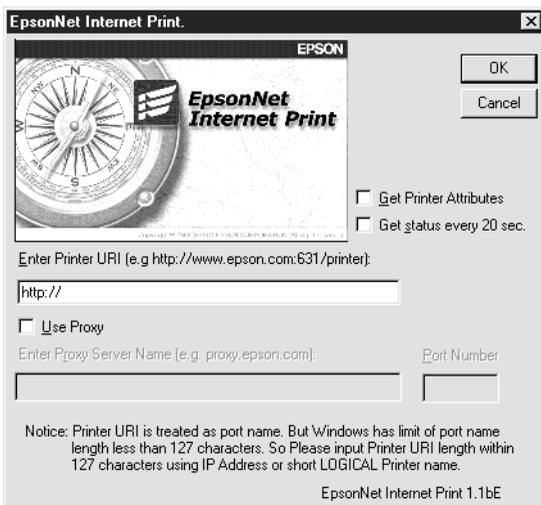

Enter Printer URI:

Enter the target device's URI (up to 127 characters). The URI you set here must be the same as the IPP URL you set for the IPP configuration in EpsonNet Config. Do not use the following characters; | \ [] { } < > # " `

Format: **http://**IP address of device:**631/**printer name

Example: **http://**192.168.100.201:**631/**EPSON_IPP_Printer

Use Proxy:

When using a proxy server, select this box and enter the Proxy Server Name and Port Number. All communication is done via the proxy server.

Enter Proxy Server Name:

Enter the proxy server name or the IP address of the proxy server (up to 256 characters). Do not use the following characters; | \ [] { } < > # " `

Port Number:

Enter the port number of the proxy server (from 0 to 65535).

Get Printer Attributes:

When you select this box and click OK, EpsonNet Internet Print communicates with the device and acquires information, so it may take a few minutes before a message appears. This setting is available only when creating a port.

Get status every 20 sec.:

Select this box when you want to receive printer status updates at regular intervals (every 5 seconds during printing and every 20 seconds when idle). If you select this box, a message will appear if an error occurs during printing. You can also check the printer status by double-clicking the printer icon.

OK button:

Saves the settings.

Cancel button:

Cancels any changes.

Note:

- ❑ *The settings can be changed after setting up the device. In the printer Properties dialog box, click the Ports tab, and click the Configure Port button to change the settings.*
 - ❑ *Be aware that if you connect to the Internet using a dial-up router and select the Get status every 20 sec check box, you may be charged for the extra line connection.*
 - ❑ *When you select the Get Printer Attributes check box and click OK, an error message may appear. Be sure that the device power is on, and the device is connected to the network.*
 - ❑ *If the device power is off or there is a problem in the network, the Get status every 20 sec check box is automatically cleared. If this happens, make sure that the device power is on and the device is correctly connected on the network, and then select the Get status every 20 sec check box again.*
8. Click OK to save the settings.
 9. Select the printer driver, and follow the on-screen instructions to install the printer driver.

Note:

When you are using EPSON Status Monitor 3 and printing from EpsonNet Internet Print, the message "A communication error has occurred." appears. To clear this message, right-click the printer icon, select Document Defaults, and select the Utility tab. Then select the Monitor the Printing Status check box.

Status Alert Window

The EpsonNet Internet Print utility updates the status of the IPP printer if you have selected the *Get status every 20 sec* check box in the EpsonNet Internet Print dialog box.

The status alert window appears when the device is out of paper, toner, or ink, if paper is jammed, the cover is open, or when the device is offline.

The EpsonNet Internet Print utility checks the printer status every 5 seconds during printing and every 20 seconds when idle. If you do not want to check the printer status, clear the *Get status every 20 sec* check box in the EpsonNet Internet Print dialog box.

EpsonNet WebManager

About EpsonNet WebManager

EpsonNet WebManager is an application designed to manage network devices. It allows network administrators to easily control network devices such as network printers, interface cards, and network adapters attached to a printer. EpsonNet WebManager offers the following features:

- ❑ It supports Windows, Macintosh, and UNIX platforms to give network administrators flexibility in managing network devices.
- ❑ It allows you to search and monitor network devices, and make settings for network devices.
- ❑ It offers a Group Management function that helps you manage devices as a group.

Note:

- ❑ *Before installing and using EpsonNet WebManager, be sure to read the Readme.txt file. This file contains the latest information on EpsonNet WebManager.*
- ❑ *The term “device” refers to a printer, interface card, or network adapter.*

System Requirements

Note:

- ❑ *Before using EpsonNet WebManager, the computer and other devices must be properly connected to the network.*

- ❑ *Since EpsonNet WebManager runs on a Web browser, you must install TCP/IP and a Web browser first. See the Readme.txt file for supported browsers.*

EpsonNet WebManager server operating systems

EpsonNet WebManager server is a computer with EpsonNet WebManager installed.

Operating system	Windows Server 2003 Windows 2000 Server/Advanced Server (with Service Pack 3 or higher) Windows NT 4.0 Server/Terminal Server Edition
Operating system for operational check only	Windows XP Home Edition/Professional Windows 2000 Professional (with Service Pack 3 or higher) Windows NT 4.0 Workstation (with Service Pack 6 or higher)
System	Pentium 300 MHz or better recommended
Memory	256 MB
Hard disk space	100 MB

EpsonNet WebManager client operating systems

You can access the EpsonNet WebManager server from the following operating systems through a browser.

- ❑ Windows XP/Me/98/2000/Server 2003/NT 4.0
- ❑ Macintosh
- ❑ UNIX (see the Readme.txt file for supported UNIX systems)
- ❑ Monitor: 1024 × 768 or higher resolution VGA monitor with support for 65535 or more display colors

EpsonNet WebManager Functions

EpsonNet WebManager provides you with the following functions:

- ❑ **Device list function**
Searches for devices on the network and displays a device list with current status.
- ❑ **Device details function**
You can make or change the printer settings through EpsonNet WebManager. The setting items in the Device details function will differ depending on the device.
- ❑ **Network settings function**
You can make or change the network interface settings through EpsonNet WebManager.
- ❑ **Group management function**
Groups can help you manage network devices more effectively.

Note:


- ❑ *Some functions of EpsonNet WebManager may not be available depending on the combination of network devices. See the Introduction of the EpsonNet WebManager Reference Guide for detailed information.*
- ❑ *When using EpsonNet WebManager with Internet Explorer in Mac OS, the Printer Layout window, Error Notification window, and Device Details window may not be available.*

EpsonNet WebManger Operating Structure

EpsonNet WebManger must be installed in the computer that functions as the network server. You can select the either of the two methods described below to use EpsonNet WebManger.

EpsonNet WebManger and a Web browser running on the same PC

No special server is required. Just install EpsonNet WebManger and a Web browser on the same computer that functions as a server. All administration is possible from the network administrator's Windows XP/2000/Server 2003/NT 4.0 computer.

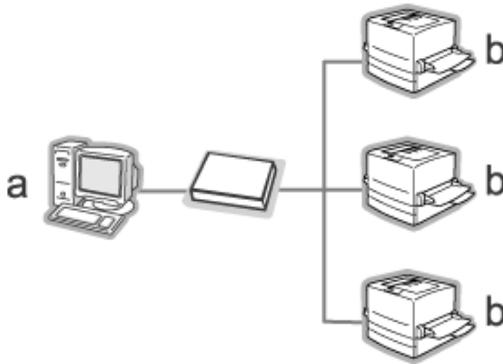


a. EpsonNet WebManger server

b. Epson device with built-in network interface

EpsonNet WebManager and a Web browser running on different PCs

Install EpsonNet WebManager in the server, and install a Web browser in the client computers. Run the Web browser on a client computer to access EpsonNet WebManager on the server. Multi-platform network administration is possible from Windows, Macintosh, and UNIX platforms through the browser.

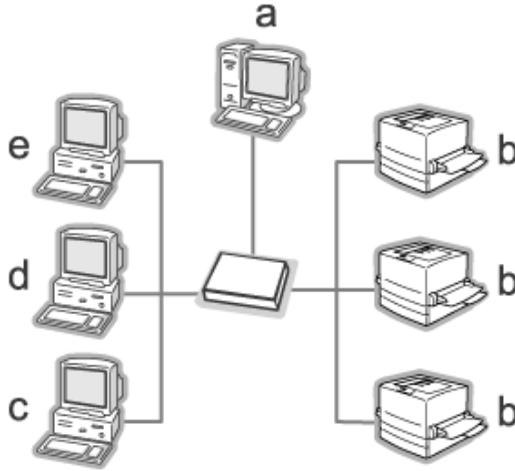

- a. EpsonNet WebManager server
- b. Epson device with built-in network interface
- c. Client computer running Windows
- d. Client computer running Macintosh
- e. Client computer running UNIX

Installing EpsonNet WebManager

Follow the steps below to install EpsonNet WebManager.

1. Insert the Software CD-ROM into the CD-ROM drive.
2. The Software Installation screen opens automatically.

If the Software Installation screen does not appear, double-click EPSetup.exe on the CD-ROM.
3. Click **Next** on the CD Installer screen.
4. Select **Install Network Utility**, and then select **EpsonNet WebManager**.
5. Make sure that all applications are closed, and then click the **Next** button.
6. Read the license agreement, and then click the **Next** button.
7. Follow the on-screen instructions to complete the installation.

Note:

You do not need to install EpsonNet WebManager in the client computer. Just announce the IP address or host name of the server to any clients who use EpsonNet WebManager from a client computer.

Starting EpsonNet WebManager

Be sure that TCP/IP is installed, and the IP address or host name is set for the computer. (Register the host name in the hosts file in the Windows directory.)


From the server

To start EpsonNet WebManager, click Start, point to All Programs (for Windows XP/Server 2003 users) or Programs (for Windows 2000/NT 4.0 users), and then select EpsonNet WebManager. Click EpsonNet WebManager.

Note for Windows XP Service Pack 2 users:

If EpsonNet WebManager is installed on the computer running Windows XP Service Pack 2, make the following settings; otherwise the client computers cannot access EpsonNet WebManager.

1. Click Start, point to Control Panel, and then select Security Center. Click Windows Firewall.
2. Click the Exceptions tab, and then click the Add Port button.
3. Enter the name of the port in the Name text box, and 8090 in the Port number text box, and then select the TCP radio button.

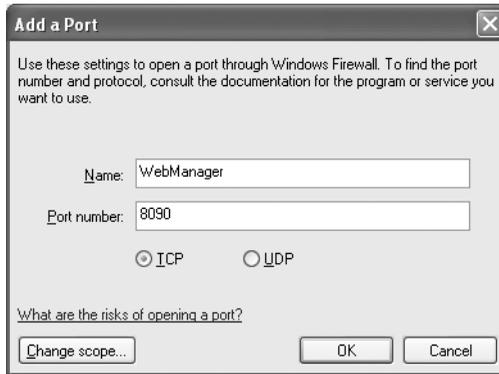

Note:

If necessary, click the Change scope button, and then specify the IP addresses of the client computers for which the port is unblocked.

4. Click OK.

From the client

Run the Web browser and then type the IP address (or the host name) of the server and default port number.

- ❑ **Format:**
http://IP address or host name of server:8090/wm
- ❑ **Example:**
http://192.168.100.201:8090/wm

Opening the Online Guide

After starting EpsonNet WebManager, be sure to read the EpsonNet WebManager's online reference guide. It provides important information and instructions on using EpsonNet WebManager.

You can access the online guide by using any of the following methods:

- ❑ **Run EpsonNet WebManager.** From the Help menu, select Online Guide.
- ❑ **Click the question mark button** on the current screen so that a help screen appears describing the functions on that page.
- ❑ **Click Start**, point to All Programs (for Windows XP/Server 2003 users) or Programs (for Windows 2000/NT 4.0 users), and then select EpsonNet WebManager. Click Online Guide.

EpsonNet SetupManager

About EpsonNet SetupManager

EpsonNet SetupManager is a utility that provides a simple device installation and configuration tool for network administrators, and an easy network device installation process for clients. EpsonNet SetupManager installs the printer driver for devices newly connected to the network, and helps network administrators and clients efficiently install and configure new network devices on Windows operating systems running TCP/IP.

EpsonNet SetupManager provides the following functions.

- ❑ Installs the printer driver easily.
- ❑ Installs the port monitor (EpsonNet Print) automatically.
- ❑ Creates a printer port.
- ❑ Creates a shortcut (an icon that executes the script file on the server) or a package (which contains all files needed for the installation) for automatic printer driver installation.
- ❑ Outputs the result of the printer driver installation using the script file.
- ❑ Edits more than one script file at a time.
- ❑ Registers unconnected devices in a script file.
- ❑ Installs utilities such as EPSON Status Monitor 3 and EPSON Scan that support automatic installation.

System Requirements

The following table lists the system requirements of EpsonNet SetupManager.

Operating system	Windows XP Home Edition/Professional Windows Me Windows 2000 Professional (with Service Pack 4 or higher) Windows 98 Second Edition Windows 95 OSR2 (with Internet Explorer version 5.0 or higher) Windows Server 2003 Windows 2000 Advanced Server Windows NT Workstation 4.0 (with Service Pack 6 or higher)
Protocol	TCP/IP
Display	800 × 600 pixels, HighColor (16 bits)

Note:

- ❑ *If you are using Windows 95, you cannot create a script file. You can only run a script file.*
- ❑ *If you are using Windows 2000 Advanced Server or Windows Server 2003, you can create a script file, but you cannot run it.*
- ❑ *The user must have administrator privileges to execute the program when the operating system is Windows XP (Home/Professional), Windows Server 2003, Windows 2000 (Professional/Advanced Server), or Windows NT 4.0.*
- ❑ *Read the Readme.txt file for information on the supported printers and network interfaces. This file comes with EpsonNet SetupManager.*

- ❑ *You cannot use EpsonNet SetupManager if more than one network adapter are installed on the computer and connected to different network segments.*

Print service

Operating systems	Port monitor services
Windows XP/2000	EpsonNet Print or Standard TCP/IP Port
Windows Me	EpsonNet Print or Add-Ons IPP Port Monitor
Windows 98 Second Edition Windows 95	EpsonNet Print
Windows NT 4.0	EpsonNet Print or LPR

Note:

- ❑ *If you are using Windows Me/98/95 and EpsonNet Print is not installed, EpsonNet Print is automatically installed. To use EpsonNet Print on Windows 95, Microsoft Internet Explorer 5.0 must be installed on the computer.*
- ❑ *If you are using Windows NT 4.0 as well as LPR printing, we recommend that you install the LPR print service on the computer. If the LPR print service is not installed, EpsonNet Print is automatically installed.*
- ❑ *If you are using Windows Me, IPP Port Monitor is included in the Add-Ons folder on the Windows Me CD-ROM.*

When using EPSON Status Monitor

For some of the devices, EPSON Status Monitor is automatically installed when you install the printer driver using EpsonNet SetupManager. See the Readme.txt file for names of devices where EPSON Status Monitor is installed automatically. If EPSON Status Monitor is not installed automatically, install it manually. See the guide shipped with your device.

Installing EpsonNet SetupManager

Follow the steps below to install EpsonNet SetupManager on your computer.

1. Insert the Software CD-ROM into the CD-ROM drive.
2. The Software Installation screen opens automatically.

If the Software Installation screen does not appear, double-click EPSetup.exe on the CD-ROM.

3. Click Next on the CD Installer screen.
4. Select Install Network Utility, and then select EpsonNet SetupManager.
5. Make sure that all applications are closed, and then click the Next button.
6. Read the license agreement, and then click the Yes button.
7. Follow the on-screen instructions to complete the installation.

Note for Windows XP Service Pack 2 users:

If the Windows Security Alert dialog box appears after you start EpsonNet SetupManager, click the Unblock button.

Accessing the User's Guide for EpsonNet SetupManager

The *EpsonNet SetupManager User's Guide* contains detailed information on EpsonNet SetupManager. Follow the steps below to access the *EpsonNet SetupManager User's Guide*.

Click Start, point to All Programs (for Windows XP/Server 2003 users) or Programs (for Windows Me/98/2000/NT 4.0 users), and then select EpsonNet. Click EpsonNet SetupManager, and then select User's Guide to open it.

The *EpsonNet SetupManager User's Guide* appears. You can get information on using EpsonNet SetupManager.

Settings for NetWare Users

Introduction to NetWare Settings

This chapter explains how to configure the network interface for NetWare.

Note:

You can use only NDPS Gateway with the LPR connection.

Supported systems

- ❑ Server environment

NetWare 5.x (NDPS)

NetWare 6.x (NDPS)

- ❑ Client environment

The client environment must be supported by NetWare.

The clients are able to use the printer driver mounted on the network interface.

The following Novell Client is supported.

- ❑ For Windows 98/95:
Latest Novell Client downloaded from the Novell Web site

- ❑ For Windows 2000/NT 4.0:
Latest Novell Client downloaded from the Novell Web site

- ❑ For Windows XP:
Latest Novell Client downloaded from the Novell Web site

Using the NDPS Gateway

You can print via LPR using Novell Distributed Print Services[®] (NDPS[®]) with Novell[®] NetWare[®] 5.x/6.x. For details, see the documentation provided with Netware. Some applications provided by Novell may be required to print with NDPS.

Note:

- ❑ *Banners cannot be printed with NDPS.*

- ❑ *The Status Monitor 3 utility cannot be used with NDPS.*

Settings for UNIX Users

Introduction to UNIX Settings

This chapter explains how to set up the device for different UNIX systems using the `lpr` command.

Your device is able to function as a remote printer on systems using TCP/IP Ethernet transfer with `lpr` remote printing protocol, or standard `ftp` (file transfer protocol).

Note:

Because this device does not convert data into the printer control language, a printer driver and filter are necessary for each system.

lpr filters

Filters for `lpr` are controlled by the name given to the remote printer. When setting up an `lpr` printer entry, a name is entered for:

- the local printer name to be redirected
- the host name of the station to which the print is sent
- the remote printer name (name of the printer port on the remote station)

Many different remote printer names may be set up, all directed to the same Ethernet remote host, and each is given a different local printer name to be redirected. Different types of print jobs may be sent to different printer names, which will then all print out on the same printer, through the same Ethernet interface, but using different filters.

The remote printer name options used to invoke the different filters are as follows:

lpb	Binary files (no filters)
lpa	ASCII files (carriage returns at line ends)
lpbf	Binary file with form feed at file end
lpaf	ASCII file with form feed at file end

All other remote printer name options will be treated the same as lpb.

The following is an example of sending a text file, "txtfile", via lpr with a form feed appended:

```
% lpr -plpaf txtfile
```

Setting Up Different UNIX Systems Using the lpr Command

The following UNIX systems can print using the standard lpr command.

- SunSoft Solaris 2.4 or later
- SunOS 4.1.4 or later
- IBM AIX 3.2.5 or later and 4.1.3 or later
- HP-UX 9.05 or later
- SCO UNIX 4.2 or later

Setting up for SunSoft Solaris 2.4 or later

In the following steps, substitute the name that your device will be known by for HOSTNAME, and the name by which you want your device to be known for Rprinter.

1. Add the IP address and printer host name to the `\etc\hosts` file.

For example:

```
22.33.44.55 HOSTNAME
```

2. Define the host name as a print server.

For example:

```
lpsystem -t bsd HOSTNAME
```

3. Create the printer.

For example:

```
lpadmin -p Rprinter -s HOSTNAME\aux-T unknown-l  
any
```

4. Enable the device for use.

For example:

```
accept Rprinter  
enable Rprinter
```

5. To print, use the `lp` command.

For example:

```
lp -d RPrinter Print-File-Name
```

Setting up for SunOS 4.1.4 or later

In the following steps, substitute the name that the device will be known by for `HOSTNAME`, and the name by which you want the device to be known for `Rprinter`.

1. Add the IP address and printer host name to the `\etc\hosts` file.

For example:

```
22.33.44.55 HOSTNAME
```

2. Create a spool directory.

For example:

```
mkdir\var\spool\lpd\PRIFx
```

3. Add the printer entry to the `\etc\printcap` file.

For example:

```
Rprinter |  
ALCXXX:lp=:rm=HOSTNAME:rp=aux:sd=/var/spool/lpd  
/PRIFx
```

4. To print, use the `lpr` command.

For example:

```
lpr -s -PRPrinter Print-File-Name
```



Caution:

Files that exceed 1 MB may not be printed unless the `-s` option is used.

Setting up for IBM AIX 3.2.5 or later and 4.1.3 or later

In the following steps, substitute the name that the device will be known by for `HOSTNAME`, and the name by which you want the device to be known for `Rprinter`.

1. Add the IP address and printer host name to the `/etc/hosts` file.

For example:

```
22.33.44.55 HOSTNAME
```

2. Run `smit`.

For example:

```
smit printer
```

3. Set the printer name (for example: Rprinter) in:

"Manage Remote Printer"
"Client Services"
"Remote Printer Queues"
"NAME of queue to add".

Set the host name (for example: HOSTNAME) in:

"DESTINATION HOST for remote jobs".

Set the port name (for example: aux) in:

"Name of QUEUE on remote printer".

4. To print, use the lpr command.

For example:

lpr -PRPrinter Print-File-Name

Setting up for HP-UX 9.05 or later

In the following steps, substitute the name that the device will be known by for HOSTNAME, and the name by which you want the device to be known for Rprinter.

1. Add the IP address and host name to the /etc/hosts file.

For example:

22.33.44.55 HOSTNAME

2. Terminate the printer service.

For example:

lpshut

3. Create a printer.

For example:

```
lpadmin -pRPrinter -v/dev/null -mrmmodel  
-ormHOSTNAME -orpaux
```

4. Restart the print service.

For example:

```
lpshed
```

5. Enable the printer for use.

For example:

```
accept Rprinter  
enable Rprinter
```

6. To print, use the lp command.

For example:

```
lp -DRPrinter Print-File-Name
```

Setting up for SCO UNIX 4.2 or later (Open Server)

In the following steps, substitute the name that the device will be known by for HOSTNAME, and the name by which you want the device to be known for Rprinter.

1. Add the IP address and host name to the /etc/hosts file.

For example:

```
22.33.44.55 HOSTNAME
```

2. Execute rlpconf to register the printer.

For example:

```
rlpconf
```

3. Enter the name of the printer.

For example:

Please enter the printer name (q to quit):RPrinter

4. Specify the remote printer as the printer type.

For example:

Is Rprinter a remote printer or a local printer (r/l)? r

5. Enter the name of the remote printer's host.

For example:

Please enter the name of the remote host that

Rprinter

is attached to:

HOSTNAME

Printer RPrinter is connected to host HOSTNAME

6. Confirm that the entries are correct.

For example:

Is this correct?(y/n)y

7. Specify that the RLP extended function (valid when the print server is SCO-UNIX) will not be used.

For example:

If HOSTNAME currently runs SCO OpenServer

Release 5 or above, it can support the extended

remote line printer protocol. Do you want to turn

on the "extended RLP protocol" support flag?

If you are not sure, answer "n"? (y/n)(n)n

- Specify whether the created printer is to become the default printer.

For example:

Would you like this to be the system default printer?
(y/n)y

- To print, use the lpr command.

For example:

lpr -d RPrinter Print-File-Name

Using the ftp Command

ftp commands are common to all UNIX systems.

ftp programs use interfaces that are common for all unix systems.

The following is an example of printing using the ftp command (the entry operations are **highlighted**).

```
ftp> open 22.33.44.55
```

```
Connected to 22.33.44.55
```

```
220 PR-Ifx(22.33.44.55) ftp server ready.
```

```
Name: XXXX
```

```
331 Password Required for (No Name).
```

```
Password: XXXX
```

```
230 User logged in.
```

```
200 Type set to I.
```

```
ftp> put binary file
```

200 PORT command successful.

150 Opening data connection for binary_file

226 Transfer complete

ftp> **bye**

Tips

Instructions on Using DHCP

When you assign an IP address to the network interface using the DHCP function, you need to change the printer port setting every time you turn on the device.

We recommend that you make one of the settings below on the DHCP server or the router and then assign a valid IP address to the network interface:

- Assign a valid IP address to the MAC address of the network interface.
- Assign an IP address that is within the range of the assignment of the DHCP server. Do not let the DHCP server assign the IP address to any other devices.

If you cannot make the above settings on the DHCP server, make one of the settings below:

- Assign an IP address that is not within the range of the assignment of the DHCP server.
- Assign an IP address that is within the range of the assignment of the DHCP server. In this case, you must turn on the network interface first, and then turn on the DHCP server.

Setting an IP Address Using the arp/ping Command

If you are using UNIX or OS/2, you need to use the arp and ping command to set the IP address of the network interface. You can also use these commands with Windows, if you have correctly installed TCP/IP networking on these systems.

Note:

- ❑ *Make sure that the Set using PING function is enabled on the TCP/IP menu in EpsonNet Config. If this function is disabled, you cannot set the IP address using the arp/ping command.*
- ❑ *Make sure the network interface and the computer are in the same segment.*

Before you start, you need the following information:

- ❑ A valid IP address for the network interface. Ask your network administrator for an IP address which does not cause conflicts with any other device on the network. If you are the network administrator, choose an address within your subnet which does not conflict with any other device.
- ❑ The MAC (Ethernet hardware) address of the network interface. You can find out the MAC address on a status sheet.

Checking the LAN

First, you need to check that the computer can reach to other computer in the same segment, as follows:

1. Set the default gateway to the host on which you are setting up the network interface.

If there is a server or a router which acts as a gateway, enter the address of the server or the router. If there is no gateway, enter the IP address of your computer as a gateway address.

2. Assume that you want to reach to the computer having the IP address "192.168.100.101". Check that the computer is reachable by "pinging" it from the command line:
`ping 192.168.100.101`

3. If the computer is reachable, you can see the following result (the exact form of the message depends on your operating system, and the time may vary):
`64 bytes from 192:168:100:101:icmp_seq=0. Time=34.ms`

4. If the computer is unreachable, you may see something like this:
`PING 192:168:100:101:56 data bytes`

If you press `Ctrl+C`, you may see something like this:
`192:168:100:101 PING Statistics
3 packets transmitted, 0 packets received,
100% packet loss`

Again, the exact wording of the message you see may differ from this, depending on your operating system. If you cannot "ping" the computer, check the following:

- The address in the ping command is correct.
- The Ethernet connection to the computer has been made correctly, and all hubs, routers, etc. are switched on.

Setting and checking the new IP address

To set the new IP address of the network interface which you have obtained from your network administrator, use the ping command and arp command with the -s flag (create an ARP entry).

Note:

In the following procedure, we assume that the MAC address of your network interface is 00:00:48:93:00:00 (hexadecimal), and that the IP address which you will be assigning is 192.168.100.201 (decimal). Substitute your values for these addresses when you type in the commands.

1. From the command line, type:
Example: `arp -s 192.168.100.201 00-00-48-93-00-00`
2. Execute the ping command to set the IP address by pinging it:
Example: `ping 192.168.100.201`
3. The network interface should now respond to the ping. If it does not, you may have incorrectly typed the MAC address or the IP address in the arp -s command. Double-check and try again. If none of these actions are effective, re-initialize the network interface and try again.
4. Print a status sheet to check whether the new IP address has been assigned to the network interface.

Note:

When the IP address is set by the ping command, the subnet mask is automatically changed by the class of the IP address. To change the subnet mask and the default gateway according to your network environment, use EpsonNet Config on Windows operating systems or EpsonNet Config in Macintosh.

Instructions on Using a Dial-Up Router

This section describes instructions on using a dial-up router.

If DHCP is used to assign an IP address of the network interface and the Dynamic DNS function is not supported, you need to change the printer port setting every time you turn on the device. Therefore, we recommend that you set a valid IP address for the network interface by using one of the following methods.

- ❑ Set the IP address for the network interface manually. Use EpsonNet Config. See the *EpsonNet Config User's Guide* for details.
- ❑ Specify the network interface by using the bind of DHCP function.
- ❑ Set the exclusive address of the DHCP function.

Note:

- ❑ *Use NetBEUI printing if you do not want to go through these steps.*
- ❑ *See the manual of the Dial-Up router for more information on scope range, bind, exclusive address of the DHCP function.*

Function of Universal Plug and Play

When you connect your device to the network, the device is automatically assigned with an IP address, and the printer's icon appears in the My Network Places folder. By double-clicking the printer's icon, you can access EpsonNet Config with Web Browser for basic information about the device, such as manufacturer, model name, location, and administrator's name.

Right-click the printer's icon in the My Network Places folder and select Properties. You can check the brief information of the network interface.

To use this function, the Universal Plug and Play must be installed on Windows Me or future operating systems. For information on how to install Universal Plug and Play, see the Windows Me online help.

Note:

Before using the Universal Plug and Play function, you must enable the Universal Plug and Play function in EpsonNet Config. See the EpsonNet Config User's Guide or "Configuring the Network Interface Using EpsonNet Config with Web Browser" on page 122.

Uninstalling Software

Follow the steps below to uninstall the network software.

Windows XP/Server 2003

1. Click Start, click Control Panel, and then click Add or Remove Programs.
2. Select the utility you want to uninstall, and then click the Change/Remove button.
3. Follow the on-screen instructions to complete uninstallation.

Windows Me/98/95/2000/NT 4.0

1. Click Start, point to Settings, and then select Control Panel.
2. Double-click the Add/Remove Programs icon.
3. Select the utility you want to uninstall, and then click the Add/Remove button (Windows Me/98/95/NT 4.0) or the Change/Remove button (Windows 2000).
4. Follow the on-screen instructions to complete uninstallation.

Macintosh

1. Double-click the EpsonNet Config Installer icon.
2. Click the Continue button.
3. In the License dialog box, read the License Agreement, and then click the Accept button.
4. Select Uninstall from the pull-down menu.
5. Click the Uninstall button.
6. Follow the on-screen instructions to complete uninstallation.

Note:

You can also uninstall the software by dragging the EpsonNet folder to the Trash.

General Problems

Cannot configure the network interface or cannot print from the network.

Cause	What to do
The printer settings or network settings may be wrong.	First, check to see if you can print a status sheet, as described in “e. SW1 switch” on page 18. If you can print a status sheet, check the network settings; otherwise, set the interface mode of the printer’s control panel to Auto or Option.

Cannot print even if you have assigned the IP address to the computer and the network interface.

Cause	What to do
You have assigned an IP address to the computer manually, but you assigned the IP address to the network interface by Automatic Private IP Addressing (APIPA).	Assign the IP address for the network interface so that it belongs to the same segment of the computer. Use EpsonNet Config or the printer’s control panel.

Unable to start EpsonNet Config.

Cause	What to do
You have added or deleted protocols after installing EpsonNet Config.	Uninstall EpsonNet Config and then reinstall it. See “Uninstalling Software” on page 208 and “Installing EpsonNet Config for Windows” on page 115 or “Installing EpsonNet Config for Macintosh” on page 119.

The message “Could not install the printer driver.” appears when you set up the network interface.

Cause	What to do
You have not installed the printer driver.	Install the printer driver on your computer before setting up the network interface. See “About installing the printer driver” on page 77 or the manual shipped with your printer for instructions on how to install the printer driver.

The message “EpsonNet Config cannot be used because no network is installed.” appears when you start EpsonNet Config.

Cause	What to do
Both TCP/IP and IPX/SPX are not installed on the computer.	Install the TCP/IP or IPX/SPX protocol.
TCP/IP is installed on the computer, but its IP address is not set correctly.	Set a correct IP address for the computer.

The message “Failed to transmit settings to the network interface.” appears when you send settings to the network interface.

Cause	What to do
This may happen when using a dial-up router.	<p>Run Command Prompt from the computer on which EpsonNet Config is installed, and then enter the following command:</p> <p>Format: >ROUTE_ADD_the IP address of the network interface_ the IP address of the computer (the under bar represents one space)</p> <p>Example: >ROUTE ADD 192.168.192.168 22.33.44.55.</p>

Unable to start EpsonNet Config with Web Browser.

Cause	What to do
You have not set the IP address for the network interface.	Set the IP address for the network interface using EpsonNet Config for Windows or Macintosh, the printer’s control panel, or the arp/ping commands. You can check the IP address on a status sheet. See the <i>EpsonNet Config Guide</i> or “Setting an IP Address Using the arp/ping Command” on page 204.

Unable to set the IP address using the arp/ping commands.

Cause	What to do
The network interface is not connected to the network.	Connect the network interface to the network, and check the network environment.
The device is located beyond the router.	The device and the computer must be in the same segment.

The Model Name and IP Address do not appear in the EpsonNet Config dialog box.

Cause	What to do
If the valid IP address is not set, the items indicated in the dialog box mentioned above may not appear.	Set a valid IP address.
	Refresh the status by selecting Refresh from the View menu.
	Increase the length of time before a timeout. To do this, select Options from the Tool menu, and then select Timeout. Note that doing so can cause EpsonNet Config to run more slowly.

The network interface cannot roam around the access point.

Cause	What to do
The AP Density is not properly set.	Change the AP Density in the Network Detailed dialog box.

The WEP Key entered is not displayed in the field.

Cause	What to do
The WEP Key disappears after the network interface is configured.	Do not forget the WEP Key (1 to 4) you have set.

The network interface does not appear in the EpsonNet Config list view.

Cause	What to do
There are several possible causes. Check the items described on the right.	<p>Make sure the network interface is properly connected to the device using the USB cable.</p> <p>Make sure the device and the network interface are turned on.</p> <p>Make sure the mode, WEP Key, SSID, authentication method, and channel (for Ad Hoc mode) of the network interface and the wireless LAN are the same.</p> <p>Make sure there is no radio interference causing the problem.</p> <p>Check the connection range of the network interface.</p>

The wireless communication speed is very slow.

Cause	What to do
There are several possible causes. Check the items described on the right.	Adjust the location and orientation of the access point. If interference occurs, switch to another channel. Other devices may be causing the interference. Relocate the “noisy” devices if found.

Unable to scan by using EPSON Scan.

Cause	What to do
There are several possible causes.	See EPSON Scan Troubleshooting Assistant. If the network connection is interrupted while starting up EPSON Scan, quit EPSON Scan and restart it after a short time. If you cannot restart EPSON Scan, turn off all-in-one and on once and then restart EPSON Scan.

Cause	What to do
Network Scanning is set to Disable.	Set Network Scanning to Enable on EpsonNet Config.

How to acquire an IP address.

To acquire your IP address, you need to apply to the NIC (Network Information Center) in your country.

Problems Specific to Your Network Environment

Windows Me/98/95 environment

A dial-up connection dialog box appears when printing with TCP/IP via EpsonNet Print.

Cause	What to do
You have selected a phone line or modem (for Internet Explorer 4.0x) for the Internet connection.	Printing ends normally after you cancel this dialog box, but the message appears every time you print. Connect to the Internet using a local area network or start a dial-up network manually.

A communication error message appears when you start printing or when you open the printer's properties.

Cause	What to do
When you print with NetBEUI or IPP, EPSON Status Monitor cannot be used.	<p>Open the printer's properties and then click the Optional Settings tab. Select the Update the Printer Option Information manually radio button.</p> <p>Open the printer's properties and then click the Utility tab. Clear the Monitor the Printing Status check box.</p>

Windows XP/2000/NT environment

You cannot access the Network Storage from Windows XP/2000.

Cause	What to do
You may have a print error in the LPR or NetBEUI environment.	Clear the print error and then access the Network Storage. See the printer's manual to clear the error.

A dial-up connection dialog box appears when you are printing with TCP/IP via EpsonNet Print.

Cause	What to do
You have selected a phone line or modem (for Internet Explorer 4.0x) for the Internet connection.	Printing ends normally after you cancel this dialog box, but the message appears every time you print. Connect to the Internet using a local area network or start a dial-up network manually.

A communication error message appears when you start printing or when you open the printer's properties.

Cause	What to do
When you print with NetBEUI or IPP, EPSON Status Monitor cannot be used.	<p>Open the printer's properties and then click the Optional Settings tab. Select the Update the Printer Option Information manually radio button.</p> <p>Open the printer's properties and then click the Utility tab. Clear the Monitor the Printing Status check box.</p>

No clients except an administrator can print via Windows NT Server 4.0.

Cause	What to do
CREATOR OWNER has been deleted from the Printer Permissions list, or CREATOR OWNER is set to Print or No Access.	Add CREATOR OWNER by clicking the Add button in the Printer Permissions dialog box, or set CREATOR OWNER to Manage Documents (default setting).

On Windows XP, you cannot search the scanner that is specified in the EPSON Scan Setting dialog box.

Cause	What to do
On the Advanced tab of the Local Area Connection Properties dialog box, the Internet Connection Firewall setting is on.	In the EPSON Scan Setting dialog box, click the Add button. In the Add dialog box, select the Enter address radio button and then enter the IP address.

Macintosh environment

Devices do not appear in Chooser.

Cause	What to do
You may have selected a wrong one for “Connect via” in the AppleTalk Control Panel.	Make sure to select Built-in Ethernet or AirMac in AppleTalk Control Panel, and make sure AppleTalk is active in Chooser. Also, check the network equipment including the hub cable.

The Rendezvous printer setting is overwritten by the AppleTalk printer setting when the same printer is set up with AppleTalk after the printer is set up with Rendezvous.

What to do

Change the AppleTalk printer name so that it does not conflict with the Rendezvous printer name.

NetWare environment

Nothing prints even though clients have sent data to the device.

Cause	What to do
Clients may not be registered, or the network interface may not be logged in to the NetWare server.	Make sure clients are registered as users of the print queue and the print server. Also, make sure the network interface is logged in to the NetWare server.

EpsonNet Config will not start correctly.

Cause	What to do
Microsoft NetWare Directory Service is installed on your computer.	If you are using the NDS service, install the Novell NetWare Client service.

It takes a long time to start EpsonNet Config.

Cause	What to do
The Novell Client service is installed.	Double-click Network in Control Panel, and then double-click the network adapter that does not use the IPX/SPX-compatible protocol. Clear the items related to IPX to unbind IPX.

Initializing the Network Interface

To initialize your network interface, turn on the device and plug the power cord of the network interface into a wall outlet. Then, while all lights (WIRELESS light, ETHERNET light, STATUS light, and USB light) are off, hold down the SW1 switch of the network interface for twenty seconds. The length of time necessary to hold down the SW1 switch varies depending on the device model. The green USB light flashes, indicating the network interface is being initialized.

After the initialization is complete, press the SW1 switch to print a status sheet. Check the information on the status sheet.

Note:

You can also initialize the network interface using EpsonNet Config by clicking the Default Settings button.

Restrictions on EPSON Status Monitor 3

The operation of EPSON Status Monitor 3 is different, depending on whether the printer or all-in-one is connected to the network interface for use in the wireless LAN environment or to the computer directly, as described below.

For the ink jet printer or all-in-one

The operation of the printer or all-in-one connected directly to the computer as a shared printer is the same as that connected to the wireless LAN.

Note:

The following explanation uses screen images of Windows XP. The screen images are the same for Macintosh.

Cartridge information

When the printer or all-in-one is connected via a wireless LAN, information may not be transmitted correctly. Because of this, all information may be displayed as “Unknown” even if you click the Information button in the EPSON Status Monitor 3 dialog box.



Connected to the computer directly



Connected to the wireless LAN



Available number of printed sheets

When some of the ink becomes less than half, the available number of printed sheets appears if the printer or all-in-one is connected directly to the computer. However, this information does not appear if the printer or all-in-one is connected with the wireless LAN.

Connected to the computer directly



Connected to the wireless LAN



Error for paper-out or paper jammed

When the paper has run out or is jammed, the Continue button appears if the printer or all-in-one is connected directly to the computer. However, this information does not appear if the printer or all-in-one is connected to the wireless LAN. Follow the on-screen instructions to clear the error.

Connected to the computer directly




Connected to the wireless LAN




Ink replacement utility

If the printer or all-in-one is connected directly to the computer, the Ink Replacement Utility dialog box appears when the ink has run out. When you click the OK button, the print head moves to the ink cartridge replacement position. On the other hand, if the printer or all-in-one is connected to the wireless LAN, you need to press the button on the printer or all-in-one to move the print head. Follow the on-screen instructions to replace the ink cartridge.

Connected to the computer directly

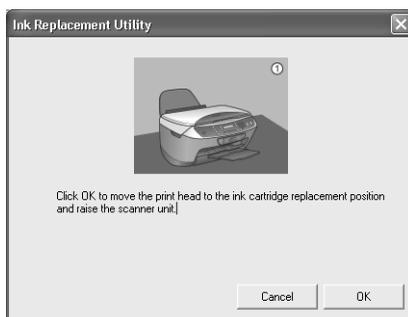


Connected to the wireless LAN

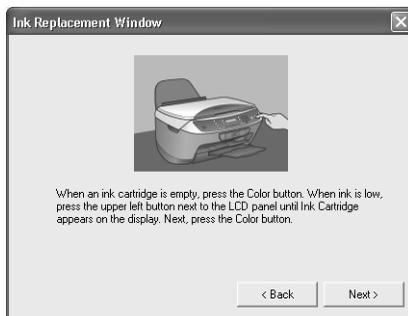

Cancel printing when an error occurs

When the printer error dialog box appears and then you click the Cancel button, printing is canceled if the printer or all-in-one is connected directly to the computer. However, printing is not canceled if the printer or all-in-one is connected to the wireless LAN. Follow the on-screen instructions to clear the error first, and then see steps 1 to 3 below if you are using Windows, or step 3 only if you are using Macintosh.

1. Click the Start menu, point to Control Panel, select Printers and Other Hardware, and then select Printers and Faxes. Double-click the printer icon for which you want to cancel printing.
For Windows Me/98SE/2000, click the Start menu, point to Settings, and then select Printers.
2. Click the print data. From the Document menu, select Cancel.
For Windows Me/98SE, select Cancel Printing from the Document menu.

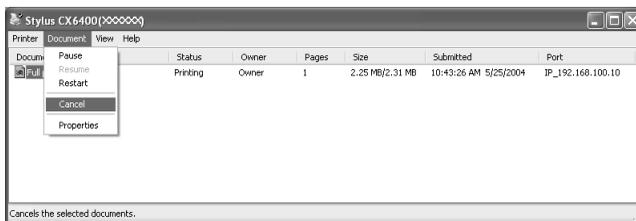

3. Turn off the printer, and then turn it back on after a while.

For the laser printer

For Windows XP Service Pack 2 Users

If you share the laser printers on the computer running Windows XP Service Pack 2 on the network, client computers with the following conditions cannot monitor the printers using EPSON Status Monitor 3:

- Client computers running Windows Me/98/95
- Client computers located in another network segment

Solution

1. Click Start, point to Control Panel, and then select Security Center. Click Windows Firewall.
2. Click the Exceptions tab, and then click the Add Program button.
3. Click the Browse button.
4. Select the program located in the following folder, using the Look in pull-down menu.

C:\Program Files\Common Files\EPSON\EBAPI\EEBAgent.exe

Note:

- Substitute the drive letter for your operating system.*
- If you have upgraded EPSON Status Monitor 2 to EPSON Status Monitor 3, select the folder where EPSON Status Monitor 2 is installed.*

5. Confirm that EEBAgent.exe is registered in the Programs list, and then click OK.
6. Confirm that the check box for EEBAgent.exe is selected in the Programs and Services list, and then click OK.

The Job Management function cannot be used (except in the wired LAN connection)

In the Monitoring Preferences dialog box, the Job Management setting does not appear. Therefore, the Job Information tab and the Notification message when your print job is finished dialog box do not appear.

Note:

The models available on the market after 2004 are excluded.

Specifications

Network Interface Specification

Printer Interface:	USB 2.0 Downstream port/Type A
Dimensions:	Vertical setup (with stand): Width: 60 mm (approx. 2.36 in) Depth: 70 mm (approx. 2.76 in) Height: 104 mm (approx. 4.09 in) Horizontal setup (without stand): Width: 101 mm (approx. 3.98 in) Depth: 70 mm (approx. 2.76 in) Height: 31 mm (approx. 1.22 in)
Weight:	Approx. 150 g (approx. 0.3 lb)

Wireless Network Interface Specification

Standard:	IEEE 802.11b/g
Communication Speed:	11, 5.5, 2, and 1 Mbps (802.11b) 54, 48, 36, 24, 18, 12, 9, and 6 Mbps (802.11g)
Security:	64-bit or 128-bit WEP Data Encryption WPA2-PSK(TKIP / AES)

Frequency Band:	2.4 GHz 2.4000 - 2.4835 GHz (802.11b/g) 2.471-2.497 GHz (802.11b)
Wireless Medium:	Direct Sequence Spread Spectrum (DS-SS) Orthogonal Frequency Division Multiplexing (OFDM)
Operation Channels:	Europe: 1 - 13
Communication Mode:	Ad hoc mode Infrastructure mode
Roaming Function:	Supported
Antenna Type:	Built-in diversity antenna
Operation Range	
Indoor (802.11g):	20 m (approx. 22 yd) at 54 Mbps
Indoor (802.11b):	60 m (approx. 66 yd) at 11 Mbps
Outdoor (802.11g):	50 m (approx. 55 yd) at 54 Mbps
Outdoor (802.11b):	180 m (approx. 198 yd) at 11 Mbps

Electrical Specifications

Rated Voltage:	DC 5 V \pm 5%
Rated Current:	2.0 A

Standards and Approvals

European model:

R&TTE directive 1999/5/EC EN60950-1
 EN55022 Class B
 EN55024
 EN300 328
 EN301 489-1
 EN301 489-17

We, SEIKO EPSON Corporation, hereby declare that this equipment Model EU-118 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For use only in;

France, Austria, Belgium, Denmark, Finland, Germany, Greece, Iceland, Italy, Ireland, Liechtenstein, Luxembourg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland, UK, Cyprus, Czech Republic, Estonia, Hungary, Latvia, Lithuania, Malta, Poland, Slovakia, Slovenia.

EPSON can not accept responsibility for any failure to satisfy the protection requirements resulting a non-recommended modification of the products.

CE 0560 !

Reliability

MTBF: 10,000 hours (power on, 100% duty)

Environmental

Operating Temperature: 0 to 35° C (32 to 95° F)
Storage Temperature: -20 to 70° C (-4 to 158° F)
Operating Humidity: 30 to 85% RH
Storage Humidity: 5 to 90% RH
Operating Vibration: 1 G (5 to 55 Hz)
Storage Vibration: 1.5 G (5 to 55 Hz)
Operating Shock: 1 G
Storage Shock: 2 G

Regulatory Approvals for AC Adapter (A351H)

Input:	Voltage: AC 100 - 240 V Frequency: 50 - 60 Hz Current: 0.3 - 0.1 A (at 100 - 240V)
Output:	Voltage: DC 5.0 V Current: 2.3 A
Power Consumption:	Max. 18 W
Safety Standards (European model):	
Low Voltage Directive 73/23/EEC	EN 60950-1:
EMC Directive 89/336/EEC	EN 55022 Class B EN 55024 EN 61000-3-2 EN 61000-3-3

Appendix A

Supported Devices

Device Type	Model Name	AppleTalk Entity Type
Ink Jet Printer	Epson Stylus C66/C66PE/C86/C86PE	EPSONLQ2
	Epson Stylus D68PE/D88/D88PE	
	Epson Stylus Photo 1280/2200	
	Epson Stylus Photo R200/R220/R240/R245/R300/R320/ R340/R800/R1800/R2400	
All-in-one	Epson Stylus CX3600/CX3650/CX6400/CX6600	EPSONLQ2
	Epson Stylus DX4200/DX4250/DX4800/DX4850	
	Epson Stylus RX420/RX425/RX500/RX520/RX600/ RX620/RX640/RX700	
Laser Printer	EPL-6200	EPSONPAGE4
	EPL-N3000/N7000	
	Epson AcuLaser C1100/C3000	EPSONPAGES3
	Epson AcuLaser C2600/C4000/C4100/C4200/C8600/ C9100	EPSONPAGECOLOR1
Impact Dot Matrix Printer	FX-890/2190	EPSONFX
	DFX-9000	EPSONDFX
	LQ-590/630/2090	EPSONLQ2
	DLQ-3500	
	PLQ-20/20M	

Note:

- ❑ *The default value of the AppleTalk entity type set in this product is EPSONLQ2.*
- ❑ *For the latest information on the supported devices and entity types, see the EPSON website at <http://www.epson.com/>.*

Index

A

Ad Hoc mode, 22
Administrator, 145
AOSS, 24
AppleTalk, 140
arp, 204, 206
Automatic Private IP Addressing
(APIPA), 124

C

Checking LAN, 205
Community, 142
Configuring network interface
for Macintosh, 63
for Windows, 50

D

DC-IN connector, 20
Default gateway, 124
DNS server address settings, 138
Dynamic DNS, 125

E

EpsonNet Config for Macintosh, 112
 Accessing user's guide, 120
 Installation, 119
 Overview, 118
 System requirements, 118
EpsonNet Config for Windows, 112
 Accessing user's guide, 117
 Installation, 115
 Overview, 114
 System requirements, 114
EpsonNet Config with Web Browser,
 112
 Configuring network interface, 122
 Opening Screen, 127

 Overview, 121
 Password, 146
 Supported web browser, 121
 Web browser settings, 121
EpsonNet Internet Print
 Installation, 168
 Overview, 167
 Setting up device, 169
 System requirements, 168
EpsonNet Print, 112
 Installation, 148
 Overview, 147
 System requirements, 147
EpsonNet SetupManager, 113
 Accessing user's guide, 191
 Installation, 190
 Overview, 187
 System requirements, 188
EpsonNet WebManager, 113
 Functions, 181
 Installation, 184
 Online guide, 186
 Operating structure, 182
 Overview, 179
 Start up, 184
 System requirements, 179
ETHERNET light, 17
Ethernet settings, 137, 138

F

ftp, 201

H

High-Speed printing, 166
Host name and domain name settings,
 139

I

- IEEE 802.11g standard, 20
- Information frame, 130
- Infrastructure mode, 21
- Initializing the network interface, 220
- Installing printer driver, 77
- Internet printing, 169, 174
- Internet Printing Protocol, 167
- IP address, 122, 204, 215
- IP address settings, 138
- IPP, 141
- IP trap, 142

L

- LPR enhanced printing, 166
- LPR filters, 194
- LPR standard printing, 166

M

- MAC address, 130
- Manual settings, 144
- Menu frame, 128
- Microsoft network, 141
- MS Network, 141

N

- NDPS, 193
- NET USE command, 102, 106
- NetWare
 - 5.x, 193
 - 6.x, 193
- Network interface
 - Features, 14
 - Operating environment, 11
 - Software, 112
- Network Scan, 145
- Network Screens, 132

O

- Optional Screens, 145

P

- Ping, 205
- Printing Control, 143
- Printing methods
 - Features, 30
 - Printing from Macintosh, 30
 - Printing from Windows, 29
- Protocol, 11

R

- Rendezvous settings, 140
- Reset, 129, 146
- Return to default button, 146
- RJ-45 connector, 19
- Router, 124

S

- Security lock, 20
- Setting for Printing and Scanning (for Windows), 62
- Setting IP address, 122, 204, 206
- Setting the Scanner Driver, 109
- Setting up printer (for Macintosh), 75
- Signal range, 23
- SNMP, 142
- SSID, 23
- Status alert window, 178
- STATUS light, 17
- Subnet mask, 124
- SW1 switch, 18
- SW2 switch, 19

T

- TCP/IP, 123, 138
- Time, 144
- Timeout, 143
- Time server settings, 144
- Title frame, 128

U

- Uninstalling software, 208
- Universal Plug and Play, 125
 - Function, 208
 - Settings, 139
- UNIX, configure for different OS, 195
- USB downstream connector, 19
- USB light, 17
- Using DHCP, 203
- Using dial-up router, 207
- Using ftp command, 201
- Using lpr command, 195
- Using NDPS gateway, 193
- Using the printer with
 - Macintosh, 107
 - NetWare, 192
 - UNIX, 194
 - Windows 2000, 89
 - Windows Me/98/95, 85
 - Windows NT 4.0, 103
 - Windows Server 2003, 96
 - Windows XP, 77

W

- WEP Key, 22
- Wi-Fi certification, 20
- Wireless (Ad Hoc) settings, 136
- Wireless (Infrastructure) settings, 132
- WIRELESS light, 17
- WPA2-PSK(AES), 22
- WPA-PSK(TKIP), 22