

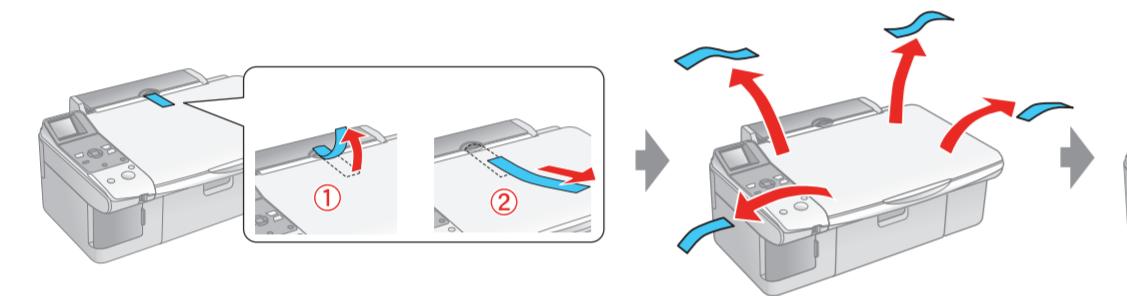


# Începeți de aici • Започнете оттук • Alusta siit • Pradēkite čia • Sāciet šeit



1.

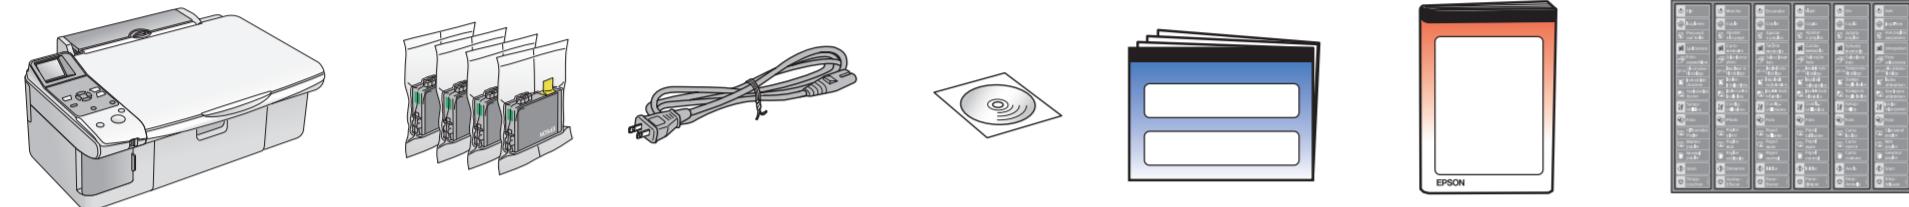

2.

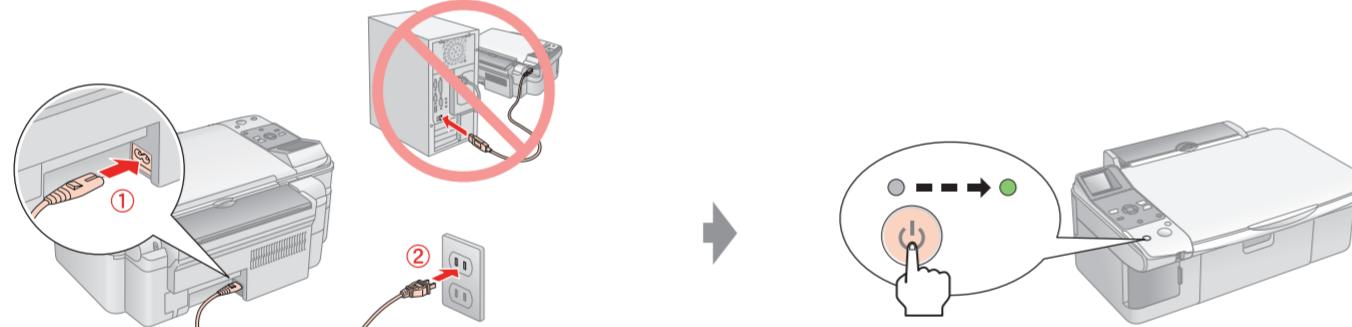

3.

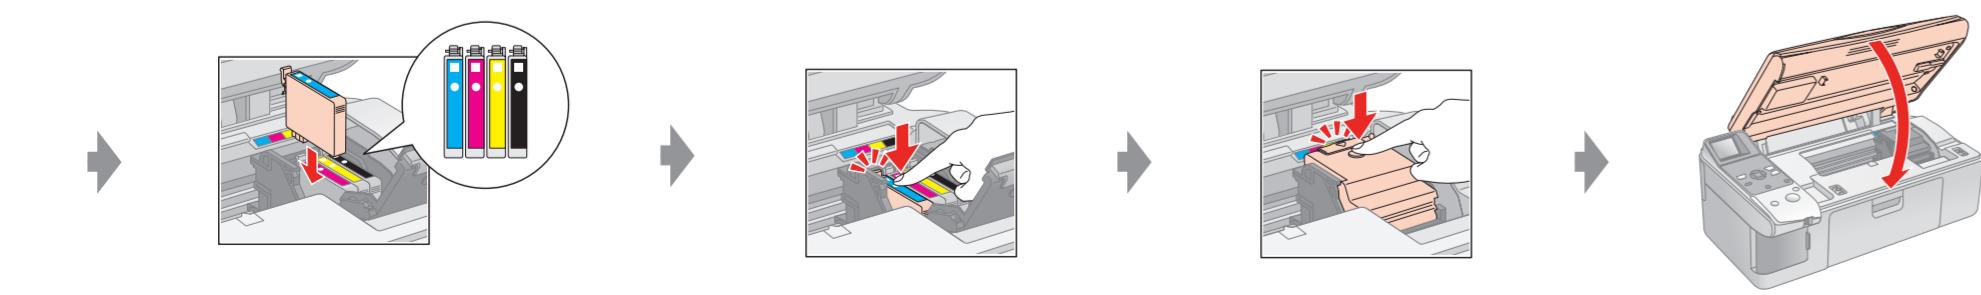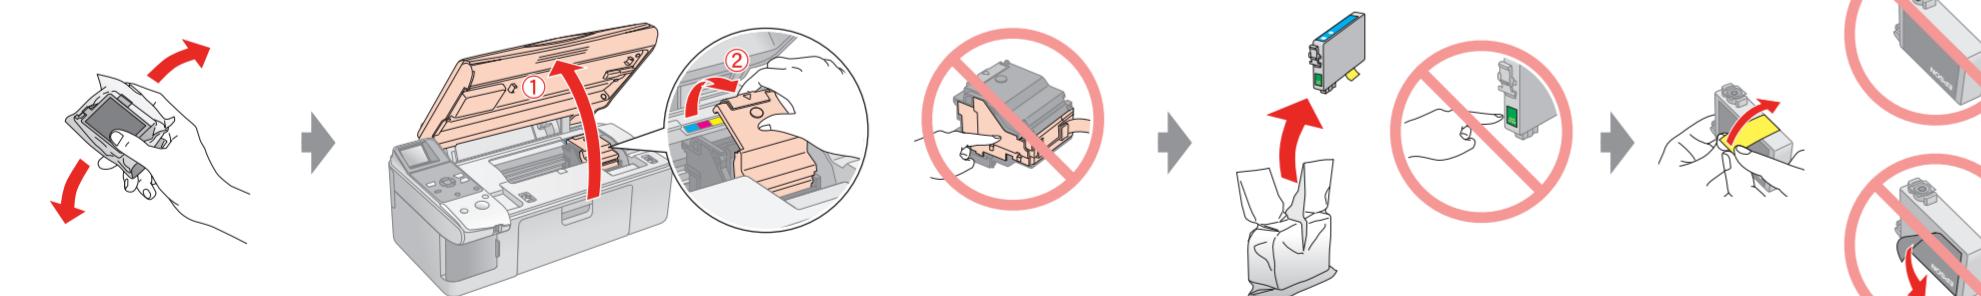


4.



Nu conectați cablul USB până când nu vi se solicita acest lucru.  
Не включайте USB кабеля, докато не получите указание да го направите.  
Ärge ühendage USB-kaablit enne, kui teil palutakse seda teha.  
Nejunkite USB kabelio, kol nebus parodytas atitinkamas nurodymas.  
Nepievienojiet USB vadu, kamēr nav saņemti norādījumi tā rikoties.





Dacă apare acest ecran, faceți clic pe **Cancel** (Revocare).  
Ако се появи този екран, кликните **Cancel** (Отказ).  
Kui avaneb kõrvvalolev kava, klõpsake **Cancel** (Tühista).  
Jei atsiranda šis langas, spustelekitė **Cancel** (Atšaukti).  
Ja parādās šīs ekrāns, uzlikšķiniet **Cancel** (Atcelt).

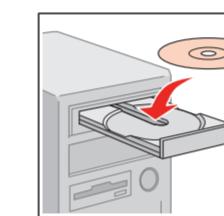

Windows  
Mac OS X



Windows  
Nu apare ecranul de instalare? →  
Няма инсталационен екран? →  
Installiäken ei avane? →  
Nerodomas diegimo langas? →  
Nav pieejams instalēšanas ekrāns? →

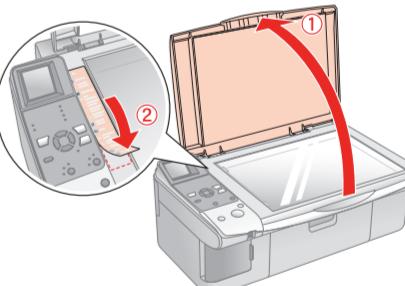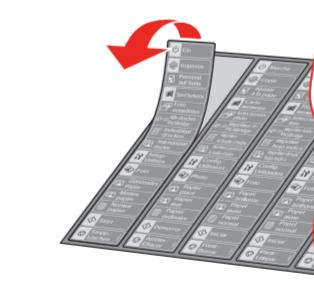

**Obținerea de informații suplimentare • Повече информация •  
Lisateabe hankimine • Kaip gauti daugiau informacijos •  
Iegūstot vairāk informācijas**

