

EPSON®

Quick Guide

PhotoPC™ 750Z

Copyright © 1999 by SEIKO EPSON CORPORATION
Nagano, Japan.

4009968

xxx-00

Printed in Japan 99.xx-x

Camera Parts and Display Panel

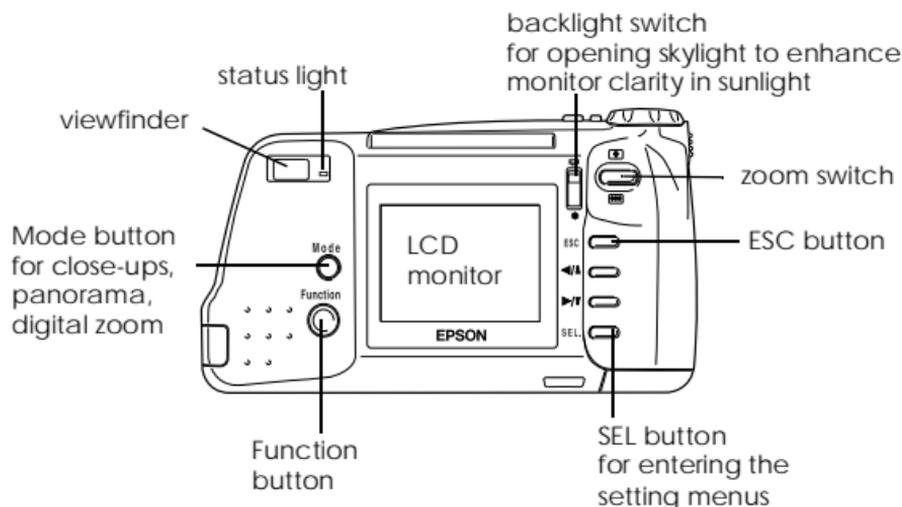
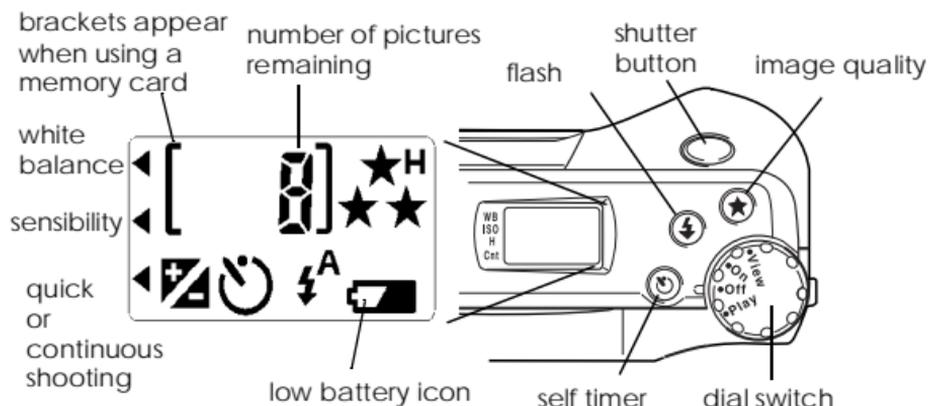


Image Quality			
★★	Fine	★★ 	Monochrome fine 1280 x 960 (pixels)
★★★	Super fine	★ ★★★ 	Monochrome super fine 1280 x 960
★★ ^H	HyPict	★★ ^H ★★★ 	Monochrome HyPict 1600 x 1200
★	Standard		640 x 480
Flash Settings			
	Automatic		Forced flash
			Flash off

Taking Pictures

1. Turn the camera's dial switch to **On** (to use the viewfinder) or **View** (to use the LCD monitor).
2. Look straight through the viewfinder or use the LCD monitor to frame your subject.
3. Push the shutter button halfway down and hold it to lock the auto focus.

The status light beside the viewfinder changes from green to orange.

4. Press the shutter button the rest of the way down to take the photo.

Playing Back Photos

1. Turn the camera's dial switch to **Play**. The last photo taken appears on the screen.
2. Press the **▶/▼** or **◀/▲** button to display the previous or next photos.

Erasing Photos

1. Turn the camera's dial switch to **Play**.
2. To erase the image displayed on the LCD screen, hold down the **Function** button and press the **ESC** button.
3. When the confirmation message appears, press **SEL** to erase the photo.