

EPSON PERFECTION™ V500 PHOTO

Start Here • Rozpocznij tutaj • Začínáme • Itt kezdje • Prvé kroky • Începeți aici • Започнете оттук • Sāciet šeit • Praděkite čia • Alusta siit




411068600


Printed in XXXXXX XX.XX-XX XXX



1.

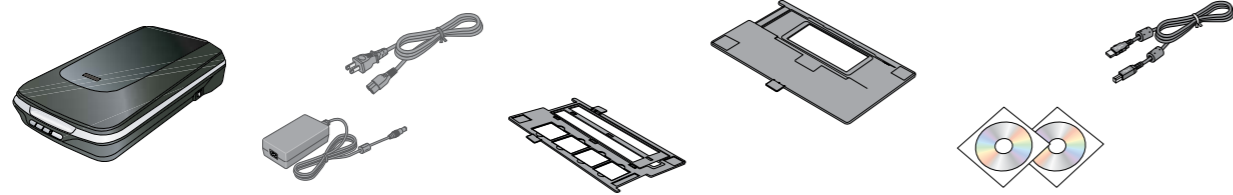


2.

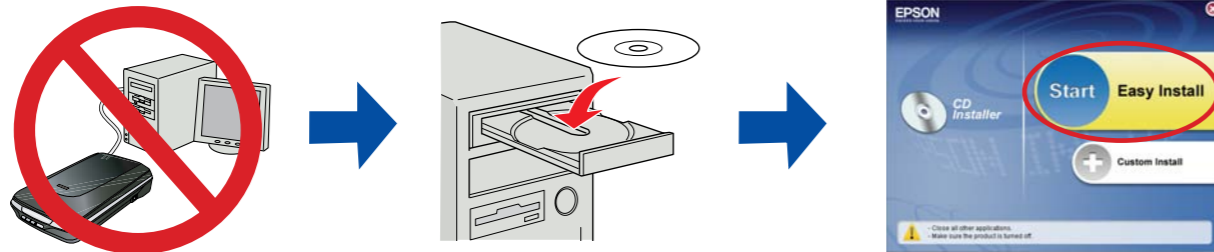




Do not connect the USB cable yet.
Nie podłączaj jeszcze kabla USB.
V tomto okamžiku ještě nepřipojujte kabel USB.
Még ne csatlakoztassa az USB-kábelt.
Zatiaľ nezapájajte kábel USB.

Deocamdată nu conectați cablul USB.
Не свързвайте още USB кабела.
Vēl nepievienojiet USB kabeli.
Kol kas USB kabelio neprijunkite.
Ärge USB-kaablit veel ühendage.

3.

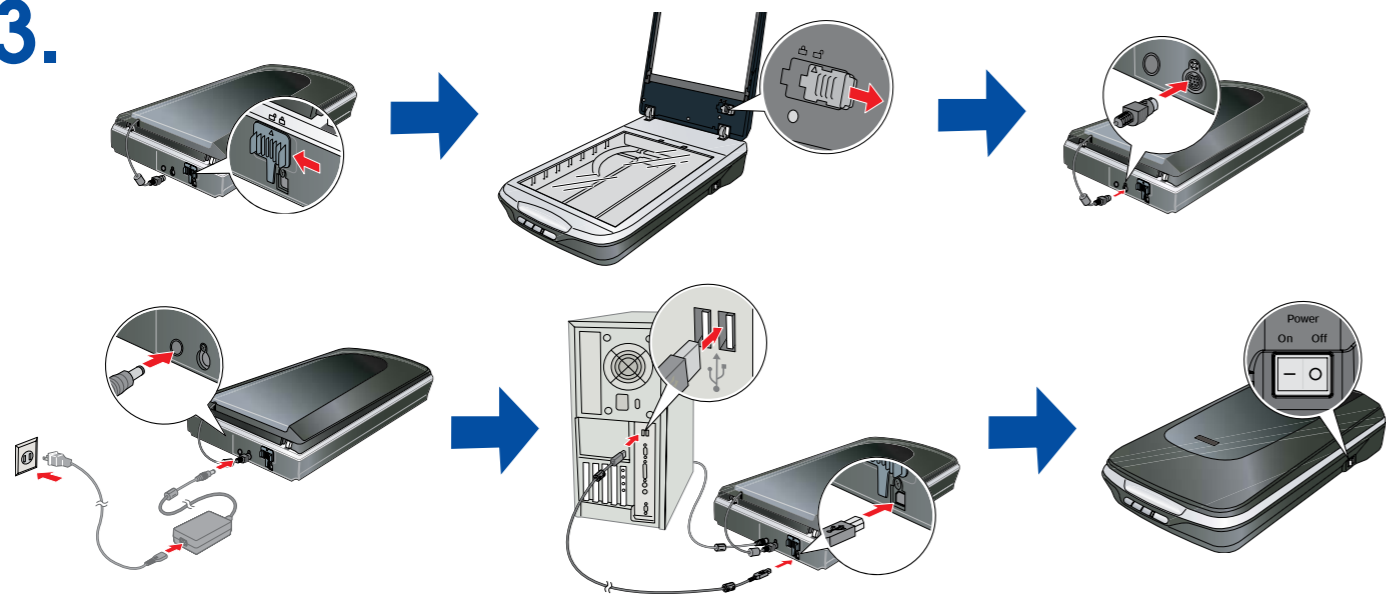

4.

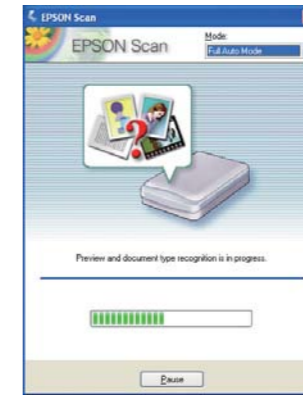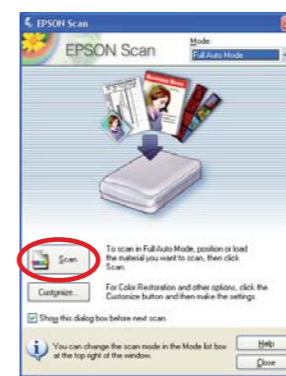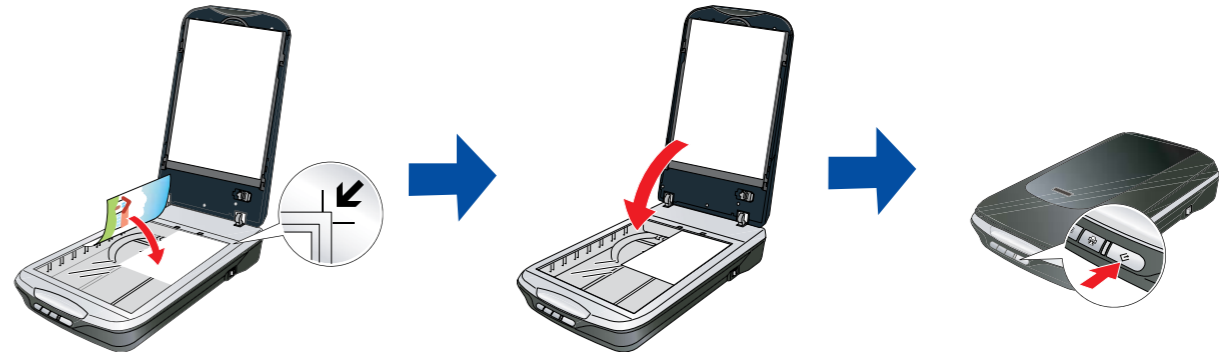

Getting More Information • Uzyskiwanie dodatkowych informacji • Další informace • További információ • Další informace • Cum se obțin mai multe informații • Получаване на повече информация • Kā iegūt plašāku informāciju • Kaip gauti daugiau informacijos • Lisateave

