


Epson Perfection™ V33 / V330 Photo


**Start her• Aloita tästä• Start her• Starta här•
Začnite tukaj• Počnite ovdje• Почнете оттука•
Započnite ovde**

1.


Perfection V33

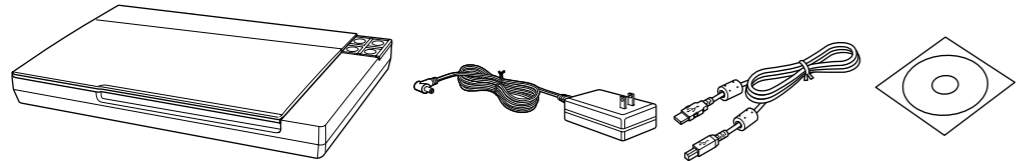

Perfection V330 Photo

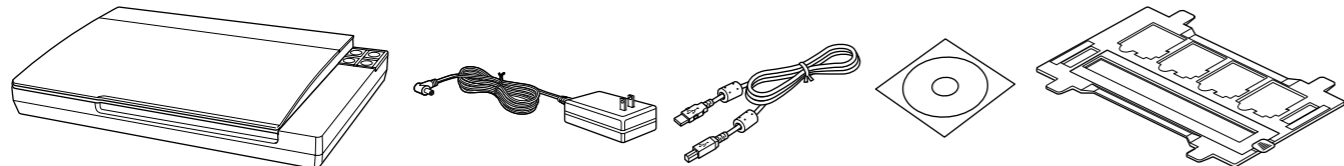


2.

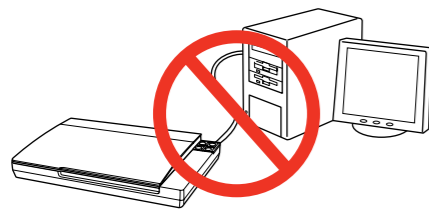


Tilslut ikke USB-kablet endnu.
Älä vielä kytke USB-kaapelia.
Ikke koble til USB-kabelen ennå.
Anslut inte USB-kabeln än.

Ne priključite še kabla USB.
Nemojte još priključiti USB kabel.
Сё уште не го поврзувајте USB кабелот.
USB kabl još nemojte povezati.



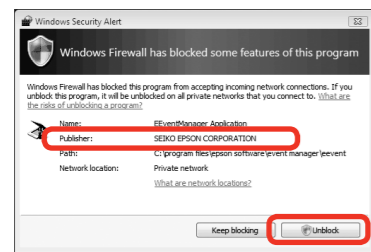


Hvis Firewall-meddelelsen vises, skal du give tilladelse til Epsonapplikationer.
Jos näet palomuurivaroituksen, anna Epson-sovelluksille käyttöoikeudet.
Hvis en brannmuradvarsel kommer opp, tillatt tilgang for Epsonprogrammer.
Om du får ett meddelande från brandväggen ska du tillåta åtkomst för program från Epson.



Če se prikaže pozivnik požarnega zidu, dovolite dostop aplikacijam Epson.
Ako se pojavi upozorenje vatrozida, dopustite pristup Epsonovim aplikacijama.
Доколку се појави предупредување од заштитниот ѕид, дозволете пристап на Epson апликацији.
Ako se pojavi upozorenje zaštitnog zida, dozvolite pristup Epson aplikacijama.

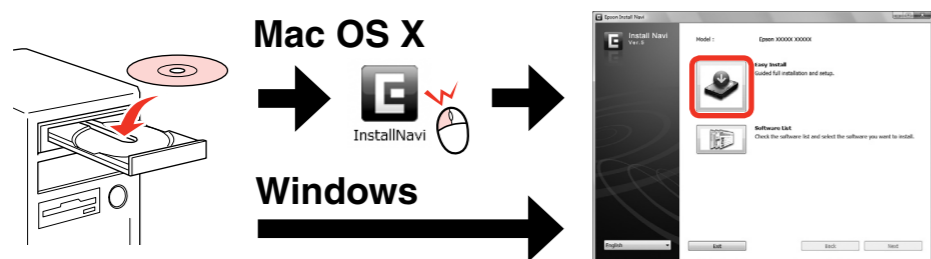

3.

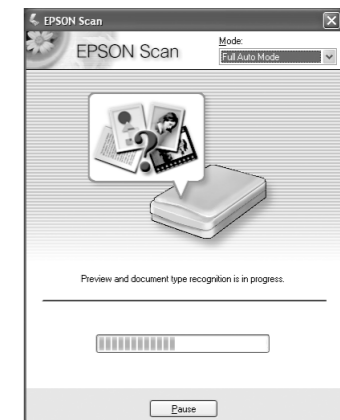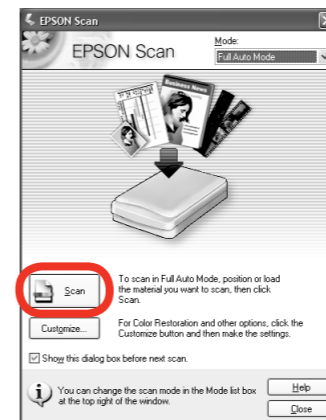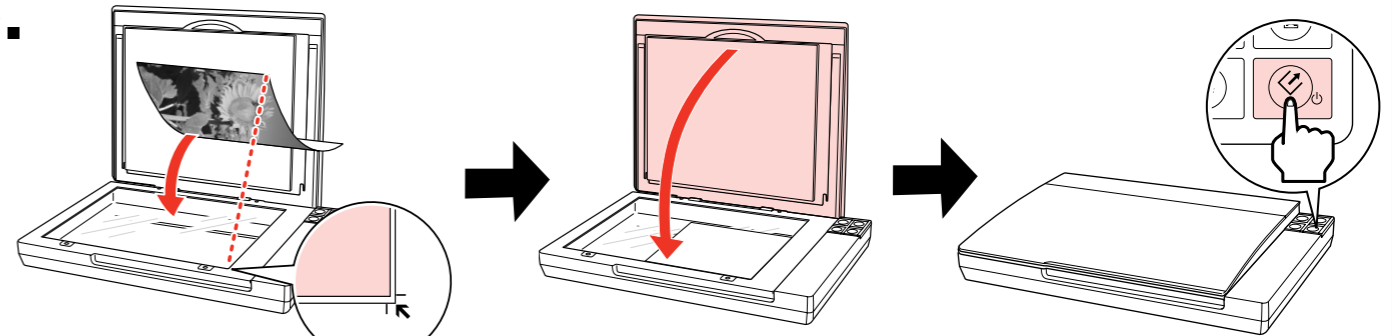

**Sådan finder du yderligere oplysninger• Lisätietojen saaminen•
Mer informasjon• Skaffa mer information•
Pridobite več informacij• Dobivanje više podataka•
Побарај повеќе информација• Dobivanje više informacija**

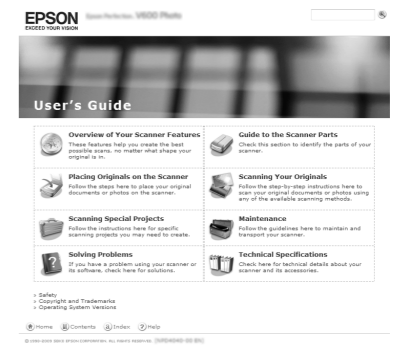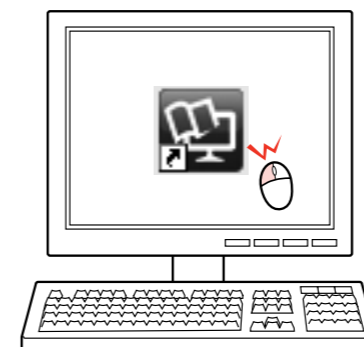

EPSON
EXCEED YOUR VISION

EPSON® is a registered trademark, and EPSON Perfection™ and EPSON EXCEED YOUR VISION or EXCEED YOUR VISION are trademarks of Seiko Epson Corporation. General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks. © 2010 Seiko Epson Corporation. All rights reserved.