



User's Guide Supplement

Multimedia Projector

**EB-L255F
EB-L250F
EB-L200F
EB-L200W
EB-L200X**

Introduction to the Updated Firmware 3

Features of Firmware Version 2.00	4
Updates to Projector Menus (Version 2.00)	4
Updates to User Operations (Version 2.00).....	4

Details of Updated Firmware 5

Details of Updated Projector Menus (Version 2.00)	6
A/V Output	6
No-signal Screen	6
Home Screen Auto Disp.	6
Standby Mode and Quick Startup	7
Transmitter Settings.....	7
Wireless LAN Sys.	7
Details of User Operation Change (Version 2.00)	9
Using the Wireless Presentation System to Connect Windows/Mac Computers ...	9
Setting Up the Wireless Presentation System for the First Time	9
Projecting with the Wireless Presentation System	10

Appendix 11

Optional Accessories.....	12
For Wireless Connection.....	12
Notices.....	13
Copyright Notice	13
General Notice.....	13
Copyright Attribution	13

Introduction to the Updated Firmware

Epson periodically provides firmware updates to enhance your projector features and to address issues of performance. Refer to these sections to learn more about the updated features within each firmware version.

» Related Links

- "Features of Firmware Version 2.00" [p.4](#)

Refer to these sections for a summary of the updated features of projector firmware version 2.00.

» Related Links

- "Updates to Projector Menus (Version 2.00)" [p.4](#)
- "Updates to User Operations (Version 2.00)" [p.4](#)

Updates to Projector Menus (Version 2.00)

The following projector menus have changed in firmware version 2.00 for newly added optional wireless presentation system:

Signal I/O Menu

- The display condition of the **A/V Output** setting is added.

Display Menu

- A setting value is added to the **No-signal Screen** setting.
- The display condition of the **Home Screen Auto Disp.** setting is added.

Operation Menu

- The display condition of the **Standby Mode** setting and the **Quick Startup** setting is added.

Network Menu

- The **Transmitter Settings** are added.

Network Settings Menu

- The **Wireless LAN Sys.** setting is added.

» Related Links

- "A/V Output" [p.6](#)
- "No-signal Screen" [p.6](#)
- "Home Screen Auto Disp." [p.6](#)
- "Standby Mode and Quick Startup" [p.7](#)
- "Transmitter Settings" [p.7](#)

- "Wireless LAN Sys." [p.7](#)

Updates to User Operations (Version 2.00)

You can project with the newly added optional wireless presentation system in firmware version 2.00.

The wireless presentation system (ELPWP10) includes two wireless transmitters (ELPWT01) and one wireless LAN module (ELPAP11).

See the *Epson Wireless Presentation System User's Guide* for details.

» Related Links

- "Using the Wireless Presentation System to Connect Windows/Mac Computers" [p.9](#)

Details of Updated Firmware

Check these sections for the updated details of firmware.

» **Related Links**

- "Details of Updated Projector Menus (Version 2.00)" [p.6](#)
- "Details of User Operation Change (Version 2.00)" [p.9](#)

Refer to these sections for details about projector menu changes.

» Related Links

- "A/V Output" [p.6](#)
- "No-signal Screen" [p.6](#)
- "Home Screen Auto Disp." [p.6](#)
- "Standby Mode and Quick Startup" [p.7](#)
- "Transmitter Settings" [p.7](#)
- "Wireless LAN Sys." [p.7](#)

A/V Output

The display condition of the **AV Output** setting is added.

Previous Signal I/O Menu (Version 1.00)

Top menu	Sub menu	Display condition
Signal I/O	AV Output	Setting is only displayed when Quick Startup is set to Off in the projector's Operation menu.

New Signal I/O Menu (Version 2.00)

Top menu	Sub menu	Display condition
Signal I/O	AV Output	Setting is only displayed in the following cases: <ul style="list-style-type: none"> • Quick Startup is set to Off in the projector's Operation menu. • Auto Power On is set to Off in the projector's Network menu.

No-signal Screen

Graduation is added as a setting value of the **No-signal Screen** setting.

Previous Display Menu (Version 1.00)

Top menu	Sub menu	Items or setting values
Display	No-signal Screen	Black Blue Logo

New Display Menu (Version 2.00)

Top menu	Sub menu	Items or setting values
Display	No-signal Screen	Black Blue Logo Gradation

Home Screen Auto Disp.

The display condition of the **Home Screen Auto Disp.** setting is added.

Previous Display Menu (Version 1.00)

Top menu	Sub menu	Display condition
Display	Home Screen Auto Disp.	—

New Display Menu (Version 2.00)

Top menu	Sub menu	Display condition
Display	Home Screen Auto Disp.	Setting is only displayed when Connection Guide Display is set to Off in the projector's Network menu.

Standby Mode and Quick Startup

The display conditions of the **Standby Mode** and the **Quick Startup** settings are added.

Previous Operation Menu (Version 1.00)

Top menu	Sub menu	Display condition
Operation	Standby Mode	Setting is only displayed when A/ V Output is set to While Projecting in the projector's Signal I/O menu.
	Quick Startup	

New Operation Menu (Version 2.00)

Top menu	Sub menu	Display condition
Operation	Standby Mode	Setting is only displayed in the following cases: <ul style="list-style-type: none"> • A/V Output is set to While Projecting in the projector's Signal I/O menu. • Auto Power On is set to Off in the projector's Network menu.
	Quick Startup	

Transmitter Settings

The **Transmitter Settings** are added.

Previous Network Menu (Version 1.00)

No setting is available.

New Network Menu (Version 2.00)

Top menu	Sub menu	Items or setting values
Network	Transmitter Settings	Start Pairing
		Auto Power On
		Connection Guide Display

Start Pairing

Updates the network information of the wireless transmitter from your computer using the Epson Wireless Transmitter Settings software. See the *Epson Wireless Transmitter Settings Operation Guide* for details.

This setting is only displayed when the wireless LAN module is installed and **Simple AP** is set to **On** in the projector's **Network Settings** menu.

Auto Power On

Set to **On** to turn on the projector automatically when you connect a computer using the optional wireless presentation systems.

This setting is only displayed in the following cases:

- When **A/V Output** is set to **While Projecting** in the projector's **Signal I/O** menu.
- When **Quick Startup** is set to **Off** in the projector's **Operation** menu.

Connection Guide Display

Set to **On** to automatically display the connection guide for the wireless transmitter (Epson Wireless Presentation) instead of the Home screen when there is no input signal when you turn on the projector. The changed setting takes effect the next time you turn on the projector.

When you use a QR code to connect a mobile device, set to **Off**.

This setting is only displayed when **Content Playback** is set to **Off** in the projector's **Operation** menu.

Wireless LAN Sys.

The **Wireless LAN Sys.** setting is added.

Previous Network Settings Menu (Version 1.00)

No setting is available.

New Network Settings Menu (Version 2.00)

Top menu	Sub menu	Items or setting values
Network	Network Settings	Wireless LAN Sys. <ul style="list-style-type: none">• 802.11ac (Wi-Fi 5)• 802.11n (Wi-Fi 4)

Sets the communication method between the projector and the mobile device.

The available methods vary depending on countries and regions.

Refer to these sections for details on changes to user operations.

» Related Links

- "Using the Wireless Presentation System to Connect Windows/Mac Computers" [p.9](#)

Using the Wireless Presentation System to Connect Windows/Mac Computers

You can use the optional wireless presentation system to quickly connect the projector to computers wirelessly and project your image. Your wireless presentation system (ELPWP10) includes two wireless transmitters (ELPWT01) and one wireless LAN module (ELPAP11).

See the *Epson Wireless Presentation System User's Guide* for details.

» Related Links

- "Setting Up the Wireless Presentation System for the First Time" [p.9](#)
- "Projecting with the Wireless Presentation System" [p.10](#)

Setting Up the Wireless Presentation System for the First Time


The first time you start using the wireless presentation system, you need to make preparations such as pairing the wireless transmitters with the projector.



- Select network settings for the projector before pairing.
- You need to pair the wireless transmitters again when you change **Projector Name** or **Passphrase** in the **Network Settings** menu.
- You can also pair the wireless transmitters from your computer using the Epson Wireless Transmitter Settings software. See the *Epson Wireless Transmitter Settings Operation Guide* for details.
- You can download the necessary software and manuals from the following Web site:
epson.sn

1 Turn on the projector.

2 Connect the wireless transmitter to the projector's USB-A port.

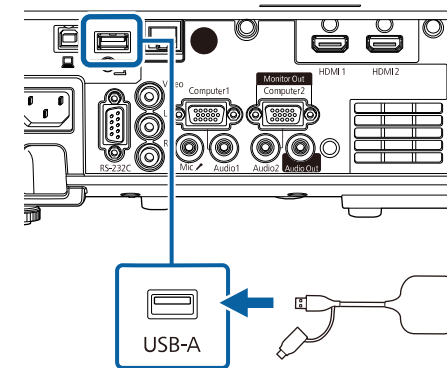

The network information is written and a completion message is displayed. It may take some time to finish pairing.

⚠ Caution

Do not disconnect the power cord or the wireless transmitter from the projector while the network information is being written. If the power cord or wireless transmitter is disconnected, the projector may not start correctly. Make sure the completion message is displayed before disconnecting the wireless transmitter.

3 Connect the other wireless transmitters if you want to continue pairing.

4 Select **Yes** to set **Connection Guide Display** to **On** if necessary.



- We recommend selecting **Yes**. The next time you turn on the projector and no signal is being input, the connection guide for the wireless transmitter (Epson Wireless Presentation) is displayed.
- The message prompting you to set **Connection Guide Display** to **On** is displayed when **Connection Guide Display** is set to **Off** and **Content Playback** is set to **Off**.
- You can change the connection guide display in the projector's **Network** menu.
☛ **Network > Transmitter Settings > Connection Guide Display**



Make sure the wireless LAN module is installed into your projector.

- 1** Turn on the projector.
- 2** Connect the wireless transmitter to a USB port on your computer.
- 3** Project your content with the Epson Wireless Presentation software in the wireless transmitter. See the *Epson Wireless Presentation System User's Guide* for details.

- 5** Remove the wireless transmitter from the projector and insert the wireless LAN module into the same port used for the wireless transmitter.
- 6** Press the [Menu] button on the control panel or remote control.
- 7** Make sure **Wireless LAN Power** is set to **On** in the projector's **Management** menu and **Simple AP** is set to **On** in the projector's **Network Settings** menu.

We recommend turning the projector off and then back on to enable the connection guide display.



If you set the **Auto Power On** setting to **On** in the projector's **Network** menu, you can start projection even if the projector is in standby mode (when the power is off).

☛ **Network > Transmitter Settings > Auto Power On**

Projecting with the Wireless Presentation System

You can use the paired wireless transmitter to quickly establish direct connection between the projector (receiver) and Windows/Mac computers and easily project your images.

Appendix

Check these sections for the newly added optional accessories and the important notices about your product.

» **Related Links**

- "Optional Accessories" [p.12](#)
- "Notices" [p.13](#)

The following optional accessories are available. Please purchase these products as and when needed.

Details of accessories are subject to change without notice and availability may vary depending on the country of purchase.

» Related Links

- "For Wireless Connection" [p.12](#)

For Wireless Connection

Wireless Presentation System ELPWP10

Use when directly connecting to Windows/Mac computers and projecting images wirelessly. Includes two wireless transmitters (ELPWT01) and one wireless LAN module (ELPAP11).

Wireless Transmitter ELPWT01

Additional wireless transmitter for wireless presentation system.

Check these sections for important notices.

» Related Links

- "Copyright Notice" [p.13](#)
- "General Notice" [p.13](#)
- "Copyright Attribution" [p.13](#)

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice.

Illustrations in this guide and the actual projector may differ.

Windows is a trademark or a registered trademark of Microsoft Corporation in the United States and/or other countries.

Mac is a trademark of Apple Inc.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

Software Copyright: This product uses free software as well as software to which this company holds the rights.

Copyright Attribution

This information is subject to change without notice.

© 2021 Seiko Epson Corporation

Rev.1.0 2021.07 EN

General Notice

EPSON is a registered trademark, and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.