

EPSON

Projector Manual Update Information

Multimedia Projector

EB-775F

EB-770Fi

EB-770F

EB-760Wi

EB-760W

Introduction to the Updated Firmware 3

Features of Firmware Version 1.10 4

Updates to User Operations (Version 1.10) 4

Features of Firmware Version 1.13 5

Updates to Projector Menus (Version 1.13) 5

Features of Firmware Version 1.30 6

Updates to Projector Menus (Version 1.30) 6

Details of Updated Firmware 7

Details of User Operation Change (Version 1.10) 8

Default Password Settings 8

Setting a Password 8

Setting the Remote Password and Web Control Password 9

Details of Updated Projector Menus (Version 1.13) 10

Pen Tracking Mode 10

Details of Updated Projector Menus (Version 1.30) 11

EPMC Monitoring Control 11

Appendix 12

Notices 13

Copyright Notice 13

General Notice 13

Copyright Attribution 13

Introduction to the Updated Firmware

Epson periodically provides firmware updates to enhance your projector features and to address issues of performance. Refer to these sections to learn more about the updated features within each firmware version.

▶ **Related Links**

- "Features of Firmware Version 1.10" [p.4](#)
- "Features of Firmware Version 1.13" [p.5](#)
- "Features of Firmware Version 1.30" [p.6](#)

Refer to the section for a summary of the updated features of projector firmware version 1.10.

▶▶ Related Links

- "Updates to User Operations (Version 1.10)" [p.4](#)

Updates to User Operations (Version 1.10)

The following projector operations have changed in firmware version 1.10:

- The default passwords are no longer set for the following functions.
 - **Password Protect**
 - **Epson Web Control**
- You must set a password for the following functions.
 - **Simple AP**
 - **SNMP**
 - **PJLink**
 - **Crestron Connected**
 - **Command Communication**
- If the **Remote Password** and the **Web Control Password** have not been set, a screen prompting you to set these passwords is displayed when you select the **Network Settings** menu for the first time.

▶▶ Related Links

- "Default Password Settings" [p.8](#)
- "Setting a Password" [p.8](#)
- "Setting the Remote Password and Web Control Password" [p.9](#)

Refer to the section for a summary of the updated features of projector firmware version 1.13.

▶▶ **Related Links**

- "Updates to Projector Menus (Version 1.13)" [p.5](#)

Updates to Projector Menus (Version 1.13)

The following projector menus have changed in firmware version 1.13:

Pen/Touch > PC Interactivity > Pen Tracking Mode **Menu**

- The **Touch Mode** setting is added.

▶▶ **Related Links**

- "Pen Tracking Mode" [p.10](#)

Refer to the section for a summary of the updated features of projector firmware version 1.30.

▶▶ **Related Links**

- "Updates to Projector Menus (Version 1.30)" [p.6](#)

Updates to Projector Menus (Version 1.30)

The following projector menus have changed in firmware version 1.30:

- The **EPMC Monitoring Control** menu has been added to the **Network** menu.

▶▶ **Related Links**

- "EPMC Monitoring Control" [p.11](#)

Details of Updated Firmware

Check these sections for the updated details of firmware.

▶ **Related Links**

- "Details of User Operation Change (Version 1.10)" [p.8](#)
- "Details of Updated Projector Menus (Version 1.13)" [p.10](#)
- "Details of Updated Projector Menus (Version 1.30)" [p.11](#)

Refer to these sections for details on changes to user operations.

▶ **Related Links**


- "Default Password Settings" [p.8](#)
- "Setting a Password" [p.8](#)
- "Setting the Remote Password and Web Control Password" [p.9](#)

Default Password Settings

No password is set by default. When you use the following functions for the first time, follow the on-screen instructions to set a password.


Previous Password Settings (Version 1.00)

Function	Password	Default Password
Password Protect	Password	0000
Epson Web Control > Basic Control	Remote Password	User Name: EPSONREMOTE Password: Projector's serial number
Epson Web Control > other options	Web Control Password	User Name: EPSONWEB Password: Projector's serial number



You can check the projector's serial number on the following screens.

- **Management** menu > **Information**
- **Epson Web Control** screen

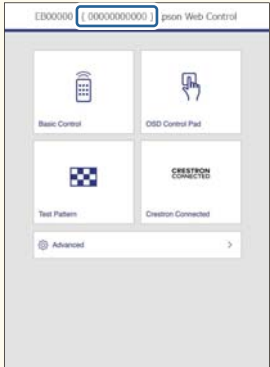

New Password Settings (Version 1.10)

Function	Password	Default Password
Password Protect	Password	None
Epson Web Control > Basic Control	Remote Password	User Name: EPSONREMOTE Password: None
Epson Web Control > other options	Web Control Password	User Name: EPSONWEB Password: None

Setting a Password

You must set a password. When you use the following functions for the first time, follow the on-screen instructions to set a password.

Function	Password
Simple AP	Passphrase
SNMP	Community Name
PJLink	PJLink Password
Crestron Connected	Password
Command Communication	Monitor Password



- You can only set the Monitor Password using Epson Web Control.
- If Command Communication fails after you update the projector firmware to version 1.10, set the Monitor Password or the Web Control Password.

Setting the Remote Password and Web Control Password

If the **Remote Password** and the **Web Control Password** have not been set, a screen prompting you to set these passwords is displayed when you select the **Network Settings** menu for the first time. Follow the on-screen instructions to set these passwords.

Refer to these sections for details about projector menu changes.

▶▶ Related Links

- "Pen Tracking Mode" [p.10](#)

Pen Tracking Mode

The **Touch Mode** setting has been added to the **Pen/Touch > PC Interactivity > Pen Tracking Mode** setting.

Previous Settings Menu (Version 1.10)

Top menu	Sub menu	Feature
PC Interactivity	Pen Tracking Mode	Selects the device type of the pen recognized from your OS. For Windows or Mac (including the computer's ink feature), select Pen Mode and for Ubuntu, select Mouse Mode .

New Settings Menu (Version 1.13)

Top menu	Sub menu	Feature
PC Interactivity	Pen Tracking Mode	Selects the device type of the pen recognized from your OS. <ul style="list-style-type: none">• For Windows, select Pen Mode or Touch Mode.• For Mac (including the computer's ink feature), select Pen Mode.• For Ubuntu, select Mouse Mode.



The **Pen Hovering** feature is disabled when **Pen Tracking Mode** is set to **Touch Mode**.

Refer to these sections for details about projector menu changes.

▶ Related Links

- "EPMC Monitoring Control" [p.11](#)

EPMC Monitoring Control

The **EPMC Monitoring Control** menu has been added to the **Network** menu.

Previous Network Menu (Version 1.13)

No setting is available.

New Network Menu (Version 1.30)

Top menu	Sub menu	Items or setting values
Network	EPMC Monitoring Control	<ul style="list-style-type: none">• EPMC Settings• Export EPMC Settings• Import EPMC Settings

Set **EPMC Monitoring Control** to **On** and make the necessary settings to directly communicate with the Epson Projector Management Connected cloud server, not through the Epson Projector Connected Agent. See the *Epson Projector Management Connected Operation Guide* for more details.

<https://www.projection-service.epson.com/pages/epm-connected/online-manual/web-front/EN/index.html>

Appendix

Refer to these sections for important notices.

▶ **Related Links**

- "Notices" [p.13](#)

Check these sections for important notices.

► **Related Links**

- "Copyright Notice" [p.13](#)
- "General Notice" [p.13](#)
- "Copyright Attribution" [p.13](#)

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice. Illustrations in this guide and the actual projector may differ.

General Notice

Windows and Microsoft Teams are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Mac and macOS are trademarks of Apple Inc.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

Software Copyright: This product uses free software as well as software to which this company holds the rights.

Copyright Attribution

This information is subject to change without notice.

© 2023 Seiko Epson Corporation

Rev.02 2024.09 EN