


Cautions

- ❑ Remove all media from the printer before proceeding.
- ❑ Do not touch belts, circuit boards, or any other parts except those that you are cleaning. Failure to observe this precaution could affect print quality or cause malfunction.
- ❑ Use only the supplied cleaning sticks (C13S090013). Lint from other products could damage the print head.
- ❑ Once cleaning has begun, do not pause until the operation is complete. Failure to observe this precaution could damage the print head.
- ❑ The printer display language can be changed using the **Language** option in the Preferences menu.


Cleaning

- 1 After confirming that there is no paper in the printer and the following message is displayed, press the **▶** button to view the menus.

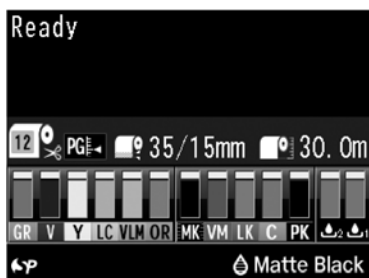


- 2 Highlight Administrator Menu using the **▼** and **▲** buttons and press **▶**.
- 3 Highlight White Cap Cleaning using the **▼** and **▲** buttons and press **▶**.
- 4 Press OK to move the print head into position for cleaning.
Wait until the message "Please wait." clears from the display.

- 5 After confirming that the message is no longer displayed, open the printer cover.

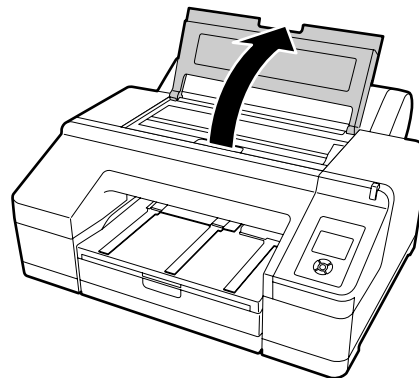

- 6 Find the caps at the right side of the platen and use a dry cleaning stick to wipe the interiors of all five caps.

Continue until no damp spots are left.

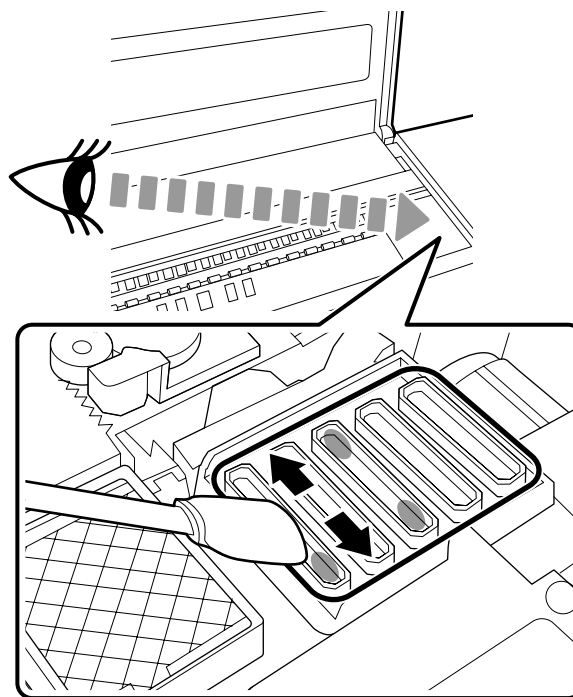

- 7 Close the printer cover when cleaning is complete.
The print head will return to its normal position and the message shown in Step 1 will be displayed.