

Where to Find Information

Setup Guide

Provides you with information on assembling the printer and installing the printer software.

Reference Guide (this manual)

Provides you with detailed information on the printer's functions, optional products, maintenance, troubleshooting, and technical specifications.

Network Guide

Provides network administrators with information on both the printer driver and network settings. You need to install this guide from the software installation CD to your computer's hard disk before referring it.

Paper Jam Guide

Provides you with solutions for paper jam problems about your printer you may need to refer to on a regular basis. We recommend printing this guide and keeping it near the printer.

Safety Information	15
Warnings, Cautions, and Notes	15
Safety Precautions	15
Important Safety Instructions	18
Power On/Off Cautions	19

Chapter 1 Getting to Know Your Printer

Printer Parts	22
Control panel	24
Options and Consumable Products	25
Options	25
Consumable products	27
Printer Features	28
High-speed tandem printing engine	28
Duplex printing	28
Reserve Job function	28
HDD Form Overlay function	29
Pre-defined color settings in printer driver	29
Wide variety of fonts	29
Toner save mode	30
Resolution Improvement Technology (RITech)	30
Various Printing Options	31
Double-sided printing	31
Fit to page printing	32
Pages per sheet printing	32
Watermark printing	33
Overlay printing	34
Using the Reserve Job function	34

Chapter 2 Paper Handling

Paper Sources	35
MP tray	35
Standard lower cassette	36
500-Sheet/1000-Sheet Paper Cassette Unit	36
Selecting a paper source	37

Loading Paper	40
MP tray	40
Standard lower cassette and optional paper cassette unit	42
Output Tray	47
Printing on Special Media	47
EPSON Color Laser Paper	48
EPSON Color Laser Transparencies	48
Envelopes	50
Labels	52
Thick paper and extra thick paper	53
Transparencies	54
Loading a custom paper size	54

Chapter 3 For Windows

About the Printer Software	57
Accessing the printer driver	57
Making Changes to Printer Settings	58
Making the print quality setting	58
Resizing printouts	65
Modifying the print layout	67
Using a watermark	68
Using an overlay	73
Using HDD form overlay	79
Printing with the duplex unit	82
Making Extended Settings	83
Making Optional Settings	86
Using the Reserve Job Function	87
Re-Print Job	88
Verify Job	89
Stored Job	91
Confidential Job	92
Monitoring Your Printer Using EPSON Status Monitor 3	94
Installing EPSON Status Monitor 3	95
Accessing EPSON Status Monitor 3	97
Getting printer status details	98
Setting Monitoring Preferences	100
Status Alert window	102

Using the Job Management function	102
Stopping monitoring	106
Monitored Printers settings	107
Setting Up the USB Connection	107
Canceling Printing	109
Uninstalling the Printer Software	110
Uninstalling the printer driver	110
Uninstall the USB device driver	113

Chapter 4 For Macintosh

About the Printer Software	117
Accessing the printer driver	117
Making Changes to Printer Settings	118
Making the print quality settings	118
Resizing printouts	124
Modifying the print layout	125
Using a watermark	128
Printing with the duplex unit	135
Making Extended Settings	136
Using the Reserve Job Function	139
Re-Print Job	140
Verify Job	142
Stored Job	144
Confidential Job	146
Monitoring Your Printer using EPSON Status Monitor 3	148
Accessing EPSON Status Monitor 3	148
Getting printer status details	149
Setting Monitoring Preferences	151
Status Alert window	152
Using the Job Management function	152
Setting Up the USB Connection	154
Canceling Printing	156
Uninstalling the Printer Software	156
For Mac OS 8.6 to 9.X	156
For Mac OS X	157

Chapter 5 *Setting Up Your Printer on a Network*

For Windows	159
Sharing the printer	159
Setting up your printer as a shared printer	160
Using an additional driver	162
Setting up a clients	168
Installing the printer driver from the CD-ROM	176
For Macintosh	178
Sharing the printer	178
Setting up your printer as a shared printer	178
Accessing the shared printer	179
For Mac OS X	181

Chapter 6 *Installing Options*

500-Sheet/1000-Sheet Paper Cassette Unit	183
Installing the optional paper cassette unit	184
Removing the optional paper cassette unit	190
Hard Disk Drive	193
Installing the Hard Disk Drive	194
Removing the Hard Disk Drive	198
Memory Module	200
Removing a memory module	205
Adobe PostScript 3 ROM Module	209
Installing the Adobe PostScript 3 ROM module	209
Removing the Adobe PostScript 3 ROM module	213
Interface Cards	216
Removing an interface card	219

Chapter 7 *Replacing Consumable Products*

Replacement Messages	221
Toner Cartridge	222
Photoconductor unit	228
Fuser unit	234
Transfer unit	238

Cleaning the Printer	242
Transporting the Printer	242
Checking color registration	248

Chapter 8 Troubleshooting

Clearing Jammed Paper	251
Precautions for clearing jammed paper	251
Jam AB (covers A and B)	252
Jam A (cover A)	254
Jam AC (cover A and paper cassettes)	258
Jam B (cover B)	263
Jam ABC (cover A, paper cassettes and cover B)	265
Jam at the MP tray	266
Printing a Status Sheet	267
Operational Problems	269
The Ready light does not turn on	269
The printer does not print (Ready light off)	269
The Ready light is on but nothing prints	269
The optional product is not available	271
Printout Problems	271
The font cannot be printed	271
Printout is garbled	271
Misalignment of colors	273
The printout's orientation on the page is not correct	273
Graphics do not print correctly	273
Color Printing Problems	275
Cannot print in color	275
The printout color differs when printed from different printers	
275	
The color looks different from what you see on the computer	
screen	275
Print Quality Problems	276
The background is dark or dirty	277
White dots appear in the printout	277
Print quality or tone is uneven	277
Half-tone images print unevenly	279
Toner smudges	279

Areas are missing in the printed image	281
Completely blank pages are output	281
The printed image is light or faint	283
The non-printed side of the page is dirty	283
Memory Problems	283
Print quality decreased	284
Insufficient memory for current task	284
Insufficient memory to print all copies	284
Paper Handling Problems	284
Paper does not feed properly	285
Problems When Using Options	285
The message Invalid AUX I/F Card appears on the LCD panel	
286	
Paper does not feed from the optional paper cassette	286
Feed jam when using the optional paper cassette	286
An installed option cannot be used	287
Correcting USB Problems	287
USB connections	287
Windows operating system	288
Printer software installation	288
Status and Error Messages	296
Canceling Printing	311
Using the Cancel Job button	311
Using the Reset menu	311

Chapter 9 Functions of the Control Panel

Using the Control Panel Menus	313
When to make control panel settings	313
How to access the control panel menus	313
Printing and Deleting Reserve Job Data	317
Using the Quick Print Job Menu	317
Using the Confidential Job Menu	318
Control Panel Menus	319
Control panel menu summary	319
Information Menu	322
Tray Menu	325
Emulation Menu	327

Printing Menu	327
Setup Menu	330
Quick Print Job Menu	336
Confidential Job Menu	336
Reset Menu	336
Parallel Menu	337
USB Menu	338
Network Menu	339
AUX Menu	339
LJ4 Menu	340
GL2 Menu	343
PS3 Menu	345
ESCP2 Menu	346
FX Menu	349
I239X Menu	351

Appendix A Technical Specifications

Paper	355
Available paper types	356
Paper that should not be used	356
Specifications	358
Printable area	360
Printer	361
General	361
Environmental	363
Mechanical	363
Electrical	363
Standard and approvals	364
Interfaces	366
Parallel interface	366
USB interface	366
Ethernet interface	366
Options and Consumables	367
500-Sheet/1000-Sheet Paper Cassette Unit	367
Memory modules	368
Hard Disk Drive	369
Toner cartridges	369

Photoconductor unit	370
Transfer unit	370
Fuser unit 120/220	371

Appendix B Working with Fonts

EPSON BarCode Fonts (Windows Only)	373
System requirements	375
Installing EPSON BarCode Fonts	375
Printing with EPSON BarCode Fonts	377
BarCode Font specifications	381
Available Fonts	392
LJ4/GL2 mode	393
ESC/P 2 and FX modes	395
I239X mode	396
Printing font samples	396
Adding More Fonts	397
Selecting Fonts	397
Downloading Fonts	397
EPSON Font Manager (Windows Only)	398
System requirements	398
Installing EPSON Font Manager	398

Appendix C Symbol Sets

Introduction to Symbol Sets	401
In the LJ4 Emulation Mode	401
International character sets for ISO	404
In the ESC/P 2 or FX Modes	405
International character sets	407
Characters available with the ESC (^ command)	407
In the I239X Emulation Mode	408
In the EPSON GL/ 2 Mode	408
Contacting Customer Support	409
For users in Latin America	410
For users in Australia	410
For users in Singapore	412

For users in Thailand	412
For users in Indonesia.....	413
For users in Hong Kong.....	414
For users in Malaysia	415
For users in India.....	416
For users in the Philippines	418

Glossary

EPSON®

Color Laser Printer

EPSON AcuLaser™ C4100

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION and its affiliates shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

NEST Office Kit Copyright © 1996, Novell, Inc. All rights reserved.

IBM and PS/2 are registered trademarks of International Business Machines Corporation. Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States of America and other countries.

EPSON and EPSON ESC/P are registered trademarks and EPSON AcuLaser and EPSON ESC/P 2 are trademarks of SEIKO EPSON CORPORATION.

Coronet is a trademark of Ludlow Industries (UK) Ltd.

Marigold is a trademark of Arthur Baker and may be registered in some jurisdictions.

CG Times and CG Omega are trademarks of Agfa Monotype Corporation and may be registered in certain jurisdictions.

Arial , Times New Roman and Albertus are trademarks of The Monotype Corporation and may be registered in certain jurisdictions.

ITC Avant Garde Gothic, ITC Bookman, ITC Zapf Chancery and ITC Zapf Dingbats are trademarks of International Typeface Corporation and may be registered in some jurisdictions.

Antique Olive is a trademark of Fonderie Olive.

Helvetica, Palatino, Times, Univers, Clarendon, New Century Schoolbook, Miriam and David are trademarks of Heidelberger Druckmaschinen AG which may be registered in certain jurisdictions.

Wingdings is a trademark of Microsoft Corporation and may be registered in some jurisdictions.

HP and HP LaserJet are registered trademarks of the Hewlett-Packard Company.

Microsoft® and Windows® are registered trademarks of Microsoft Corporation.

Apple® and Macintosh® are registered trademarks of Apple Computer, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

Copyright © 2003 by SEIKO EPSON CORPORATION, Nagano, Japan.

Safety Information

Warnings, Cautions, and Notes



Warnings

must be followed carefully to avoid bodily injury.



Cautions

must be observed to avoid damage to your equipment.


Notes

contain important information and useful tips on the operation of your printer.

Safety Precautions


Be sure to follow these precautions carefully to ensure safe, efficient operation:

- ❑ Because the printer weighs approximately 36.0 kg (79lb) with consumable products installed, one person should not lift or carry it. Two people should carry the printer, lifting it by the correct positions as shown below.

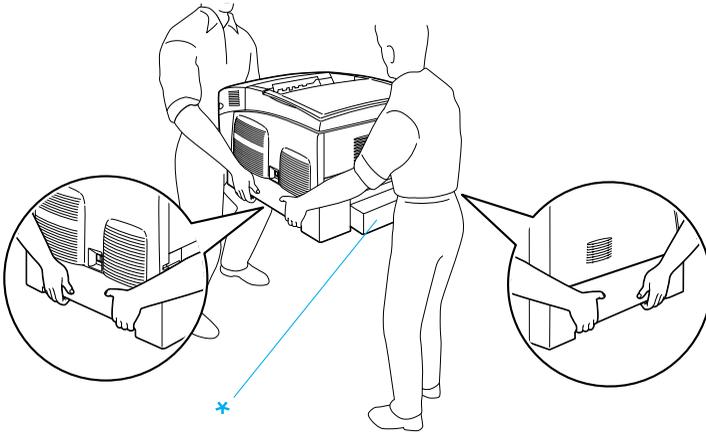

* Do not lift the printer by these areas.

- ❑ Be careful not to touch the fuser, which is marked **CAUTION HIGH TEMPERATURE**, or the surrounding areas. If the printer has been in use, the fuser and the surrounding areas may be very hot.

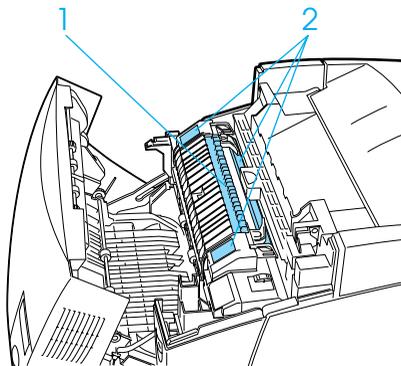

1. Do not insert your hand deep into the fuser unit.
2. CAUTION HIGH TEMPERATURE

- Do not insert your hand deep into the fuser unit as some components are sharp and may cause injury.
- Avoid touching the components inside the printer unless instructed to do so in this guide.
- Never force the printer's components into place. Although the printer is designed to be sturdy, rough handling can damage it.
- When handling an imaging cartridge, always place them on a clean, smooth surface.
- Do not attempt to modify an imaging cartridge or take them apart. They cannot be refilled.
- Do not touch the toner. Keep the toner away from your eyes.
- Do not dispose of used toner cartridges, photoconductor units, fuser units, or transfer units in fire, as they can explode and cause injury. Dispose of them according to local regulations.
- If toner is spilled, use a broom and dustpan or a damp cloth with soap and water to clean it up. Because the fine particles can cause a fire or explosion if they come into contact with a spark, do not use a vacuum cleaner.
- Wait at least one hour before using an imaging cartridge after moving it from a cool to a warm environment to prevent damage from condensation.

- ❑ When removing the photoconductor unit, avoid exposing it to room light for more than five minutes. The unit contains a green-colored light-sensitive drum. Exposure to light can damage the drum, causing dark or light areas to appear on the printed page and reducing the service life of the drum. If you need to keep the unit out of the printer for long periods, cover it with an opaque cloth.
- ❑ Be careful not to scratch the surface of the drum. When you remove the photoconductor unit from the printer, always place the unit on a clean, smooth surface. Avoid touching the drum, since oil from your skin can permanently damage its surface and affect print quality.
- ❑ To get the best print quality, do not store the photoconductor unit in an area subject to direct sunlight, dust, salty air, or corrosive gases (such as ammonia). Avoid locations subject to extreme or rapid changes in temperature or humidity.
- ❑ Be sure to keep consumable components out of the reach of children.
- ❑ Do not leave jammed paper inside the printer. This can cause the printer to overheat.
- ❑ Avoid sharing outlets with other appliances.
- ❑ Use only an outlet that meets the power requirements of this printer.

Important Safety Instructions

- ❑ Connect your printer to an electrical outlet that meets the power requirements of this printer. Your printer's power requirements are indicated on a label attached to the printer. If you are not sure of the power supply specifications in your area, contact your local power company or consult your dealer.

- ❑ If you are unable to insert the AC plug into the electrical outlet, contact an electrician.
- ❑ Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage that requires repair by a qualified service representative.

ENERGY STAR[®] Compliance



As an International ENERGY STAR[®] Partner, EPSON has determined that this product meets the International ENERGY STAR[®] Program guidelines for energy efficiency.

The International ENERGY STAR[®] Office Equipment Program is a voluntary partnership with the computer and office equipment industry to promote the introduction of energy-efficient personal computers, monitors, printers, fax machines, copiers, and scanners, in an effort to reduce air pollution caused by power generation.

Power On/Off Cautions



Do not turn off the printer:


- ❑ After turning on the printer, wait until Ready appears on the LCD panel.
- ❑ While the Ready light is flashing
- ❑ While the Data light is on or flashing
- ❑ While printing

Chapter 1


Getting to Know Your Printer

Printer Parts

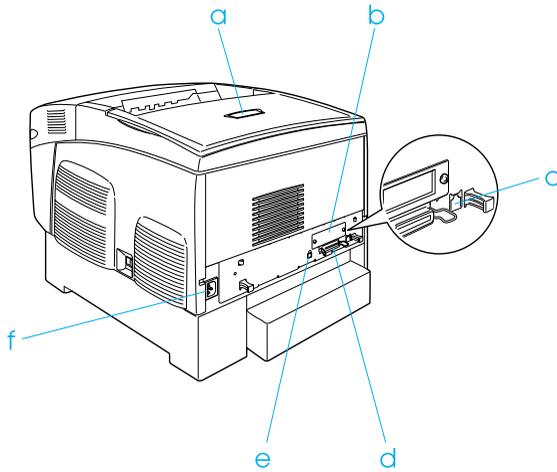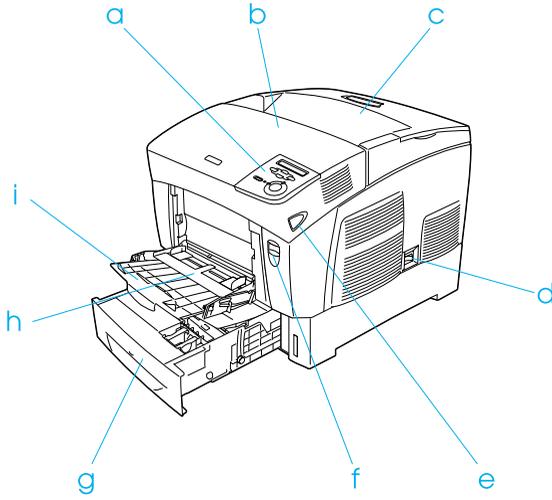

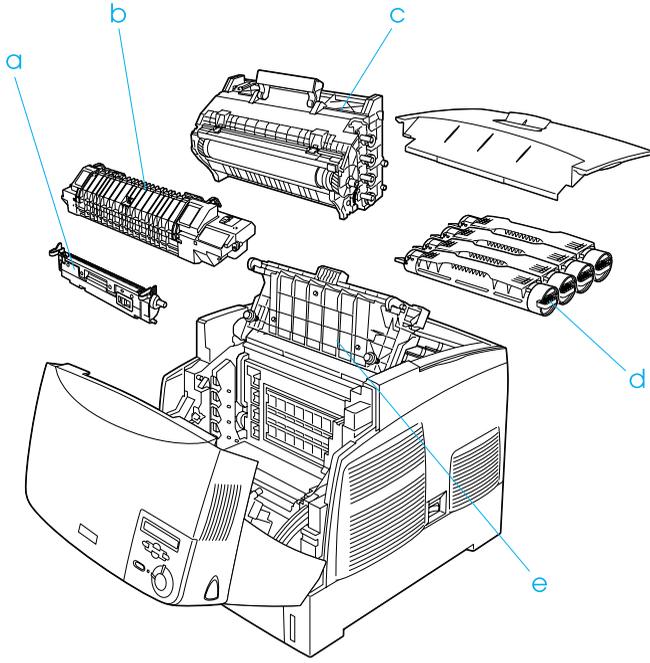

Control panel

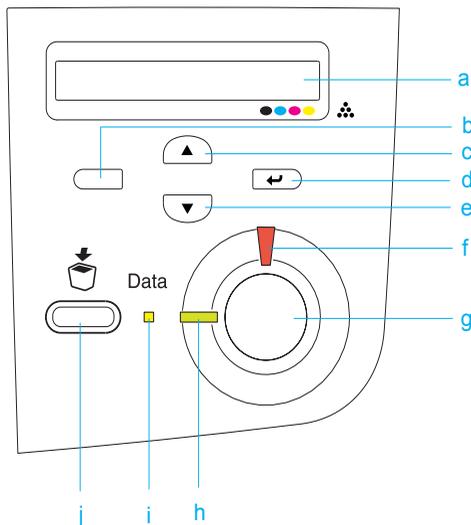

- | | |
|-------------------------|---|
| a. LCD panel | Displays printer status messages and control panel menu settings. |
| b. Back button | Use these buttons to access the control panel menus, where you can make printer settings and check the status of consumable products. For instructions on how to use these buttons, see “Using the Control Panel Menu” on page 313. |
| c. Up button | |
| d. Enter button | |
| e. Down button | |
| f. Error light
(Red) | On or flashes when an error has occurred. Flashing slowly when the printer is not ready. |

- g. Start/Stop button When the printer is printing, pressing this button stops the printing.
When the error light is flashing, pressing this button clears the error and switches the printer to ready status.
- h. Ready light (Green) On when the printer is ready, indicating that the printer is ready to receive and print data.
Off when the printer is not ready.
- i. Data light (Yellow) On when print data is stored in the print buffer (the section of printer memory reserved for receiving data) but not yet printed.
Flashes when the printer is processing data.
Off when no data remains in the print buffer.
- j. Cancel Job button Press once to cancel the current print job.
Press and hold for more than two seconds to delete all jobs from the printer memory, including jobs the printer is currently receiving, saving to the Hard Disk Drive, or printing.

Options and Consumable Products

Options

You can add to your printer's capabilities by installing any of the following options.

- ❑ The 500-Sheet Paper Cassette Unit (C12C802061) holds one paper cassette. It increases paper-feeding capacity up to 500 sheets of paper.
- ❑ The 1,000-Sheet Paper Cassette Unit (C12C802071) holds two paper cassettes. It increases paper-feeding capacity up to 1,000 sheets of paper.
- ❑ The Hard Disk Drive (C12C824061) expands the printer's capacity by allowing you to print complex and large print jobs at high speed. This option also allows you to use the Reserve Job function, allowing you to save overlay data and print job data. These allow you to print overlay data fast and reprint the print job later directly from the printer's control panel.
- ❑ Optional memory modules expand your printer's memory, allowing you to print complex and graphics-intensive documents.
- ❑ The Adobe® PostScript® 3™ ROM Module (C12C832571) generates crisp PostScript output. It cannot be used for Macintosh connected over the IEEE 1394 Type B Interface Card.
- ❑ The IEEE 1394 Type B Interface Card (C12C82391) can be used for Macintosh users. It can be connected to a Macintosh® FireWire® port.

Consumable products

The life of the following consumable products is monitored by the printer. The printer lets you know when replacements are needed.

Toner Cartridge (Yellow)	S050148
Toner Cartridge (Magenta)	S050147
Toner Cartridge (Cyan)	S050146
Toner Cartridge (Black)	S050149
Photoconductor Unit	S051093
Transfer Unit	S053006
Fuser Unit 120/220	S053011/S053012*

* Product number varies by location.

The EPSON special media listed below provide you with the best-quality printouts.

EPSON Color Laser Paper (A4)	S041215
EPSON Color Laser Paper (Letter)	S041218
EPSON Color Laser Transparencies (A4)	S041175
EPSON Color Laser Transparencies (Letter)	S041174



Caution:

- Do not use other EPSON media such as EPSON special media for ink jet printers, as this can cause paper jams and damage the printer.*
- Do not use the media listed above in other printers, except when specified in the documentation.*

Printer Features

The printer comes with a full set of features that contributes to ease of use and consistent, high-quality output. The main features are described below.

High-speed tandem printing engine

Your printer's state-of-the-art tandem engine features 400 MHz image processing and single-pass technology that delivers 24 ppm (pages per minute) at 600 dpi color and monochrome printing.

Duplex printing

This printer comes with a built-in duplex unit, allowing you to easily print on both sides of the page. You can produce professional quality double-sided documents. Use this feature with any print job to cut costs and save resources.

As an ENERGY STAR[®] partner, EPSON recommends the use of the duplex printing function. See ENERGY STAR[®] Compliance for more information on the ENERGY STAR[®] program.

Reserve Job function

The Reserve Job function lets you store a print job on the printer's Hard Disk Drive and reprint it directly from the printer's control panel at any time without using your computer. You can also print one copy in order to verify the content before printing multiple copies. If the content of the print job is confidential, you can set a password to limit access to it. For more information, see "Using the Reserve Job Function" on page 87 for Windows, or "Using the Reserve Job Function" on page 139 for Macintosh.

Note:

You need an optional Hard Disk Drive installed in your printer in order to use the Reserve Job function.

HDD Form Overlay function

Enables faster printing with form overlays by allowing you to save the overlay data on the optional Hard Disk Drive instead of your computer. This feature is only available for Windows. For details, see “Using HDD form overlay” on page 79.

Note:

You need an optional Hard Disk Drive installed in your printer in order to use the HDD Form Overlay function.

Pre-defined color settings in printer driver

The printer driver offers many pre-defined settings for color printing, allowing you to optimize print quality for various types of color documents.

For more information, see “Making the print quality setting” on page 58 for Windows, or “Making the print quality settings” on page 118 for Macintosh.

Wide variety of fonts

The printer comes with a selection of 80 Laser-Jet-compatible scalable fonts, and 3 bitmap fonts in LJ4 emulation mode to provide you with the fonts you need to create professional-looking documents.

Toner save mode

To reduce the amount of toner used in printing documents, you can print rough drafts using the Toner Save mode.

Resolution Improvement Technology (RITech)

Resolution Improvement Technology (RITech) is an original EPSON printer technology that improves the appearance of printed lines, text, and graphics.

Various Printing Options

This printer provides you with a variety of different printing options. You can print in various formats, or can print using many different types of paper.

The following explains the procedure for each type of printing. Choose the appropriate one for your printing.

Double-sided printing

“Printing with the duplex unit” on page 82 (Windows)

“Printing with the duplex unit” on page 135 (Macintosh)



Lets you print on both sides of paper.


Fit to page printing

“Resizing printouts” on page 65 (Windows)

“Resizing printouts” on page 124 (Macintosh)

Note:

This function is not available with Mac OS X.

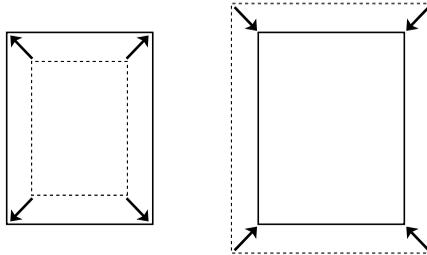


Lets you automatically enlarge or reduce the size of your document to fit the paper size you selected.

Pages per sheet printing

“Modifying the print layout” on page 67 (Windows)

“Modifying the print layout” on page 125 (Macintosh)

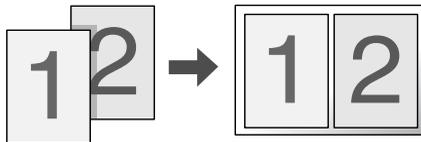

Lets you print two or four pages on a single sheet.

Watermark printing

“Using a watermark” on page 68 (Windows)

“Using a watermark” on page 128 (Macintosh)

Note:


This function is not available with Mac OS X.



Lets you print a text or image as a watermark on your printout.
For example, you can put "Confidential" on an important document.

Overlay printing

“Using an overlay” on page 73 (Windows)

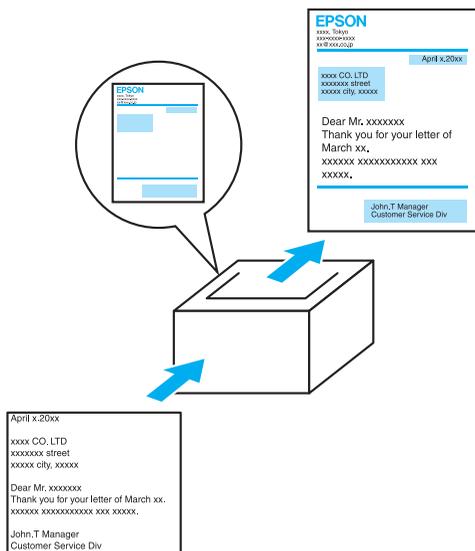

Lets you prepare standard forms or template on your printout that you can use as overlays when printing other documents.

Using the Reserve Job function

“Installing the Hard Disk Drive” on page 194

“Using the Reserve Job Function” on page 87 (Windows)

“Using the Reserve Job Function” on page 139 (Macintosh)

Lets you print jobs that you stored in the printer’s Hard Disk Drive later directly from the printer’s control panel.

Chapter 2

Paper Handling

Paper Sources

This section describes the combinations of paper sources and paper types that you can use.

MP tray

Paper Type	Paper Size	Capacity
Plain paper	A4, A5, B5, Letter (LT), Half-Letter (HLT), Executive (EXE), Government Legal (GLG), Legal (LGL), Government Letter (GLT), F4 Custom-size paper: 88.9 × 139.7 mm minimum 215.9 × 355.6 mm maximum	Up to a 100 sheets (Total thick stack: less than 10 mm)
Envelopes	Monarch (MON), C10, DL, C5, C6, IB5	Up to a 10 mm thick stack
Labels	A4, Letter (LT)	Up to a 10 mm thick stack
Thick paper Weight: 106 to 159 g/m	88.9 × 139.7 mm minimum 215.9 × 355.6 mm maximum	Up to a 10 mm thick stack
Extra thick paper Weight: 160 to 216 g/m	88.9 × 139.7 mm minimum 215.9 × 355.6mm maximum	Up to a 10 mm thick stack

EPSON Color Laser Paper	A4, Letter (LT)	Up to 100 sheets (Total thickness: less than 10 mm)
EPSON Color Laser Transparencies	A4, Letter (LT)	Up to a 10 mm thick stack

Standard lower cassette

Paper Type	Paper Size	Capacity
Plain paper	A4, A5, B5, Executive (EXE), Letter (LT), Legal (LGL) Government Legal (GLG),	Up to 500 sheets (Total thickness: less than 56 mm)
EPSON Color Laser Paper	A4, Letter (LT)	Up to 500 sheets

500-Sheet/1000-Sheet Paper Cassette Unit

Paper Type	Paper Size	Capacity
Plain paper	A4, A5, B5, Letter (LT), Executive (EXE), Legal (LGL) Government Legal (GLG),	Up to 500 sheets in each cassette (Total thickness: less than 56mm)
EPSON Color Laser Paper	A4, Letter (LT)	Up to 500 sheets in each cassette

Selecting a paper source

You can specify a paper source manually, or set the printer to select the paper source automatically.

Manual selection

You can use the printer driver or the printer's control panel to select a paper source manually.

- Using the printer driver

For Windows, access the printer driver, click the **Basic Settings** tab, and select the paper source that you want to use from the Paper Source list. Then click OK.

For Macintosh, access the printer driver, open the Basic Settings dialog box, and select the paper source that you want to use from the Paper Source list. Then click OK.

- Using the printer's control panel

Access the control panel's Setup Menu, then select **Paper Source** and specify the paper source you want to use.

Auto selection

If you want the printer to select the paper source containing the appropriate size of paper automatically, select **Auto Selection** in the printer driver or **Auto** using the printer's control panel.

The printer will search for a paper source containing the specified paper size in the following order.

Standard configuration:

MP Tray
Lower Cassette 1

Note:

- ❑ *If you make paper size settings or paper source settings in your application, these settings may override the printer driver settings.*
- ❑ *If you select an envelope for the Paper Size setting, it can be fed only from the MP tray regardless of the Paper Source setting.*
- ❑ *You can change the priority of the MP tray by using the MP Mode setting in the control panel's Setup Menu. For details, see "Setup Menu" on page 330.*

With optional 500-Sheet/1000-Sheet Paper Cassette Unit installed:

MP Tray
Lower Cassette 1
Lower Cassette 2
Lower Cassette 3

Note:

- ❑ *If you make paper size settings or paper source settings in your application, these settings may override the printer driver settings.*
- ❑ *If you select an envelope for the Paper Size setting, it can be fed only from the MP tray regardless of the Paper Source setting.*
- ❑ *You can change the priority of the MP tray by using the MP Mode setting in the control panel's Setup Menu. For details, see "Setup Menu" on page 330.*

Manually feeding paper

Manual feeding is similar to normal paper feeding, except that you need to press the  Start/Stop button to print each page or each job. This can be helpful when you want to set paper for the page or job.

Follow these steps to feed paper manually.

1. Access the printer driver by one of the following methods.
 - To access the printer driver from your application, select **Print** or **Page Setup** from the **File** menu. You also need to click **Setup**, **Options**, **Properties**, or a combination of these buttons.
 - To access the printer driver from Windows Me, 98, 95, XP, 2000, or NT 4.0, click **Start**, point to **Settings**, and click **Printers**. Next, right-click the **EPSON AL-C4100 Advanced** icon and click **Properties** (in Windows Me, 98, or 95), **Printing Preferences** (in Windows XP or 2000), or **Document Defaults** (in Windows NT 4.0).
 - To access the printer driver from Macintosh, select **Print** from the **File** menu on any application or select **Chooser** from the **Apple** menu and click the **AL-C4100** icon beforehand.
 - To access the printer driver from Mac OS X, register your printer in **Print Center**, then click **Print** on the file menu of any application and select your printer.
2. For Windows, click the **Basic Settings** tab, then select the **Manual Feed** check box. For Macintosh, click the **Manual Feed** check box in the **Basic Settings** dialog box.

If you want to press the **Start/Stop** button before printing each page, select the **Each Page** check box; otherwise, you only need to press the **Start/Stop** button once to start printing.
3. Select the correct paper size from the **Paper Size** list.

4. If paper of the selected size is already loaded, go on to the next step. Otherwise, remove any paper remaining in the tray. Load a sheet or a stack of the selected size paper with the printable side up. Adjust the paper guides to match the paper size you are loading.

Note:

Load paper into the MP tray with the printable surface facing down, but load the standard and optional paper cassettes with the printable surface facing up.

5. Print a document from your application. The LCD panel shows Manual Feed and the selected page size.

Press the  Start/Stop button to print. Paper is loaded and printed.


Loading Paper

This section describes how to load paper into the MP tray and the optional paper cassette. If you use special media such as transparencies or envelopes, see also “Printing on Special Media” on page 47.


MP tray

Follow these steps to load paper into the MP tray.

1. Open the MP tray, then pull out the expansion tray on the MP tray to accommodate the size of the media you want to load.

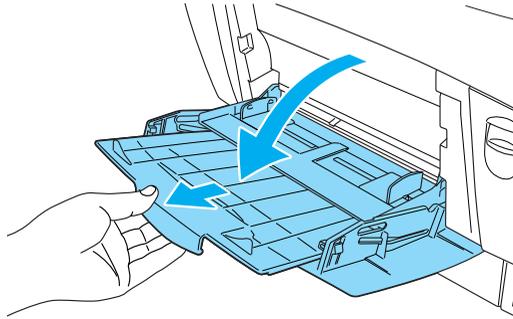

2. Load a stack of the desired media with the printable surface facing down, then slide the guides against the sides of the stack to get a snug fit.

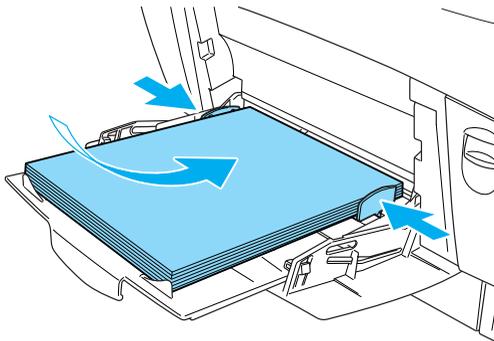

3. Select the Paper Source and Paper Size settings that match the loaded media by using the printer driver or the printer's control panel.

Note:

To print on the back side of previously printed paper, use the MP tray.
The duplex unit cannot be used for this purpose.

Standard lower cassette and optional paper cassette unit


The paper sizes and types supported by the optional paper cassette units are the same as the standard lower cassette unit. For more information, see “500-Sheet/1000-Sheet Paper Cassette Unit” on page 36.

The paper-loading procedure is the same for the standard lower cassette and the optional paper cassette unit.


In addition to plain paper, you can also use special media such as EPSON Color Laser Paper in the paper cassettes.

Follow these steps to load paper into the standard and optional paper cassette units. The illustrations show the standard lower cassette.

1. Pull the paper cassette out until it stops. Then lift up the front of the cassette and pull out the cassette.

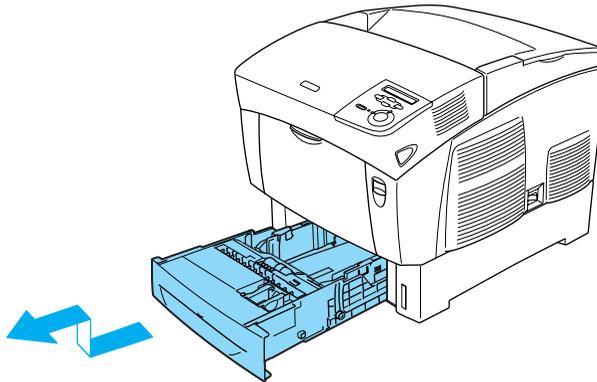

2. Slide the guides to accommodate the paper you are loading. Tilt the rear guide forward to slide it.

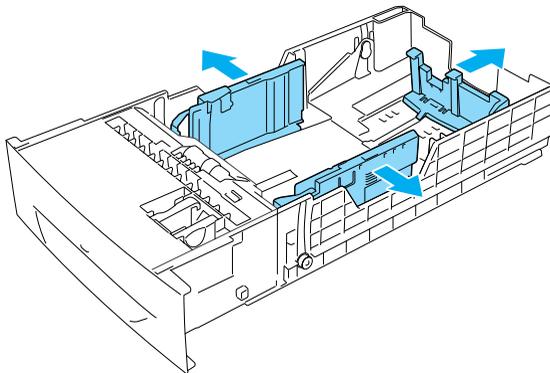


3. To prevent the sheets from sticking together, fan a stack of paper. Then tap the edge on a firm surface to line it up.

Note:

If your printouts are curled or do not stack properly when using plain paper, try turning the stack over and reloading it.



4. Insert the stack into the cassette, lining it up with both the back and right sides of the cassette. Make sure that all the paper is under the metal retaining clip, with the printable surface up.

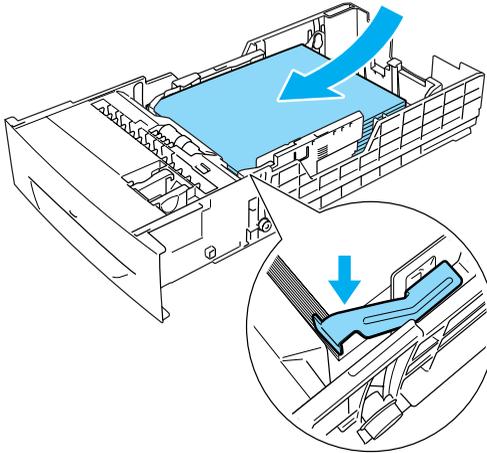


Note:

- ❑ *Loading the cassette with too much paper may cause paper jams.*


- ❑ When loading A5 size paper, attach the adjuster that comes with the cassette, as shown below.

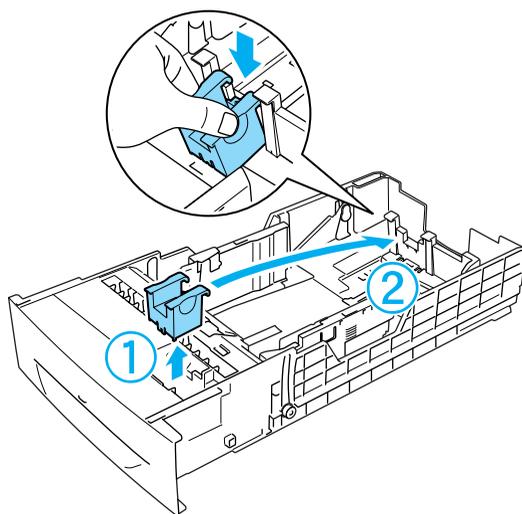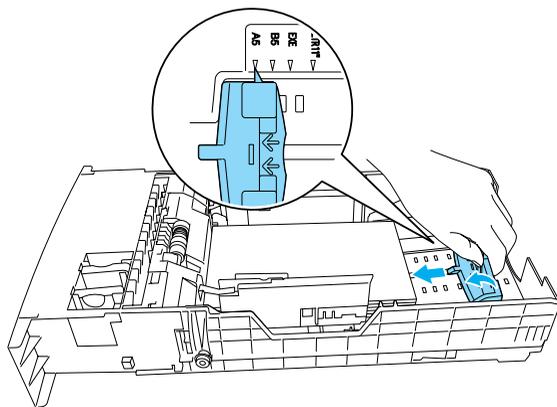

5. Slide the paper guides to fit the paper you are loading.

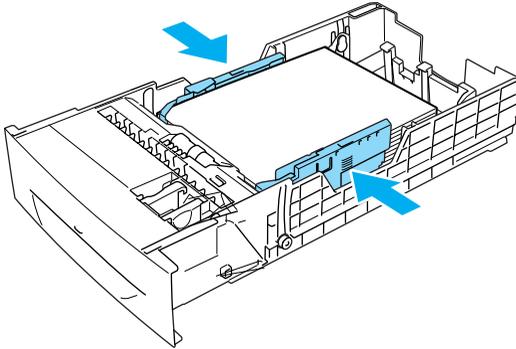

6. Insert the paper cassette gently into the printer, and push it back into the printer.

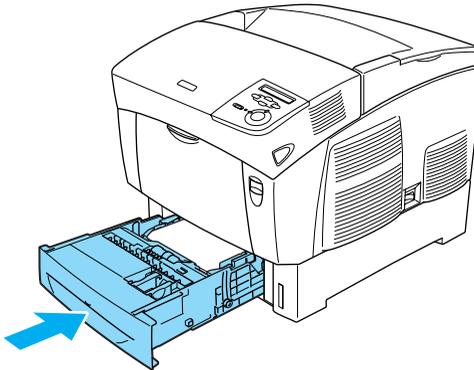


7. Use the printer's control panel to select the LC1 Type setting that matches the type of loaded paper. For details, see "Tray Menu" on page 325.

Note:

If you have installed and loaded paper into the optional paper cassette unit, select LC1 Type through LC3 Type settings that match the loaded paper types.

Output Tray

The output tray is located on the top of the printer. Since printouts are output face-down, this tray is also referred to as the face-down tray. This tray can hold up to 250 sheets. Raise the stopper to prevent your printouts from slipping off the printer.

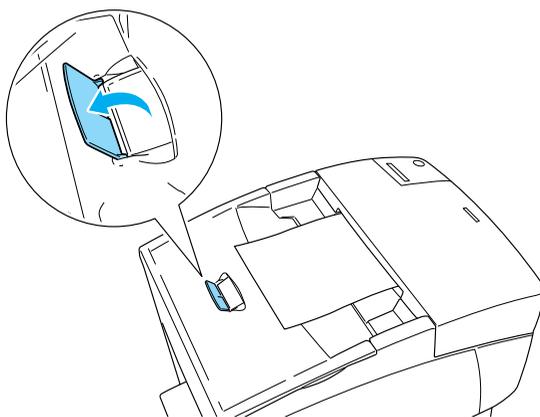

Printing on Special Media

You can print on special media such as EPSON Color Laser Paper, EPSON Color Laser Transparencies, thick paper, envelopes, and labels.

Note:

Since the quality of any particular brand or type of media may be changed by the manufacturer at any time, EPSON cannot guarantee the quality of any type of media. Always test samples of media stock before purchasing large quantities or printing large jobs.

EPSON Color Laser Paper

You can load EPSON Color Laser Paper in the following paper sources:

MP tray (up to 100 sheets)

standard lower cassette (up to 500 sheets)

optional paper cassette unit (up to 500 sheets in each cassette)

EPSON Color Laser Transparencies

EPSON recommends the use of EPSON Color Laser Transparencies.

Note:

Duplex printing is not available for transparencies.

Transparencies can be loaded into the MP tray only (up to a 10 mm thick stack). When using transparencies, you should make paper settings as shown below:

- Make settings on the Basic Settings menu (for Windows) or the Basic Settings dialog box (for Macintosh) in the printer driver as shown below.

Paper Size: A4 or Letter

Paper Source: MP tray

Paper Type: Transparency


- ❑ You can also make these settings on the Tray Menu in the control panel.

MP Tray Size: A4 or LT

MP tray Type: Transparency

Please note the following when handling this media:

- ❑ Hold each sheet by its edges, as oil from your fingers may transfer to the surface and damage the printable surface of the sheet. The EPSON logo appears on the printable side.
- ❑ When loading transparencies in the MP tray, insert the short edge first with the printable surface facing down.

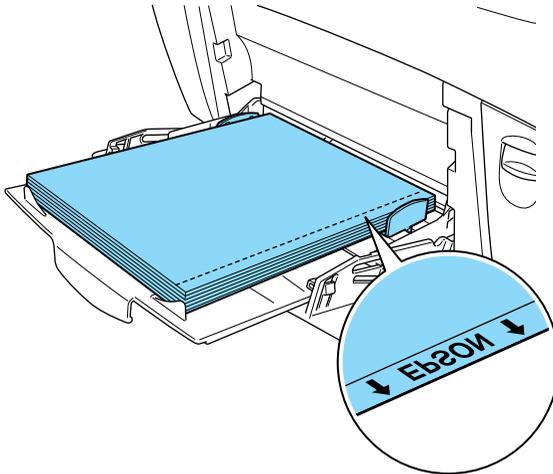

If transparencies are loaded incorrectly, the message **Check Transparency** appears on the LCD panel. Remove the transparencies from the MP tray and remove the jammed transparencies from the MP tray. Open and close cover A to clear the message on the LCD panel, then reload the transparencies. The printer resumes printing from the page that jammed.

- ❑ When using transparencies, load them in the MP tray and set the Paper Type setting to **Transparency** in the printer driver.
- ❑ When the Paper Type setting in the printer driver is set to **Transparency**, do not load any other type of paper except transparencies.



Caution:

Sheets that have just been printed on may be hot.

Envelopes

The print quality of envelopes may be irregular because different parts of an envelope have different thicknesses. Print one or two envelopes to check the print quality.



Caution:

Do not use window envelopes unless they are specifically designed for laser printers. The plastic on most window envelopes will melt when it comes into contact with the fuser.

Note:


- ❑ *Depending on the quality of envelopes, the printing environment, or the printing procedure, envelopes might be wrinkled. Make a trial print run before you print on a lot of envelopes.*
- ❑ *Duplex printing is not available for envelopes.*

The following table shows important settings you have to make when using envelopes.

Paper Source	MP tray (up to 10 mm thickness)
MP Tray Size setting in the Tray Menu	Mon, C10, DL, C5, C6, IB5
Printer driver settings	Paper Size: Mon, C10, DL, C5, C6, IB5 Paper Source: MP Tray Paper Type: Thick

Please note the following tips for handling this media.

- Load envelopes with the short edge first and the printable side down, as shown below.

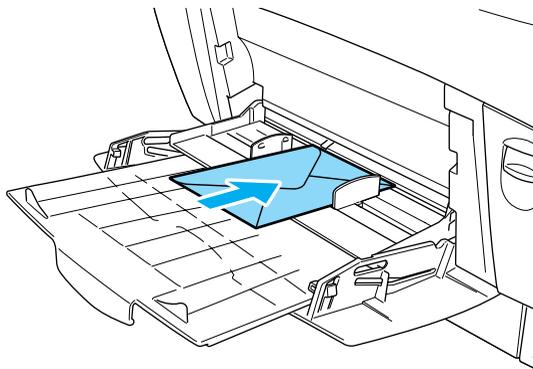

- Do not use an envelope that has glue or tape on it.




Caution:

Make sure that the minimum size of envelopes meets the following size requirements:

Height: 139.7 mm

Width: 88.9 mm

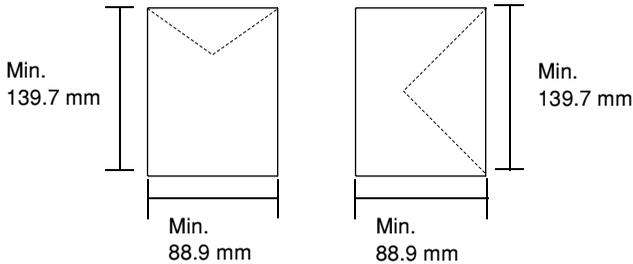

Labels

You can load up to 10 mm thickness of labels into the MP tray at a time. However, you may need to feed some labels one sheet at a time, or load them manually.

Note:

- Duplex printing is not available for labels.*
- Depending on the quality of labels, the printing environment, or the printing procedure, labels might be wrinkled. Make a trial print run before you print on a lot of labels.*

The following table shows important settings you have to make when using labels.

Paper Source	MP tray (up to 10 mm thickness)
MP Tray Size setting in the Tray Menu	A4 or LT

Printer driver settings	Paper Size: A4, LT Paper Source: MP Tray Paper Type: Labels
-------------------------	---

Note:

- You should only use labels designed for monochrome laser printers or monochrome plain-paper copiers.*
- To prevent the label adhesive from coming into contact with printer parts, always use labels that completely cover the backing sheet, with no gaps between the individual labels.*
- Press a sheet of paper on top of each sheet of labels. If the paper sticks, do not use those labels in your printer.*
- You may have to make the setting Thick* for Paper Type in the Setup Menu.*

* When using especially thick labels, set Paper Type to ExtraThk.

Thick paper and extra thick paper

The following table shows important settings you have to make when using thick (for 106 to 162 g/m paper) or extra thick (for 163 to 216 g/m paper) paper.

Paper Source	MP tray (up to 10 mm thickness)
Printer driver settings	Paper Size: A4, A5, B5, LT, HLT, EXE, LGL, GLG, GLT, F4 Paper Source: MP Tray Paper Type: Thick or Extra Thick

Note:

When using thick and extra thick paper, you cannot do duplex printing automatically. When you want to make duplex printing with thick paper, set the Page side setting on the control panel's Setup Menu to Back or Front, then print manually.

Transparencies

You can load transparencies up to 100 sheets into the MP tray.

The following table shows important settings you have to make when using transparencies.

Paper Source	MP tray (up to 100 sheets)
MP Tray Size setting in the Tray Menu	A4 or LT
Printer driver settings	Paper Size: A4, LT Paper Source: MP Tray Paper Type: Transparency

Loading a custom paper size

You can load non-standard size paper into the MP tray as long as it meets the following size requirements:

88.9 × 139.7 mm to 215.9 × 355.6 mm for MP tray.

Paper Source	MP tray
Printer driver settings	Paper Size: User Defined Size Paper Source: MP Tray Paper Type: Plain, Thick or Extra Thick

- ❑ For Windows, access the printer driver, then select **User-Defined Size** from the Paper Size list on the Basic Settings menu. In the User Defined Paper Size dialog box, adjust the Paper Width, Paper Length, and Unit settings to match your custom paper. Then click OK and your custom paper size will be saved.
- ❑ For Macintosh, access the printer driver, click **Custom Size** in the Paper Setting dialog box. Then click **New**, adjust the Paper Width, Paper Length, and Margin settings to match your custom paper. Then enter the setting's name, and click OK to save your custom paper size.
- ❑ If you cannot use the printer driver as explained above, make this setting at the printer by accessing the control panel's Printing Menu and selecting **CTM** (custom) as the Page Size setting.

About the Printer Software

The printer driver lets you choose from a wide variety of settings to get the best results from your printer. The printer driver also includes EPSON Status Monitor 3, which is accessed through the Utility menu. EPSON Status Monitor 3 lets you check the status of your printer. See “Monitoring Your Printer Using EPSON Status Monitor 3” on page 94 for more information.

Accessing the printer driver

You can access the printer driver directly from any application programs, from your Windows operating system.

The printer settings made from many Windows applications override the settings made when the printer driver is accessed from the operating system, so you should access the printer driver from your application to make sure that you get the result you want.

Note:

The printer driver's online help provides details on printer driver settings.

- ❑ To access the printer driver from your application, click the **Print** or **Page Setup** from the File menu. You also need to click **Setup**, **Options**, **Properties**, or a combination of these buttons.

- ❑ To access the printer driver from Windows, click Start, point to Settings, and click Printers. Next, right-click the EPSON AL-C4100 Advanced icon and click Properties (in Windows Me, 98, or 95), Printing Preferences (in Windows XP or 2000) or Document Defaults (in Windows NT 4.0).

Making Changes to Printer Settings

Making the print quality setting

You can change the print quality of printouts through settings in the printer driver. With the printer driver, you can make the print settings by choosing from a list of predefined settings, or customizing the settings.

Choosing the print quality by using the Automatic setting

You can change the print quality of printouts to favor speed or detail. There are two levels of print output, 300 dpi and 600 dpi. 600 dpi provides high quality, precise printing, but requires more memory and slows the printing speed.


When the Automatic button is selected in the Basic Settings menu, the printer driver takes care of all detailed settings according to the color setting you select. Color and resolution are the only settings you have to make. You can change other settings such as paper size or orientation in most applications.

Note:

Online help provides more information on printer driver settings.

1. Click the Basic Settings tab.

2. Click the Automatic button. Then choose desired printing resolution from Fast (300 dpi) or Fine (600 dpi) with the slider bar.

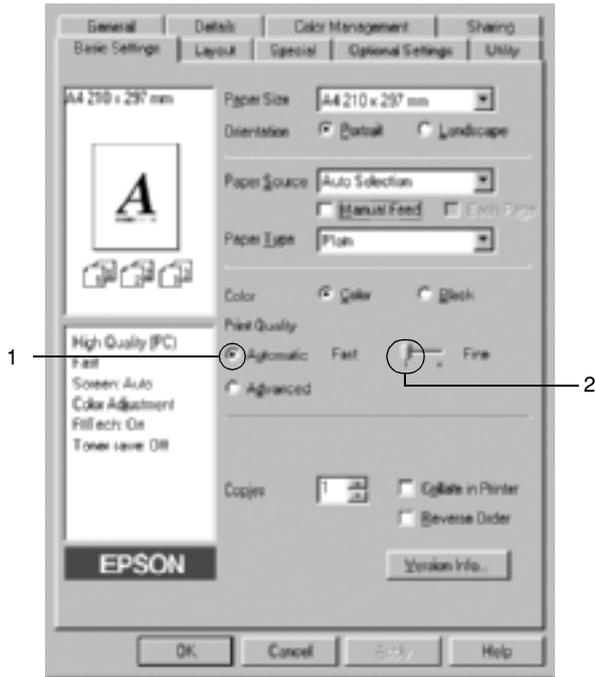

3. Click OK to accept the setting.

Note:


If printing is unsuccessful or a memory-related error message appears, selecting a lower resolution may allow printing to proceed.

Using the predefined settings

The predefined settings are provided to help you optimize print settings for a particular kind of printout, such as presentation documents or images taken by a video or digital camera.

Follow these steps to use the predefined settings.

1. Click the Basic Settings tab.
2. Select the Advanced button. You will find the predefined settings in the list on the right of the Automatic button.

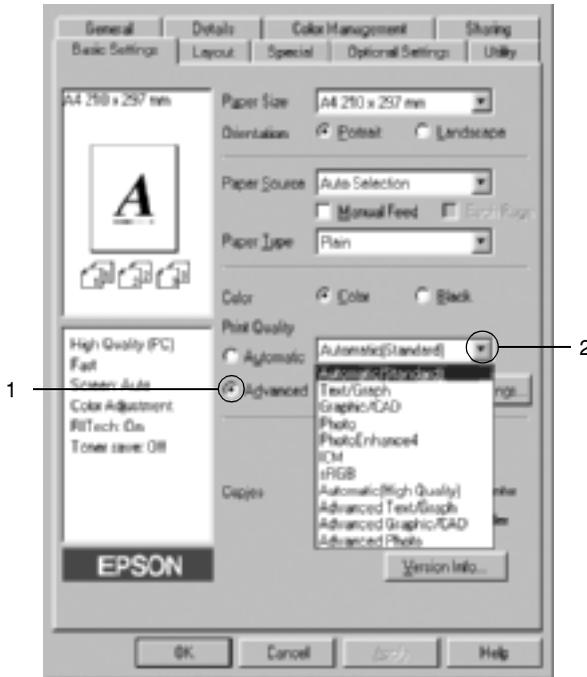

Note:

This screen is a Windows Me, 98 and 95 screen.

3. Select the most appropriate setting from the list according to the type of document or image you want to print.

When you choose a predefined setting, other settings such as Printing Mode, Resolution, Screen, and Color Management are set automatically. Changes are shown in the current settings list on the left of the Basic Settings menu.

This printer driver provides the following predefined settings:

Automatic (Standard)

Suitable for regular printing, especially photos.

Text/Graph

Suitable for printing documents that include text and graphs, such as presentation documents.

Graphic/CAD

Suitable for printing graphics and charts.

Photo

Suitable for printing photos.

PhotoEnhance4

Suitable for printing video captures, images taken with a digital camera, or scanned images. EPSON PhotoEnhance4 automatically adjusts the contrast, saturation, and brightness of the original image data to produce sharper, more vivid color printouts. This setting does not affect your original image data.

ICM (Except for Windows NT 4.0)

ICM stands for Image Color Matching. This feature automatically adjusts printout colors to match colors on your screen.

sRGB

When using equipment which supports sRGB, the printer performs Image Color Matching with these pieces of equipment before printing. To confirm that your equipment supports sRGB, contact your equipment dealer.

Automatic (High Quality)

Suitable for printing high-quality printing documents.

Advanced Text/Graph

Suitable for printing high-quality presentation documents that include text and graphs.

Advanced Graphic/CAD

Suitable for printing high-quality graphs, charts, and photos.

Advanced Photo

Suitable for printing high-quality scanned photos and digitally-captured images.

Customizing print settings


If you need to change detailed settings, make the settings manually.

Follow these steps to customize your print settings.

1. Click the **Basic Settings** tab.
2. Click the **Advanced** button, then click **More Settings**.
3. Choose **Color** or **Black** as the **Color** setting. Then choose desired printing resolution from 300 dpi or 600 dpi with the **Resolution** slider bar.

Note:

When making the other settings, see online help for details on each setting.

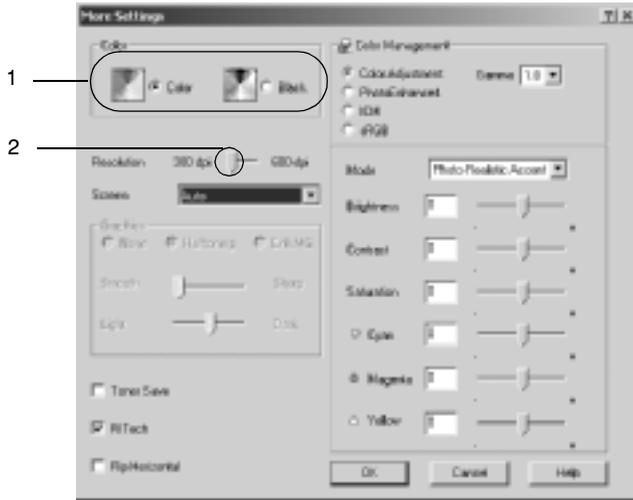

Note:

This screen is a Windows Me, 98, and 95 screen.

4. Click OK to apply your settings and return to the Basic Settings menu.

Saving your settings

To save your custom settings, click the **Advanced** button and click **Save Settings** on the Basic Settings menu. The Custom Settings dialog box appears.



Type a name for your custom settings in the Name box, and click **Save**. Your settings will appear in the list to the right of the **Automatic** button in the Basic Settings menu.

Note:

- ❑ *You cannot use a predefined setting name for your custom settings.*
- ❑ *To delete a custom setting, click the **Advanced** button and click **Save Settings** in the Basic Settings menu, select the setting in the Custom Settings dialog box and then click **Delete**.*
- ❑ *You cannot delete predefined settings.*


If you change any setting in the More Settings dialog box when one of your custom settings is selected in the Advanced Settings list on the Basic Settings menu, the setting selected in the list changes to Custom Settings. The custom setting that was previously selected is not affected by this change. To return to your custom setting, simply reselect it from the current settings list.

Resizing printouts

You can have your document enlarged or reduced during printing.

To automatically resize pages to fit the output paper

1. Click the Layout tab.
2. Select the Zoom Options check box. Then select the desired paper size from the Output Paper drop-down list. The page will be printed to fit on the paper you have selected.

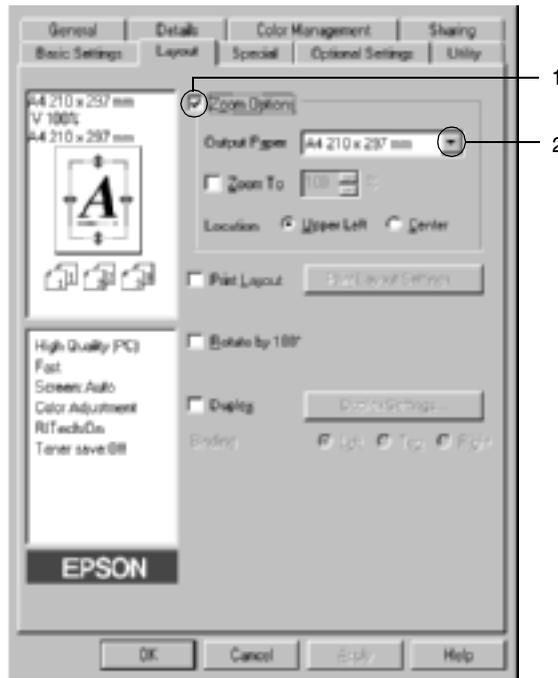


3. Click the Upper Left button (to print reduced page image at upper left corner of the paper) or the Center button (to print reduced page image with centering) for Location setting.

4. Click OK to accept the settings.

To resize pages by a specified percentage

1. Click the Layout tab.
2. Select the Zoom Options check box.
3. Select the Zoom To check box. Then specify the magnification percentage in the box.

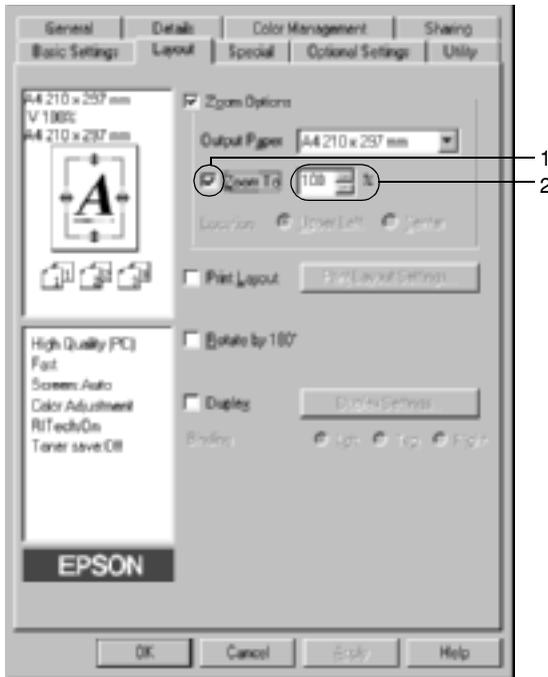

Note:

The percentage can be set between 50% and 200% in 1% increments.


4. Click OK to accept the settings.

If necessary, select the paper size to be printed from the Output Paper drop-down list.


Modifying the print layout

Your printer can print either two or four pages onto a single page and specifies the printing order, automatically resizing each page to fit the specified paper size. You can also choose to print documents surrounded by a frame.

1. Click the Layout tab.
2. Select the Print Layout check box, and click Print Layout Settings. The Print Layout Settings dialog box appears.

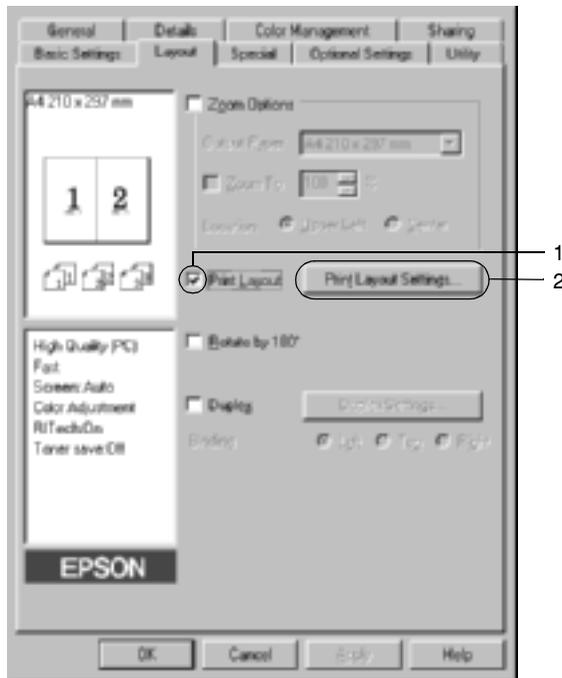

3. Select the number of pages you want to print on one sheet of paper. Then Select the Page Order in which the pages are printed on each sheet.

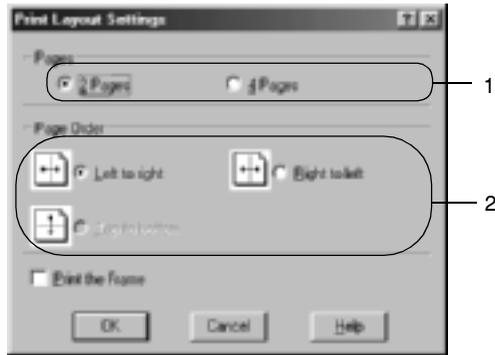

4. Select the Print the Frame check box when you want to print the pages surrounded by a frame.

Note:

The Page Order choices depend on the number of pages selected above, and the paper orientation (Portrait or Landscape) selected on the Basic Settings menu.


5. Click OK to accept the settings and return to the Layout menu.

Using a watermark

Follow the steps to use a watermark on your document. In the Watermark dialog box, you can select from a list of predefined watermarks, or you can make an original watermark with text or a bitmap. The Watermark dialog box also allows you to make a variety of detailed watermark settings. For example, you can select the size, intensity, and position of your watermark.

1. Click the Special tab.

3. Select a watermark from the Watermark Name drop-down list. Then select the color from the Color drop-down list.

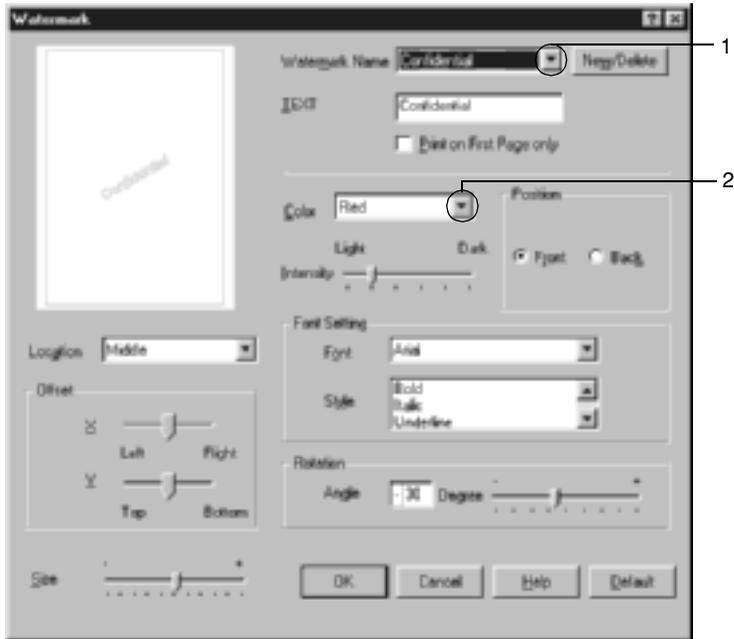


4. Adjust the image intensity of the watermark with the Intensity slider bar.
5. Select Front (to print the watermark in the foreground of the document) or Back (to print the watermark in the background of the document) for the Position setting.
6. Select the location on the page where you want to print the watermark from the Location drop-down list.
7. Adjust the horizontal or vertical Offset position.
8. Adjust the size of the watermark with the Size slider bar.
9. Click OK to accept the settings and return to the Special menu.


Making a new watermark

You can make a new watermark as follows:

1. Click the Special tab.
2. Select the **Watermark** check box.
3. Click **Watermark Settings**. The Watermark dialog box appears.
4. Click **New/Delete**. The User Defined Watermarks dialog box appears.

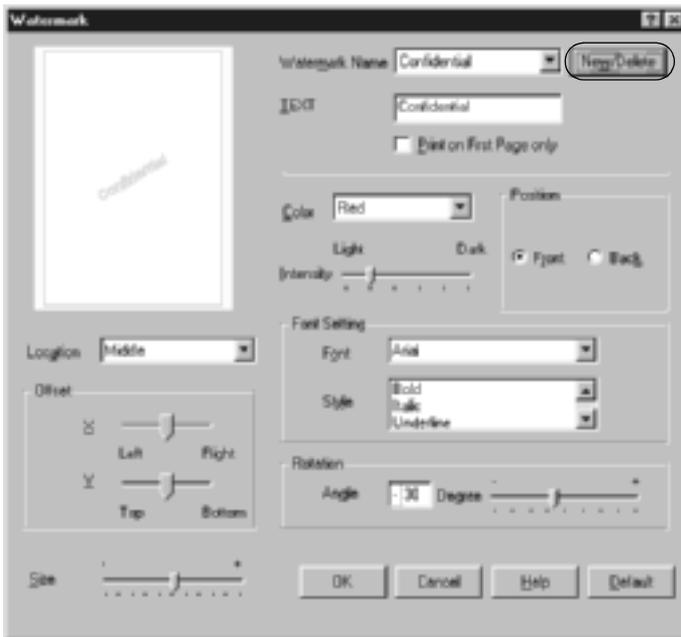

5. Select **Text** or **BMP** and type a name for the new watermark in the Name box.

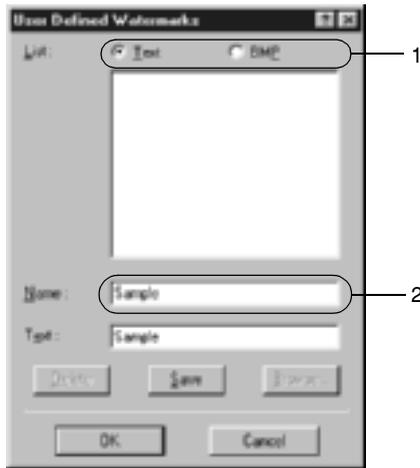

Note:

*This screen appears when you select the **Text** button.*

6. If you select **Text**, type the watermark text in the **Text** box. If you select **BMP**, click **Browse**, select the BMP file you want to use, then click **OK**.
7. Click **Save**. Your watermark will appear in the **List** box.
8. Click **OK** to register the new watermark settings.

Note:

You can register up to 10 watermarks.

Using an overlay

The Overlay Settings dialog box allows you to prepare standard forms, or templates, that you can use as overlays when printing other documents. This feature can be useful for creating corporate letterheads or invoices.

Note:


The overlay function is available only when the High Quality (Printer) is selected for the Graphic Mode in the Extended Settings dialog box from the Optional Settings menu.

Creating an overlay


Follow these steps to create and save a form overlay file.

1. Open your application and create the file that you want to use as an overlay.
2. When the file is ready to be saved as an overlay, choose **Print** or **Print Setup** from the File menu of your application. Then click **Printer, Setup, Options, Properties**, or a combination of these buttons, depending on your application.
3. Click the **Special** tab.


4. Select the Form Overlay check box, and click the Overlay Settings. The Overlay Settings dialog box appears.

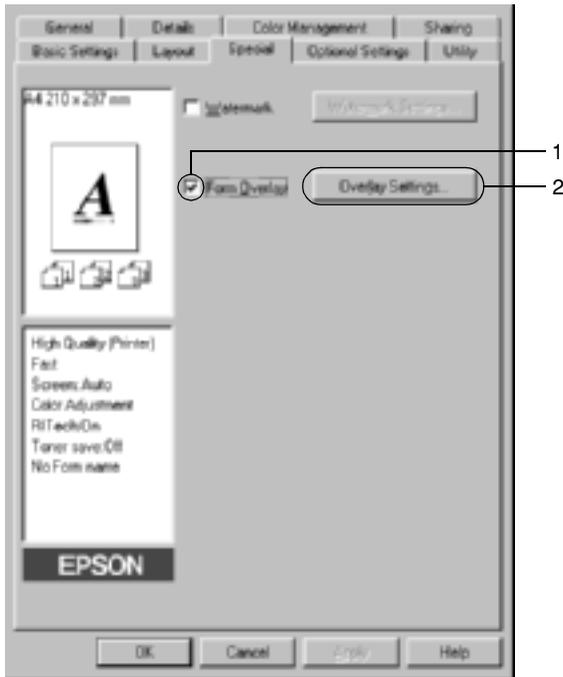

5. Click the Create Overlay Data button, then click Settings. The Form Settings dialog box appears.

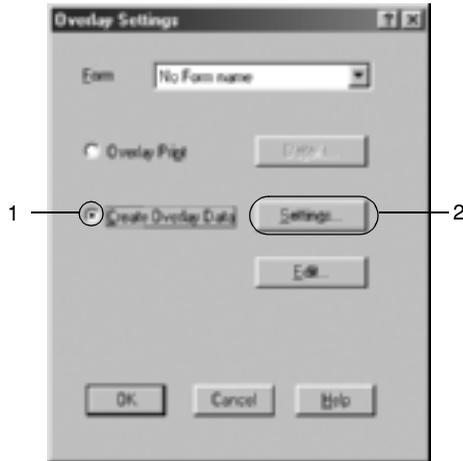

6. Select the Use Form Name check box. Then click Add Form Name. The Add Form dialog box appears.

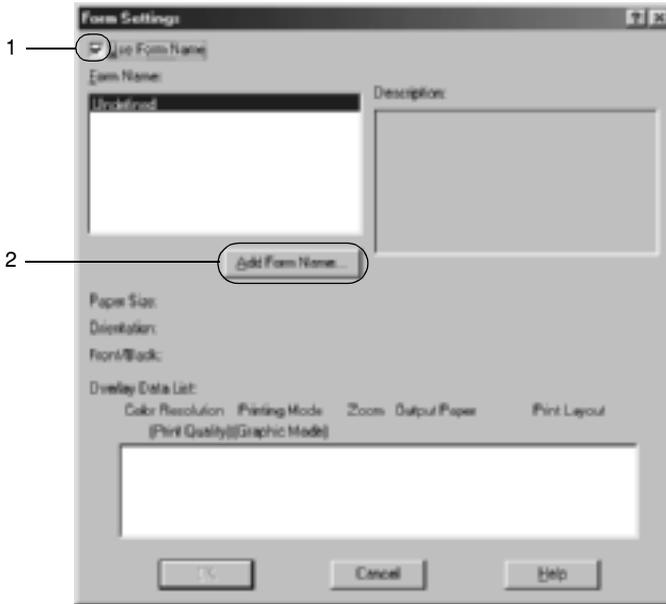

7. Type the form name in the Form Name box and its description in the Description box.




8. Click the To Front or To Back button to specify whether the overlay will be printed as background or foreground of the document.
9. Click Register to accept the settings and return to Form settings dialog box.
10. Click OK in the Form Settings dialog box.
11. Click OK in the Overlay Settings dialog box.
12. Print the file saved as overlay data. It is possible to save any kind of file as an overlay. The overlay data is created.

Printing with an overlay

Follow the steps to print a document with overlay data.

1. Open the file to print with overlay data.

2. From the application, access the printer driver. Open the File menu and choose Print or Print Setup. Then click Printer, Setup, Options, Properties, or a combination of these buttons, depending on the application you use.
3. Click the Special tab.
4. Select the Form Overlay check box, and click Overlay Settings to open the Overlay Settings dialog box.
5. Choose the form from the Form list, then click OK and to return the Special menu.

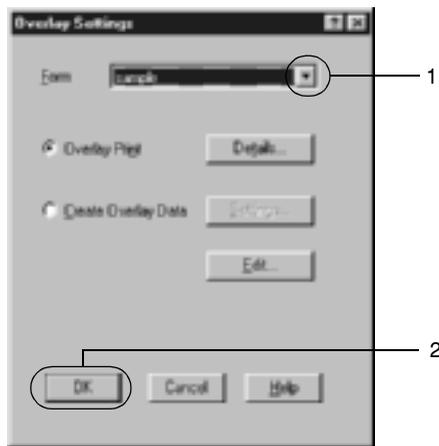

6. Click OK to print the data.

Different printer settings overlay data

The overlay data is made with the current printer settings (such as Resolution: 600 dpi). If you want to make the same overlay with different printer settings (such as 300 dpi), follow the instructions below.

1. Re-access the printer driver as described in step 2 in “Creating an overlay” on page 73.
2. Make the printer settings and exit the printer driver.
3. Send the same data that you made by application to the printer like step 12 in “Creating an overlay” on page 73.

This setting is available only for Form Name data.

Using HDD form overlay

This function enables faster printing with form overlay data. Windows users can use the form data registered in the optional Hard Disk Drive installed in the printer though only an administrator can register or delete the form data in the Hard Disk Drive. You can access this function from the Form Selection dialog box in the printer driver.

Note:

- This function is not available when the Color setting is set to **Black** in the printer driver’s Basic Settings menu.*
- This function is not available if the optional Hard Disk Drive is not installed.*
- Use this function by inputting the registered form name after printing the Print List.*
- When the document’s resolution, paper size or paper orientation settings are different from the form overlay data that you use, you cannot print the document with the form overlay data.*
- This function is available in the ESC/Page Color mode.*

Register the form overlay data on the Hard Disk Drive

Only a network administrator using Windows XP/2000/NT 4.0 is allowed to register the form overlay data on the optional Hard Disk Drive. See the *Network Guide* for details.

Printing with HDD form overlay

All Windows users can use the registered form data in the optional Hard Disk Drive. Follow these steps to print with HDD form data.

1. Select the Special tab.
2. Select the Form Overlay check box, and click the Overlay Settings button. The Overlay Settings dialog box appears.
3. Select No Form name in the Form text box, and click Details. The Form Selection dialog box appears.

Note:

Make sure that the No Form Name is selected. If any form name is selected, another dialog box will appear.

4. Click Printer's HDD, then enter the registered form name.

Note:

If you need the list of the registered form data, click **Print List** to print it and confirm the form name.

Also, if you need a sample print-out of the form data, enter the form name and click the **Print Sample** button.



5. Choose **To Back** or **To Front** to print the form data as background or foreground of the document. Then click **OK** and return to the **Special** menu.
6. Click **OK** to print data.

Delete the form overlay data in the Hard Disk Drive


Only a network administrator using Windows XP/2000/NT 4.0 is allowed to delete or edit the form overlay data in the optional Hard Disk Drive. See the *Network Guide* for details.

Printing with the duplex unit


Duplex printing prints on both sides of the paper. When printing for binding, the binding edge can be specified as required to produce the desired page order.

As an ENERGY STAR® partner, EPSON recommends the use of the double-sided printing function. Refer to ENERGY STAR® Compliance for more information on the ENERGY STAR® program.

1. Click the Layout tab.
2. Select the Duplex check box. Then select the Left, Top, or Right button as Binding position.

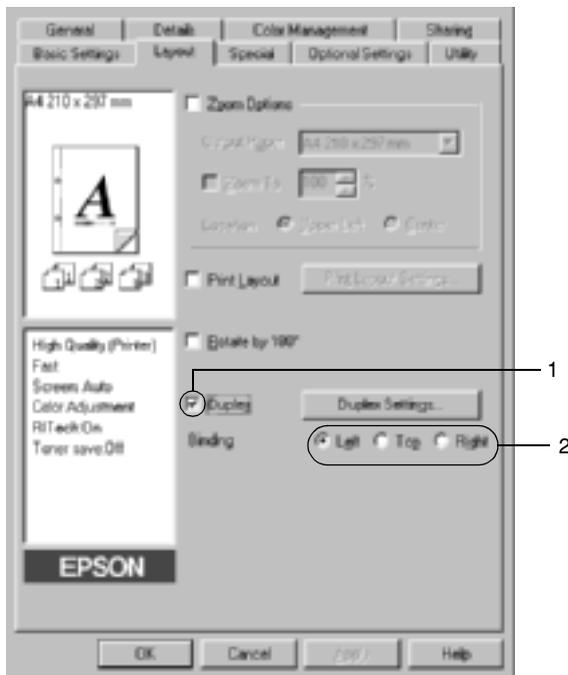

3. Click **Duplex Settings** to open the Duplex Settings dialog box.
4. Specify the Binding Margin for the front and back sides of the paper. Then select whether the front or back side of the paper is to be printed as the Start Page.

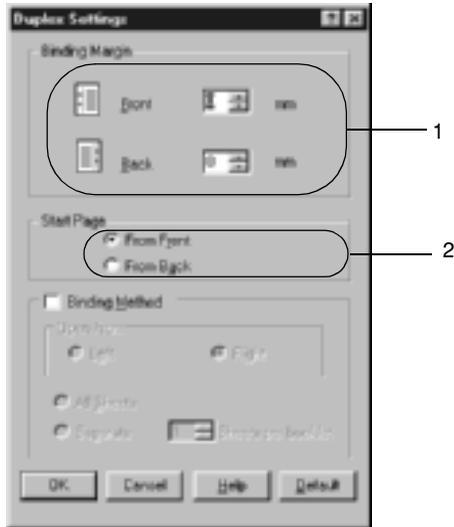

5. When printing for binding as a booklet, click the **Binding Method** check box and make appropriate settings. For details about each setting, see online help.
6. Click **OK** to accept the settings and return to the Layout menu.

Making Extended Settings

You can make detailed settings such as font setting or offset setting in the Extended Settings dialog box. To open the dialog box, click **Extended Settings** on the **Optional Settings** menu.

- a. **Printing mode:**
- High Quality (PC):**
 Select this mode if you use a computer with higher specs to reduce the PC load.
 In this mode, functions such as "FormOverlay", and "Print true type with fonts with substitution" cannot be used.
- High Quality (Printer):**
 Select this mode if you use a computer with lower specs to reduce the PC load.
- CRT:**
 Select this mode if your printing results are not as good as you wish with "High Quality (PC)" or "High Quality (Printer)". In this mode, functions such as "PhotoEnhance4", "Print Layout", "Binding Method", "Watermark", "FormOverlay" and "Print true type with fonts with substitution" cannot be used.
- b. **Print True Type fonts as bitmap button:** Select this button to print, as bitmap, the True Type fonts that are not substituted with device fonts in the document.
- c. **Print True Type fonts with substitution button:** Select this button to print the True Type fonts in the document as device fonts. This function is not available when the Graphic Mode setting is set to High Quality (PC).

- d. **Setting button:** Click this button to open the Font Substitution dialog box. This button is available when the Print True Type fonts with substitution button is selected.
- e. **Uses the settings specified on the printer button:** Select this button to use the Offset, Skip blank page, and Ignore the selected paper size settings on the control panel.
- f. **Uses the settings specified on the driver button:** Select this button to use the Offset, the Skip blank page, and the Ignore the selected paper size settings in the printer driver.
- g. **Offset** Makes fine adjustments to the printing position on the front and the back of data on a page in 1.0 mm increments.
- h. **Skip Blank Page check box:** When you select this check box, the printer skips blank pages.
- i. **Ignore the selected paper size check box:** When you select this check box, the printer prints on loaded paper, regardless of size.
- j. **Automatically change to monochrome mode check box:** Select this check box to have the printer driver analyze the printing data, and automatically switch to monochrome mode if the printing data is black and white.

- | | | |
|----|--|--|
| k. | High Speed Graphics Output check box: | Select this check box to optimize the printing speed of graphics composed of line drawings such as overlaid circles and squares.

Clear this check box if graphics do not print correctly. |
| l. | Uses the spooling method provided by the operating system check box: | Select this check box to enable the Spool function for Windows XP, 2000, or NT 4.0. |
| m. | Default button: | Click this button to return the driver settings to the initial settings. |
| n. | Help button: | Click this button to open online help. |
| o. | Cancel button: | Click this button to exit the dialog box or printer driver without saving your settings. |
| p. | OK button: | Click this button to save your settings and to exit the dialog box or printer driver. |

Making Optional Settings

You can update the installed option information manually if you have installed options to your printer.

1. Click the **Optional Settings** tab, then select the **Update the Printer Option Info Manually** button.
2. Click **Settings**. The **Optional Settings** dialog box appears.
3. Make settings for each installed option, then click **OK**.

Using the Reserve Job Function

The Reserve Job function allows you to store print jobs in the printer's Hard Disk Drive and to print them later directly from the printer's control panel. Follow the instructions in this section to use the Reserve Job function.

Note:

You need an optional Hard Disk Drive installed in your printer in order to use the Reserve Job function. Make sure that the drive is correctly recognized by the printer driver before you start using the Reserve Job function.

The table below gives an overview of the Reserve Job options. Each option is described in detail later in this section.

Reserve Job Option	Description
Re-Print Job	Lets you print the job now and store it for later reprinting.
Verify Job	Lets you print one copy now to verify the content before printing multiple copies.
Stored Job	Lets you save the print job without printing it now.
Confidential Job	Lets you apply a password to the print job and save it for later printing.

Jobs stored in the Hard Disk Drive are handled differently depending on the Reserve Job option. Refer to the tables below for details.

Reserve Job Option	Maximum Number of Jobs	When Maximum is Exceeded	When Drive is Full
Re-Print Job + Verify Job	64 (combined total)	Oldest job automatically replaced with newest	Oldest job automatically replaced with newest

Reserve Job Option	Maximum Number of Jobs	When Maximum is Exceeded	When Drive is Full
Stored Job	64	Delete old jobs manually	Delete old jobs manually
Confidential Job	64		

Reserve Job Option	After Printing	After Turning Off Printer or Using Reset All
Re-Print Job	data remains in hard drive	Data is cleared
Verify Job		
Stored Job		Data remains in hard drive
Confidential Job	data is cleared	Data is cleared


Re-Print Job

The Re-Print Job option allows you to store the job you are currently printing so that you can reprint it later directly from the control panel.

Follow these steps to use the Re-Print Job option.

1. Click the **Basic Settings** tab
2. Select the **Collate in Printer** check box. Specify the number of copies to be printed, and make other printer driver settings as appropriate for your document.
3. Click the **Optional Settings** tab and click **Reserve Jobs Settings**. The Reserve Job Settings dialog box appears.

4. Select the Reserve Job On check box and click the Re-Print Job button.

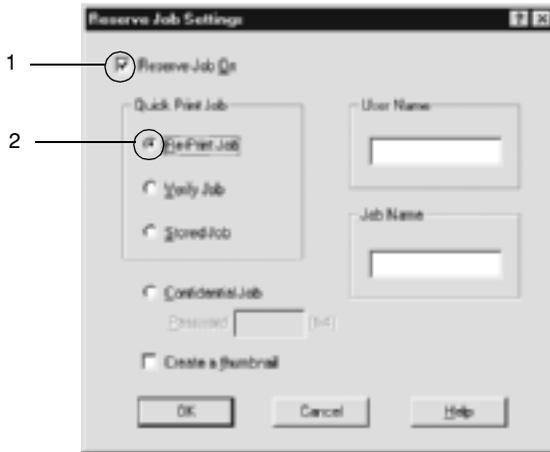

5. Enter a user name and job name in the corresponding text boxes.

Note:

*If you want to create a thumbnail of the first page of a job, select the **Create a thumbnail** check box. Thumbnails can be accessed by entering `http://` followed by the internal print server's IP address in a Web browser.*

6. Click OK. The printer prints your document, and stores the print job data on the Hard Disk Drive.


To reprint or delete this data using the printer's control panel, see "Printing and Deleting Reserve Job Data" on page 317.

Verify Job

The Verify Job option allows you to print one copy in order to verify the content before printing multiple copies.

Follow these steps to use the Verify Job option.

1. Click the **Basic Settings** tab.
2. Select the **Collate OK** check box. Specify the number of copies to be printed, and make other printer driver settings as appropriate for your document.
3. Click the **Optional Settings** tab and click **Reserve Jobs Settings**. The Reserve Job Settings dialog box appears.
4. Select the **Reserve Job On** check box and click the **Verify Job** button.

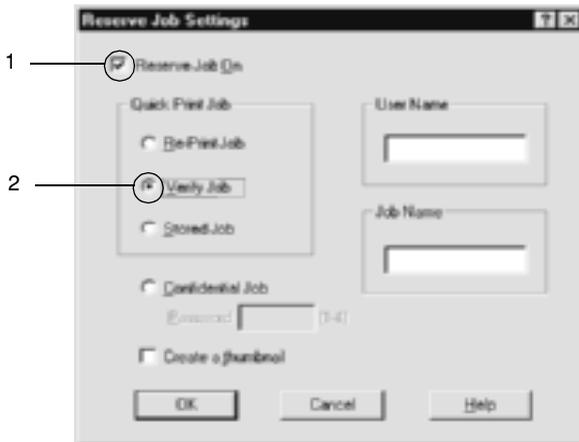

5. Enter a user name and job name in the corresponding text boxes.

Note:

If you want to create a thumbnail of the first page of a job, select the **Create a thumbnail** check box. Thumbnails can be accessed by entering <http://> followed by the internal print server's IP address in a Web browser.

6. Click OK. The printer prints one copy of your document, and stores the print data with information on the number of remaining copies on the Hard Disk Drive.

After you have confirmed the printout, you can print the remaining copies or delete this data using the printer's control panel. See "Printing and Deleting Reserve Job Data" on page 317 for instructions.


Stored Job

The Stored Job option is useful for storing documents you print on a regular basis, such as invoices. The stored data remains on the Hard Disk Drive even if you turn off the printer or reset it using the Reset All function.

Follow these steps to store print data using the Stored Job option.

1. Click the Basic Settings tab.
2. Select the Collate OK check box. Specify the number of copies to be printed, and make other printer driver settings as appropriate for your document.
3. Click the Optional Settings tab and click Reserve Jobs Settings. The Reserve Job Settings dialog box appears.

4. Select the Reserve Job On check box, and the Stored Job button.

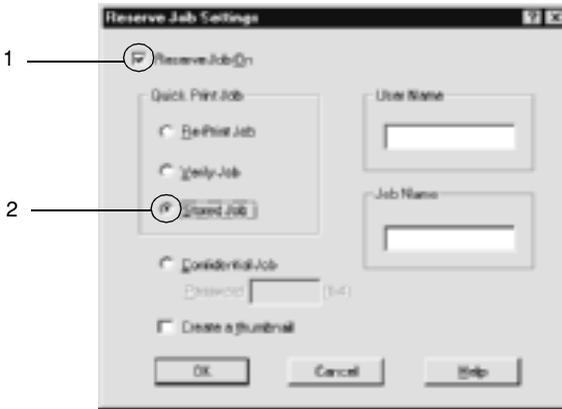

5. Enter a user name and job name in the corresponding text boxes.

Note:

*If you want to create a thumbnail of the first page of a job, select the **Create a thumbnail** check box. Thumbnails can be accessed by entering <http://> followed by the internal print server's IP address in a Web browser.*

6. Click OK. The printer stores the print data in the Hard Disk Drive.


To print or delete this data using the printer's control panel, see "Printing and Deleting Reserve Job Data" on page 317.

Confidential Job

The Confidential Job option allows you to apply passwords to print jobs stored on the Hard Disk Drive.

Follow these steps to store print data using the Confidential Job option.

1. Make printer driver settings as appropriate for your document.
2. Click the Optional Settings tab and click the Reserve Jobs Settings button. The Reserve Jobs Settings dialog box appears.
3. Select the Reserve Job On check box and the Confidential Job button.

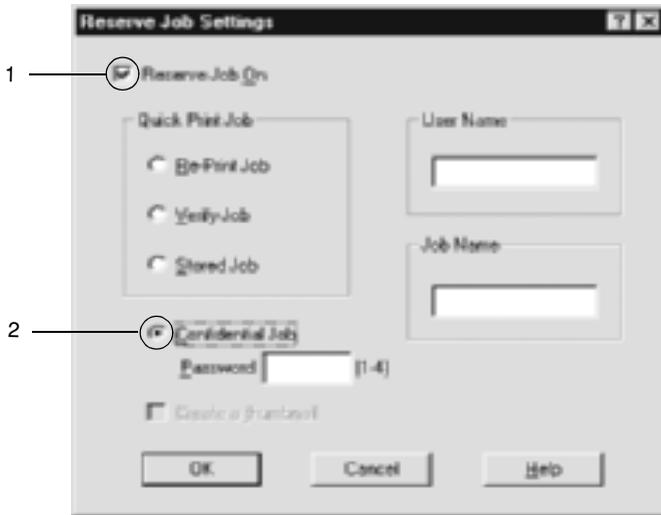

4. Enter a user name and job name in the corresponding text boxes.
5. Set the password for the job by entering a four-digit number in the password text box.

Note:

- ❑ Passwords must be four digits.

- Only numbers from 1 through 4 can be used for passwords.*
 - Keep passwords in a safe place. You must enter the correct password when printing a Confidential Job.*
6. Click OK. The printer stores the print job in the Hard Disk Drive.

To print or delete this data using the printer's control panel, see "Printing and Deleting Reserve Job Data" on page 317.

Monitoring Your Printer Using EPSON Status Monitor 3

EPSON Status Monitor 3 monitors your printer and gives you information about its current status.

Note for Windows XP users:

- Shared Windows XP LPR connections and shared Windows XP Standard TCP/IP connections with Windows clients do not support the Job Management function.*
- EPSON Status Monitor 3 is not available when printing from a Remote Desktop connection.*

Note for Netware users:

When monitoring NetWare printers, a Novell Client that corresponds to your operating system must be used. Operation is confirmed for the versions below.

- For Windows 98, 95, or Me:
Novell Client 3.32 for Windows 95/98*
- For Windows XP, 2000, or NT 4.0:
Novell Client 4.83+SP1 for Windows NT/2000/XP*

Installing EPSON Status Monitor 3

Follow these steps to install EPSON Status Monitor 3.

1. Make sure that the printer is off and that Windows is running on your computer.
2. Insert the printer software CD-ROM in the CD-ROM drive.

Note:

- If the language selection window appears, select your country.
 - If the EPSON Installation Program screen does not appear automatically, double-click the My Computer icon, right-click the CD-ROM icon, and click OPEN in the menu that appears. Then double-click Epsetup.exe.
3. Click Continue. When the software license agreement screen appears, read the statement and then click Agree.
 4. In the dialog box that appears, click Install Software.



5. Click Custom.

6. Select the EPSON Status Monitor 3 check box and click Install.




7. In the dialog box that appears, make sure that your printer's icon is selected, and click OK. Then follow the on-screen instructions.



8. When the installation is complete, click OK.


Accessing EPSON Status Monitor 3

Here is the way to access EPSON Status Monitor 3: Open the printer software, click the Utility tab, then click the EPSON Status Monitor 3 button.

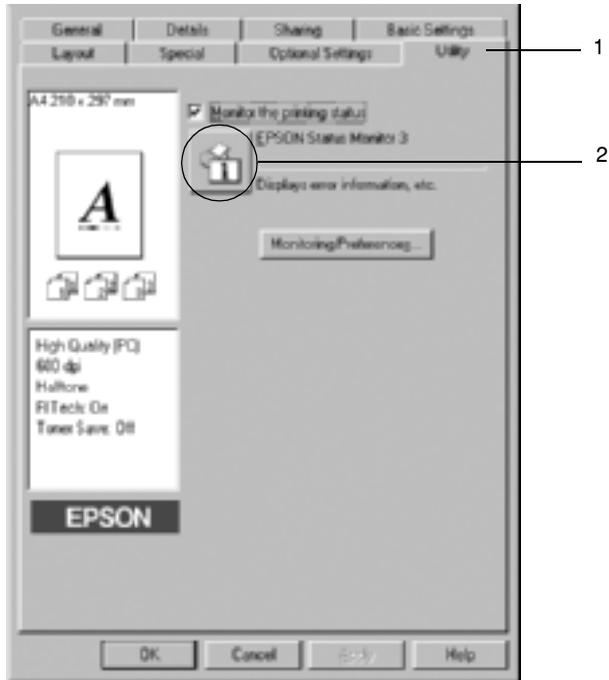

Getting printer status details

You can monitor printer status and obtain information on consumable products using the EPSON Status Monitor 3 dialog box.

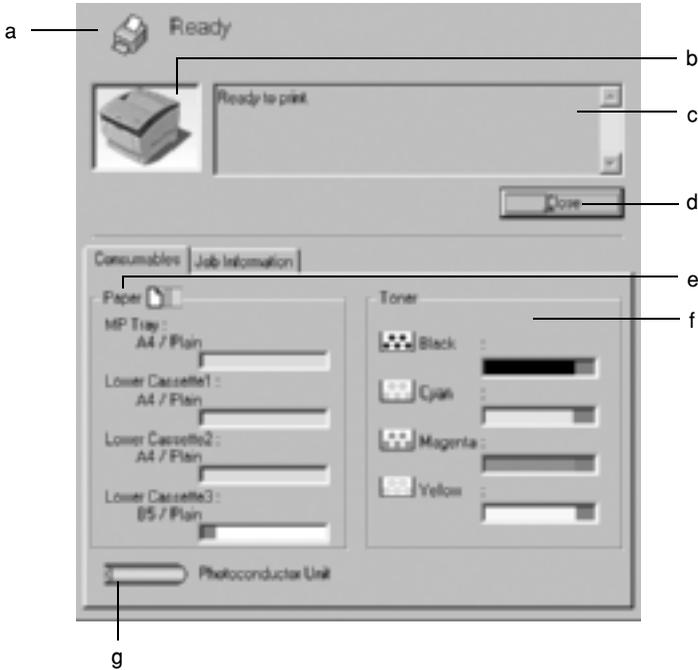

Note:


The screen shot may vary depending on your printer.

- a. Icon/Message: The icon and message show the printer status.

- b. Printer image: The image at the upper left shows the printer status graphically.
- c. Text box: The text box next to the printer image displays the current status of the printer. When a problem occurs, the most probable solution is displayed.
- d. Close button: Clicking this button closes the dialog box.
- e. Paper: Displays the paper size, paper type and the approximate amount of paper remaining in the paper source. Information for the optional cassette is displayed only if this option is installed.
- f. Toner: Indicates the amount of remaining toner. The toner icon flashes if the toner is low.
- g. Photoconductor Unit: Indicates the remaining functional life of the photoconductor unit.

Setting Monitoring Preferences

To make specific monitoring settings, click **Monitoring Preferences** in the **Utility** menu of the printer driver. The **Monitoring Preferences** dialog box appears.

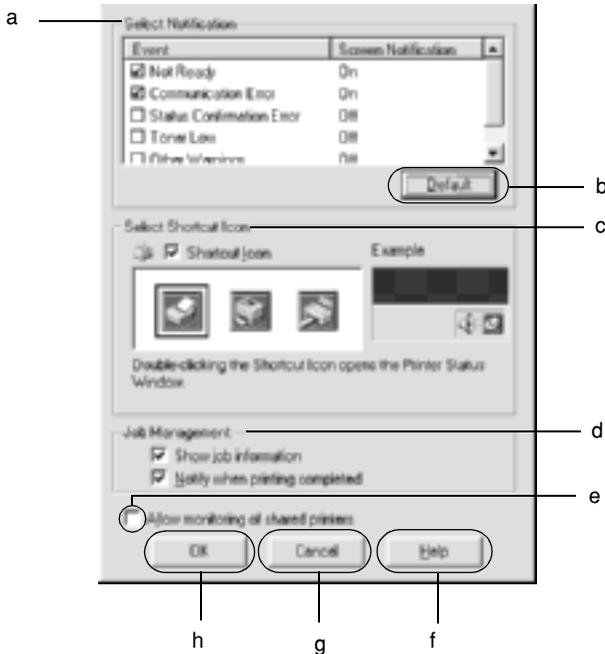

The following settings and buttons appear in the dialog box:


- a. **Select Notification:** Use the check boxes in this area to select the types of error that you wish to be notified about.
- b. **Default button:** Restores default settings.

- c. **Select Shortcut Icon:** To use the shortcut icon, select the **Shortcut Icon** check box and choose an icon. The icon you select appears on the right side of the task bar. Once the shortcut icon is in the task bar, you can double-click it to open the EPSON Status Monitor 3 dialog box. Alternatively, you can right-click the shortcut icon and select **Monitoring Preferences** to open the **Monitoring Preferences** dialog box, and **EPSON AL-C4100 Advanced** to open the EPSON Status Monitor 3 dialog box.
- d. **Job management:** To display the job information menu in the EPSON Status Monitor 3 window, select the **Show job information** check box.
- Note:**
This menu is enabled only under the conditions given in “Supporting connection to use the Job Management function” on page 105.
- To display the notification message when your print job is finished, select the **Notify when printing completed** check box.
- e. **Allow monitoring of shared printers check box:** When this check box is selected, a shared printer can be monitored by other PCs.
- f. **Help button:** Opens online help for the **Monitoring Preferences** dialog box.
- g. **Cancel button:** Cancels any changes.

- h. OK button: Saves new changes.

Status Alert window

The Status Alert window indicates what type of error has occurred and offers you a possible solution. The window closes automatically once the problem is cleared.

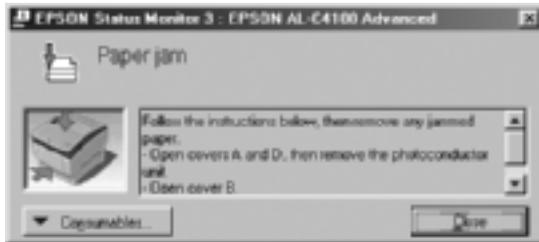


This window will also appear according to the selected notification in the Monitoring Preferences dialog box.

If you wish to see information about printer consumables, click the EPSON Status Monitor 3 button. Once this button is clicked, the Status Alert window will not disappear even after a problem is cleared. Click Close to close the window.

Using the Job Management function

You can obtain information on the print jobs on the Job Information menu on the EPSON Status Monitor 3 dialog box.

To display the Job Information menu, select the Show job information check box on the Monitoring Preferences dialog box. (See “Setting Monitoring Preferences” on page 100 for details.) Then click the Job Information tab on the EPSON Status Monitor 3 dialog box.

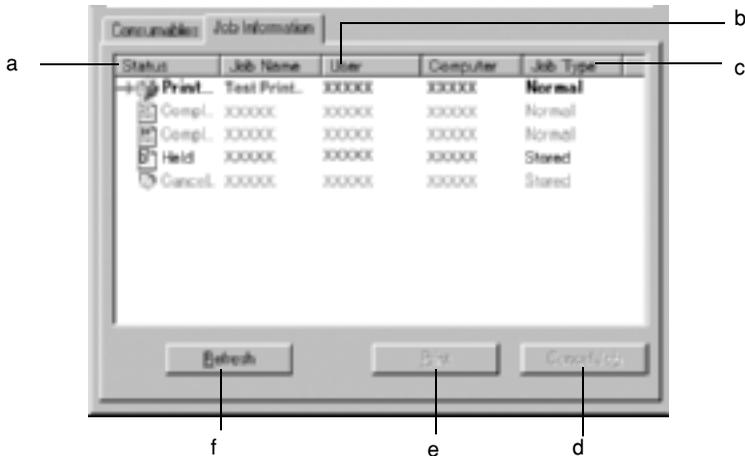

- a. Status: Waiting: The print job which waiting to be printed.
 Printing: The print job which is printed currently.
 Completed: Displays only your jobs that have finished printing.
 Canceled: Displays only your jobs that have been canceled printing.
 Held: Job is on held.
- b. Job Name: Displays the user’s print job file names. Other user’s print jobs are displayed as -----.

- c **Job Type:** Displays the job type. When the Reserve job function is used, the jobs are displayed as Stored, Verify, Re-Print, and Confidential respectively. About the Reserve Job function, see “Using the Reserve Job Function” on page 87.
- d **Cancel Job button:** Selecting a print job and clicking this button, cancels the selected print job.
- e **Print button:** Display the dialog box to print the spooled and held status job.
- f **Refresh button:** Clicking this button refreshes the information on this menu.

Re-printing your print job


Clicking the Print button on the EPSON Status Monitor 3 screen lets you print a spooled job. Follow the steps below to re-print your job.

Note:

You cannot re-print your jobs in the following cases.

- The status of the job is other than Held.
 - The job is sent by someone other than you.
 - When multiple jobs are selected
1. Access EPSON Status Monitor 3. See “Accessing EPSON Status Monitor 3” on page 97 for details.
 2. Click Job Information tab.

3. Click the Print button. The following screen appears.

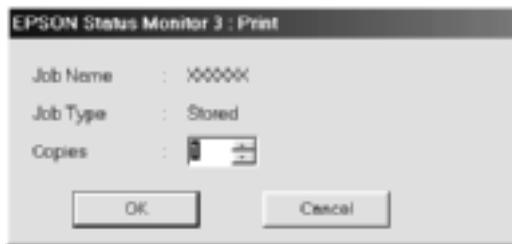

4. In the screen, confirm the job name and select a copy number from 1 to 999.
5. Click OK to reprint your job.

Supporting connection to use the Job Management function

The Job Management function is available when the following connections are used:

- When using the EPSON Net Direct Print TCP/IP connection (in Windows Me, 98, 95 and XP, 2000 or NT 4.0)
- When using the LPR connections (in Windows XP, 2000 and NT 4.0)
- When using standard TCP/IP connections (in Windows XP and 2000)
- Shared Windows 2000 and NT 4.0 LPR connections and shared Windows 2000 Standard TCP/IP connections with Windows XP, Me, 98, 95, 2000 and NT 4.0 clients

Note:

You can not use this function in the following situations:

- When using an optional Ethernet interface card that doesn't support the Job Management function.*

- ❑ *When the NetWare connections do not support the Job Management function.*
- ❑ *When the printing jobs from NetWare and NetBEUI are displayed as “Unknown” on the Job Management menu.*
- ❑ *Note that if the user account used to log on to a client is different from the user account used to connect to the server, the Job Management function is not available.*

Setting to notify when printing is completed

When the Notify when printing completed check box is selected, the Notify when printing completed function can be used.

When this function is enabled, the notify dialog box appears after your print job is completed.

Note:

When you canceled the target job, the Notify when printing completed dialog box does not appear.

Stopping monitoring

You can stop monitoring the printing status by clearing the Monitor the Printing Status check box in the printer driver’s Utility menu if you don’t need to monitor the printer at all.

Note:

- ❑ *The Monitor the Printing Status check box is displayed in the Utility menu of Document Defaults in Windows NT 4.0, or in the Utility menu of Printing Preference in Windows XP or 2000.*
- ❑ *You can find out the current printer status by clicking the EPSON Status Monitor 3 icon in the printer driver’s Utility menu.*

Monitored Printers settings

You can use the Monitored Printers utility to change the types of printers that EPSON Status Monitor 3 will monitor. When you install EPSON Status Monitor 3, this utility is also installed. Usually, it is not necessary to change a setup.

1. Click **Start**, point to **Programs**, point to **EPSON Printers**, then click **Monitored printers**.
2. Clear the check box of the printers which are not monitored.



3. Click **OK** to accept the setting.

Setting Up the USB Connection

The USB interface that comes with your printer complies with Microsoft Plug and Play (PnP) USB specifications.

Note:

Only PC systems equipped with a USB connector and running Windows Me, 98, XP, and 2000 support the USB interface.

1. Click **Start**, point to **Settings**, then click **Printers**. In Windows XP, click **Start**, then click **Printers and Faxes**.
2. Right-click the **EPSON AL-C4100 Advanced** icon, and click **Properties** on the menu that appears.
3. Click the **Details** tab. In Windows XP or 2000, click the **Ports** tab.
4. Select the appropriate USB port from the **Print to the following port** drop-down list. In Windows Me or 98, select **EPUSB1: (EPSON AL-C4100)**. In Windows XP or 2000, select **USB001** in the list on the **Ports** menu.




Note:
This screen is a Windows 98 screen.

5. Click OK to save this setting.

Canceling Printing

If the printouts are not what you expected and display incorrect or garbled characters or images, you may need to cancel printing. When the printer icon is displayed on the taskbar, follow the instructions below to cancel the printing.

Double-click the printer icon on the task bar. Select the task in the list, then click **Cancel** from the Document menu.

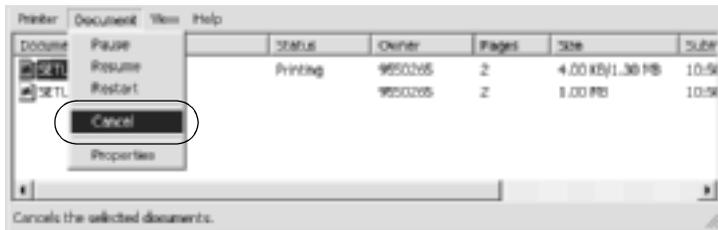

After the last page is output, the Ready (green) light on the printer turns on.

The current job is canceled.

Note:

You can also cancel the current print job that is sent from your computer, by pressing the  Cancel Job button on the printer's control panel. When canceling the print job, be careful not to cancel print sent by other users.

Uninstalling the Printer Software

When you wish to reinstall or upgrade the printer driver, uninstall the printer driver that has been installed already.

Uninstalling the printer driver

1. Quit all applications.
2. Click Start, point to Settings, and click Control Panel.
3. Double-click the Add/Remove Programs icon.



4. Select EPSON Printer Software, and click Add/Remove.




Note:

When using the Windows XP or Windows 2000, click **Change** or **Remove Programs**, select the **EPSON Printer Software**, then click **Change/Remove**.

5. Click the Printer Model tab, select the EPSON AL-C4100 Advanced icon, then click OK.



6. Click the Utility tab, and confirm that the check box for the printer software you want to uninstall is selected.

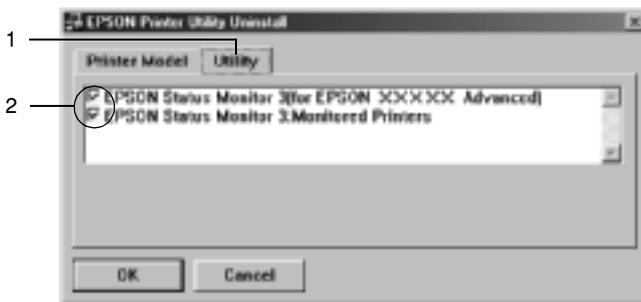

Note:

If you uninstall only EPSON Status Monitor 3, select the EPSON Status Monitor 3 check box.

7. If you uninstall the Monitored Printers utility, select the EPSON Status Monitor 3: Monitored Printers check box, and click OK.



Note:

You can uninstall only the Monitored Printers utility of EPSON Status Monitor 3. When the utility is uninstalled, you cannot change the setting of Monitored Printers from EPSON Status Monitor 3 of other printers.

8. Follow the on-screen instructions.

Uninstall the USB device driver


When you connect the printer to your computer with a USB interface cable, the USB device driver is also installed. When you uninstalled the printer driver, you also need to uninstall the USB device driver.

Follow these steps to uninstall the USB device driver.

Note:

- Uninstall the printer driver before uninstalling the USB device driver.*

- ❑ *Once you uninstalled the USB device driver, you cannot access any other EPSON printers connected with a USB interface cable.*
1. Follow steps 1 through 3 of “Uninstalling the printer driver” on page 110.
 2. Select EPSON USB Printer Devices, and click Add/Remove.

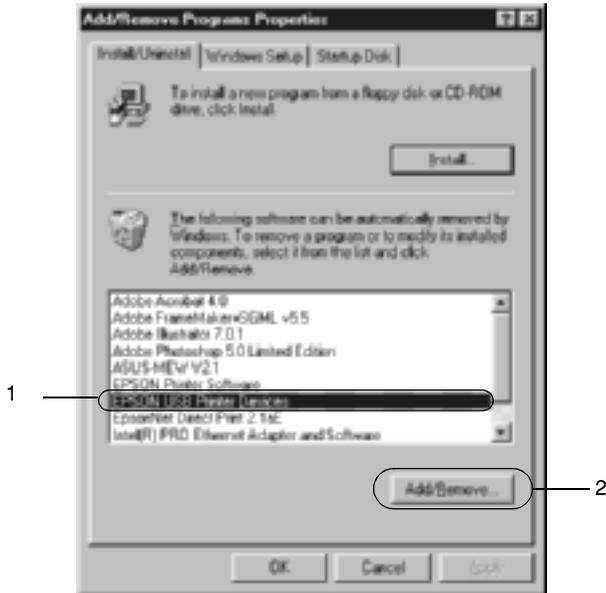

Note:

- ❑ *EPSON USB Printer Devices appears only when the printer is connected to Windows Me or 98 with a USB interface cable.*

- ❑ *If the USB device driver is not installed correctly, **EPSON USB Printer Devices** may not appear. Follow these steps to run the “Epusbun.exe” file in the CD-ROM that comes with your printer.*
 1. Insert the CD-ROM in your computer’s CD-ROM drive.
 2. Access the CD-ROM drive.
 3. Double-click the Win9x folder.
 4. Double-click the Epusbun.exe icon.

3. Follow the on-screen instructions.

About the Printer Software

The printer software contains a printer driver and EPSON Status Monitor 3. The printer driver lets you choose from a wide variety of settings to get the best results from your printer. EPSON Status Monitor 3 is accessed through the Apple menu. EPSON Status Monitor 3 lets you check the status of your printer. See “Monitoring Your Printer using EPSON Status Monitor 3” on page 148 for more information.

Accessing the printer driver

To control your printer and change its settings, use the printer driver. The printer driver allows you to easily make all the print settings, including paper source, paper size, and orientation.

Note:

The printer driver's online help provides details on printer driver settings.

To access the printer driver from Mac OS 8.6 to 9.x and open the appropriate dialog box, select Chooser from the Apple menu and click the AL-C4100 icon beforehand.

To access the printer driver from Mac OS X, register your printer in Print Center, then click Print on the file menu of any application and select your printer.

- ❑ To open the Paper Setting dialog box, select Page Setup from the File menu on any application.

- ❑ To open the Basic Settings dialog box, select Print from the File menu on any application.
- ❑ To open the Layout dialog box, click the  Layout icon on the Basic Settings dialog box.

Making Changes to Printer Settings

Making the print quality settings

You can change the print quality of printouts through settings in the printer driver. With the printer driver, you can make the print settings by choosing from a list of predefined settings, or customizing the settings.

Choosing the print quality by using the Automatic setting

You can change the print quality of printouts to favor speed or detail. There are two levels of print output, 300 dpi and 600 dpi. 600 dpi provides high quality, precise printing, but requires more memory and slows the printing speed.


When the Automatic button is selected on the Basic Settings dialog box, the printer driver takes care of all detailed settings according to the color setting you select. Color and resolution are the only settings you need to make. You can change other settings such as paper size or orientation in most applications.

Note:

Online help provides more information on printer driver settings.

1. Open the Basic Settings dialog box.

2. Click the Automatic button on Print Quality. Then choose desired printing resolution from Fast (300 dpi) or Fine (600 dpi) with the slider bar.

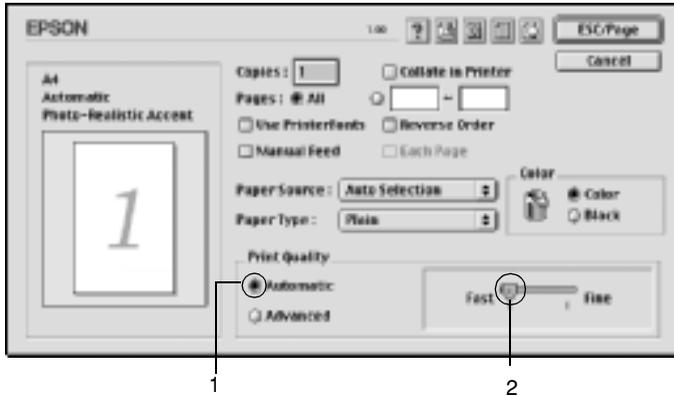

Note:

- ❑ For details about the RITech function, see the Online Help.
- ❑ If printing is unsuccessful or a memory-related error message appears, selecting a lower resolution may allow printing to proceed.

For Mac OS X Users


1. Open the Basic Settings dialog box.
2. Click the Automatic button, then choose the resolution from the Resolution drop-down list.

Using the predefined settings

The predefined settings are provided to help you optimize print settings for a particular kind of printout, such as presentation documents or images taken by a video or digital camera.

Follow these steps to use the predefined settings.

1. Open the Basic Settings dialog box.
2. Select the **Advanced** radio button. You will find the predefined settings in the list on the right of the **Automatic** radio button.

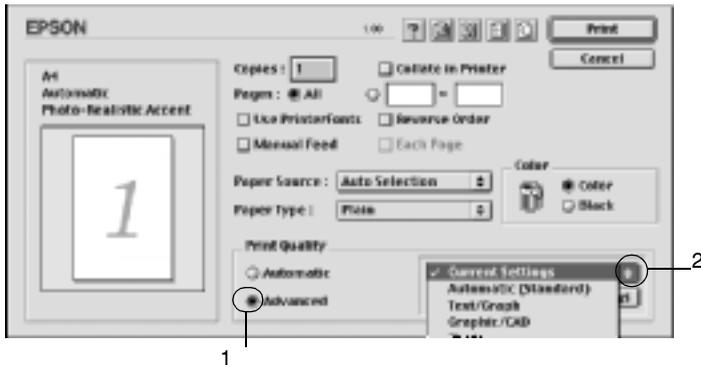

3. Select the most appropriate setting from the list according to the type of document or image you want to print.

For Mac OS X users

1. Open the Basic Settings dialog box.
2. Select the **Custom** radio button. You will find the predefined setting in the **Advanced** drop-down list.

When you choose a predefined setting, other settings such as Printing Mode, Resolution, Screen, and Color Management are set automatically. Changes are shown in the current settings list on the left of the Basic Settings dialog box.

This printer driver provides the following predefined settings:

Automatic (Standard)

Suitable for regular printing, especially photos.

Text/Graph

Suitable for printing documents that include text and graphs, such as presentation documents.

Graphic/CAD

Suitable for printing graphs and charts.

Photo

Suitable for printing photos.

PhotoEnhance4

Suitable for printing images captured using the video input, a digital camera, or scanner. EPSON PhotoEnhance4 automatically adjusts the contrast, saturation, and brightness of the original image data to produce sharper, more vivid color printouts. This setting does not affect your original image data.

Note:

This function is not available with Mac OS X.

ColorSync

Automatically adjusts printout colors to match colors on your screen.

Automatic (High Quality)

Suitable for regular printing that gives priority to high-quality printing.

Advanced Text/Graph

Suitable for printing high-quality presentation documents that include text and graphs.

Advanced Graphic/CAD

Suitable for printing high-quality graphs, charts, and photos.

Advanced Photo

Suitable for printing high-quality scanned photos and digitally-captured images.

Customizing print settings

Many users will never need to make their own print settings manually. However, your printer provides for customized print settings if you need more control over the printout, want to make the most detailed settings available, or just want to experiment.

Follow these steps to customize your print settings.

1. Open the Basic Settings dialog box.
2. Click the Advanced radio button, then click More Settings. The following dialog box appears.



3. Choose Color or Black as the Color setting.

4. Choose desired printing resolution from **Fast** (300 dpi) or **Fine** (600 dpi).

Note:

When making the other settings, see the  button for details on each settings.

5. Click **OK** to accept the settings and return to the **Basic Settings** dialog box.

For Mac OS X users

1. Open the **Print** dialog box.
2. Select **Color/ Graphics** settings from the drop-down list.
3. Make the settings as necessary.

Note:

For details on each settings, see online help.

Saving your settings

To save your custom settings, select the **Advanced** radio button and click **Save Settings** on the **Basic Settings** dialog box. The **Custom Settings** dialog box appears.

Type a name for your custom settings in the **Name** box, and click **Save**. Your settings will appear in the list on the right of the **Automatic** radio button in the **Basic Settings** dialog box.

Note:

- You cannot use a predefined setting name for your custom settings.
- To delete a custom setting, select the **Advanced** radio button and click **Save Settings** on the **Basic Settings** dialog box, select the setting in the **User Settings** dialog box and then click **Delete**.
- You cannot delete predefined settings.

If you change any setting in the Advanced Settings dialog box when one of your custom settings is selected in the Advanced Settings list on the Basic Settings dialog box, the setting selected in the list changes to User Settings. The custom setting that was previously selected is not affected by this change. To return to your custom setting, simply reselect it from the current settings list.

For Mac OS X users

Use the following procedures to save your custom settings.

For Mac OS 10.1.x users, save your custom settings in Save Custom Setting. Your settings will be saved as Custom in the Preset drop-down list. You can save only one set of custom settings.

For Mac OS 10.2.x users, save your custom settings in Save Custom Setting. Type a name for your custom settings in the name box. Your settings will be saved with this name in the Preset drop-down list.

Note:

- The Custom Setting option is a standard feature of Mac OS X.*


Resizing printouts

The Fit to Page function in the Layout dialog box allows you to have your documents enlarged or reduced during printing according to the specified paper size.

Note:

- This function is not available with Mac OS X.*
- The enlarging or reducing rate is automatically specified according to the paper size selected in the Paper Setting dialog box.*

- ❑ *The modifying or reducing rate selected in the Paper Setting dialog box is not available.*
1. Click the  Layout icon on the Basic Settings dialog box. The Layout dialog box appears.
 2. Select the Fit to Page check box. Then select the desired paper size from the Output Paper drop-down list. The page will be printed to fit on the paper you have selected.

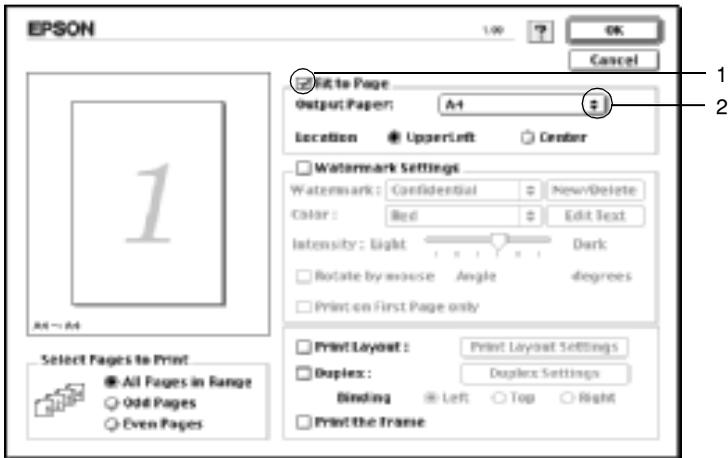


3. Click OK to accept the settings.

Modifying the print layout

You can print either two or four pages onto a single page and to specify the printing order, automatically resizing each page to fit the specified paper size by using Layout printing. You can also choose to print documents surrounded by a frame.

1. Click the  Layout icon on the Basic Settings dialog box. The Layout dialog box appears.

2. Select the Print Layout check box, then click Print Layout Settings. The Print Layout Setting dialog box appears.

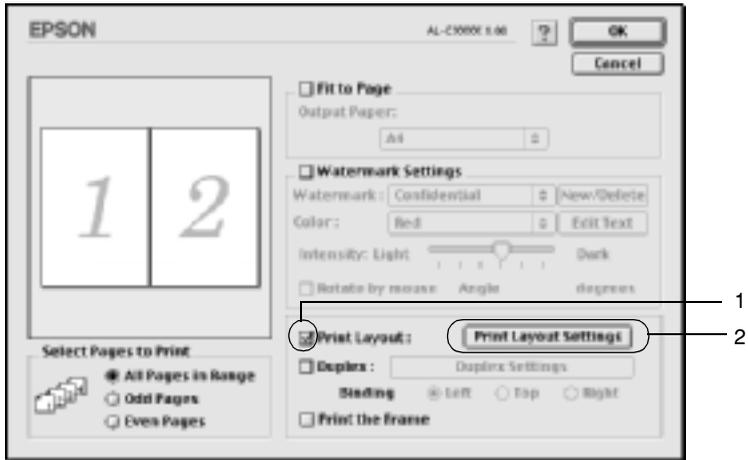

3. Select the number of pages you want to print on one sheet of paper.



4. Select the page order in which the pages are printed on each sheet.

Note:

Page Order choices depend on Pages selected above, and Orientation.

5. Click OK to accept the settings and return to the Layout dialog box.
6. Select the Print the Frame check box on the Layout dialog box when you want to print the pages surrounded by a frame.
7. Click OK to accept the settings.

For Mac OS X users

1. Open the Print dialog box.

2. Select Layout from the drop-down list.
3. Select the number of page you want to print on one sheet of paper from the drop-down list.
4. Click Print to start printing.

Note:

The Layout settings are a standard feature of Mac OS X.

Using a watermark


Follow the steps to use a watermark on your document. In the Layout dialog box, you can select from a list of predefined watermarks, or you can select a bitmap (PICT) file or text file as your own custom watermark. The Layout dialog box also allows you to make a variety of detailed watermark settings. For example, you can select the size, intensity, and position of your watermark.

Note:

This function is not available with Mac OS X.

1. Click the  Layout icon on the Basic Settings dialog box. The Layout dialog box appears.

2. Select the **Watermark Settings** check box and a watermark from the Watermark drop-down list.

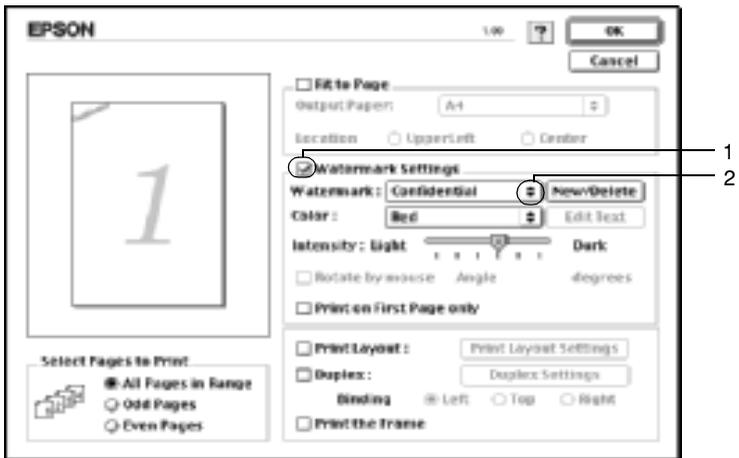


3. Select the location on the page where you want to print the watermark by dragging the watermark image on the preview window. Also, when you want to resize the watermark, drag its handle.
4. Adjust the image intensity of the watermark with the Intensity slider bar.
5. For your own custom text watermark, you can rotate it by inputting the degrees in the Angle box. Or select the Rotate by mouse check box, and rotate the text watermark with the pointer on the preview window.
6. Click OK to accept the settings.

Making a new watermark


You can make a new text or bitmap watermark with the following procedures.

To make a text watermark


1. Click the  Layout icon on the Basic Settings dialog box. The Layout dialog box appears.
2. Select the Watermark Settings check box and click New/Delete. The Custom Watermark dialog box appears.

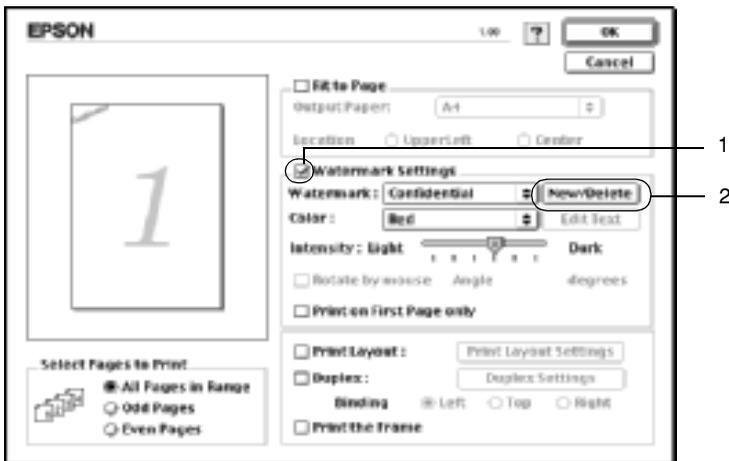


3. Click Add Text on the Custom Watermark dialog box.

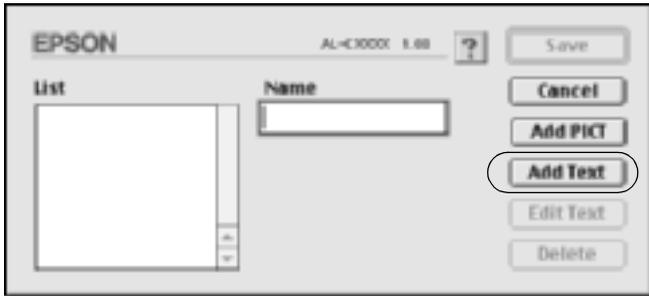

4. Type the watermark text in the Text box, and select the Font and Style, and then click OK on the Text Watermark dialog box.

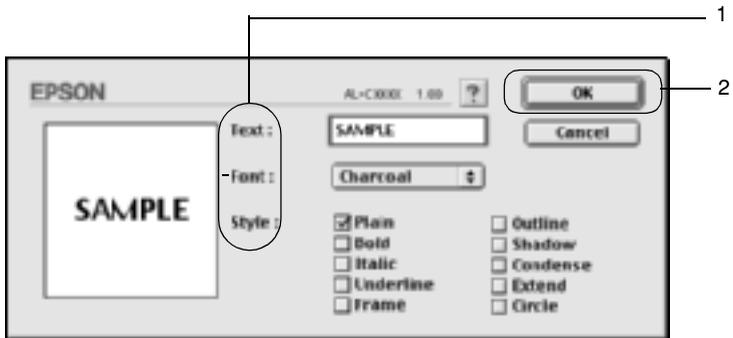

5. Type the file name in the Name box, and click Save.

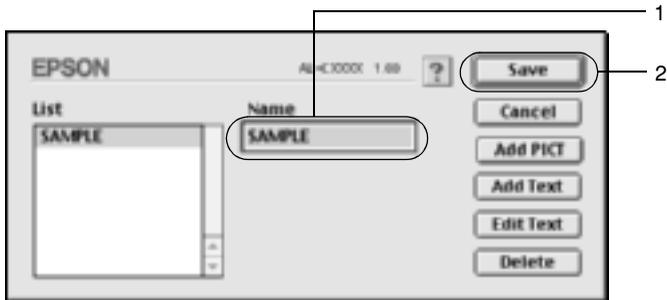

Note:


- ❑ To edit the saved text watermark, select it from the List box, and click **Edit Text**. After editing, be sure to click **OK** to close the dialog box.
 - ❑ To remove the saved text watermark, select it from the List box, and click **Delete**. After removing it, be sure to click **Save** to close the dialog box.
6. Select the saved custom watermark from the Watermark drop-down list on the Layout dialog box. Then click **OK**.

To make a bitmap watermark


Before making a custom watermark, you should prepare a bitmap (PICT) file.

1. Click the  Layout icon on the Basic Settings dialog box. The Layout dialog box appears.


2. Select the **Watermark Settings** check box and click **New/Delete**. The Custom Watermark dialog box appears.

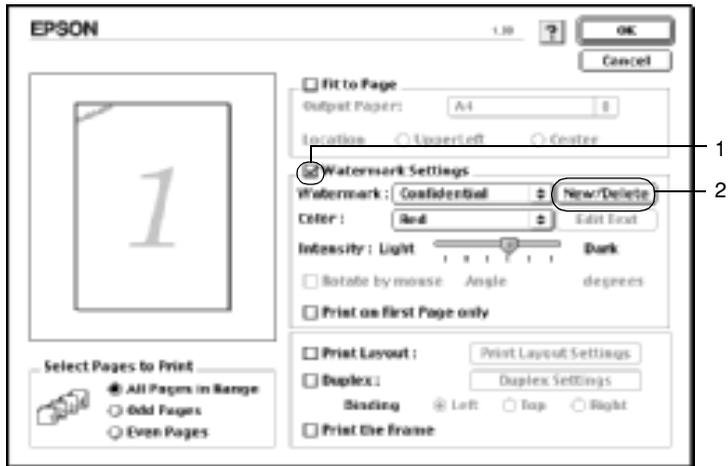


3. Click **Add PICT** on the Custom watermark dialog box.

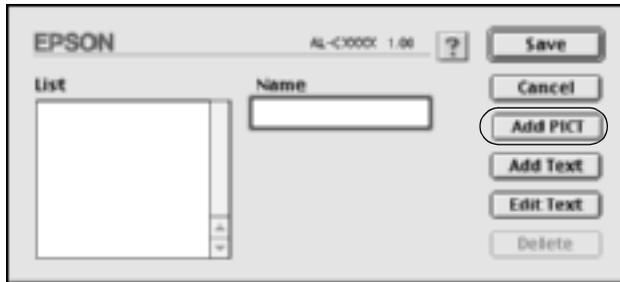

4. Select the PICT file and click Open.

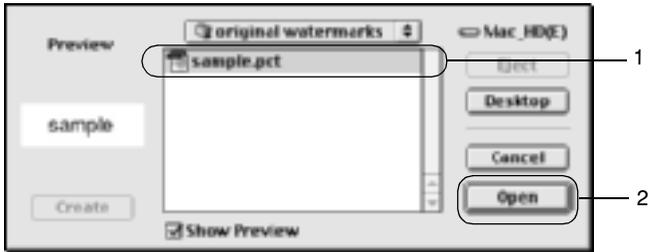

5. Type the file name in the Name box, and click Save.

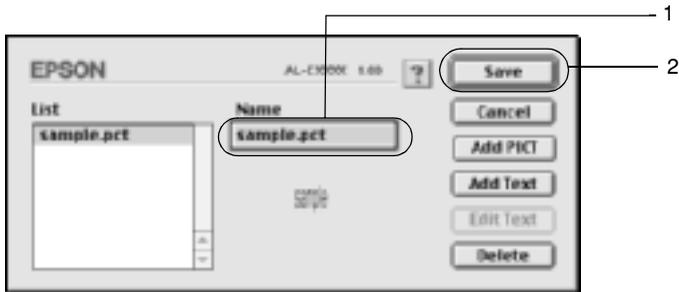

Note:

To remove the saved watermark, select it from the List box, and click **Delete**. After removing it, be sure to click **Save** to close the dialog box.


6. Select the saved custom watermark from the Watermark drop-down list on the Layout dialog box. Then click OK.

Printing with the duplex unit

Duplex printing prints on both sides of the paper. When printing for binding, the binding edge can be specified as required to produce the desired page order.

As an ENERGY STAR® partner, EPSON recommends the use of the double-sided printing function. Refer to ENERGY STAR® Compliance for more information on the ENERGY STAR® program.

1. Click the  Layout icon on the Basic Settings dialog box. The Layout dialog box appears.
2. Select the Duplex check box.
3. Select a Binding position from Left, Top, or Right.
4. Click Duplex Settings to open the Duplex Settings dialog box.
5. Specify the Binding Margin for the front and back sides of the paper.

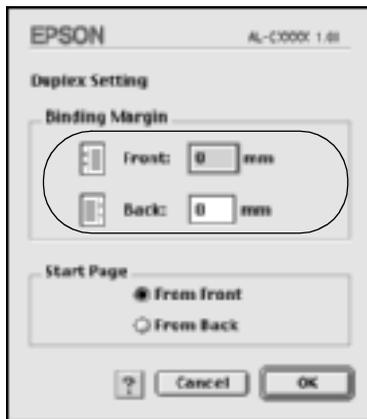

6. Select whether the front or back side of the paper is to be printed as the Start Page.
7. Click OK to accept the settings and return to the Layout dialog box.

For Mac OS X users

1. Open the Print dialog box.
2. Select Duplex Settings from the drop-down list.
3. Select the Duplex Settings check box.
4. Select a Binding position from Left, Top, or Right.
5. Specify the Binding Margin for the front and back sides of the paper.
6. Select whether the front or back side of the paper is to be printed as the Start Page.
7. Click Print to start printing.

Making Extended Settings

You can make various settings in the Extended Setting dialog box, for example Page Protect. To open the dialog box, click the  Extended Setting icon on the Basic Settings dialog box.

For Mac OS X users, open the Extension Settings dialog box.

- a. Uses the settings specified on the printer check box: Select this button to use the Offset, Skip blank page, and Ignore the selected paper size settings on the control panel.
- b. Offset: Makes fine adjustments to the printing position on the front and the back of data on a page in 1.0mm increments.
- c. Ignore the selected paper size check box: When you select this check box, the printer prints on loaded paper, regardless of size.
- d. Skip Blank Page check box: When you select this check box, the printer skips blank pages.

Note:

This function is not available with Mac OS X.

- e. Automatically change to monochrome mode check box: Select this check box to have the printer driver analyze the printing data, and automatically switch to monochrome mode if the printing data is black and white.

Note:

This function is not available with Mac OS X.

- f. Adjust line thickness check box: Adjusts the width of the lines printed.
- Note:*
This function is not available with Mac OS X.
- g. Default button: Returns to initials settings.
- Note:*
This function is not available with Mac OS X.
- h. Select button: Selects spool file saving folder.
- Note:*
This function is not available with Mac OS X.
- i. Cancel button: Click this button to exit the dialog box or printer driver without saving your settings.
- j. OK button: Click this button to save your settings and to exit the dialog box or printer driver. The settings are effective until you make new settings and click OK again.
- Note:*
This function is not available with Mac OS X.

Using the Reserve Job Function

The Reserve Job function allows you to store print jobs in the printer's Hard Disk Drive and to print them later directly from the printer's control panel. Follow the instructions in this section to use the Reserve Job function.

Note:

You need an optional Hard Disk Drive installed in your printer in order to use the Reserve Job function. Make sure that the drive is correctly recognized by the printer driver before you start using the Reserve Job function.

The table below gives an overview of the Reserve Job options. Each option is described in detail later in this section.

Reserve Job Option	Description
Re-Print Job	Lets you print the job now and store it for later reprinting.
Verify Job	Lets you print one copy now to verify the content before printing multiple copies.
Stored Job	Lets you save the print job without printing it now.
Confidential Job	Lets you apply a password to the print job and save it for later printing.

Jobs stored in the Hard Disk Drive are handled differently depending on the Reserve Job option. Refer to the tables below for details.

Reserve Job Option	Maximum Number of Jobs	When Maximum is Exceeded	When Drive is Full
Re-Print Job + Verify Job	64 (combined total)	Oldest job automatically replaced with newest	Oldest job automatically replaced with newest

Reserve Job Option	Maximum Number of Jobs	When Maximum is Exceeded	When Drive is Full
Stored Job	64	Delete old jobs manually	Delete old jobs manually
Confidential Job	64		


Reserve Job Option	After Printing	After Turning Off Printer or Using Reset All
Re-Print Job	Data remains in hard drive	Data is cleared
Verify Job		
Stored Job		Data remains in hard drive
Confidential Job	Data is cleared	Data is cleared

Re-Print Job


The Re-Print Job option allows you to store the job you are currently printing so that you can reprint it later directly from the control panel.

Follow these steps to use the Re-Print Job option.

1. Make printer driver settings as appropriate for your document, then open the Basic Settings menu and click the  Reserve Jobs icon. The Reserve Jobs Settings dialog box appears.

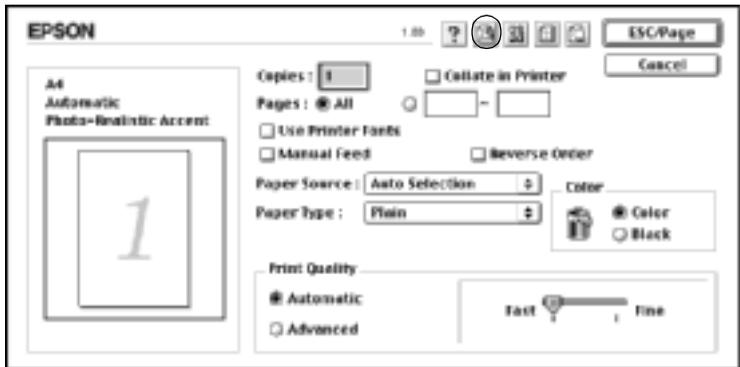

2. Select the Reserve Job On check box and the Re-Print Job radio button.

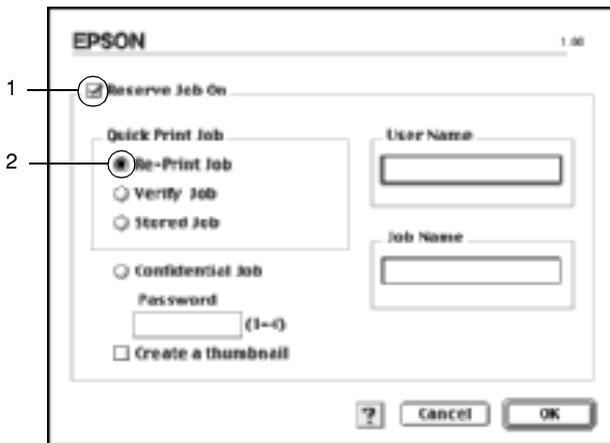

3. Enter a user name and job name in the corresponding text boxes.

Note:

If you want to create a thumbnail of the first page of a job, select the **Create a thumbnail** check box. Thumbnails can be accessed by entering `http://` followed by the internal print server's IP address in a Web browser.

4. Click OK. The printer prints your document, and stores the print job data on the Hard Disk Drive.

To reprint or delete this data using the printer's control panel, see "Using the Quick Print Job Menu" on page 317.

For Mac OS X users

1. Open the Reserve Job dialog box.
2. Select the Re-Print Job radio button.
3. Enter a user name and job name in the corresponding text box.
4. Click Print. The printer print your document and stores the print job data on the Hard Disk Drive.

Verify Job

The Verify Job option allows you to print one copy in order to verify the content before printing multiple copies.

Follow these steps to use the Verify Job option.

1. Specify the number of copies to be printed, and make other printer driver settings as appropriate for your document.
2. Open the Basic Settings dialog box and click the  Reserve Jobs icon. The Reserve Jobs Settings dialog box appears.

3. Select the Reserve Job On check box and the Verify Job radio button.



4. Enter a user name and job name in the corresponding text boxes.

Note:

*If you want to create a thumbnail of the first page of a job, select the **Create a thumbnail** check box. Thumbnails can be accessed by entering `http://` followed by the internal print server's IP address in a Web browser.*

5. Click OK. The printer prints one copy of your document, and stores the print data with information on the number of remaining copies on the Hard Disk Drive.

After you have confirmed the printout, you can print the remaining copies or delete this data using the printer's control panel. See "Using the Quick Print Job Menu" on page 317 for instructions.

For Mac OS X users

1. Open the Reserve Job dialog box.

2. Select the Verify Job radio button.
3. Enter a user name and job name in the corresponding text box.
4. Click Print. The printer print your document and stores the print job data on the Hard Disk Drive.


Stored Job

The Stored Job option is useful for storing documents you print on a regular basis, such as invoices. The stored data remains on the Hard Disk Drive even if you turn off the printer or reset it using the Reset All function.

Follow these steps to store print data using the Stored Job option.

1. Make printer driver settings as appropriate for your document, then open the Basic Settings menu and click the  Reserve Jobs icon. The Reserve Jobs Settings dialog box appears.

2. Select the Reserve Job On check box and the Stored Job radio button.

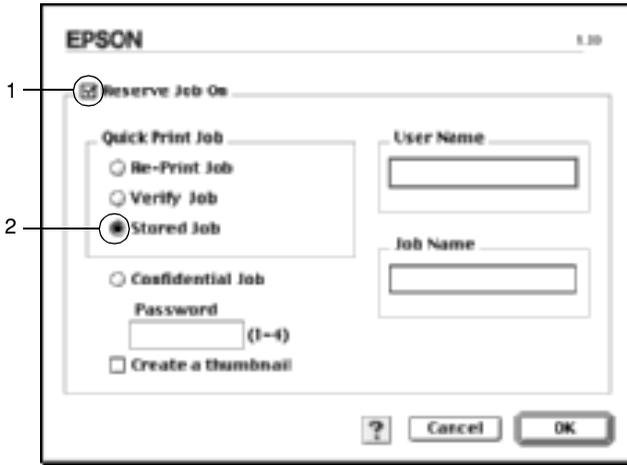

3. Enter a user name and job name in the corresponding text boxes.

Note:

*If you want to create a thumbnail of the first page of a job, select the **Create a thumbnail** check box. Thumbnails can be accessed by entering `http://` followed by the internal print server's IP address in a Web browser.*

4. Click OK. The printer stores the print data in the Hard Disk Drive.

To print or delete this data using the printer's control panel, see "Using the Quick Print Job Menu" on page 317.

For Mac OS X users

1. Open the Reserve Job dialog box.
2. Select the Stored Job radio button.

3. Enter a user name and job name in the corresponding text box.
4. Click Print. The printer print your document and stores the print job data on the Hard Disk Drive.

Confidential Job

The Confidential Job option allows you to apply passwords to print jobs stored on the Hard Disk Drive.

Follow these steps to store print data using the Confidential Job option.

1. Make printer driver settings as appropriate for your document, then open the Basic Settings dialog box and click the  Reserve Jobs icon. The Reserve Jobs Settings dialog box appears.
2. Select the Reserve Job On check box and click the Confidential Job button.



3. Enter a user name and job name in the corresponding text boxes.
4. Set the password for the job by entering a four-digit number in the password text box.

Note:

- Passwords must be four digits.*
 - Only numbers from 1 through 4 can be used for passwords.*
 - Keep passwords in a safe place. You must enter the correct password when printing a Confidential Job.*
5. Click OK. The printer stores the print job in the Hard Disk Drive.

To print or delete this data using the printer's control panel, see "Using the Confidential Job Menu" on page 318.

For Mac OS X users

1. Open the Reserve Job dialog box.
2. Select the Confidential Job radio button.
3. Enter a user name and job name in the corresponding text box.
4. Press the Confidential Job or Password button. The password dialog box appears.
Set the password for the job by entering a four-digit number in the password dialog box.
5. Click Print. The printer print your document and stores the print job data on the Hard Disk Drive.

Monitoring Your Printer using EPSON Status Monitor 3

EPSON Status Monitor 3 monitors your printer and gives you information about its current status.

Accessing EPSON Status Monitor 3

You can access EPSON Status Monitor 3 by selecting the EPSON Status Monitor 3 alias from the Apple menu.

Note:


- ❑ *The appropriate printer port must already be selected in the Chooser so that necessary information can be received from the selected printer driver when the EPSON Status Monitor 3 starts. If the printer port is not correct, an error will occur.*
- ❑ *If you change the printer driver in the Chooser while the spool file is printing in the background, output to the printer may be disrupted.*
- ❑ *Printer and consumable products status information appears in the status window only if the Chooser is acquiring status normally.*

For Mac OS X users

1. Click **Print** in the **File** menu of any application. The **Print** dialog box appears.
2. Select **Utilities** in the list where **Copies & Pages** is displayed.
3. Click your printer's icon.

Getting printer status details

You can monitor printer status and get information on consumable products using the EPSON Status Monitor 3 dialog box.

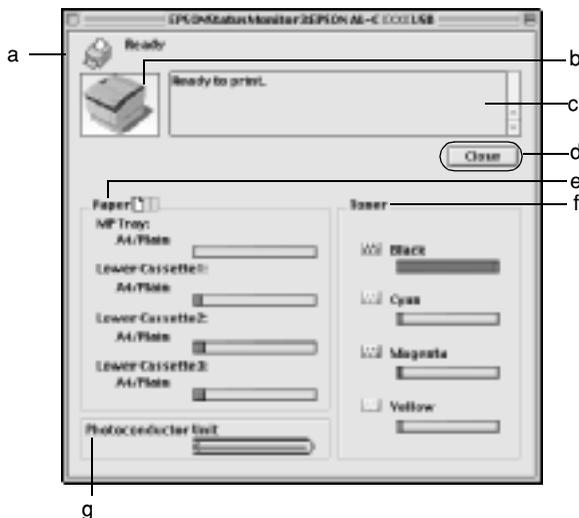

Note:


The screen shot may vary depending on your printer.

- | | |
|-------------------|---|
| a. Icon/Message: | The icon and message shows the printer status. |
| b. Printer image: | The image at the upper left shows the printer status graphically. |

- c. Text box: The text box next to the printer image displays the current status of the printer. When a problem occurs, the most probable solution is displayed.
- d. Close button: Clicking this button closes the dialog box.
- e. Paper: Displays the paper size and the approximate amount of paper remaining in the paper source. Information for the optional cassettes are displayed only if this option is installed.
- f. Toner: Indicates the amount of remaining toner. The toner icon flashes if toner is low.
- g. Photoconductor Unit: Indicates the remaining functional life of the photoconductor unit.

Setting Monitoring Preferences

To make specific monitoring settings, select Monitor Setup from the File menu. The Monitor Setup dialog box appears.

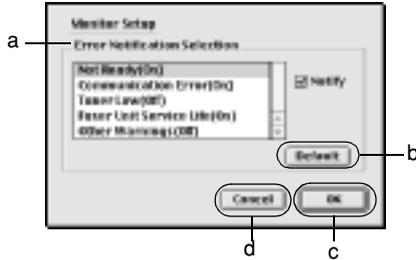

The following settings and buttons appear in the dialog box:

- | | |
|----------------------------------|---|
| a. Error Notification Selection: | Select the types of error that you wish to be notified about. |
| b. Default button: | Restores default settings. |
| c. OK button: | Saves new changes. |
| Save button: | Saves new changes and closes the dialog box. |


Note:

This function is only available with Mac OS X.

- | | |
|-------------------|----------------------|
| d. Cancel button: | Cancels any changes. |
|-------------------|----------------------|

Status Alert window

The Status Alert window indicates what type of error has occurred and offers you a possible solution. The window closes automatically once the problem is cleared.

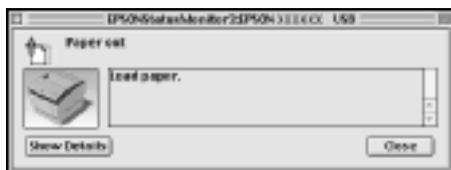


This window will also appear according to the selected notification in the Monitoring Preferences dialog box.

If you wish to see information about printer consumables, click **Show Details**, for Mac OS X users, click  button. If you click this button, the Status Alert Window will not disappear even after the problem is cleared. To close the window you need to click **Close**.

Using the Job Management function

You can obtain information on the print jobs on the Job Information menu on the EPSON Status Monitor 3 dialog box.

To display the Job Information menu, select the Show job information check box on the Monitoring Preferences dialog box. Then click the Job Information menu on the EPSON Status Monitor 3 dialog box.

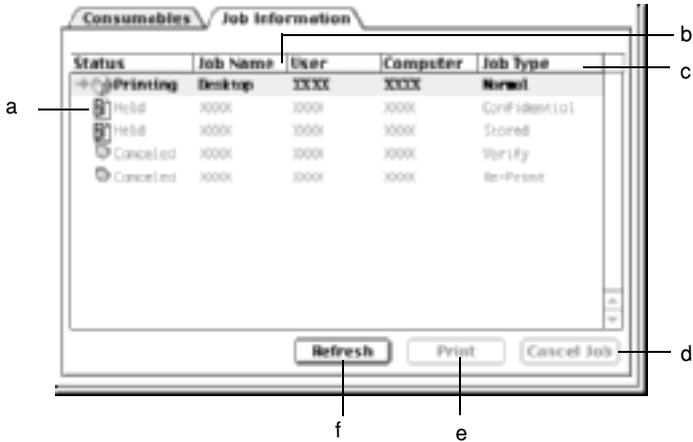

- a. Status:
- Waiting: Waiting to print.
 - Printing: Current job is being printed.
 - Completed: Indicates job has been printed.
 - Canceled: Indicates job has been canceled.
 - Held: Job is on hold.
- b. Job Name: Displays the user's print job file names. Other users print jobs are displayed as -----.


- c. Job Type: Displays the job type. When the Reserve job function is used, the jobs are displayed as Stored, Verify, Re-Print, and Confidential respectively. About the Reserve Job function, see “Using the Reserve Job Function” on page 139.
- d. Cancel Job button: Selecting a print job and clicking this button, cancels the selected print job.
- e. Print button: Displays the dialog box to print the spooled and Held status job. See “Re-Print Job” on page 140 for details.
- f. Refresh button: Clicking this button refreshes the information on this menu.

Setting Up the USB Connection

Note:

If you are connecting the USB cable to your Macintosh through a USB hub, be sure to connect using the first hub in the chain. The USB interface may be unstable depending on the hub used. If you experience problems with this type of setup, connect the USB cable directly to your computer's USB connector.

1. Select Chooser from the Apple menu. Click the AL-C4100 icon and then click the USB port your printer is connected to.

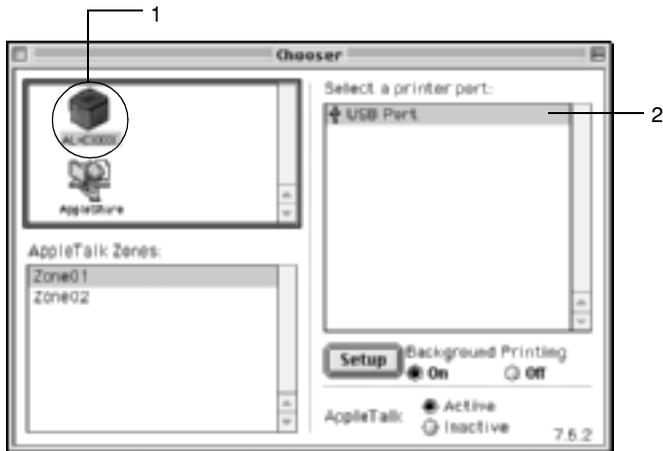

2. Select Background Printing to turn background printing on or off.

Note:

- Background printing must be turned on for the EPSON Status Monitor 3 to manage print jobs.*
 - When background printing is on, you can use your Macintosh while it is preparing a document for printing.*
3. Close the Chooser.

Canceling Printing

If the printouts are not what you expected and display incorrect or garbled characters or images, you may need to cancel printing. When a print job continues on the PC, follow the instruction below to cancel the printing.

- ❑ Press the Period (.) key while pressing the Command key to cancel printing. Depending on applications, the message shows the procedure to cancel printing during printing. If this appears, follow instructions in the message.
- ❑ During background printing, open EPSON Status Monitor 3 from the Application menu. Then stop printing from EPSON Status Monitor 3, or delete the file that is in sleep mode.

After the last page is output, the Ready (green) light on the printer turns on.

Note:

You can also cancel the current print job that is sent from your computer, by the  Cancel Job button on the control panel. When canceling the print job, be careful not to cancel print jobs from other users' computers.

Uninstalling the Printer Software

When you wish to reinstall or upgrade the printer driver, be sure to uninstall the current printer software beforehand.

For Mac OS 8.6 to 9.X

1. Quit all applications, and restart your Macintosh.

2. Insert the EPSON printer software CD-ROM in your Macintosh.
3. Double-click the English folder, then double-click Disk 1 folder inside the Disk Package folder.
4. Double-click the Installer icon.



5. Click Continue. When the software license agreement screen appears, read the statement and then click Accept.
6. Select Uninstall from the menu at the upper left, and click Uninstall.

Follow the on-screen instructions.

For Mac OS X

1. Quit all applications, and restart your Macintosh.
2. Insert the EPSON printer software CD-ROM in your Macintosh.
3. Double-click the Mac OS X folder
4. Double-click the English folder, then double-click the Disk Package folder.
5. Double-click the ALC4100_10a icon.

Note:

If the Authorization dialog box appears, enter the Password or phrase, then click OK.

6. When the software license agreement screen appears, read the statement and then click **Accept**.
7. Select **Uninstall** from the menu at the upper left, and click **Uninstall**.

Follow the on-screen instructions.

Setting Up Your Printer on a Network

For Windows

Sharing the printer

This section describes how to share the printer on a standard Windows network.

The computers on a network can share a printer that is directly connected to one of them. The computer that is directly connected to the printer is the printer server, and the other computers are the clients which need permission to share the printer with the printer server. The clients share the printer via the printer server.

According to the versions of Windows OS and your access rights on the network, perform the appropriate settings of the printer server and clients.

Setting the printer server

- ❑ For Windows Me, 98, or 95, see “Setting up your printer as a shared printer” on page 160.
- ❑ For Windows XP, 2000, or NT 4.0, see “Using an additional driver” on page 162.

Setting the clients

- ❑ For Windows Me, 98, or 95, see “With Windows Me, 98, or 95” on page 169.
- ❑ For Windows XP or 2000, see “With Windows XP or 2000” on page 170.

- ❑ For Windows NT 4.0, see “With Windows NT 4.0” on page 174.

Note:

- ❑ *When sharing the printer, be sure to set EPSON Status Monitor 3 so that the shared printer can be monitored on the printer server. See “Setting Monitoring Preferences” on page 100.*
- ❑ *When you are Windows shared printer user in a Windows Me, 98, or 95 environment, on the server, double-click the **Network** icon in Control panel and make sure that the “File and printer sharing for Microsoft Networks” component is installed. Then, on the server and clients, make sure that the “IPX/SPX-compatible Protocol” or the “TCP/IP Protocol” is installed.*
- ❑ *The printer server and clients should be set on the same network system, and they should be under the same network management beforehand.*
- ❑ *The on-screen displays on the following pages may differ depending on the version of Windows OS.*

Setting up your printer as a shared printer

When the printer server’s OS is Windows Me, 98, or 95, follow these steps to set the printer server.

1. Click Start, point to Settings, and click Control Panel.
2. Double-click the Network icon.
3. Click File and Print Sharing on the Configuration menu.
4. Select the I want to be able to allow others to print to my printer(s). check box, then click OK.
5. Click OK to accept the settings.


Note:

- ❑ When “Insert the Disk” appears, insert the Windows Me, 98, or 95 CD-ROM in the computer. Click **OK** and then follow the on-screen instructions.

- ❑ When the prompt to restart the computer appears, restart the computer and continue with the settings. See “For users restarting the computer” on page 161.

For users restarting the computer

1. Double-click the Printers icon on the control panel.
2. Right-click EPSON AL-C4100 Advanced icon, and click Sharing in the menu that appears.
3. Select the Shared As button, type the name in the Share Name box, and click OK. Type a Comment and Password if needed.

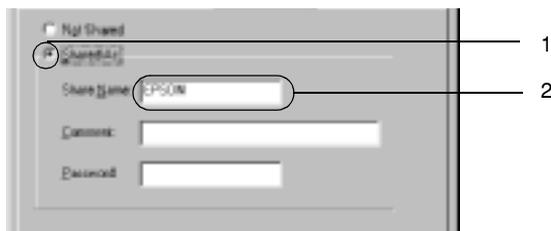

Note:

- ❑ Do not use spaces or hyphens for the share name, or an error may occur.

- ❑ When sharing the printer, be sure to set EPSON Status Monitor 3 so that the shared printer can be monitored on the printer server. See “Setting Monitoring Preferences” on page 100.

You need to set the client computers so that they can use the printer on a network. See the following pages for details.

- ❑ “With Windows Me, 98, or 95” on page 169
- ❑ “With Windows XP or 2000” on page 170
- ❑ “With Windows NT 4.0” on page 174

Using an additional driver

When the printer server’s OS is Windows 2000, XP, or Windows NT 4.0, you can install the additional drivers in the server. The additional drivers are for client computers that have different OS from the server.

Follow these steps to set a Windows XP, 2000, or Windows NT 4.0 as a printer server, and install the additional drivers.

Note:


- ❑ *You must access Windows XP, 2000, or Windows NT 4.0 as the Administrators of the local machine.*
 - ❑ *If the printer server’s OS is Windows NT 4.0, the additional driver can be used only on Service Pack 4 or later.*
1. For a Windows 2000 or NT 4.0 printer server, click **Start**, point to **Settings**, and click **Printers**.
For a Windows XP printer server, click **Start**, point to **Printers and Faxes**. For Windows XP Home edition users, point to **Control panel** first, then click **Printers and Faxes**.
 2. Right-click **EPSON AL-C4100 Advanced** icon, and click **Sharing** in the menu that appears.

For Windows XP, if the following menu appears, click either Network Setup Wizard or If you understand the security risks but want to share printers without running the wizard, click here.


In either case, follow the on-screen instructions.



3. For a Windows 2000 or NT 4.0 printer server, select the Shared as button, then type the name in the Share Name box.

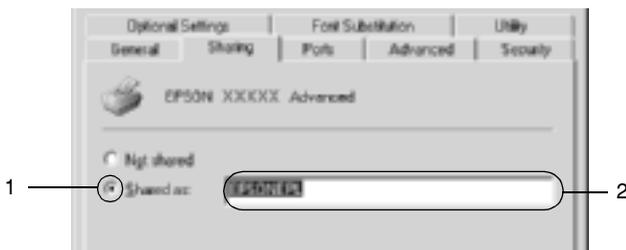

For a Windows XP printer server, select the Share this printer button, then type the name in the Share name box.

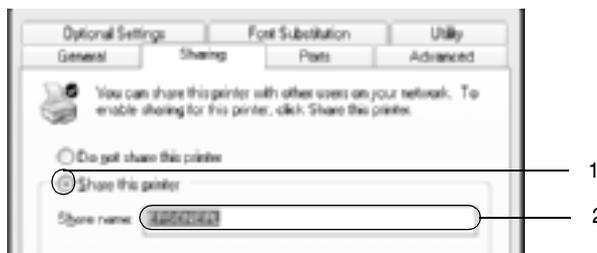

Note:

Do not use spaces or hyphens for the Share name, or an error may occur.


4. Select the additional drivers.

Note:

If the computers of the server and clients use the same OS, you do not have to install the additional drivers. Just click OK after step3.

On the Windows NT 4.0 printer server

Select Windows being used for clients. For example, select Windows 95 to install the additional driver for the Windows Me, 98, or 95 clients. Then click OK.

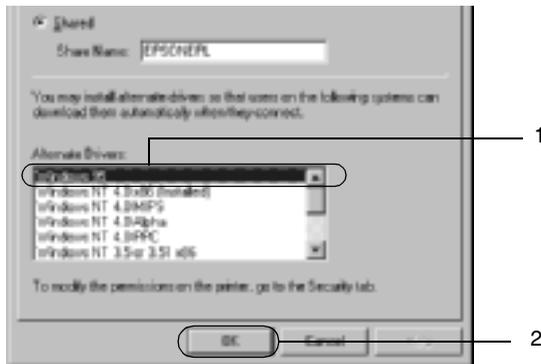


Note:

- ❑ *You do not have to select Windows NT 4.0x86, because that driver has been already installed.*
- ❑ *Do not select additional drivers other than Windows 95. The other additional drivers are not available.*



On the Windows XP or 2000 printer server

Click Additional Drivers.

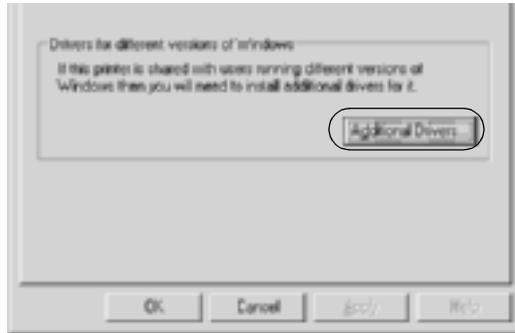

Select Windows being used for clients then click OK.

For Windows Me, 98, or 95 clients	Select Intel Windows 95 or 98 (and Me)
For Windows NT 4.0 clients	Select Intel Windows NT 4.0 or 2000
For Windows XP or 2000 clients	Intel Windows XP (or 2000) may be already selected.

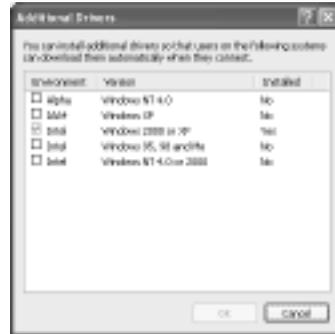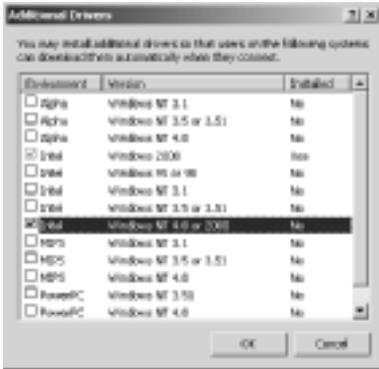

Note:

- You do not have to install the additional driver for Intel Windows 2000 (or XP) only, because that driver is preinstalled.
 - Do not select additional drivers other than Intel Windows 95 or 98 (and Me) and Intel Windows NT 4.0 or 2000. The other additional drivers are not available.
5. When a prompt appears, insert the CD-ROM that comes with your printer in your CD-ROM drive, then click OK.

6. According to the message, type the appropriate drive and folder names in which the printer driver for clients is located, then click OK.
Depending on the client's OS, the displayed message may differ.



The folder name differs depending on the OS being used.

Client's OS	Folder Name
Windows Me, 98, or 95	\\<Language>\WIN9X
Windows NT 4.0	\\<Language>\WINNT40

When installing drivers in Windows XP or 2000, "Digital Signature is not found." may appear. Click Yes (for Windows 2000) or Continue Anyway (for Windows XP) and continue installing.

7. When installing in Windows XP or 2000, click Close. When installing in Windows NT 4.0, the property window closes automatically.

Note:

Confirm the following items when sharing the printer.

- ❑ *Be sure to set EPSON Status Monitor 3 so that the shared printer can be monitored on the printer server. See "Setting Monitoring Preferences" on page 100.*

- ❑ *Set the security for the shared printer (access right for clients). Clients can not use the shared printer without right. For details, see Windows help.*

You need to set the client computers so that they can use the printer on a network. See the following pages for details:

- ❑ *“With Windows Me, 98, or 95” on page 169*
- ❑ *“With Windows XP or 2000” on page 170*
- ❑ *“With Windows NT 4.0” on page 174*

Setting up a clients

This section describes how to install the printer driver by accessing the shared printer on a network.

Note:

- ❑ *To share the printer on a Windows network, you need to set the printer server. For details, see “Setting up your printer as a shared printer” on page 160 (Windows Me, 98, or 95) or “Using an additional driver” on page 162 (Windows XP, 2000, or NT 4.0).*
- ❑ *This section describes how to access the shared printer on a standard network system using the server (Microsoft workgroup). If you cannot access the shared printer due to the network system, ask the administrator of the network for assistance.*
- ❑ *This section describes how to install the printer driver by accessing the shared printer from the **Printers** folder. You can also access the shared printer from Network Neighborhood or My Network on the Windows desktop.*
- ❑ *You cannot use the additional driver on the server system OS.*

- ❑ When you want to use EPSON Status Monitor 3 at clients, you have to install both of the printer driver and EPSON Status Monitor 3 in each client from the CD-ROM.

With Windows Me, 98, or 95

Follow these steps to set Windows Me, 98, or 95 clients.

1. Click Start, point to Settings, and click Printers.
2. Double-click the Add Printer icon, then click Next.
3. Select Network printer, then click Next.
4. Click Browse, and the Browse for Printer dialog box appears.

Note:

You can also type “\\(the name of the computer that is locally connected to the shared printer)\(the shared printer’s name)” in the network path or queue name.

5. Click the computer or server that is connected to the shared printer, and the name of the shared printer. Then click OK.



Note:

The name of the shared printer may be changed by the computer or server that is connected to the shared printer. To make sure of the name of the shared printer, ask the administrator of the network.

6. Click Next.

Note:

- If the printer driver is installed in the client beforehand, you need to select the new printer driver or the current printer driver. When the prompt to select the printer driver appears, select the printer driver according to the message.*
- If the printer server's OS is Windows Me, 98, or 95 or the additional driver for Windows Me, 98, or 95 is installed in the Windows XP, 2000, or NT 4.0 printer server, go to the next step.*
- If the additional driver for Windows Me, 98, or 95 is not installed in the Windows XP, 2000, or NT 4.0 printer server, go to "Installing the printer driver from the CD-ROM" on page 176.*

7. Make sure of the name of the shared printer, and select whether to use the printer as the default printer or not. Click Next, and then follow the on-screen instructions.

Note:

You can change the shared printer's name so that it appears only on the client computer.

With Windows XP or 2000

Follow these steps to set Windows XP or 2000 clients.

You can install the printer driver of the shared printer, if you have Power Users or more powerful access rights even if you are not the Administrator.


If the printer server's OS is Windows NT 4.0, confirm the following items.

- ❑ In a Windows NT 4.0 printer server, the additional driver for Windows XP or 2000 clients is the "Windows NT 4.0 x86" driver which is installed beforehand as the printer driver for Windows NT 4.0. When installing the printer driver in the Windows XP or 2000 clients from Windows NT 4.0 printer server, the driver for Windows NT 4.0 is installed.
- ❑ You can not install the printer driver for Windows XP or 2000 as the additional driver in a Windows NT 4.0 printer server. To install the printer driver for Windows XP or 2000 in Windows XP or 2000 clients, the administrator installs the local printer driver in the clients from the CD-ROM that comes with the printer, then performs the following procedure.
 1. For Windows 2000 clients, click **Start**, point to **Settings**, and click **Printers**.
For Windows XP clients, click **Start**, point to **Printers and Faxes**. For Windows XP Home edition users, point to **Control panel** first, then click **Printers and Faxes**.
 2. For Windows 2000, double-click the **Add Printer** icon, then click **Next**.

For Windows XP, click **Add a printer** in the **Printer Tasks** menu.




3. Select Network printer (for Windows 2000) or A network printer, or a printer attached to another computer (for Windows XP), then click Next.
4. For Windows 2000, type the name of the shared printer, then click Next.

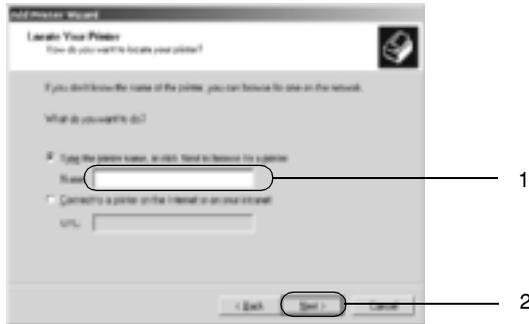

Note:

- ❑ You can also type “\\(the name of the computer that is locally connected to the shared printer)\(the shared printer’s name)” in network path or queue name.
- ❑ You do not necessarily need to type the name of the shared printer.

For Windows XP, select the **Browse for a printer** button.

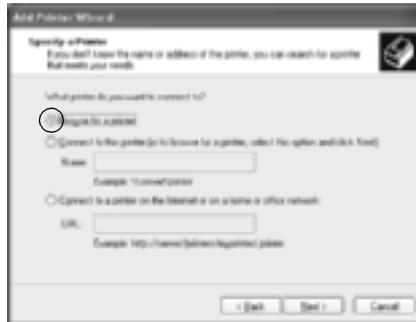


5. Click the icon of the computer or server that is connected to the shared printer, and the name of the shared printer. Then click **Next**.



Note:

- ❑ *The name of the shared printer may be changed by the computer or server that is connected to the shared printer. To make sure of the name of the shared printer, ask the administrator of the network.*

- ❑ *If the printer driver is installed in the client beforehand, you need to select either the new printer driver or the current printer driver. When the prompt to select the printer driver appears, select the printer driver according to the message. If the local printer driver for Windows XP or 2000 is installed beforehand, you can select the printer driver for Windows XP or 2000 as the current printer driver instead of the alternative driver in the Windows NT 4.0 server.*
 - ❑ *If the additional driver for Windows XP or 2000 (NT 4.0) is installed in the Windows XP, 2000, or NT 4.0 printer server, go to the next step.*
 - ❑ *If the additional driver is not installed in the Windows NT 4.0 printer server or the printer server's OS is Windows Me, 98, or 95, go to "Installing the printer driver from the CD-ROM" on page 176.*
6. For Windows 2000, select whether to use the printer as the default printer or not, then click Next.
 7. Make sure of the settings, then click Finish.

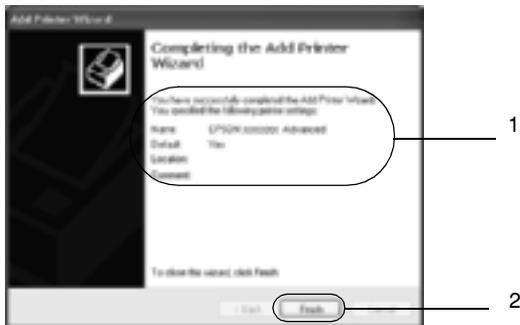


With Windows NT 4.0

Follow these steps to set Windows NT 4.0 clients.

You can install the printer driver of the shared printer, if you have Power Users or more powerful access rights even if you are not the Administrator.

1. Click Start, point to Settings, and click Printers.
2. Double-click the Add Printer icon.
3. Select Network printer server, then click Next.
4. Click the icon of the computer or server that is connected to the shared printer, and the name of the shared printer. Then click OK.

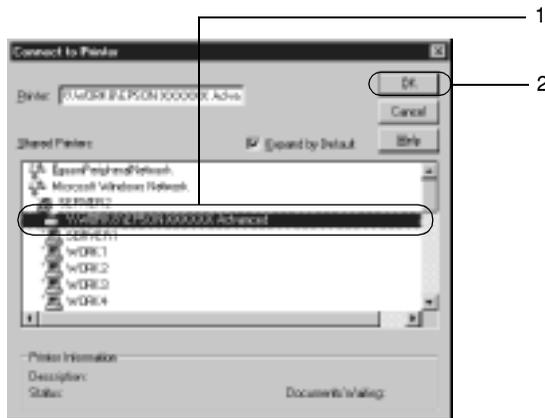

Note:

- ❑ You can also type "\\(the name of the computer that is locally connected to the shared printer)\(the shared printer's name)" in network path or queue name.
- ❑ The name of the shared printer may be changed by the computer or server that is connected to the shared printer. To make sure of the name of the shared printer, ask the administrator of the network.

- ❑ *If the printer driver is installed in the client beforehand, you need to select the new printer driver or the current printer driver. When the prompt to select the printer driver appears, select the printer driver according to the message.*
 - ❑ *If the additional driver for Windows NT 4.0 is installed in the Windows XP or 2000 printer server, go to the next step.*
 - ❑ *If the additional driver for Windows NT 4.0 is not installed in the Windows XP or 2000 printer server or the printer server's OS is Windows Me, 98, or 95, go to "Installing the printer driver from the CD-ROM" on page 176.*
5. Select whether to use the printer as the default printer or not, then click Next.
 6. Click Finish.

Installing the printer driver from the CD-ROM

This section describes how to install the printer driver in the clients when setting the network system as follows:


- ❑ The additional drivers are not installed in the Windows XP, 2000, or NT 4.0 printer server.
- ❑ The printer server's OS is the Windows Me, 98, or 95 and the client's OS is the Windows XP, 2000, or NT 4.0.

The on-screen displays on the following pages may differ depending on the version of Windows OS.

Note:

- ❑ *When installing in Windows XP, 2000, or NT 4.0 clients, you must access Windows XP, 2000, or NT 4.0 with the Administrator.*

- ❑ *If the additional drivers are installed or the computers of the server and clients use the same OS, you do not have to install the printer drivers from the CD-ROM.*
1. Access the shared printer and a prompt may appear. Click OK, and then follow the on-screen instructions to install the printer driver from the CD-ROM.
 2. Insert the CD-ROM, then type the appropriate drive and folder names in which the printer driver for clients is located, then click OK.

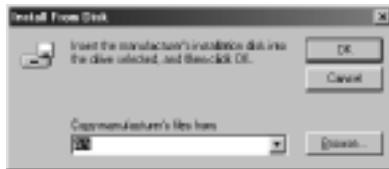

When installing drivers in Windows XP or 2000, “Digital Signature is not found.” may appear. Click Yes (for Windows 2000) or Continue Anyway (for Windows XP) and continue installing.

The folder name differs depending on the OS being used.

Client's OS	Folder Name
Windows Me, 98, or 95	\<Language>\WIN9X
Windows 2000 or XP	\<Language>\WIN2000
Windows NT 4.0	\<Language>\WINNT40

3. Select the name of the printer, then click OK. Then follow the on-screen instructions.

For Macintosh

Sharing the printer

This section describes how to share the printer on an AppleTalk network.

The computers on the network can share the printer that is directly connected to one of them. The computer that is directly connected to the printer is the printer server, and the other computers are the clients which need permission to share the printer with the printer server. The clients share the printer via the printer server.

Note for Mac OS X users:

This function is available only with Mac OS X 10.2 or later. To share your printer on a network, use the Printer Sharing setting, which is a standard feature of the Mac OS X 10.2 or later.

Setting up your printer as a shared printer

Follow these steps to share a printer connected directly to your computer with other computers on an AppleTalk network.

Note:

This function is not available with Mac OS X. However, you can share your printer by installing an interface card with a FireWire port to the Type B Interface card slot.

1. Turn on the printer.
2. Select Chooser from the Apple menu and click the AL-C4100 Advanced icon. And select USB port in the "Select a printer port" box on the right. Then click Setup. The Printer Setup dialog box appears.

Note:

Make sure On is selected under Background Printing.

3. Under Printer Sharing Set Up, click Printer Sharing Setup.



4. The Printer Sharing dialog box appears. Select the Share this Printer check box, then type the printer name and password information as needed.



5. Click OK to accept the settings.
6. Close Chooser.

Accessing the shared printer

Follow these steps to access your printer from another computer on the network.

Note:

This function is not available with Mac OS X.

1. Turn on your printer.
2. On each computer from which you want to access the printer, select Chooser from the Apple menu. Then click the AL-C4100 Advanced (AT) icon and select the name of the shared printer in the “Select a printer port” box on the right. You can only select from the printers connected to your current AppleTalk zone.


Note:

Make sure On is selected under Background Printing.

3. Click Setup, enter the password for the printer, then click OK. The Printer Setup dialog box appears. Under Printer Sharing Set Up, click Shared Printer Information.



4. The following type of message appears if the client has fonts that are unavailable on the printer server.

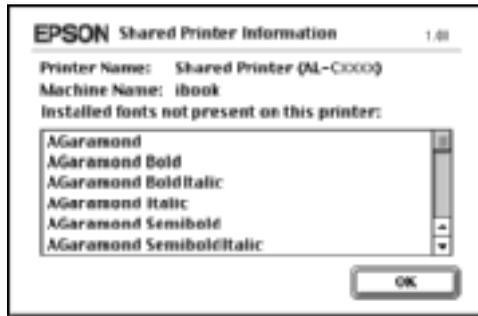

5. Click OK to close the message.
6. Close Chooser.

For Mac OS X

Use the Printer Sharing setting, which is a standard feature of Mac OS X 10.2 or later.

This feature is not available with Mac OS X 10.1.

See your operating system's documentation for details.

Installing Options

500-Sheet/1000-Sheet Paper Cassette Unit

The following table summarizes the paper types and sizes that you can use with the optional paper cassette unit.

Paper Type	Paper Size	Capacity
Plain paper	A4, A5, B5 Letter (LT), Legal (LGL), Government Legal (GLG) Executive (EXE),	Up to 500 sheets in each cassette (Total thickness: less than 56 mm for one cassette) (Weight: 60 to 105 g/m , 16 to 28 lb)
EPSON Color Laser Paper	A4, Letter (LT)	Up to 500 sheets in each cassette

Note:


Load paper with the printable surface facing up.

Handling precautions

Always pay attention to the following handling precautions before installing the option.

- ❑ The optional paper cassette unit weighs approximately 18.5 kg (8.4 lb); always lift it with two or more people.
- ❑ When installing this option on the printer, make sure to lock the two casters at the front of the unit.

- ❑ The printer weighs about 36.0 kg (79 lb). One person should never attempt to lift or carry it alone. Two people should carry the printer, lifting it from the positions shown below.

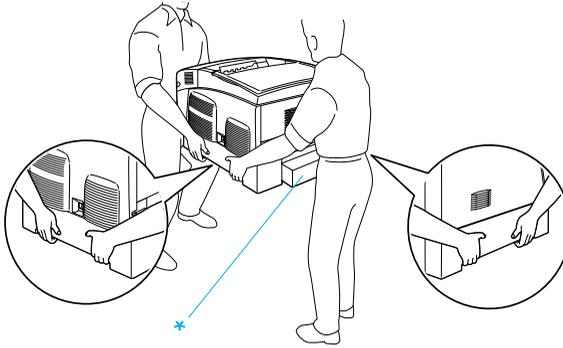

* Do not lift the printer by these areas.




Warning:

If you lift the printer incorrectly, you could drop it and cause injury.

Installing the optional paper cassette unit

Follow these steps to install the optional paper cassette unit.

1. Turn the printer off and unplug the power cord and interface cable.

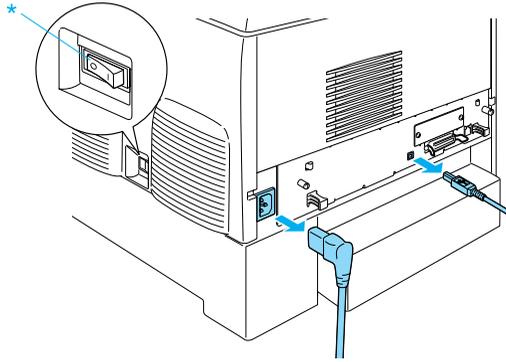

Caution:


Make sure to unplug the power cord from the printer to prevent getting an electrical shock.

2. Carefully remove the optional paper cassette unit from its carton and place it on the floor.


Note:

- Make sure you have the four screws packed with the optional paper cassette unit.*
- Remove the protective materials from the unit.*
- Keep all protective materials in case you want to ship the optional paper cassette unit in the future.*

3. Remove the protective materials inside of the cassette trays.

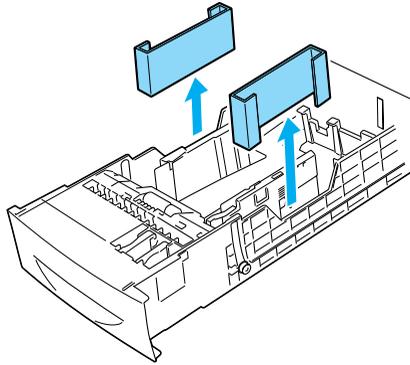

4. For 1000-Sheet Paper Cassette Unit users, lock the two casters at the front of the unit.

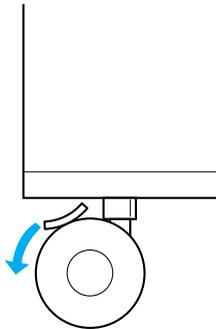

Warning:


Be sure to lock both casters before installing the unit on the printer. Otherwise, the unit may move and cause an accident.

5. Carefully, grasp the printer at the positions indicated below and lift it carefully with two or more people.




Warning:

Two people should lift the printer by the correct positions as shown below.

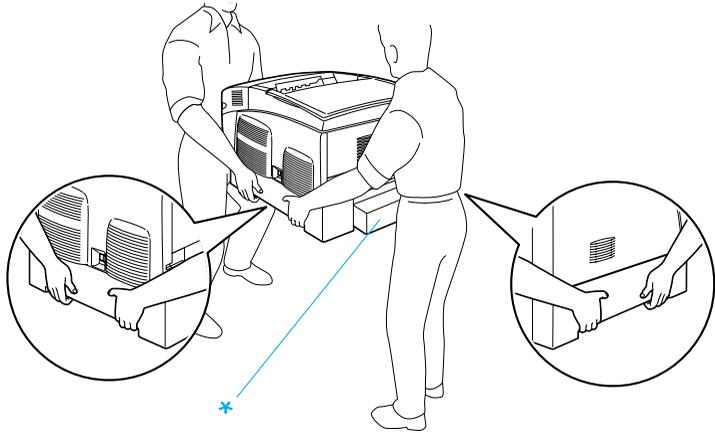


* Do not lift the printer by these areas.


6. Align the corners of the printer and the unit, then lower the printer gently onto the unit so that the five pins on top of the unit fit into the holes on the bottom of the printer.

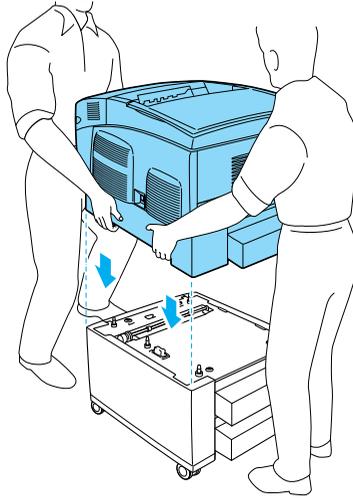


7. Remove the standard lower cassette from the printer.

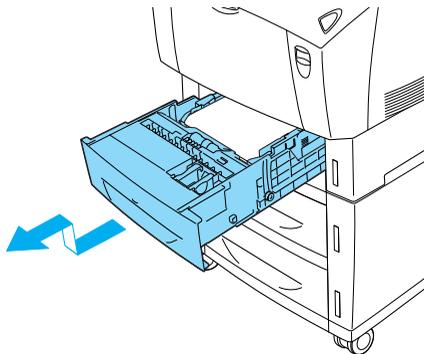

8. Fasten the front of the optional paper cassette unit to the printer with two of the provided screws.

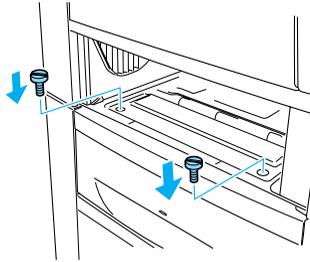

9. Remove the cover on the back of the standard lower cassette, and secure the back of the unit to the printer with the remaining two screws. Then reattach the cover.

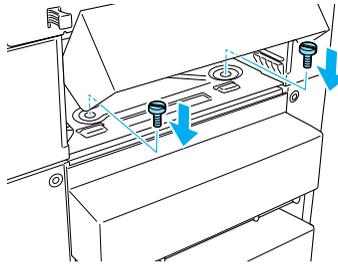

10. Reinsert the standard lower cassette into the printer.
11. Reconnect all interface cables and the power cord.
12. Plug the printer's power cord into an electrical outlet.
13. Turn on the printer.

To confirm that the option is installed correctly, print a Status Sheet. See "Printing a Status Sheet" on page 267.


Note:

*If you are using Windows, and EPSON Status Monitor 3 is not installed, you have to make settings manually in the printer driver. Click the **Update the Printer Option Information Manually** button on the **Optional Settings** menu, then click **Settings**. Then select **500-Sheet/1000-Sheet Paper Cassette Unit** from the **Optional Paper Sources** list on the **Optional Settings** dialog box and click **OK**.*

Removing the optional paper cassette unit

Follow these steps to remove the optional paper cassette unit.


1. Turn the printer off and unplug the power cord.
2. Remove all interface cables from the interface connectors.
3. For 1000-Sheet Paper Cassette Unit users, lock the two casters at the bottom of the unit.

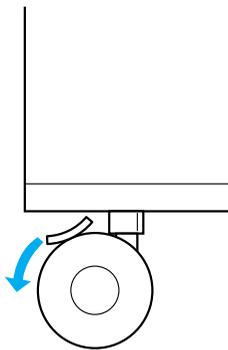


Warning:

Be sure to lock both casters before removing the unit from the printer. Otherwise, the unit may move and cause an accident.

4. Remove the standard lower cassette from the printer.

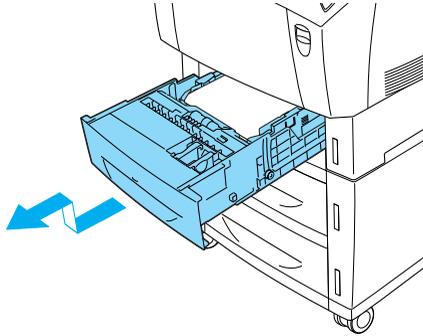


5. Remove the two screws securing the front of the unit to the printer.

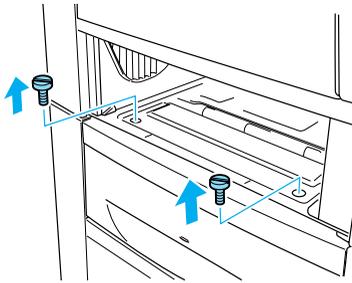

Warning:


Removing other screws and covers will expose high voltage areas.

6. Remove the cover on the back of the standard lower cassette, and remove the two screws securing the back of the unit. Then reattach the cover.

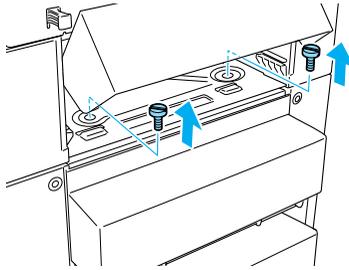


Warning:
Removing other screws and covers will expose high voltage areas.

7. Insert the standard lower cassette into the printer.

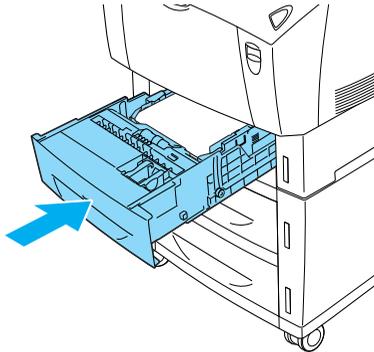

- Carefully lift up the printer with two or more people until the holes on the bottom of the printer are free from the five pins on the top of the unit, and place it on a flat stable surface.

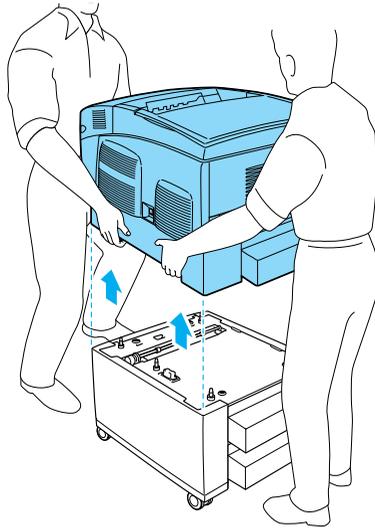

- Repack the optional paper cassette unit in its original carton.
- Reconnect all interface cables and the power cord.
- Plug the printer's power cord into an electrical outlet.
- Turn on the printer.

Hard Disk Drive

The optional Hard Disk Drive (C12C824061) allows you to expand the printer's input buffer when the Ethernet interface is used, and gives you additional memory for graphics, form data, and faster multi-page, multi-output sorting.

Installing the Hard Disk Drive

Follow these steps to install the Hard Disk Drive:



Caution:


Before you install the Hard Disk Drive, be sure to discharge any static electricity by touching a grounded piece of metal. Otherwise, you may damage static-sensitive components.



Warning:

Be careful when working inside the printer as some components are sharp and may cause injury.


1. Turn the printer off and unplug the power cord.
2. Remove all interface cables from the interface connectors.
3. Loosen the two screws on the back of the printer.

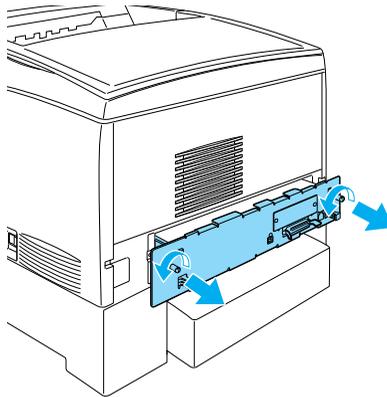


Warning:

Removing other screws and covers will expose high voltage areas.

4. Pull out the circuit board tray.

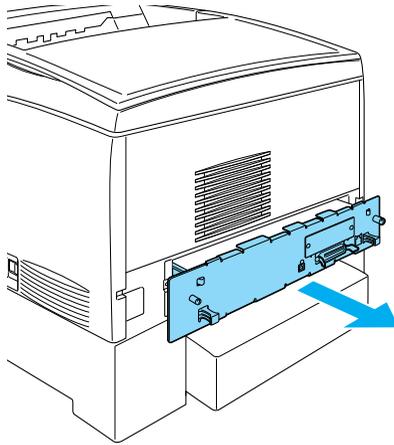


5. Connect the Hard Disk Drive cable to the circuit board.

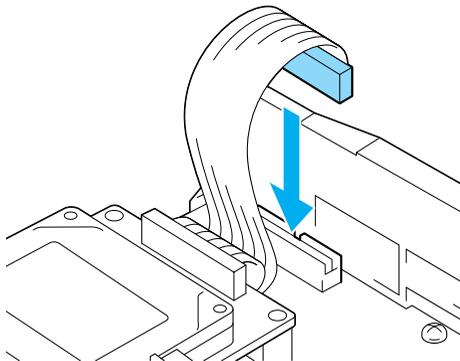

Note:

There are two cables included with the hard disk drive. Use the longer cable.

- Align the three screw holes on the Hard Disk Drive with the screw holes on the circuit board. Secure it by tightening the three screws provided.

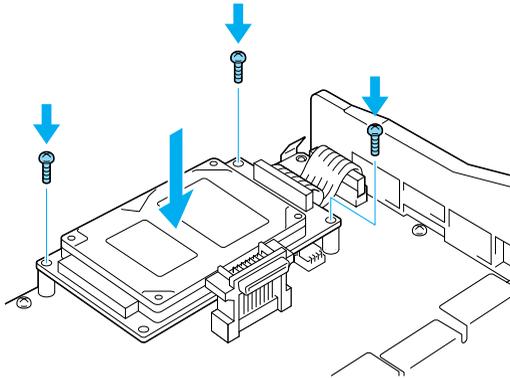

Note:


Be careful not to damage the cable when tightening the screws.




Caution:

*Do not remove any modules from the circuit board.
Otherwise, the printer will not work.*

7. Slide the circuit board tray into the printer.

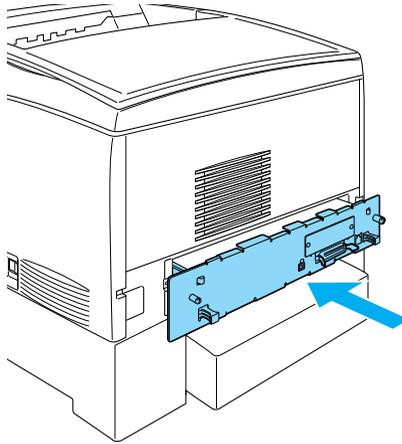

8. Fasten the circuit board tray with the two screws.

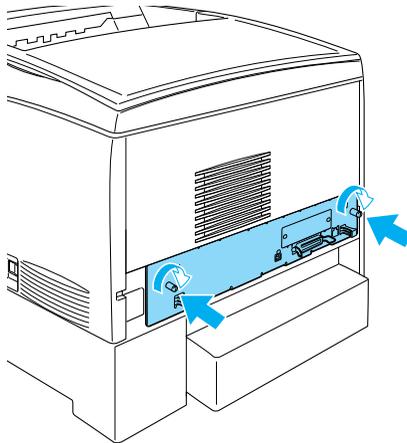

9. Reconnect all interface cables and the power cord.

10. Plug the printer's power cord into an electrical outlet.
11. Turn on the printer.

To confirm that the Hard Disk Drive is installed correctly, use the printer's control panel menus to print a status sheet. See "Printing a Status Sheet" on page 267 for instructions. If the drive is not listed on the status sheet, try reinstalling the drive. Make sure that the connector on the Hard Disk Drive is securely connected to the socket on the circuit board.

Note:

If you are using Windows, and EPSON Status Monitor 3 is not installed, you have to make settings manually in the printer driver. Click the Update the Printer Option Information Manually button on the Optional Settings menu, then click Settings. Then select the Optional HDD Unit check box on the Optional Settings dialog box and click OK.

Removing the Hard Disk Drive

Follow these steps to remove the Hard Disk Drive:



Caution:

Before you remove the Hard Disk Drive, be sure to discharge any static electricity by touching a grounded piece of metal. Otherwise, you may damage static-sensitive components.




Warning:

Be careful when working inside the printer as some components are sharp and may cause injury.

1. Turn the printer off and unplug the power cord.
2. Remove all interface cables from the interface connectors.

3. Loosen the two screws on the back of the printer.

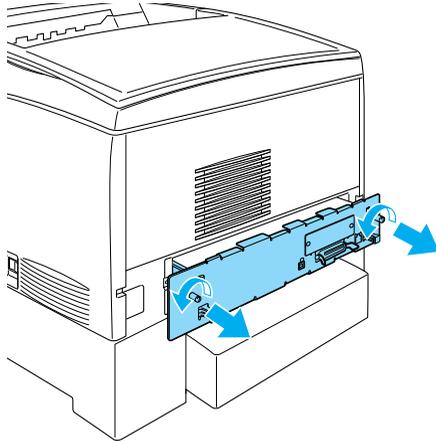

Warning:

Removing other screws and covers will expose high voltage areas.

4. Pull out the circuit board tray.
5. Loosen the three screws on the Hard Disk Drive, and pull out the connector from the circuit board.

Note:

Keep the three screws with Hard Disk Drive.

6. Slide the circuit board tray into the printer.
7. Fasten the circuit board tray with the two screws.
8. Reconnect all interface cables and the power cord.
9. Plug the printer's power cord into an electrical outlet.
10. Turn on the printer.

Memory Module

By installing a Dual In-line Memory Module (DIMM), you can increase printer memory up to 1024 MB. You may want to add additional memory if you are having difficulty printing complex graphics.

This printer has two memory slots, but one slot has a 64 MB DIMM already installed in it at the time of manufacture. To increase printer memory more than 578 MB, you have to remove the original 64 MB DIMM first and then install two optional DIMMs.

Note:

The maximum expandable memory is 1024 MB.

Follow these steps to install an optional memory module.



Warning:


Be careful when working inside the printer as some components are sharp and may cause injury.




Caution:

Before you install a memory module, be sure to discharge any static electricity by touching a grounded piece of metal. Otherwise, you may damage static-sensitive components.

1. Turn the printer off and unplug the power cord and interface cable.

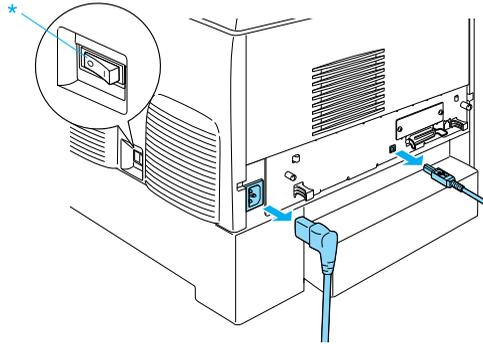


2. Loosen the two screws on the back of the printer.

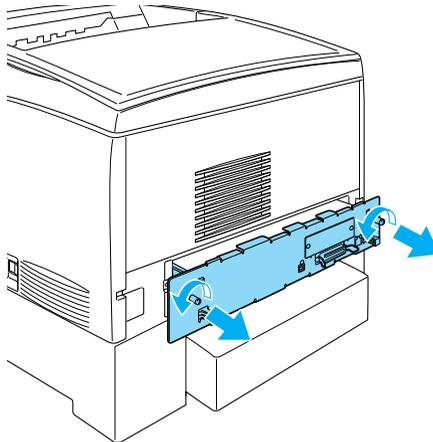


Warning:

Removing other screws and covers will expose high voltage areas.


3. Pull out the circuit board tray.

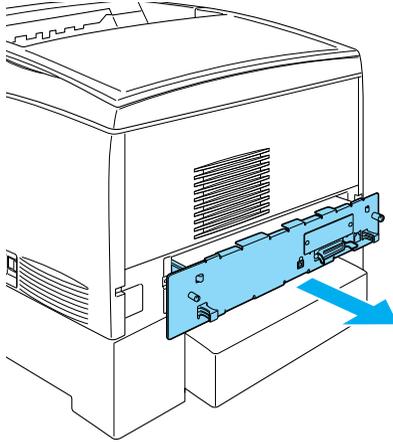

4. Identify the memory slot. Its position is shown below.

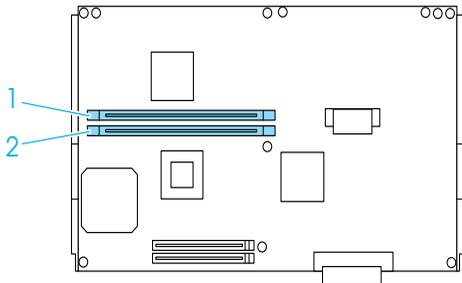


5. Hold the memory module above the memory slot and insert it into the slot until the clips come up to hold the memory module securely in place. Do not apply too much force.

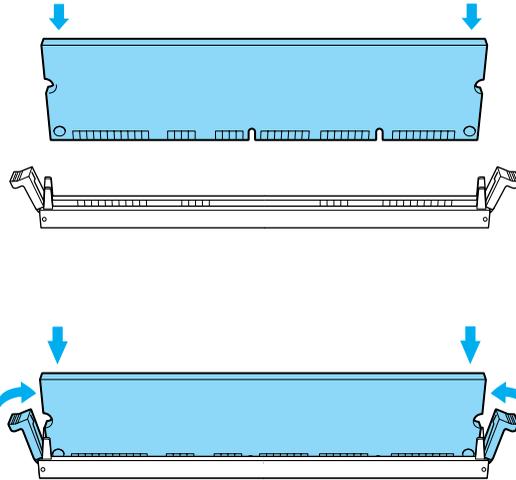


Caution:

- Do not force the memory into the slot.
- Be sure to insert the memory facing the correct way.
- Do not remove any modules from the circuit board. Otherwise, the printer will not work.
- Make sure that one module (more than 64 MB) is installed in the **S0** slot.

6. Slide the circuit board tray into the printer.

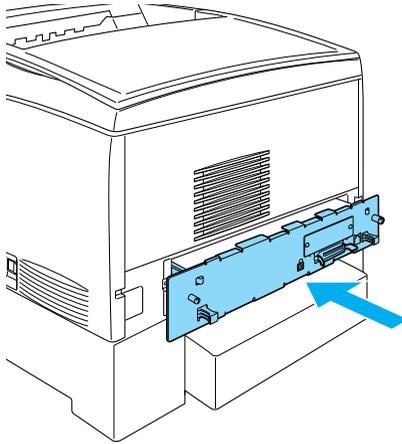

7. Fasten the circuit board tray with the two screws.

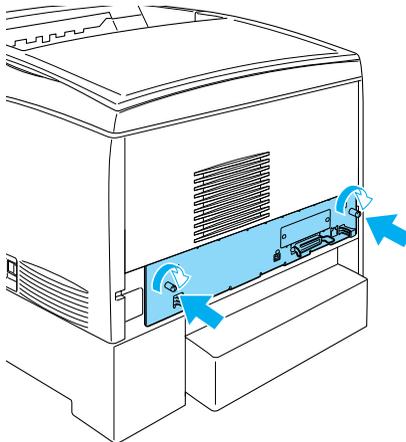

8. Reconnect all the interface cables and the power cord.

9. Plug the printer's power cord into an electrical outlet.
10. Turn on the printer.

To confirm that the memory module is installed correctly, print a status sheet. See "Printing a Status Sheet" on page 267 for instructions. If the total amount of memory listed does not include the size of the optional memory module, try reinstalling the module. Make sure that the module is securely seated into the memory slot on the circuit board.

Note:

*If you are using Windows, and EPSON Status Monitor 3 is not installed, you have to make settings manually in the printer driver. Click the **Update the Printer Option Information Manually** button on the **Optional Settings** menu, then click **Settings**. Then select the number of bytes of the memory you installed from the **Installed Memory** drop-down list on the **Optional Settings** dialog box and click **OK**.*

Removing a memory module

Follow these steps to remove a memory module:



Caution:


Before you remove a memory module, be sure to discharge any static electricity by touching a grounded piece of metal. Otherwise, you may damage static-sensitive components.




Warning:

Be careful when working inside the printer as some components are sharp and may cause injury.

1. Turn the printer off and unplug the power cord.

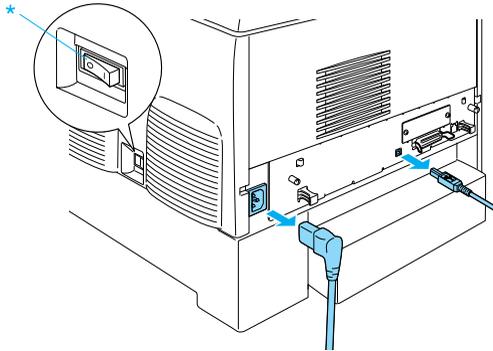


2. Remove all interface cables from the interface connectors.
3. Loosen the two screws on the back of the printer.

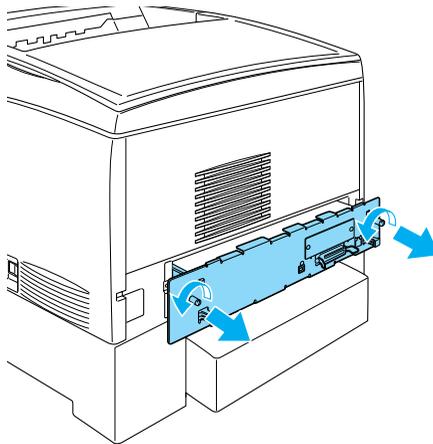


Warning:
Removing other screws and covers will expose high voltage areas.

4. Pull out the circuit board tray.

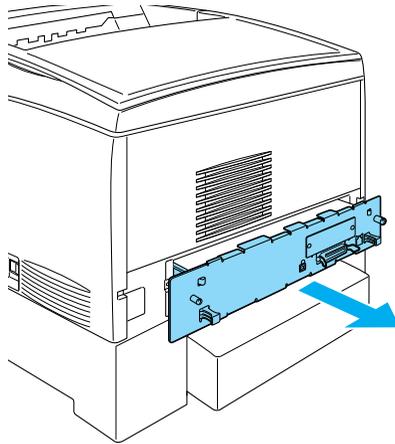

5. Identify the memory slot. Its position is shown below.

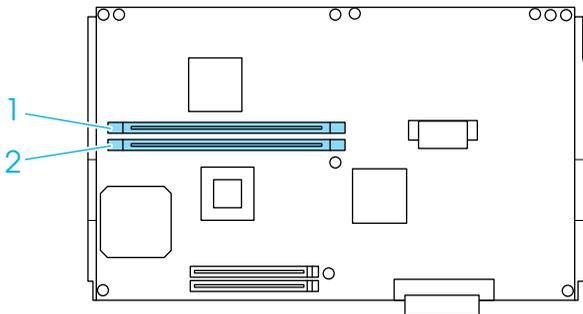


6. Grasp both sides of the memory module and pull the module out.



Caution:

- ❑ *Do not remove any other modules from the circuit board. Otherwise, the printer will not work.*

 - ❑ *Make sure that the more than 64 MB memory module is installed in the S0 slot. Otherwise, the printer will not work.*
7. Store the memory module in an anti-static packet such as the one it came packaged in.
 8. Slide the circuit board tray into the printer.
 9. Fasten the circuit board tray with the two screws.

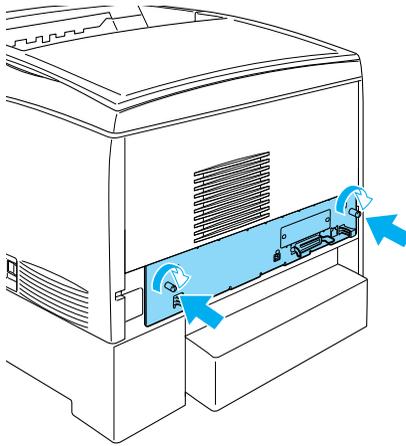

10. Reconnect all the interface cables and the power cord.
11. Plug the printer's power cord into an electrical outlet.
12. Turn on the printer.

Adobe PostScript 3 ROM Module

In some locations, the Adobe PostScript 3 Kit (C12C832571) ROM module is available as an option. This module allows your printer to print documents in the PostScript printing language.

Note:

The features provided by the Adobe PostScript 3 ROM Module cannot be used when the printer is connected to a Macintosh computer using an optional IEEE 1394 Type B Interface Card.

Installing the Adobe PostScript 3 ROM module

Follow these steps to install the Adobe PostScript 3 ROM module:



Caution:


Before you install the ROM module, be sure to discharge any static electricity by touching a grounded piece of metal. Otherwise, you may damage static-sensitive components.




Warning:

Be careful when working inside the printer as some components are sharp and may cause injury.

1. Turn the printer off and unplug the power cord.

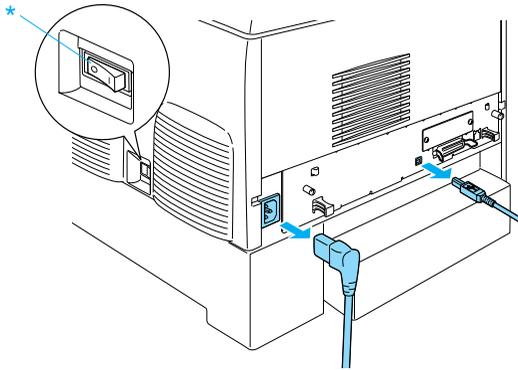


2. Remove all interface cables from the interface connectors.
3. Loosen the two screws on the back of the printer.

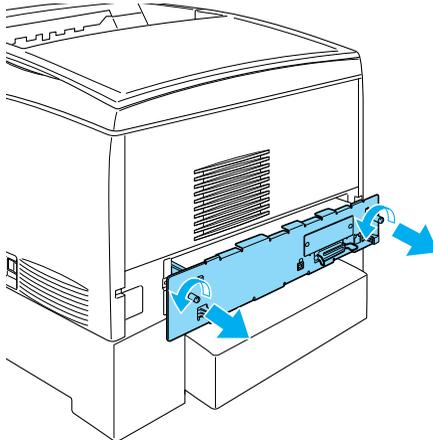



Warning:

Removing other screws and covers will expose high voltage areas.

4. Pull out the circuit board tray.
5. Identify the ROM slot A. Its position is shown below.

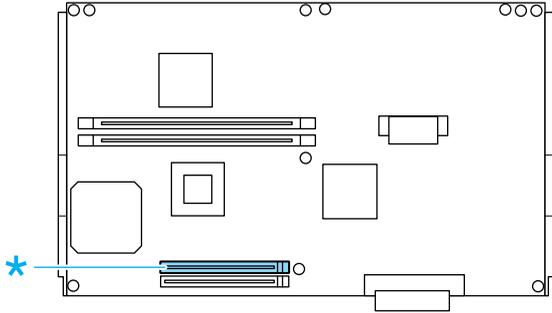

6. Remove the ROM module from its package.
7. Hold the ROM module above the slot and insert it into the slot A in the orientation shown below, until the clip comes up to hold the ROM module securely in place. Do not apply too much force.

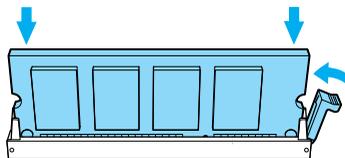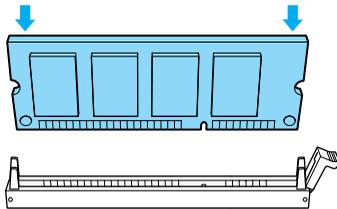




Caution:

- ❑ *Do not force the ROM into the slot.*
- ❑ *Be sure to insert the ROM facing the correct way.*
- ❑ *Do not remove any modules from the circuit board. Otherwise, the printer will not work.*

8. Slide the circuit board tray into the printer.
9. Fasten the circuit board tray with the two screws.

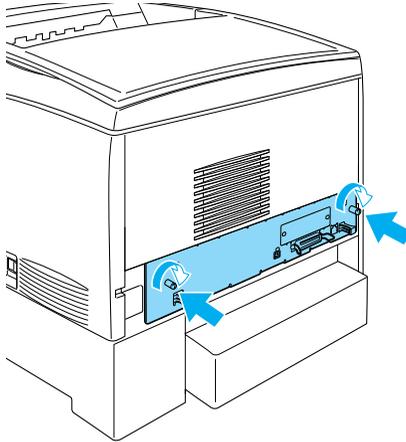

10. Reconnect all the interface cables and the power cord.
11. Plug the printer's power cord into an electrical outlet.
12. Turn on the printer.

13. To confirm that the Adobe PostScript 3 ROM module is installed correctly, print a status sheet. See “Printing a Status Sheet” on page 267 for instructions. If PS3 is not listed as an installed emulation on the status sheet, try reinstalling the module. Make sure that it is securely seated into the ROM slot on the circuit board.

Removing the Adobe PostScript 3 ROM module

Follow these steps to remove the Adobe PostScript 3 ROM module:



Caution:

Before you remove the ROM module, be sure to discharge any static electricity by touching a grounded piece of metal. Otherwise, you may damage static-sensitive components.




Warning:

Be careful when working inside the printer as some components are sharp and may cause injury.


1. Make sure the printer is off, then unplug the power cord.
2. Remove all interface cables from the interface connectors.

3. Loosen the two screws on the back of the printer.

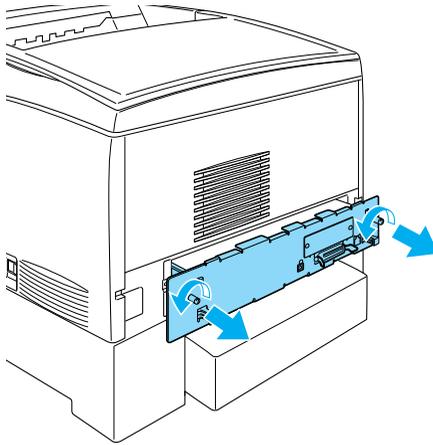


Warning:
Removing other screws and covers will expose high voltage areas.

4. Pull out the circuit board tray.

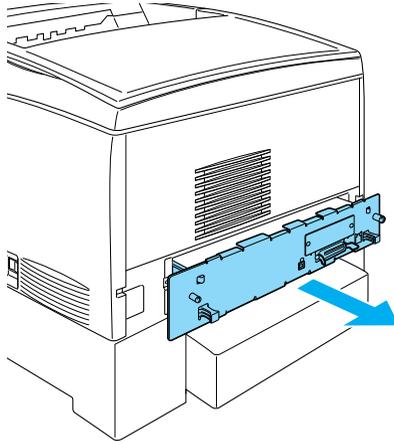

5. Identify the ROM slot A. Its position is shown below.

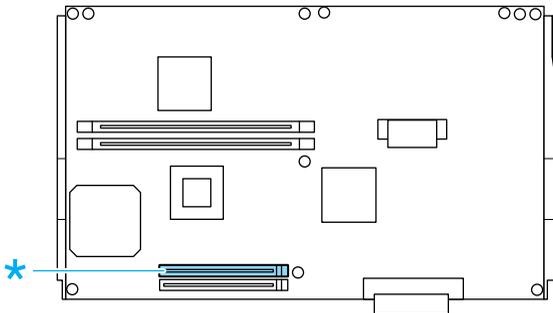


6. Push down on the tab on the right side of the ROM slot to raise the module out of the slot A.



Caution:

*Do not remove the ROM module from the ROM slot P.
Otherwise, the printer will not work.*

7. Remove the ROM module from the slot A. Store the ROM module in an anti-static packet such as the one it came packaged in.
8. Slide the circuit board tray into the printer.
9. Fasten the circuit board tray with the two screws.

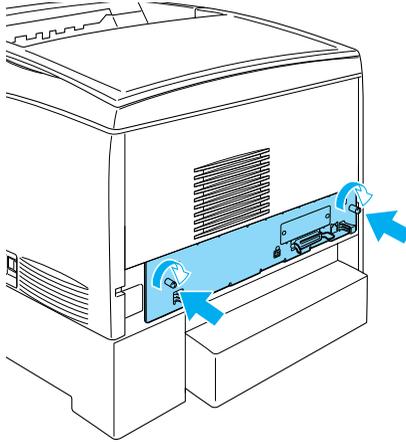

10. Reconnect all the interface cables and the power cord.
11. Plug the printer's power cord into an electrical outlet.
12. Turn on the printer.

Interface Cards

Your printer comes with a Type B interface slot. Various optional interface cards are available to expand your printer's interface options.

Follow these steps to install an optional interface card.




Caution:


Before you install the interface card, be sure to discharge any static electricity by touching a grounded piece of metal.

Otherwise, you may damage static-sensitive components.

1. Turn the printer off and unplug the power cord and interface cable.

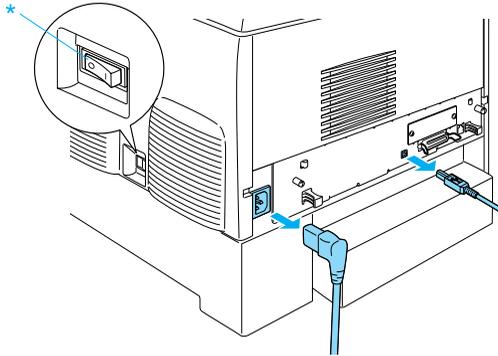

2. Remove the screws and the Type B interface card slot cover as shown below.

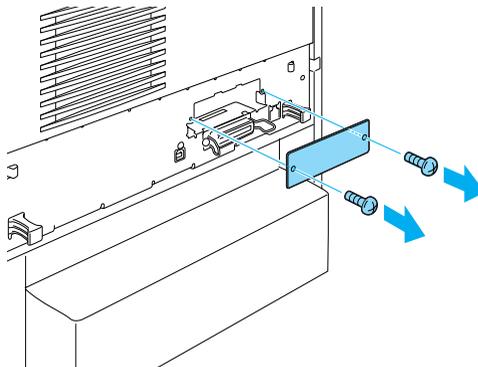




Warning:

Removing screws and covers that are not described in the following instructions will expose high voltage areas.

Note:

Keep the slot cover in a safe place. You will need to reattach it if you remove the interface card later.

3. Slide and push the interface card into the slot firmly, then fasten the screw as shown below.

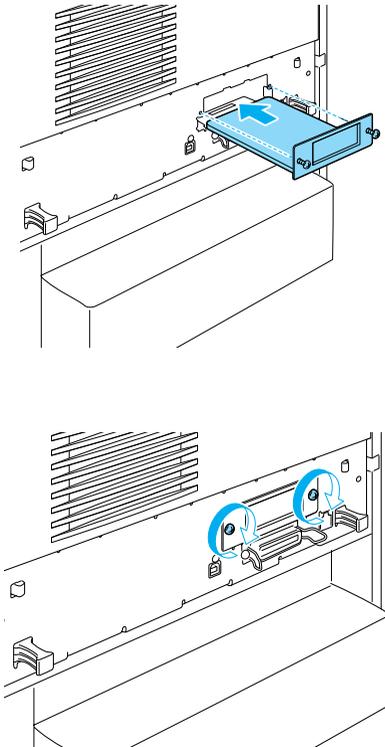

4. Reconnect the interface cable and power cord and turn the printer on.

To confirm that the option is installed correctly, print a status sheet. See “Printing a Status Sheet” on page 267.

Removing an interface card


Follow these steps to remove an interface card:



Caution:

Before you remove an interface card, be sure to discharge any static electricity by touching a grounded piece of metal. Otherwise, you may damage static-sensitive components.

1. Turn the printer off and unplug the power cord.
2. Remove the two screws securing the interface card to the back of the printer.

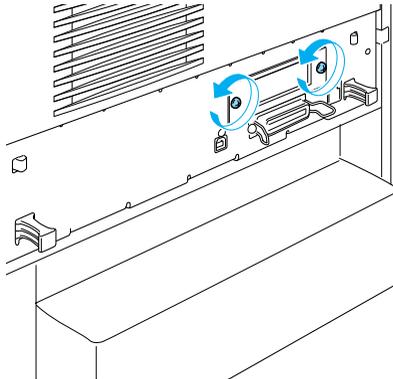

Warning:

Removing screws that are not described in the following instructions will expose high voltage areas.

3. Gently but firmly pull the interface card out of the socket.

4. Reinstall the interface slot cover (removed and stored when the interface card was installed) over the now empty slot. Use the two screws to secure it.
5. Keep the interface card in an anti-static packet such as the one it came packaged in.

Chapter 7

Replacing Consumable Products

Replacement Messages

When you see the following messages on the LCD panel or the window of EPSON Status Monitor 3, replace the appropriate consumable products. You can continue to print for a short time after a message appears, but EPSON recommends early replacement to maintain print quality and extend the life of your printer.

Note:

Do not replace the toner cartridge when the XXXX Toner Low message appears. Toner remaining in the toner cartridge may spill out if you remove the toner cartridge to replace it. Replace the toner cartridge when the Replace Toner xxxx message appears.

LCD Panel Message	Description
Worn Photoconductor	The photoconductor unit has reached the end of its service life.
Worn Fuser	The fuser unit has reached the end of its service life.
Worn Transfer Unit	The transfer unit is near the end of its service life.

Note:

To clear the warning, select Clear All Warnings from the control panel's Reset Menu.

If a consumable product reaches the end of its service life, the printer stops printing and displays the following messages on the LCD panel or the window of EPSON Status Monitor 3. When this happens, the printer cannot resume printing until you replace the depleted consumable products.

LCD Panel Message	Description
Replace Toner xxxx*	The indicated toner cartridges are empty.
Replace Photocondctr	Printing has stopped to avoid damage to the engine.
Replace Transfer Unit	The transfer unit has reached the end of its service life.

* The letters C, M, Y, and K appear in this position, indicating the color of the toner to be replaced. For example, the message *Y Toner Low* means that the amount of toner remaining in the yellow toner cartridge is low.

Note:

Messages appear for one consumable product at a time. After replacing a consumable product, check the LCD panel for replacement messages for other consumable products.

Toner Cartridge

Handling precautions

Always observe the following handling precautions when replacing imaging cartridges.

- ❑ Installing a genuine toner cartridge is recommended. Using a non-genuine toner cartridge may affect print quality. EPSON shall not be liable for any damages or problems arising from the use of consumable products not manufactured or approved by EPSON.

- ❑ When handling toner cartridges, always place them on a clean smooth surface.
- ❑ Do not install used toner cartridges into the printer.
- ❑ If you have moved a toner cartridge from a cool to a warm environment, wait for at least one hour before installing it to prevent damage from condensation.



Warning:


- ❑ *Do not touch the toner. Keep the toner away from your eyes. If toner gets on your skin or clothes, wash it off with soap and water immediately.*
- ❑ *Keep toner cartridges out of the reach of children.*
- ❑ *Do not dispose of used toner cartridges in fire, as they may explode and cause injury. Dispose of them according to local regulations.*
- ❑ *If toner is spilled, use a broom and dustpan or a damp cloth with soap and water to clean it up. Because the fine particles can cause a fire or explosion if they come into contact with a spark, do not use a vacuum cleaner.*

Replacing a toner cartridge


Follow these steps to replace a imaging cartridge.

1. Confirm the color of the toner cartridge that needs to be replaced by checking the LCD panel or EPSON Status Monitor 3.

2. Remove the top cover.

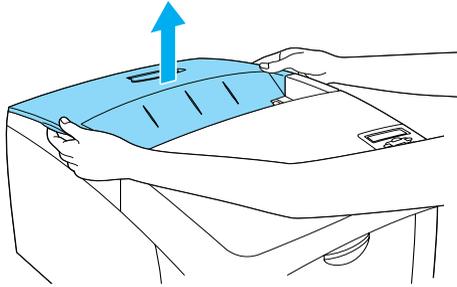


3. Turn the toner cartridge knobs to the unlocked position.

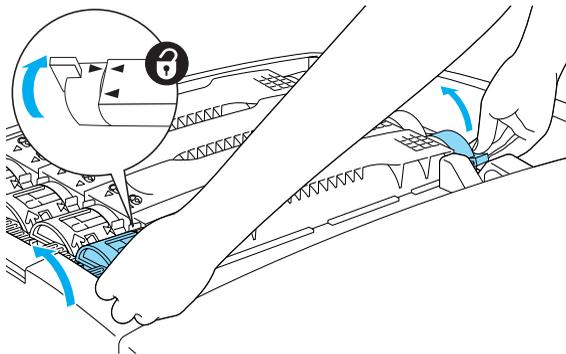

Note:
Hold the knobs with both hands.


4. Lift the toner cartridge out of the slot.

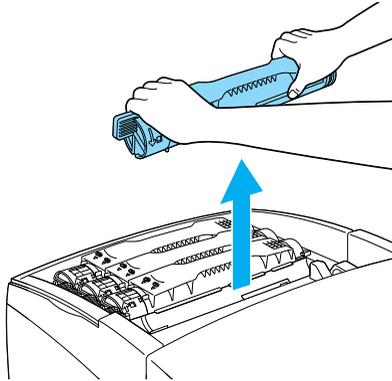

Note:

- ❑ *A small amount of the toner may adhere to the bottom of the cartridge. Be careful not to spill this toner or get it on your skin or clothes.*
- ❑ *Put the used cartridge on a flat surface with the toner spout facing up to avoid spilling the toner.*
- ❑ *Dispose of the used toner cartridge by putting it into its disposal bag.*


5. Take the new toner cartridge out of its package, and gently shake it from side to side and front to back to distribute the toner evenly.

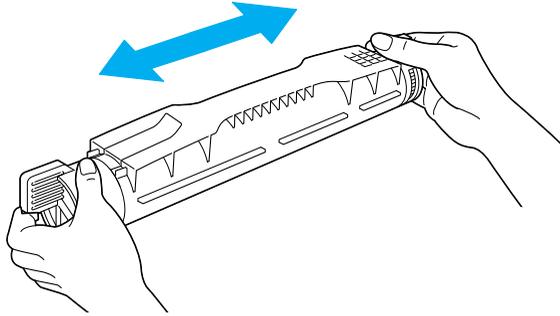


Note:

Do not remove the protective tape yet.

6. Hold the toner cartridge as shown below, and lower it into the slot.

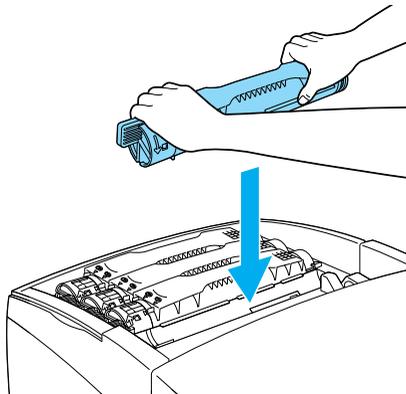

7. Turn the toner cartridge knobs to the locked position.

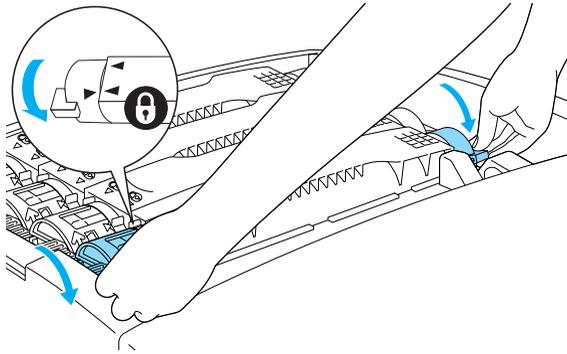

Note:


Hold the knobs with both hands and turn them until they click.




Caution:

Be sure to turn the knob all the way to the locked position. Otherwise, you may have toner problems or leakage.

8. Remove the protective tape, pulling straight up from the toner cartridge.

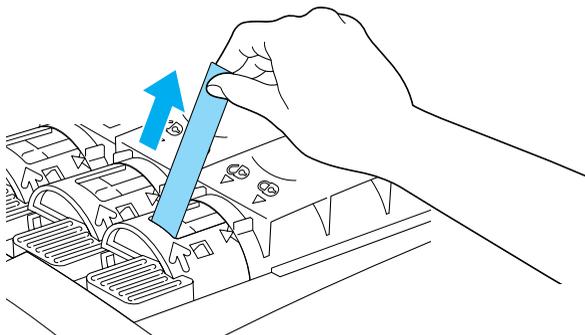

9. Replace the top cover.

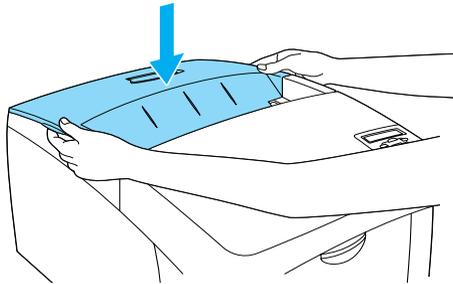

Photoconductor unit

Prepare a new photoconductor unit for replacement when you see a message informing you to do so.

Handling precautions

Note the following handling precautions before replacing the photoconductor unit:

- The photoconductor unit weighs 4.5 kg (9.9 lb). Be sure to hold it firmly by the handle when carrying it.
- When replacing the photoconductor unit, avoid exposing it to room light any longer than necessary.
- Be careful not to scratch the surface of the drum. Also, avoid touching the drum, since oil from your skin may permanently damage its surface and affect print quality.
- To get the best print quality, do not store the photoconductor unit in an area subject to direct sunlight, dust, salty air, or corrosive gases (such as ammonia). Avoid locations subject to extreme or rapid changes in temperature or humidity.
- Do not tilt the photoconductor unit.



Warning:


- ❑ *Do not dispose of the used photoconductor unit in fire, as it may explode and cause injury. Dispose of it according to local regulations.*

- ❑ *Keep the photoconductor unit out of the reach of children.*


Replacing the photoconductor unit

Follow these steps to replace the photoconductor unit.


1. Turn off the printer.
2. Press the latch on cover A and open the cover.

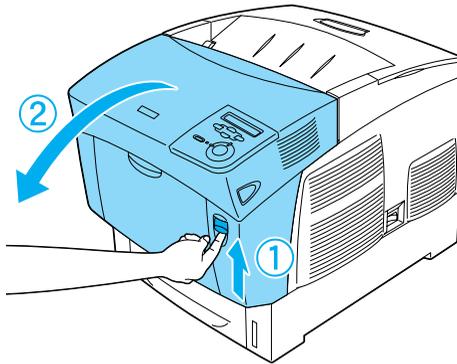

3. Raise cover D.

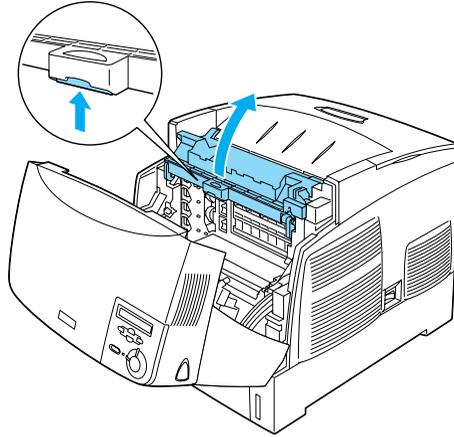


4. Hold the photoconductor unit by the handle, and slowly lift it straight out of the printer.

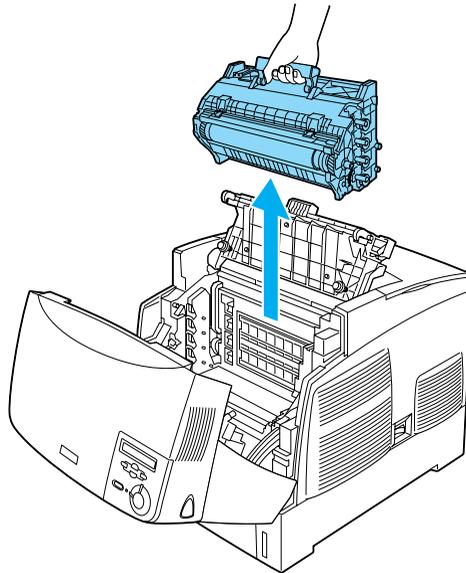


5. Take the new photoconductor unit and tear away the top portion of the bag along the dotted line to expose the handle. Then, grab the handle and remove the styrofoam insert and tear open the bag along the dotted line.

Note:

Always keep the cartridge positioned as shown in the illustration.

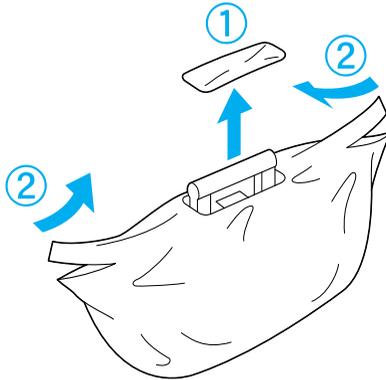


6. Unwrap the protective sheet and material while holding the handle as shown below.

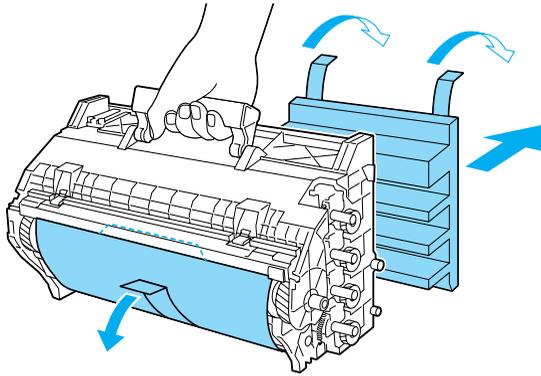


Caution:

- ❑ Be careful not to touch or scratch the surface of the drum.
- ❑ Avoid touching the drum, since oil from your skin may permanently damage its surface and affect print quality.


7. Remove the protective tapes.

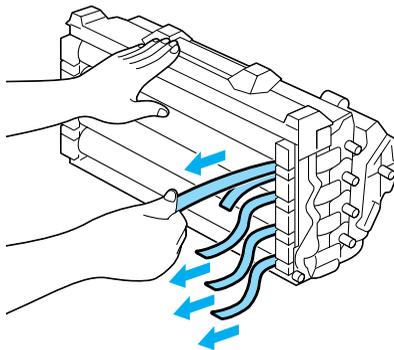

8. Holding the handle firmly, lower the photoconductor unit into the printer, making sure the posts on the sides of the unit slide into the slots.

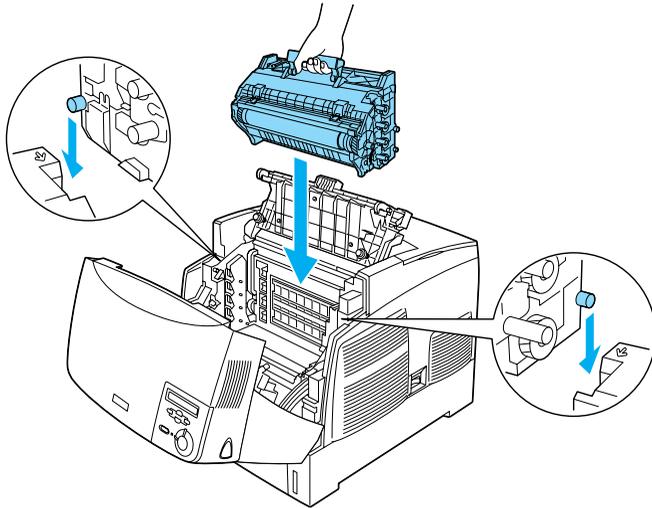

9. Close covers D and A.

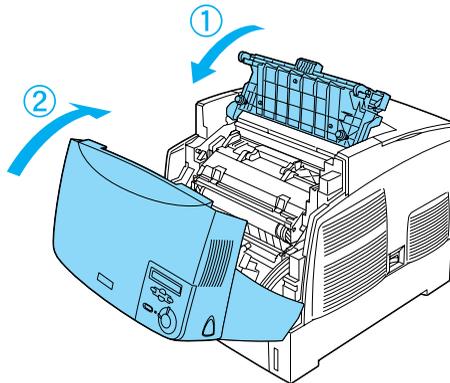

Fuser unit

Prepare a new fuser unit for replacement when you get a message informing you to do so.

Handling precautions

Note the following handling precautions before replacing the fuser unit:

- Do not touch the surface of the fuser unit. Doing so may impair print quality.



Warning:


- The fuser unit can be very hot if the printer has been in use. Turn the printer off and wait for 30 minutes until the temperature has subsided before replacing the fuser unit.*
- Do not dispose of the used fuser unit in fire, as it may explode and cause injury. Dispose of it according to local regulations.*
- Keep the fuser unit out of the reach of children.*

Replacing the fuser unit


Follow these steps to replace the fuser unit.

1. Turn off the printer, and wait for 30 minutes until the temperature has subsided.


2. Press the latch on cover B and open the cover.

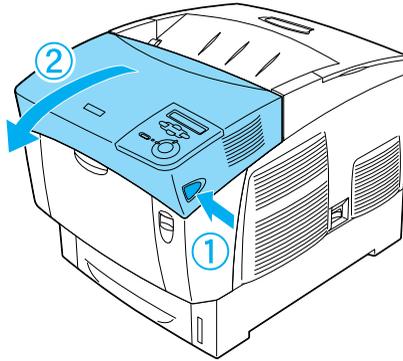


3. Push the lever down and raise cover D.

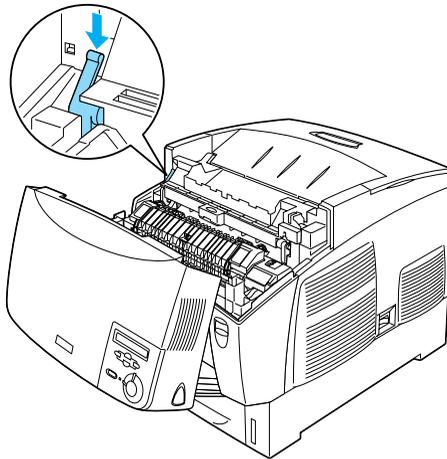

4. Unlock the locks on both sides of the fuser unit.

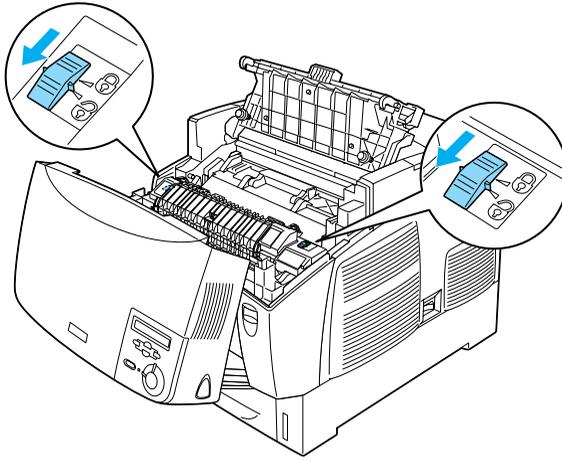


5. Lift the fuser unit out of the printer as shown below.

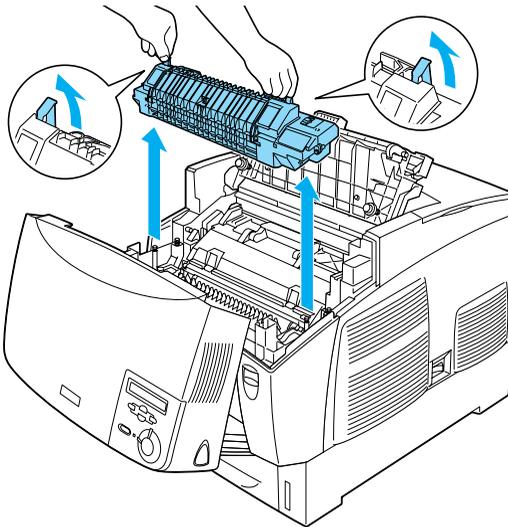


6. Take the new fuser unit out of its package.

7. Hold the new fuser unit by the handles and lower it into the printer making sure that the guide posts slide into the holes on the bottom of the unit.

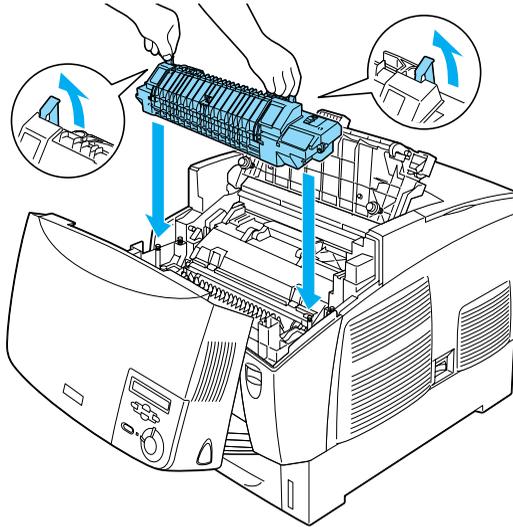


8. Lock the fuser unit.

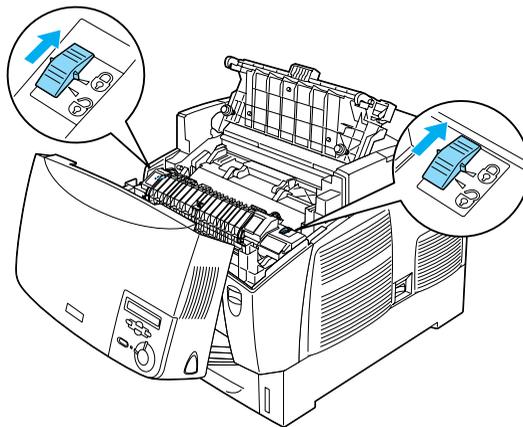

Note:

Make sure that the locks are completely in the locked position.

9. Close covers D and B.

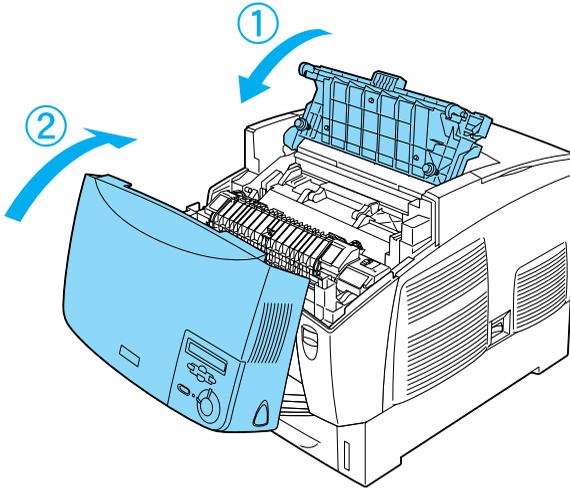

Transfer unit

Prepare a new transfer unit for replacement when you get a message informing you to do so.

Handling precautions

Note the following handling precautions before replacing the transfer unit:

- Do not touch the surface of the transfer unit. Doing so may impair print quality.



Warning:


- ❑ Do not dispose of the used transfer unit in fire, as it may explode and cause injury. Dispose of it according to local regulations.

- ❑ Keep the fuser unit out of the reach of children.


Replacing the transfer unit

Follow these steps to replace the transfer unit.


1. Press the latch on cover A and open the cover A.

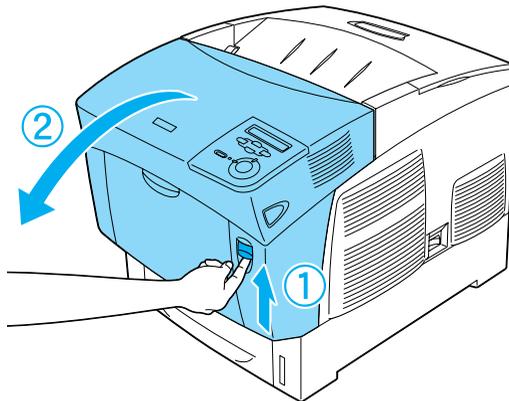

2. Grasp the two orange tabs and pull the unit forward and down, then lift the unit out of the printer.

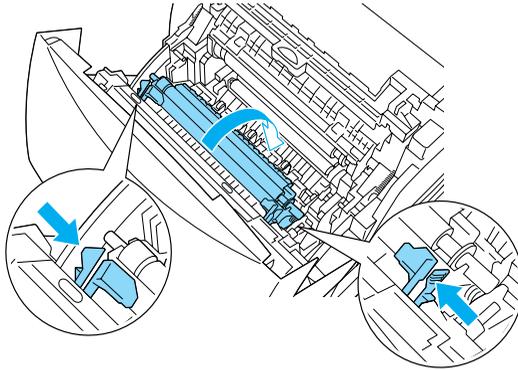


3. Pull the transfer unit out of the printer.

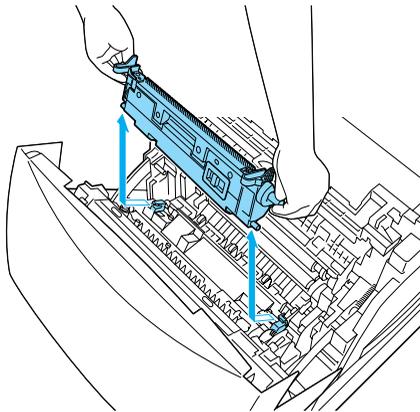


4. Take the new transfer unit from its package.

5. Hold the new transfer unit by the orange tabs and lower it into the printer, making sure that it fits into the guides. Push the transfer unit in and up until it clicks into place.

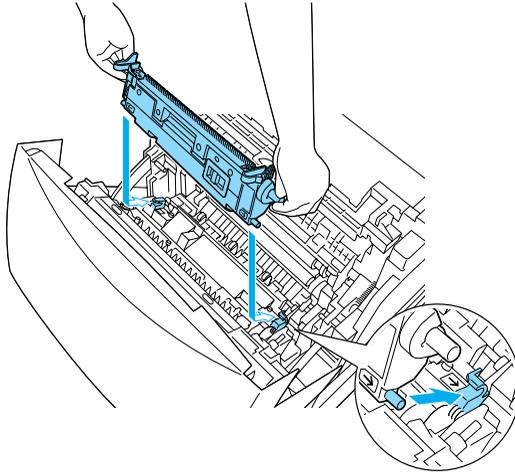


6. Close cover A.

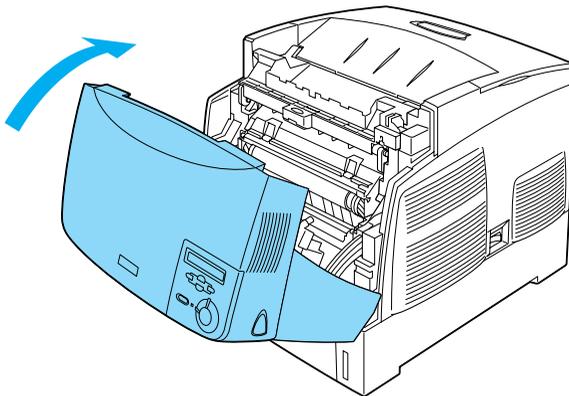

Cleaning the Printer

The printer needs only minimal cleaning. If the printer's outer case is dirty or dusty, turn off the printer and clean it with a soft, clean cloth moistened with a mild detergent.

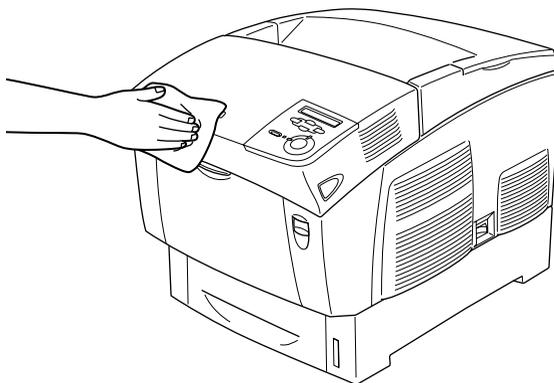

Caution:

Never use alcohol or paint thinner to clean the printer cover; these chemicals can damage the components and the case. Be careful not to get water onto the printer mechanism or any electrical components.

Transporting the Printer

For long distances

If you need to transport your printer for long distances, carefully repack it using the original box and packing materials.

Follow these steps to repack your printer.

1. Turn off the printer.

2. Unplug the power cord from the electrical outlet.
3. Remove the photoconductor unit. For information on removing the photoconductor unit, see “Photoconductor unit” on page 228. Then pack them in their original boxes with the protective materials they came in.
4. Remove all installed options. For information on removing options, see the section under Installing Options.
5. Attach the protective materials onto the printer, then repack the printer in its original box.

After unpacking and setting your printer at the new location, you need to check the color registration and adjust the color alignment if necessary. See “Checking color registration” on page 248 for instructions.

For short distances

Always pay attention to the following handling precautions when you need to move the printer for a short distance:

- If you are moving the printer on its own, two people should lift and carry the printer.


If you are moving the printer together with the optional paper cassette unit, you can move it by using the casters on the unit. See “Moving the printer together with an optional paper cassette unit installed” on page 244.

Moving the printer

Follow these steps to move the printer for a short distance.

1. Turn off the printer and remove the following items:
 - Power cord

- Interface cable
 - Paper
 - Photoconductor unit
2. Be sure to lift the printer by the correct positions as shown below.

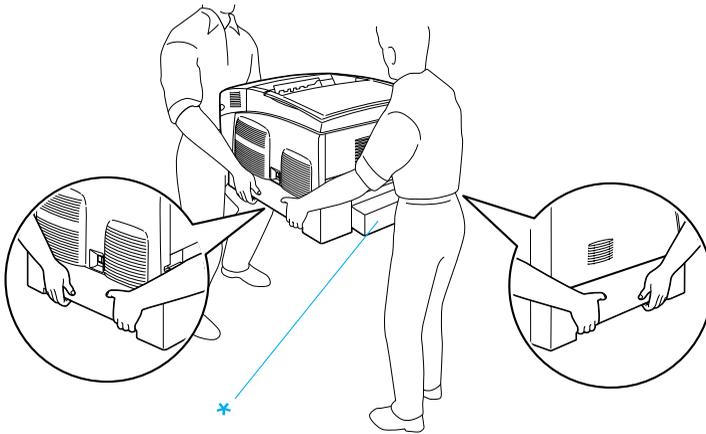

* Do not lift the printer by these areas.

3. When moving the printer, always keep it horizontal.


Moving the printer together with an optional paper cassette unit installed

Follow these steps to move the printer together with the optional paper cassette unit:

For 1000-Sheet Paper Cassette Unit users

1. Turn off the printer and remove the following items.
- Power cord

- Interface cable
 - Paper
 - Photoconductor unit
2. Unlock the two casters at the bottom of the unit.

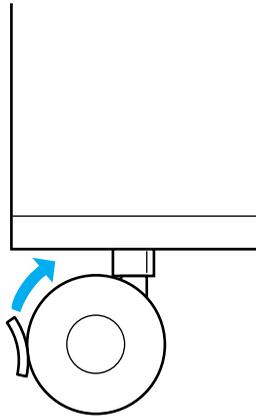

3. Roll the printer to the new location.
4. Lock the casters after relocating the printer.



Caution: Do not move the printer on angled or uneven surfaces.


For 500-Sheet Paper Cassette Unit users

1. Turn off the printer and remove the following items.
 - Power cord
 - Interface cable
 - Paper

- ❑ Photoconductor unit
2. Be sure to lift the printer by the bottom of paper cassette unit.
 3. When moving the printer, always keep it horizontal.

Finding a place for the printer

When relocating the printer, always choose a location that has adequate space for easy operation and maintenance. Use the following illustration as a guide for the amount of space required around the printer to ensure smooth operation. Dimensions shown in the illustrations below are in centimeters.

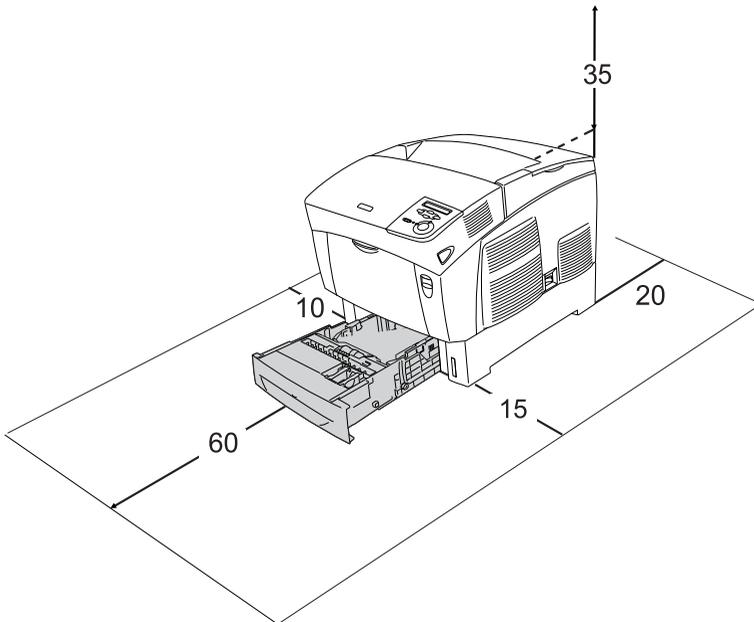

To install and use any of the following options, you will need the indicated amount of additional space.

The 500-Sheet Paper Cassette Unit adds 17.2 mm (6.8 in.) to the bottom of the printer.

The 1000-Sheet Paper Cassette Unit adds 33.6cm (13.2 in.) to the bottom of the printer.

In addition to space consideration, always heed the following precautions when finding a place to locate the printer:

- ❑ Place the printer where you can easily unplug the power cord.
- ❑ Keep the entire computer and printer system away from potential sources of interference, such as loudspeakers or the base units of cordless telephones.
- ❑ Avoid using an electrical outlet that is controlled by wall switches or automatic timers. Accidental disruption of power can erase valuable information in your computer's and printer's memory.



Caution:

- ❑ *Leave adequate room around the printer to allow for sufficient ventilation.*
- ❑ *Avoid locations that are subject to direct sunlight, excessive heat, moisture, or dust.*
- ❑ *Avoid using outlets that other appliances are plugged into.*
- ❑ *Use a grounded outlet that matches the printer's power plug. Do not use an adapter plug.*
- ❑ *Only use an outlet that meets the power requirements for this printer.*


Checking color registration

If you transported your printer for a long distance, you need to check the color registration for possible misalignment.

Follow these steps to check the color registration.

1. Turn on the printer.
2. Load paper into the MP tray.
3. Make sure the LCD panel displays *Ready* or *Sleep*, then press the  Enter button on the control panel twice.
4. Press the  Down button several times to display *ColorReaist Sheet*.
5. Press the  Enter button. The printer prints a color registration sheet.

- The arrow (◀) points to the current settings. Check the patterns indicated by the arrows (◀). If the color segment of the line is in alignment with the black segments on either side to make one straight line, you do not need to adjust the registration for that color. If the line segments are not aligned, adjust the registration as explained below.

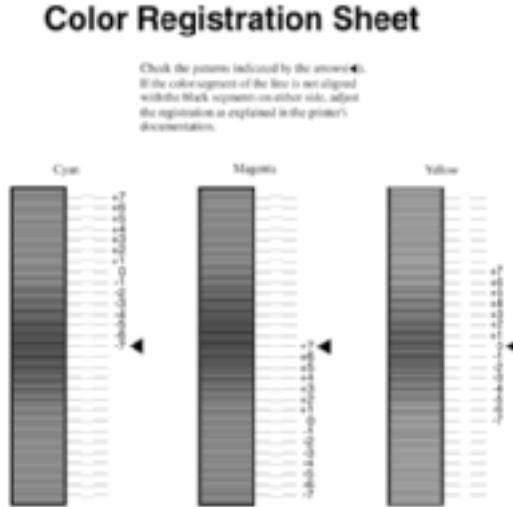

Adjusting color registration alignment

- Make sure the LCD panel displays *Ready* or *Sleep*, then press the  Enter button to access the control panel menus.
- Press the  Down button several times until the LCD panel displays *Setup Menu*, then press the  Enter button.
- Press the  Up button several times until the LCD displays the *XXXXResist* item for the color (Cyan, Magenta, and Yellow) you need to adjust, then press the  Enter button. For example, to adjust the cyan registration, scroll up to *CyanResist*, then press the  Enter button.

4. On the color registration sheet, find the line segments that are most closely aligned, then use the  Up or  Down button to display the number that corresponds to that pattern. Press the  Enter button to complete the adjustment.
5. If necessary, print the color registration sheet for confirmation.

Chapter 8

Troubleshooting

Clearing Jammed Paper

If paper becomes jammed in the printer, the printer's LCD panel and EPSON Status Monitor 3 provide alert messages.

Precautions for clearing jammed paper

Be sure to observe the following points when you clear jammed paper.

- ❑ Do not remove jammed paper by force. Torn paper can be difficult to remove and might cause other paper jams. Pull it gently in order to avoid tearing.
- ❑ Always try to remove jammed paper with both hands to avoid tearing it.
- ❑ If jammed paper is torn and remains in the printer, or if paper is jammed in a place not mentioned in this chapter, contact your dealer.
- ❑ Make sure that the paper type that is loaded is the same as the Paper Type setting in the printer driver.



Warning:

- ❑ *Be careful not to touch the fuser, which is marked **CAUTION HIGH TEMPERATURE**, or the surrounding areas. If the printer has been in use, the fuser and the surrounding areas may be very hot.*


- ❑ *Do not insert your hand deep into the fuser unit as some components are sharp and may cause injury.*

Jam AB (covers A and B)


When there is paper jammed around the fuser unit, the LCD panel displays the **Jam AB** error message.

Follow these steps to clear the jammed paper.

1. Press the latch on cover A and open the cover.

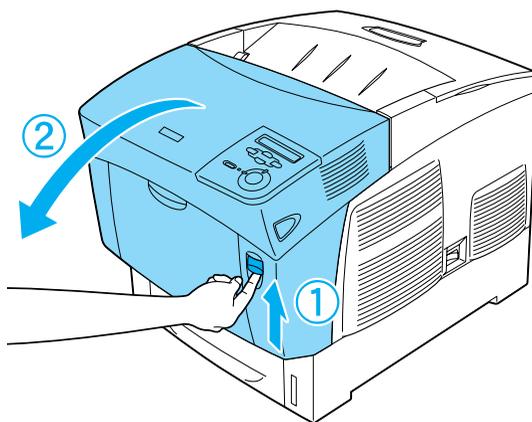


2. Turn the inner green levers of the fuser unit outward, and gently remove any jammed paper with both hands.

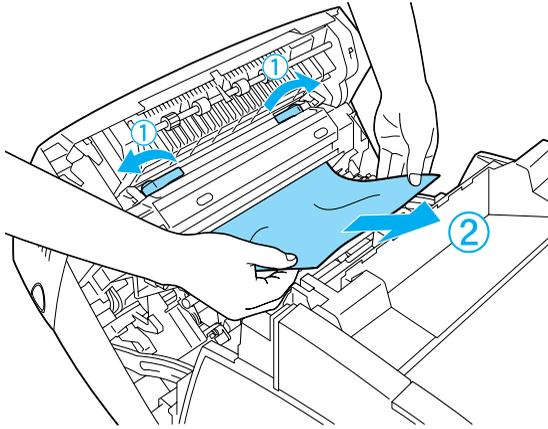


Note:

If paper is torn, be sure to remove all torn pieces.

3. Close cover A.
4. Press the latch on cover B and open the cover.

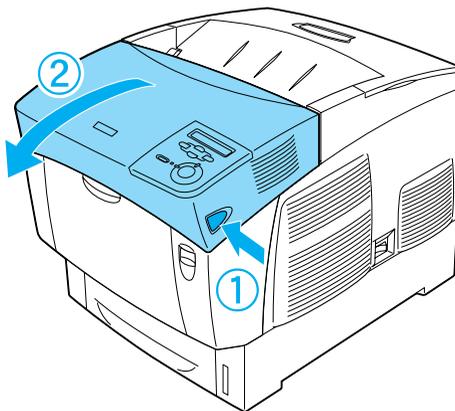

5. Raise the outer green knobs to open the paper path, and remove the jammed paper.

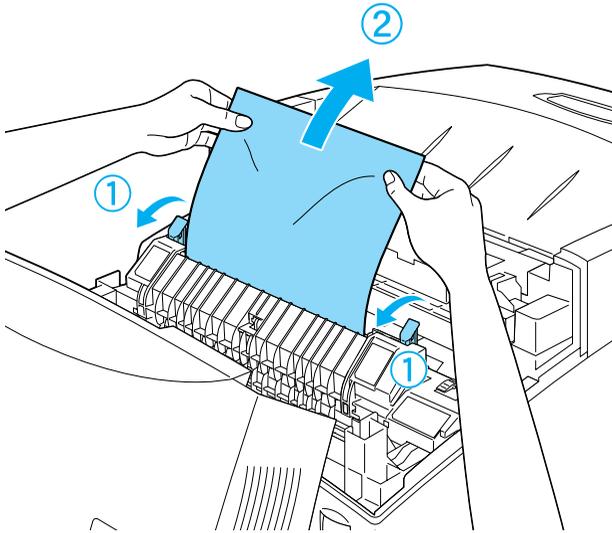


6. Close cover B.

When the paper jam is cleared completely and the covers are closed, printing resumes from the page that jammed.


Jam A (cover A)

Follow these steps to clear paper jams at cover A.


1. Press the latch on cover A and open the cover.

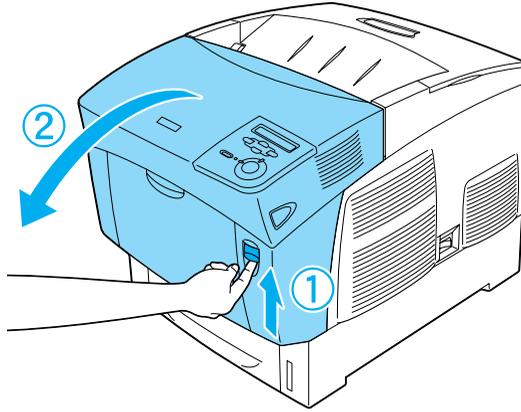


2. Remove any jammed paper gently with both hands.

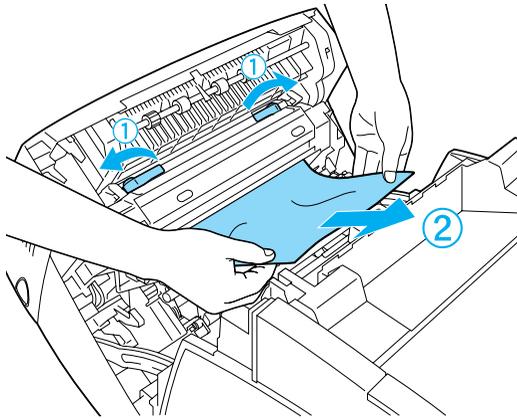


3. Open cover D.

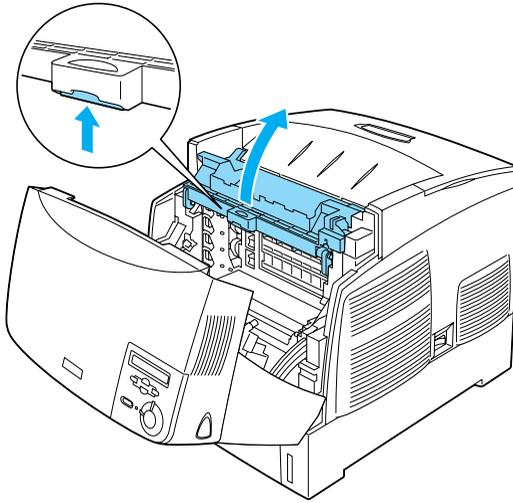


4. Grasp the handle of the photoconductor unit firmly and remove the unit from the printer.

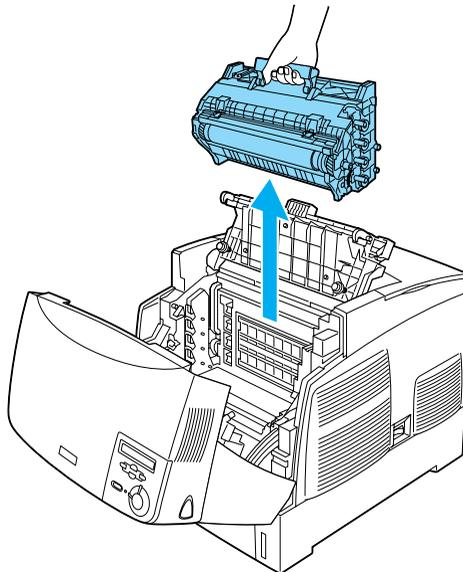


5. Remove any jammed paper.

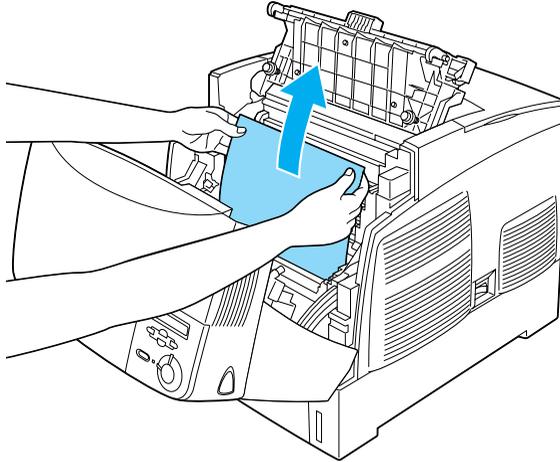

6. Reinstall the photoconductor unit, making sure the posts on the sides of the unit slide into the slots.

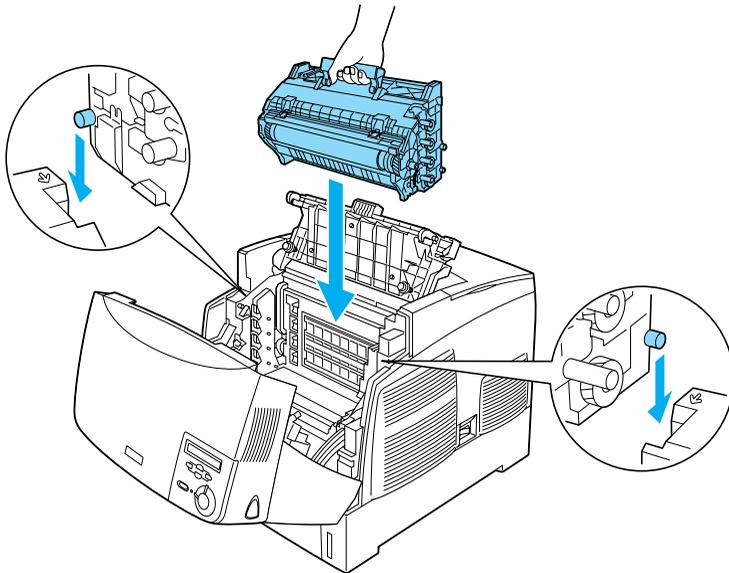

7. Close covers D and A.

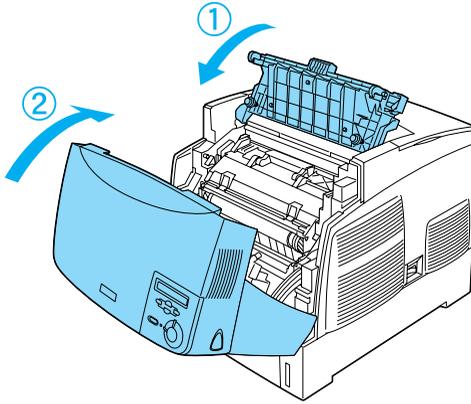


When the paper jam is cleared completely and the covers are closed, printing resumes from the page that jammed.

Jam AC (cover A and paper cassettes)

When there is paper jammed at the place where paper feeds into the printer, or in the paper cassettes, the LCD panel displays the Jam AC error message.

Follow these steps to clear the jammed paper.


1. Remove the paper cassette from the printer and discard any crumpled paper.

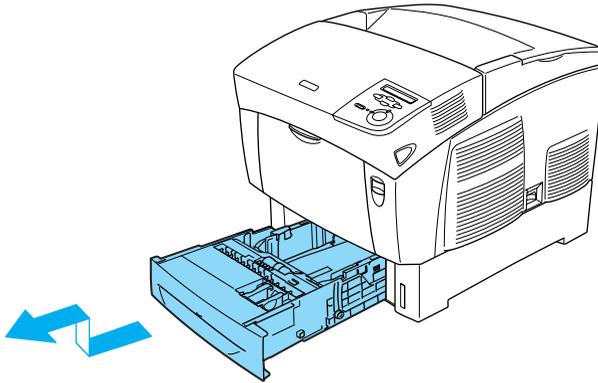

Note:

The illustration shows the standard lower cassette. If the optional paper cassette unit is installed, check the unit's paper cassettes in the same way.


2. Gently remove any paper that has fed part way into the printer.

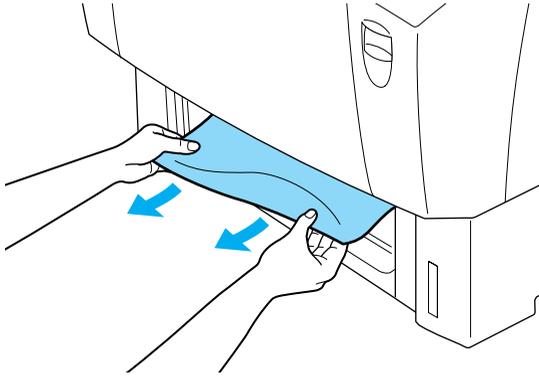


Note:

Confirm that the jammed paper is not still deep inside the printer.


3. Remove the stack of paper from the cassette, tap it on a flat surface to even the edges, then reinsert it into the paper cassette. Be sure the paper is evenly aligned and the top of the stack is below the metal retaining clip and the maximum paper mark.

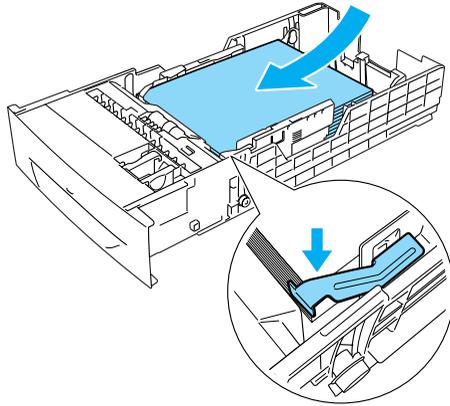


4. Reinsert the paper cassette into the printer.

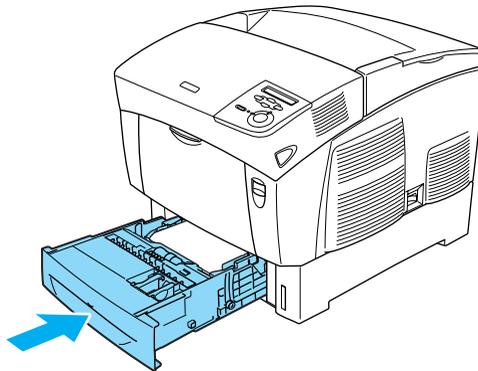

5. Press the latch on cover A and open the cover.

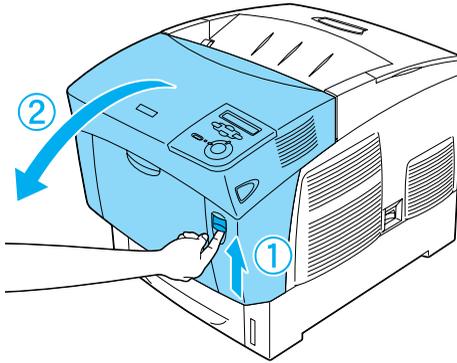


6. Remove any jammed paper gently with both hands. Be careful not to tear the jammed paper.

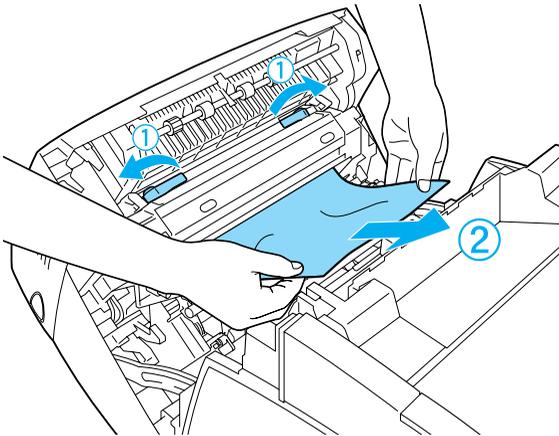

Note:

- ❑ Always try to remove jammed paper with both hands to avoid tearing it.
- ❑ If paper is torn, be sure to remove all torn pieces.

- ❑ *When a paper jam occurs repeatedly at the paper cassettes (Jam AC or Jam ABC), jammed or crumpled paper may still be inside the paper cassettes. Remove the paper cassettes, then remove the black unit that is located on the top part of the inside of the cassette slot, and check whether any jammed paper is there.*

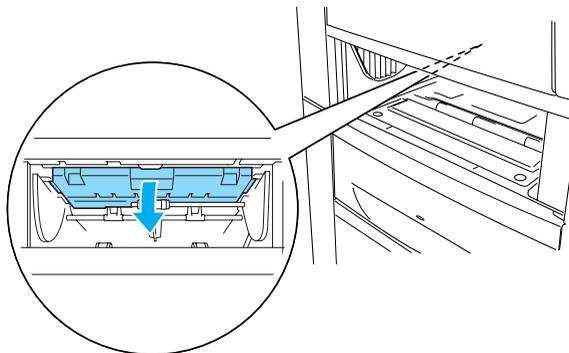


When the paper jam is cleared completely and cover A is closed, printing resumes from the page that jammed.

Jam B (cover B)

When there is paper jammed at the duplex unit, the LCD panel displays the **Jam B** error message.

Follow these steps to clear the jammed paper.


1. Press the latch on cover B and open the cover.

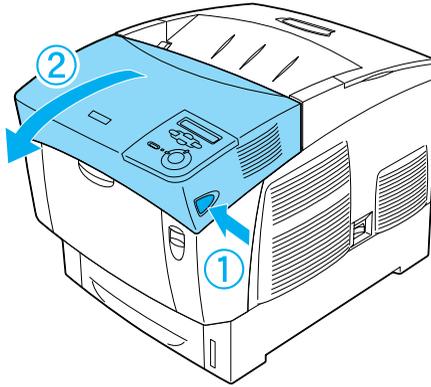

2. Gently remove any jammed or crumpled paper.

Note:

- ❑ Be sure to remove the jammed paper by pulling it upward.
- ❑ If paper is torn, be sure to remove all torn pieces.

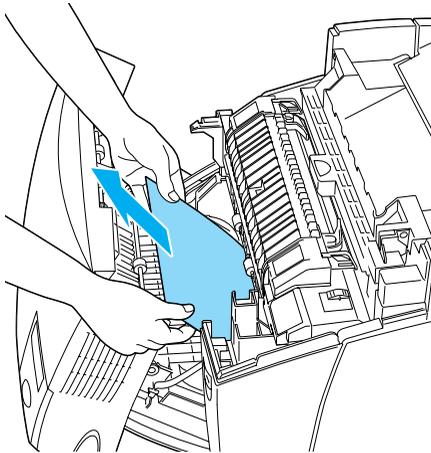



Warning:

*Do not touch the fuser, which is marked **CAUTION HIGH TEMPERATURE**, or the surrounding areas. If the printer has been in use, the fuser and the surrounding areas may be very hot.*

3. Close cover B.

When the paper jam is cleared completely and cover B is closed, printing resumes from the page that jammed.


Jam ABC (cover A, paper cassettes and cover B)

When there are paper jams where paper feeds into the printer or in the paper cassettes, and at the duplex unit, the LCD panel displays the Jam ABC error message.

To clear the paper jam, first clear the jammed paper where paper feeds, as described in “Jam AC (cover A and paper cassettes)” on page 258. Then, clear the jammed paper at the duplex unit as described in “Jam B (cover B)” on page 263.

Note:

When a paper jam occurs repeatedly at the paper cassettes (Jam AC or Jam ABC), jammed or crumpled paper may still be inside the paper cassettes. Remove the paper cassettes, then remove the black unit that is located on the top part of the inside of the cassette slot, and check whether any jammed paper is there.

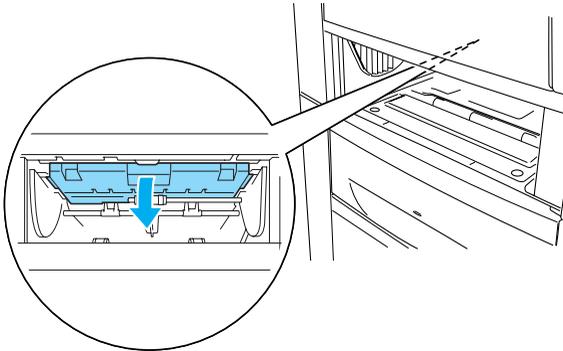

Jam at the MP tray

When the LCD panel displays the Check Transparency error message, there may be paper jammed at the MP tray.

Remove the paper from the MP tray and remove any jammed paper. Open and close cover A to clear the message on the LCD panel, then reload the paper. The printer resumes printing from the page that jammed.


Note:

- ❑ When using transparencies, load them in the MP tray and set the Paper Type setting to **Transparency** in the printer driver.
- ❑ When the Paper Type setting in the printer driver is set to **Transparency**, do not load any other type of paper except transparencies.

Printing a Status Sheet

To confirm the current status of the printer, and that the options are installed correctly, print a status sheet using the printer's control panel.

1. Turn on the printer. The LCD panel shows **Ready**.
2. Press the  Enter button three times. The printer prints a status sheet.

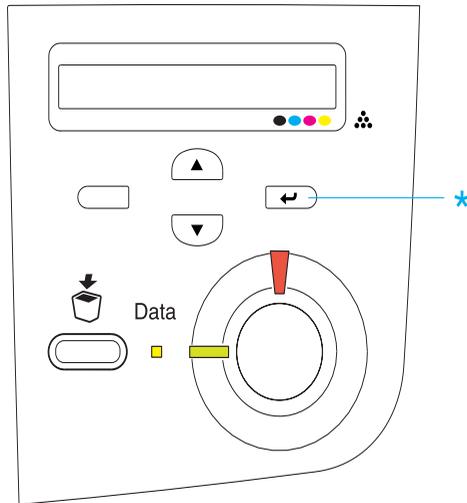

3. Confirm that the information about the installed options is correct. If the options are installed correctly, they appear under **Hardware Configurations**. If the options are not listed, try reinstalling them.

Note:

- ❑ *If the status sheet does not list your installed options correctly, make sure that they are securely connected to the printer.*

- ❑ *If you are unable to get the printer to print a correct status sheet, contact your dealer.*

- ❑ *For the Windows printer driver, you can update the installed option information manually. Click the **Update the Printer Option Information Manually** button, and click **Settings** from the **Optional Settings** menu. The **Optional Settings** dialog box appears. Make settings for each installed option, then click **OK**.*

Operational Problems

The Ready light does not turn on

Cause	What to do
The power cord may not be properly plugged into the electrical outlet.	Turn off the printer and check the power cord connections between the printer and the electrical outlet. Then turn the printer back on.
The electrical outlet may be controlled by an outside switch or an automatic timer.	Make sure that the switch is turned on or plug another electrical device into the outlet to check whether the outlet is operating properly.

The printer does not print (Ready light off)

Cause	What to do
The printer is offline.	Press the  Start/Stop button once to switch the printer to ready status.

The Ready light is on but nothing prints

Cause	What to do
Your computer may not be properly connected to the printer.	Perform the procedure described in “Connecting the Printer to a Computer” in the <i>Setup Sheet</i> .

The interface cable may not be plugged in securely.	Check both ends of the interface cable between the printer and the computer. If you are using the parallel interface, be sure to secure the connector using the wire retaining clips.
---	---

You may not be using the correct interface cable.	If you are using the parallel interface, make sure that the cable is a double-shielded, twisted-pair interface cable no more than six feet in length. If you are using the USB interface, use a Revision 2.0 cable.
---	--

Some error may have occurred.	Check the LCD panel to see if an error message appears.
-------------------------------	---

Your application software is not properly set up for your printer.	Make sure that the printer is selected in your application software.
--	--

Your computer system's memory is too small to handle the volume of data in your document.	Try reducing the image resolution of your document in the application software, or install more memory in your computer if you can.
---	---

The optional product is not available

Cause	What to do
If you are using Windows, and EPSON Status Monitor 3 is not installed, you have to make settings manually in the printer driver.	Click the Optional Settings tab, select Update the Printer Option Information Manually, then click Settings.

Printout Problems

The font cannot be printed

Cause	What to do
You may use the printer fonts substituted for specified TrueType fonts.	In the printer driver, choose the Print TrueType fonts as bitmap button in the Extended Settings dialog box.
The selected font is not supported by your printer.	Make sure that you have installed the correct font. See "Available Fonts" on page 392 for more information.

Printout is garbled

Cause	What to do
The interface cable may not be plugged in securely.	Make sure that both ends of the interface cable are plugged in securely.

You may not be using the correct interface cable.

If you are using the parallel interface, make sure that the cable is a double-shielded, twisted-pair interface cable no more than six feet in length.

If you are using the USB interface, use a Revision 2.0 cable.

The emulation setting for the port may not be correct.

Specify the emulation mode by using the printer's control panel menus. See "Emulation Menu" on page 327.

Note:

If a status sheet does not print correctly, your printer may be damaged. Contact your dealer or a qualified service representative.

Misalignment of colors

Cause	What to do
The registration position of each color may have shifted while the printer was being shipped or moved to a new location.	Check the color registration and adjust the alignment if necessary. See “Checking color registration” on page 248 for instructions.

The printout’s orientation on the page is not correct

Cause	What to do
The page length and margins may be set incorrectly in your application.	Make sure that you are using the correct page length and margin settings in your application.
The Paper Size setting may be incorrect.	Make sure the correct paper size is set in the Tray Menu on the control panel.

Graphics do not print correctly

Cause	What to do
The printer emulation setting in your application may be incorrect.	Make sure that your application is set for the printer emulation you are using. For example, if you are using the LJ4 emulation mode, make sure that your application is set to use a LaserJet 4 printer.

You may need more memory. Graphics require large amounts of memory. Install an appropriate memory module. See “Memory Module” on page 200.

Color Printing Problems

Cannot print in color

Cause	What to do
Black is selected as the Color setting in the printer driver.	Change this setting to Color.
The color setting in the application you are using is not appropriate for color printing.	Make sure that the settings in your application are appropriate for color printing.

The printout color differs when printed from different printers

Cause	What to do
Printer driver default settings and color tables vary by printer model.	Set the Gamma setting to 1.5 in the More Settings dialog box in the printer driver, then print again. If you still do not get the printouts you expect, adjust the color using the slide bar for each color. For details about the More Settings dialog box, see "Customizing print settings" on page 62 for Windows, or see "Customizing print settings" on page 122 for Macintosh.

The color looks different from what you see on

the computer screen

Cause	What to do
Printed colors do not exactly match the colors on your monitor, since printers and monitors use different color systems: monitors use RGB (red, green, and blue), while printers typically use CMYK (cyan, magenta, yellow, and black).	Although it is difficult to match colors perfectly, selecting the printer driver's ICM setting (for Windows XP, Me, 98, 95, or 2000) or ColorSync setting (for Macintosh) can improve color matching between different devices. For details, see "Using the predefined settings" on page 59 for Windows, and "Using the predefined settings" on page 119 for Macintosh.
For Macintosh, the System Profile setting is not in use.	To apply ColorSync properly, your input device and the application must support ColorSync, and a System Profile must be used for your monitor.
PhotoEnhance4 may be selected in the printer driver.	The PhotoEnhance 4 feature corrects the contrast and brightness of the original image data, and so may not be suitable for printing vivid images.

Print Quality Problems

The background is dark or dirty

Cause	What to do
You may not be using the correct type of paper for your printer.	If the surface of your paper is too rough, printed characters may appear distorted or broken. EPSON special paper, or smooth, high-quality copier paper is recommended for best results. See "Available paper types" on page 356 for information on choosing paper.
The paper path inside the printer may be dusty.	Turn off the printer. Clean internal printer components by printing three pages with only one character per page.

White dots appear in the printout

Cause	What to do
The paper path inside the printer may be dusty.	Turn off the printer. Clean internal printer components by printing three pages with only one character per page.

Print quality or tone is uneven

Cause	What to do
Your paper may be moist or damp.	Do not store paper in a humid or damp environment.

There may be no toner left in the toner cartridge. If the message on the LCD panel or in EPSON Status Monitor 3 indicates that the amount of toner left is low, see “Replacing a toner cartridge” on page 223.

There may be a problem with the photoconductor unit. Replace the photoconductor unit. See “Photoconductor unit” on page 228.

Half-tone images print unevenly

Cause	What to do
Your paper may be moist or damp.	Do not store paper in a humid or damp environment. Be sure to use paper that is newly unwrapped.
There may be no toner left in the imaging cartridge.	If the message on the LCD panel or in EPSON Status Monitor 3 indicates that the amount of toner is low, see "Replacing a toner cartridge" on page 223.
The gradation setting is too small when printing graphics.	On the Basic Setting menu in the printer driver, click More Settings , select the Enh.MG button, then select Smooth .
There may be a problem with the photoconductor unit.	Replace the photoconductor unit. See "Photoconductor unit" on page 228.

Toner smudges

Cause	What to do
Your paper may be moist or damp.	Do not store your paper in a humid or damp environment.
You may not be using the correct type of paper for your printer.	EPSON special paper or smooth, high-quality copier paper is recommended for best results. See "Available paper types" on page 356 for information on choosing paper.

The paper path inside the printer may be dusty.

Turn off the printer. Clean internal printer components by printing three pages with only one character per page.

There may be a problem with the photoconductor unit.

Replace the photoconductor unit. See "Photoconductor unit" on page 228.

Areas are missing in the printed image

Cause	What to do
Your paper may be moist or damp.	This printer is sensitive to moisture absorbed by the paper. The higher the moisture content in the paper, the lighter the printout. Do not store paper in a humid or damp environment.
You may not be using the correct type of paper for your printer.	If the surface of your paper is too rough, printed characters may appear distorted or broken. EPSON special paper or smooth, high-quality copier paper is recommended for best results. See "Available paper types" on page 356 for information on choosing paper.

Completely blank pages are output

Cause	What to do
The printer may have loaded more than one sheet at a time.	Remove the paper stack and fan it. Tap it on a flat surface to even the edges. Then reload the paper.
There may be no toner left in the Toner cartridge.	If the message on the LCD panel or in the EPSON Status Monitor 3 indicates that the amount of toner is low, see "Replacing a toner cartridge" on page 223.
The problem may be with your application or interface cable.	Print out a status sheet. See "Printing a Status Sheet" on page 267. If a blank page is ejected, the problem may be with the printer. Turn off the printer and contact your dealer.

The Paper Size setting may be incorrect.	Make sure the correct paper size is set in the Tray Menu on the control panel.
--	--

There may be a problem with the photoconductor unit.	Replace the photoconductor unit. See “Photoconductor unit” on page 228.
--	---

The printed image is light or faint

Cause	What to do
Your paper may be moist or damp.	Do not store your paper in a humid or damp environment.
The Toner Save mode may be on.	Turn off the Toner Save mode using the printer driver or the printer's control panel menus.
There may be no toner left in the toner cartridge.	If the message on the LCD panel or in EPSON Status Monitor 3 indicates that the amount of toner left is low, see "Replacing a toner cartridge" on page 223.
There may be a problem with the photoconductor unit.	Replace the photoconductor unit. See "Photoconductor unit" on page 228.

The non-printed side of the page is dirty

Cause	What to do
Toner may have spilled onto the paper feed path.	Clean internal printer components by printing three pages with only one character per page.

Memory Problems

Print quality decreased

Cause	What to do
The printer cannot print in the required quality level because of insufficient memory, and the printer lowers the quality automatically so that the printer can continue printing.	Check to see if the printout is acceptable. If not, add more memory for a permanent solution or lower print quality temporarily in the printer driver.

Insufficient memory for current task

Cause	What to do
The printer has insufficient memory for current task.	Add more memory for a permanent solution or lower print quality temporarily in the printer driver.

Insufficient memory to print all copies

Cause	What to do
The printer does not have sufficient memory to collate print jobs.	Only one set of copies will be printed. Reduce the contents of print jobs, or add more memory. For information on installing more memory, see “Memory modules” on page 368.

Paper Handling Problems

Paper does not feed properly

Cause	What to do
The paper guides are not set correctly.	Make sure that the paper guides in all the paper cassettes are set in the correct paper size positions.
The paper source setting may not be correct.	Make sure that you have selected the correct paper source in your application.
There may be no paper in the cassettes.	Load paper.
The size of loaded paper differs from the control panel setting.	Make sure that the correct paper size is set in the control panel's Paper Source and MP Tray Size settings.
Too many sheets may be loaded in the MP tray or paper cassettes.	Make sure that you have not tried to load too many sheets of paper. For the maximum paper capacity for each paper source, see "MP tray" on page 35.
If paper does not feed from the optional 500-Sheet/1000-Sheet Paper Cassette Unit, the unit may not be installed properly.	For instructions on installing the unit, see "500-Sheet/1000-Sheet Paper Cassette Unit" on page 183.

Problems When Using Options

To confirm your options are installed correctly, print a status sheet. See "Printing a Status Sheet" on page 267 for details.

The message Invalid AUX I/F Card appears on the LCD panel

Cause	What to do
The printer cannot read the installed optional interface card.	Turn off the computer, then remove the card. Make sure the interface card is of a supported model.

Paper does not feed from the optional paper cassette

Cause	What to do
The optional paper cassette may not be installed properly.	See "500-Sheet/1000-Sheet Paper Cassette Unit" on page 183 for instructions on installing an optional paper cassette unit.
The paper source setting may not be correct.	Make sure you have selected the proper paper source in your application.
There may be no paper in the paper cassette.	Load paper.
Too many sheets may be loaded in the paper cassette.	Make sure that you have not tried to load in with too many sheets of paper. The cassette can hold a maximum of 500 sheets of 75 g/m paper.

Feed jam when using the optional paper cassette

Cause	What to do
--------------	-------------------

The paper is jammed at the optional paper cassette.	See “Clearing Jammed Paper” on page 251 to clear jammed paper.
---	--

An installed option cannot be used

Cause	What to do
The installed option is not defined in the printer driver.	See “Making Optional Settings” on page 86.

Correcting USB Problems

If you are having difficulty using printer with a USB connection, see if your problem is listed below, and take any recommended actions.

USB connections

USB cables or connections can sometimes be the source of USB problems. Try one or both of these solution:

- ❑ For best results, you should connect the printer directly to the computer’s USB port. If you must use multiple USB hubs, we recommended that you connect the printer to the first-tier hub.

Windows operating system

Your computer must be a model pre-installed with Windows Me, 98, XP, or 2000, a model that was pre-installed with Windows 98 and upgraded to Windows Me, or a model that was pre-installed with Windows Me, 98, or 2000 and upgraded to Windows XP. You may not be able to install or run the USB printer driver on a computer that does not meet these specifications or that is not equipped with a built-in USB port.

For details about your computer, contact your dealer.

Printer software installation

Incorrect or incomplete software installation can lead to USB problems. Take note of the following and perform the recommended checks to ensure proper installation.

Checking printer software installation for Windows 2000 and XP

When using Windows XP or 2000, you must follow the steps in the Setup Sheet packed with the printer to install the printer software. Otherwise, Microsoft's Universal driver may be installed instead. To check if the Universal driver has been installed follow the steps below.

1. Open the Printers folder and right-click the icon of your printer.
2. Click Printing Preferences on the shortcut menu that appears, and then right-click anywhere in the driver.

If About is displayed in the shortcut menu that appears, click it. If a message box with the words “Unidrv Printer Driver” appears, you must reinstall the printer software as described in the Setup Sheet. If About is not displayed, the printer software has been installed correctly.

Note:

*If the Digital Signature Not Found dialog box (Windows 2000) or Software Installation dialog box (Windows XP) appears during the installation process, click **Yes** (Windows 2000) or **Continue Anyway** (Windows XP). If you click **No** (Windows 2000) or **STOP Installation** (Windows XP), you will have to install the printer software again.*

Checking printer software in Windows Me and 98

If you canceled the plug-and-play driver installation in Windows Me or 98 before the procedure was complete, the USB printer device driver or the printer software may be incorrectly installed. Follow the directions below to ensure that the driver and printer software are installed correctly.

Note:

The screen shots shown in this section are taken from Windows 98. Windows Me screens may differ slightly.

1. Click **Start**, point to **Settings**, and then click **Printers**. Make sure that the icon for your printer appears in the **Printers** window.

Select the icon for your printer, and then click Properties on the File menu.



2. Click the Details tab.



If EPUSBX: (EPSON AcuLaser C4100) is displayed in the “Print to the following port list”, then the USB printer device driver and printer software are installed correctly. If the correct port is not displayed, proceed to the next step.



3. Right-click the My Computer icon on your desktop, and then click Properties.
4. Click the Device Manager tab.

If your drivers are correctly installed, EPSON USB Printer Devices should appear on the Device Manager menu.



If EPSON USB Printer Devices does not appear on the Device Manager menu, click the plus(+) sign beside Other devices to view the installed devices.




If USB Printer or EPSON AcuLaser C4100 appears under Other devices, the printer software is not installed correctly. Proceed to step 5.

If neither USB Printer nor EPSON AcuLaser C4100 appears under Other devices, click Refresh or unplug the USB cable from the printer, then plug it into the printer again. Once you've confirmed that these items appear, proceed to step 5.

5. Under Other devices, select USB Printer or EPSON AcuLaser C4100 and click Remove. Then click OK.



When the following dialog box appears, click OK, and then click OK to close the System Properties dialog box.

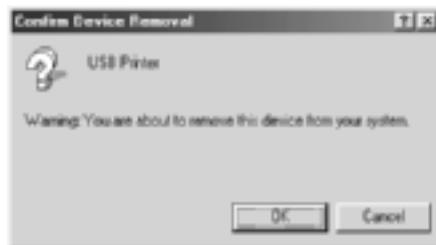

6. Uninstall the printer software as explained in “Uninstalling the Printer Software” on page 110. Then turn the printer off, restart your computer, and reinstall the printer software as described in the Setup Sheet.

Status and Error Messages

This section contains a list of error messages shown on the LCD panel, giving a brief description of each message and suggestions for correcting the problem. Note that not every message shown on the LCD panel indicates a problem. When the  mark is displayed at the left of the warning message, multiple warnings occur. To confirm all warnings that occur, press the  Down button to display the Status Menu, then press the  Enter button.

Calibrating Printer

The printer automatically calibrates itself when any of its covers are opened and when there is no paper jammed inside. This is not an error message, and will clear itself within one minute. While the printer displays this message, do not open the covers or turn off the printer.

Cancel All Print Job

The printer is canceling all print jobs in the printer memory, including jobs the printer is currently receiving or printing. This message appears when the  Cancel Job button has been pressed down for more than 2 seconds.

Cancel Print Job

The printer is canceling the current print job. This message appears when the  Cancel Job button has been pressed and released within 2 seconds.

Can't Print

The print data is deleted because it is incorrect.

Make sure that the appropriate paper size is set and a printer driver for EPSON AL-C4100 is used.

Can't Print Duplex

The printer has encountered problems during duplex printing. Make sure you are using an appropriate type and size of paper for the Duplex Unit. The problem could also be a result of incorrect settings for the paper source you are using. Pressing the  Start/Stop button will print the rest of the print job on only one side of the paper. Press the  Cancel Job button to cancel the print job.

Check Transparency

You have loaded media other than transparencies when the Paper Type setting in the printer driver is **Transparency**, or transparencies are loaded when the Paper Setting in the printer driver is not set to **Transparency**. Paper is jammed at the MP tray.

Remove the paper from the MP tray and remove the jammed paper from the MP tray. Open and close cover A to clear the message on the LCD panel, then reload the paper. The printer resumes printing from the page that jammed.

Check Paper Size

The paper size setting is different from the size of paper loaded in the printer. Check to see if the correct size of paper is loaded in the specified paper source.

To clear this error, select **Clear Warning** from the control panel's Reset Menu. See "How to access the control panel menus" on page 313 for instructions.

Check Paper Type

The media loaded in the printer does not match the paper type setting in the printer driver. Media that matches only the paper size setting will be used for printing.

To clear this error, select **Clear Warnings** from the control panel's **Reset Menu**. See "How to access the control panel menus" on page 313 for instructions.

Clean Sensor

Open cover A and remove the transfer unit temporarily. Wipe the transparent plastic window at the back of the transfer unit with a soft cloth, then reinstall the transfer unit. Close cover A to clear this error.

If the error still remains, replace the transfer unit with a new one.

Collate Disabled

Printing by specifying the number of copies is no longer possible due to a lack of memory (RAM) or free disk space on the optional Hard Disk Drive. If this error occurs, print only one copy at a time.

To clear this error, select **Clear Warnings** from the control panel's **Reset Menu**. For instruction about accessing the control panel menus, see "How to access the control panel menus" on page 313.

Duplex Mem Overflow

There is not enough memory for duplex printing. The printer prints only on the front and ejects the paper. To clear this error, follow the instructions below.

If **Off** is selected as the **Auto Cont** setting on the control panel's **Setup Menu**, press the **Start/Stop** button to print on the back of the next sheet, or press the **Cancel Job** button to cancel the print job.

If **On** is selected as the **Auto Cont** setting on the control panel's **Setup Menu**, printing continues automatically after a certain period of time.

Face Down Full

The output tray is full of printouts, and the printer has stopped printing. Remove the printouts from the output tray, and press the **○ Start/Stop** button to continue printing. The output tray can hold up to 250 sheets.

Form Data Canceled

Unable to store form overlay data on the printer's optional Hard Disk Drive. Either the drive is full, or the maximum number of form overlay files has been reached. Delete any form overlay files you no longer need, then try storing the new overlay again.

To clear this error, select **Clear Warnings** from the control panel's **Reset Menu**. For instruction about accessing the control panel menus, see "How to access the control panel menus" on page 313.

Form Feed

The printer is ejecting paper due to a user request. This message appears when pressing the **○ Start/Stop** button once to make the printer offline, and then holding down the **○ Start/Stop** button for more than 2 seconds in order not to receive form feed command.

Format Error ROM A

An unformatted ROM module has been inserted.

To clear this error, either press the **○ Start/Stop** button or turn off the printer and remove the ROM module, then reinstall the ROM module. If that fails to clear the error, contact your dealer.

Formatting HDD

The HDD is being formatted.

Hard Disk Full

The optional Hard Disk Drive is full and you cannot save any data. Delete the unnecessary data from the Hard Disk Drive. To clear this error, select **Clear Warnings** from the control panel's Reset Menu. For instruction about accessing the control panel menus, see "How to access the control panel menus" on page 313.

HDD Check

The printer is checking the Hard Disk Drive.

Image Optimum

There is insufficient memory to print the page at the specified print quality. The printer automatically lowers the print quality so that it can continue printing. If the quality of the printout is not acceptable, try simplifying the page by limiting the number of graphics or reducing the number and size of fonts.

To clear this error, select **Clear Warnings** from the control panel's Reset Menu. See "How to access the control panel menus" on page 313 for instructions.

Turn the **Image Optimum** setting off on the control panel's Printing Menu if you do not want the printer to automatically lower the print quality to continue printing.

You may need to increase the amount of printer memory to be able to print at the desired print quality for your document. For more information on adding memory, see "Memory modules" on page 368.

Install Fuser

There is no fuser unit installed or the fuser unit is not installed properly. Turn off the printer and install the fuser unit if it is not installed.

If a fuser unit is already installed, turn the printer off and reinstall the unit after it has cooled off (30 minutes). Then open cover B and D. Remove the fuser unit, then reinstall it properly. Close covers D and B. The error clears automatically if the fuser unit is properly installed.

If the error is not cleared, the fuser unit is out of order. Replace it with a new fuser unit.

Install LC1

The paper tray of the standard paper cassette is not installed, or not installed properly. Install the paper cassette correctly to clear this error.

Install LC2

The paper trays of the optional paper cassette unit are not installed, or not installed properly. Install the paper trays correctly to clear this error.

Install Photoconductor

There is no photoconductor unit installed or the photoconductor unit is not installed properly. Turn off the printer and install the photoconductor unit if it is not installed.

If a photoconductor unit is already installed, confirm cover D is closed. Otherwise, turn off the printer, open cover A, and then open cover D. Remove the photoconductor unit, then reinstall it properly. Close covers D and A. The error clears automatically if the photoconductor unit is properly installed.

Install TransferUnit

There is no transfer unit installed or the transfer unit is not installed properly. Turn off the printer and install the transfer unit if it is not installed.

If a transfer unit is already installed, turn off the printer, open cover A, and remove the transfer unit. Then reinstall the unit properly and close cover A. The error clears automatically if the transfer unit is properly installed.

Install xxxx TnrCart

The indicated toner cartridges are not installed in the printer or the protective tape has not been removed from a toner cartridge. (The letters C, M, Y, or K appear in place of XXXX and indicate the colors Cyan, Magenta, Yellow, and Black respectively.)

Install the indicated cartridges. See “Toner Cartridge” on page 222.

If the protective tape has not been removed from a toner cartridge, turn the toner cartridge knobs to the unlocked position and then return to the locked position. Then remove the protective tape from the toner cartridge. If that fails to clear the error, turn the printer off and back on again.

Invalid AUX I/F Card

This message means that the printer cannot communicate with the installed optional interface card. Turn off the printer, remove the card, then reinstall it.

Invalid HDD

Either the optional Hard Disk Drive is damaged or it cannot be used with this printer. Turn off the printer and remove the Hard Disk Drive.

Invalid PS3

An optional PostScript 3 ROM module that cannot be used on this printer is installed. Turn off the printer and remove the module.

Invalid ROM A

The printer cannot read the installed optional ROM module. Turn off the printer and remove the ROM module.

Jam XXX

The location where the paper jam occurred is displayed at xxx. xxx indicates the location of the error.

If a paper jam occurs at two or more locations simultaneously, the corresponding multiple locations are displayed.

Location	Description
Jam AB	Paper is jammed at the fuser unit. For instructions on how to remove jammed paper at the fuser unit, see “Jam AB (covers A and B)” on page 252.
Jam A	Paper is jammed at cover A. For instructions on how to remove jammed paper at cover A, see “Jam A (cover A)” on page 254.
Jam AC	Paper is jammed where it feeds into the printer, or at the paper cassettes. For instructions on clearing this type of paper jam, see “Jam AC (cover A and paper cassettes)” on page 258.
Jam B	Paper is jammed inside the duplex unit. For instructions on clearing this type of paper jam, see “Jam B (cover B)” on page 263.
Jam ABC	Paper is jammed where it feeds into the printer or at the paper cassettes, and inside the duplex unit. For instructions on clearing this type of paper jam, see “Jam ABC (cover A, paper cassettes and cover B)” on page 265.

Manual Feed xxx

The manual feed mode is specified for the current print job. Make sure the paper size indicated by xxx is loaded, then press the Start/Stop button.

For details on the manual feed mode, see “Manually feeding paper” on page 38.

Mem Overflow

The printer has insufficient memory to execute the current task. Press the ○ Start/Stop button on the control panel to resume printing. Or press the ⏹ Cancel Job button to cancel the print job.

Menus Locked

This message appears if you try to change the printer's settings through the control panel when the buttons are locked. You can unlock them by using the EPSON WinAssist or WebAssist utility. Refer to the *Network Guide* for information.

Need Memory

The printer has insufficient memory to complete the current print job.

To clear this error message, select **Clear Warnings** from the control panel's **Reset Menu**. See "How to access the control panel menus" on page 313 for instructions.

To prevent this problem from happening again, add more memory to your printer as described in "Memory modules" on page 368, or reduce the resolution of the image to be printed.

NonGenuine Toner xxxx

The installed toner is not an EPSON genuine toner cartridge. Using a non-genuine toner cartridge may affect print quality. EPSON shall not be liable for any damages or problems arising from the use of consumable products not manufactured or approved by EPSON. Installing a genuine toner cartridge is recommended. Press the ○ Start/Stop button on the control panel to resume printing.

Offline

The printer is not ready to print. Press the  Start/Stop button. In this mode, the remaining amount of the toner cartridge for each color is displayed in seven levels.

Optional RAM Error

The optional memory module may be corrupted or incorrect. Replace it with a new one.

Paper Out XXXXX YYYY

There is no paper in the specified paper source (XXXXX). Load paper of the size (YYYY) into the paper source.

Paper Set XXXXX YYYY

The paper loaded in the specified paper source (XXXXX) does not match the required paper size (YYYY). Replace the loaded paper with the correct size paper and press the  Start/Stop button to resume printing. Or press the  Cancel Job button to cancel the print job.

If you press the  Start/Stop button without replacing the paper, the printer will print on the loaded paper even though it does not match the required size.

Printer Open

Cover A, cover B, cover D, or some combination of these covers are open. To clear this error, close all covers.

Print Overrun

The required time to process the print data exceeded the print engine speed because the current page is too complex. Press the  Start/Stop button to resume printing. Or press the  Cancel Job button to cancel the print job. If this message appears again, select  On as the Page Protect setting in the control panel's Setup Menu.

If you continue to receive this message when printing a particular page, try simplifying the page by limiting the number of graphics or reducing the number and size of fonts.

You can also add more memory to the printer as described in “Memory modules” on page 368.

PS3 Hard Disk full

The memory allocated for writing PostScript 3 commands on the optional Hard Disk Drive is full.

To clear this error, select `Clear Warnings` from the control panel’s Reset Menu, or remove the downloaded PS fonts to make room in the HDD. For instruction about accessing the control panel menus, see “How to access the control panel menus” on page 313.

RAM Check

The printer is ready to receive data and print. In this mode, the remaining amount of the toner cartridge for each color is displayed in seven levels.

Ready

The printer is ready to receive data and print. In this mode, the remaining amount of the toner cartridge for each color is displayed in seven levels.

Replace Photoconductor

The photoconductor has reached the end of its service life. Turn off the printer, then replace the photoconductor unit with a new one. See “Photoconductor unit” on page 228 for instructions.

The error clears automatically after you replace the unit and close all printer covers. The photoconductor service life counter is reset automatically.

Replace Toner xxxx

The indicated toner cartridges are out of toner and need to be replaced. (The letters C, M, Y, or K appear in place of XXXX and indicate the colors Cyan, Magenta, Yellow, and Black respectively.)

See “Toner Cartridge” on page 222 for instructions.

Replace Transfer Unit

The transfer unit has reached the end of its service life. Turn off the printer, then replace the transfer unit with a new one. See “Transfer unit” on page 238 for instructions.

The error clears automatically after you replace the unit and close all printer covers. The transfer unit service life counter is reset automatically.

Reserve Job Canceled

The printer cannot store the data of your print job using the Reserve Job function. The maximum number of print jobs stored in the printer’s Hard Disk Drive has been reached, or the drive has no more memory available to store a new job. To store a new print job, delete a previously stored job. Also, if you have any Confidential Jobs stored, printing those jobs will make more memory available.

To clear this error, select **Clear Warnings** from the control panel’s Reset Menu. For instruction about accessing the control panel menus, see “How to access the control panel menus” on page 313.

Reset

The printer’s current interface has been reset and the buffer has been cleared. However, other interfaces are still active and retain their settings and data.

Reset All

All printer settings have been reset to the default configuration, or to the last settings that were saved.

Reset to Save

A control panel menu setting was changed while the printer was printing. Press the \circ Start/Stop button to clear this message. The setting will become effective after printing has finished.

ROM Check

The printer is checking the ROM.

Self Test

The printer is performing a quick internal check.

Service Req xyyyy

A controller error or a print engine error has been detected. Turn off the printer. Wait at least 5 seconds and then turn it back on. If the error message still appears, write down the error number listed on the LCD panel (xyyyy) and turn off the printer, unplug the power cord, and contact a qualified service representative.

Sleep

The printer is in sleep mode.

In this mode, the remaining amount of the toner cartridge for each color is displayed in seven levels.

TonerCart Error xxxx

A read/write error has occurred for the indicated toner cartridges (The letters C, M, Y, or K appear in place of XXXX and indicate the colors Cyan, Magenta, Yellow, and Black respectively.). Replace the toner cartridges. If that fails to clear the error, turn the printer off.

Install the indicated cartridges. See “Toner Cartridge” on page 222.

Unable Clear Error

The printer cannot clear an error message because the error status still remains. Try solving the problem again.

Worn Fuser

This message indicates that the fuser unit has reached the end of its service life. Printing after this message appears is not guaranteed. Turn the printer off, and reinstall the unit after it has cooled off (30 minutes). Then replace the fuser unit with a new one. See “Fuser unit” on page 234 for instructions.

The error clears automatically after you replace the unit and close all printer covers.

Worn Photoconductor

This message indicates that the photoconductor unit has reached the end of its service life. Printing after this message appears is not guaranteed. Turn the printer off, then replace the photoconductor unit with a new one. See “Photoconductor unit” on page 228 for instructions. The error clears automatically after you replace the unit and close the printer covers.

Worn TransferUnit

This message warns you that the transfer unit is near the end of its service life. You can continue to print until the `Replace TransferUnit` error message appears, but early replacement is recommended to maintain high print quality.

To clear this warning message and continue printing, select `Clear All Warning` from the control panel’s `Reset Menu`. For instruction about accessing the control panel menus, see “How to access the control panel menus” on page 313.

Wrong Photoconductor

An inappropriate photoconductor unit is installed. Install only the photoconductor unit listed in “Consumable products” on page 27.

See “Photoconductor unit” on page 228 for instructions on replacing the photoconductor unit.

Wrong Toner xxxx

An inappropriate toner cartridge is installed. Install only the toner cartridge listed in “Consumable products” on page 27.

See “Toner Cartridge” on page 222 for instructions on replacing the photoconductor unit. (The letters C, M, Y, or K appear in place of XXXX and indicate the colors Cyan, Magenta, Yellow, and Black respectively.)

XXXX Toner Low

The indicated toner cartridges have less than 10% of toner remaining. (The letters C, M, Y, or K appear in place of XXXX and indicate the colors Cyan, Magenta, Yellow, and Black respectively.)

You can continue to print until the `Replace Toner xxxx` error message appears. Waiting until this message appears before replacing the toner is recommended as toner may spill during replacement if toner remains in the cartridge. When printouts become faint, see “Toner Cartridge” on page 222 for instructions.

Note:

Do not replace the toner cartridge when the `xxxx Toner Low` message appears. Toner remaining in the toner cartridge may spill out if you remove the toner cartridge to replace it. Replace the toner cartridge when the `Replace Toner xxxx` message appears.

To clear this error, select **Clear All Warnings** from the control panel's **Reset Menu**. For instruction about accessing the control panel menus, see "How to access the control panel menus" on page 313.

Canceling Printing

You can cancel printing from your computer by using the printer driver.

To cancel a print job before it is sent from your computer, see "Canceling Printing" on page 109.

Using the Cancel Job button

The  **Cancel Job** button on your printer is the quickest and easiest way to cancel printing. Pressing this button cancels the currently printing job. Pressing the  **Cancel Job** button for more than two seconds deletes all jobs from the printer memory, including jobs the printer is currently receiving or printing.

Using the Reset menu

Selecting **Reset** from the control panel's **Reset Menu** stops printing, clears the print job being received from the active interface, and clears errors that may have occurred at the interface.

Follow these steps.

1. Press the  **Enter** button to access the control panel menus.
2. Press the  **Down** button several times until **Reset Menu** appears on the LCD panel, then press the  **Enter** button.

3. Press the  Down button several times until `Reset` to display.
4. Press the  Enter button. Printing is canceled the printer is ready to receive a new print job.

Functions of the Control Panel

Using the Control Panel Menus

You can use the printer's control panel to access a variety of menus that allow you to check the status of consumable products, print status sheets, and make printer settings. This section describes how to use the control panel menus, and when it is appropriate to make printer settings using the control panel.

When to make control panel settings

In general, printer settings can be made from the printer driver, and do not need to be made using the control panel. In fact, printer driver settings override settings made using the control panel, so use the control panel menus only to make settings you cannot make in your software or printer driver, including the following:


- ❑ Changing the emulation modes and selecting the IES (Intelligent Emulation Switching) mode
- ❑ Specifying a channel and configuring the interface
- ❑ Choosing the size of the memory buffer used to receive data

How to access the control panel menus

For a complete description of the items and settings available in the control panel menus, see "Control Panel Menus" on page 319.


Accessing the control panel menus

When the Ready light is on, pressing any of the control panel buttons shown below accesses the control panel menus.

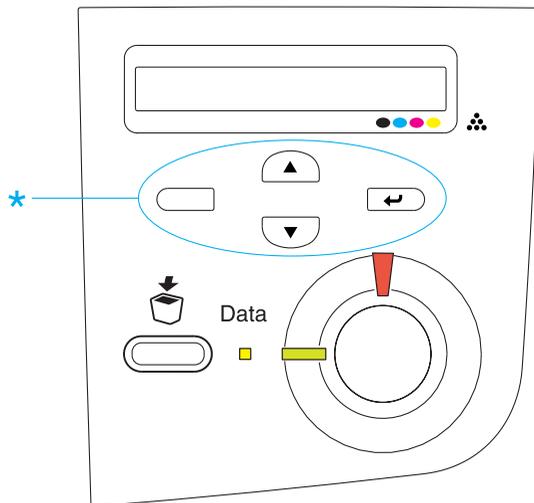

Using the control panel buttons

Once you have accessed the menus, the control panel buttons function as shown below.

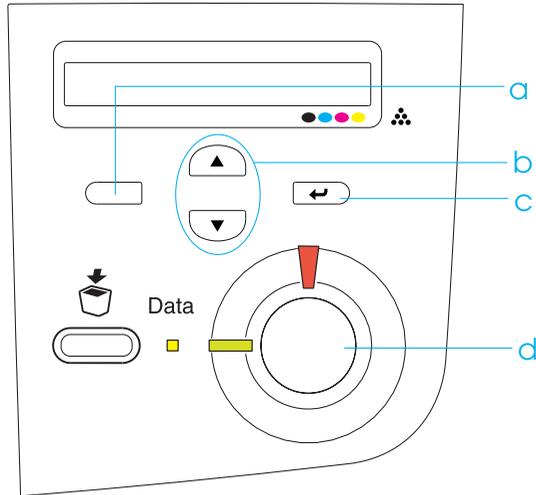

- a. Back button: Return to the previous level.
- b. Up/Down buttons: Scroll through menus, items, and settings on the current level.
- c. Enter button: Advance to the next level, carry out indicated operations, and activate settings.
- d. Start/Stop button: Exit the control panel menus from any level.

How to use the menus

1. Make sure the Ready light is on, then press any of the buttons indicated above to access the menus.
2. Use the  Up and  Down buttons to scroll through the menus.
3. Press the  Enter button to view the items in a menu. Depending on the menu, the LCD panel displays an item and the current setting separated by an asterisk (YYYY*ZZZZ), or only an item (YYYY).
4. Use the  Up and  Down buttons to scroll through the items, or press the  Back button to return to the previous level.
5. Press the  Enter button to carry out the operation indicated by an item, such as printing a status sheet or resetting the printer; or to view the settings available for an item, such as paper sizes or emulation modes.

Use the  Up and  Down buttons to scroll through available settings, and press the  Enter button to select a setting and return to the previous level. Press the  Back button to return to the previous level without changing the setting.

Note:

You need to turn the printer off and then on to activate some settings. For details, see "Control Panel Menus" on page 319.

6. Press the  Start/Stop button to exit the control panel menus.

Printing and Deleting Reserve Job Data

Print jobs stored on the printer's optional Hard Disk Drive using the Re-Print Job, Verify Job, and Stored Job options of the Reserve Job function can be printed and deleted using the control panel's Quick Print Job Menu. Jobs saved using the Confidential Job option can be printed from the Confidential Job Menu. Follow the instructions in this section.

Using the Quick Print Job Menu

Follow these steps to print or delete Re-Print Job, Verify Job, and Stored Job data.

1. Make sure the LCD panel displays *Ready* or *Standby*, then press the  Enter button to access the control panel menus.
2. Press the  Down button repeatedly until *Quick Print Job Menu* appears on the LCD panel, then press the  Enter button.
3. Use the  Down or  Up button to scroll to the appropriate user name, then press the  Enter button.
4. Use the  Down or  Up button to scroll to the appropriate job name, then press the  Enter button.
5. To specify the number of copies you want to print, press the  Enter button, then use the  Down and  Up buttons to select the number of copies.


To delete the print job without printing any copies, press the  Down button to display *Delete* on the LCD panel.

6. Press the  Enter button to start printing or to delete the data.

Using the Confidential Job Menu

Follow these steps to print or delete Confidential Job data.

1. Make sure the LCD panel displays *Ready* or *Standby*, then press the  Enter button to access the control panel menus.
2. Press the  Down button repeatedly until *ConfidentialJobMenu* appears on the LCD panel, then press the  Enter button.
3. Use the  Down or  Up button to scroll to the appropriate user name, then press the  Enter button.
4. Enter your 4-digit password by using the corresponding buttons, as shown below.

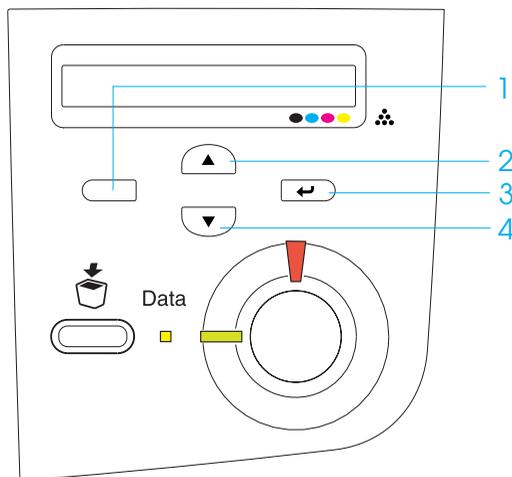

Note:

- ❑ Passwords are always 4 digits.

- ❑ *Passwords consist of numbers from 1 through 4.*
 - ❑ *If no print jobs have been saved with the password you entered, Password Error appears briefly on the LCD panel then the printer exits the control panel menus. Confirm the password and try again.*
5. Use the  Down or  Up button to scroll to the appropriate job name, then press the  Enter button.
 6. To specify the number of copies you want to print, press the  Enter button, then use the  Down and  Up buttons to select the number of copies.

To delete the print job without printing any copies, press the  Down button to display `Delete` on the LCD panel.

7. Press the  Enter button to start printing or to delete the data.

Control Panel Menus

For a summary of the control panel menus, see the table below. For details on the items and settings on the menus, see the descriptions for each menu later in this section.

Control panel menu summary

The following table shows the order in which control panel menus and menu items appear on the LCD panel.

Press the  Up and  Down buttons to scroll through the menus. The menus and menu items appear in the order shown below.

Menu	Items
Information Menu	Status Sheet, Reserve Job List* ¹ , Form Overlay List* ² , NetworkStatus Sheet* ³ , Color Regist Sheet, AUX Status Sheet* ⁴ , PS3 Status Sheet* ⁴ , PS3 Font Sample* ⁴ , LJ4 Font Sample, ESCP2 Font Sample, FX Font Sample, I239X Font Sample, C Toner, M Toner, Y Toner, K Toner, Photoconductr, Total Pages, Color Pages, B/W Pages
Tray Menu	MP Tray Size, LC1 Size, LC2 Size* ⁴ , LC3 Size* ⁴ , MP Type, LC1 Type, LC2 Type* ⁴ , LC3 Type* ⁴
Emulation Menu	Parallel, USB, Network, AUX* ⁴
Printing Menu	Page Size, Wide A4, Orientation, Resolution, RITech, Toner Save, Image Optimum, Top Offset, LeftOffset, T Offset B, L Offset B
Setup Menu	Lang, Time Out, Paper Source, MP Mode* ⁴ , Manual Feed, Copies, Duplex, Binding, Start Page, Paper Type, Page Side, Skip Blank Page, Auto Eject Page, Size Ignore, Auto Cont, Page Protect, LCD Contrast, Cyan Regist, Magenta Regist, Yellow Regist
Quick Print Job Menu* ⁵	-
ConfidentialJobMenu* ⁶	-
Reset Menu	Clear Warning, Reset, Reset All, SelecType Init
Parallel Menu* ⁹	Parallel I/F, Speed, Bi-D, Buffer Size
USB Menu* ⁹	USB I/F, Buffer Size
Network Menu* ⁹	Network I/F, Network Config, Get IPAddress* ⁷ , IP Byte1* ^{7*8} , IP Byte2* ^{7*8} , IP Byte3* ^{7*8} , IP Byte4* ^{7*8} , SM Byte1* ⁷ , SM Byte2* ⁷ , SM Byte3* ⁷ , SM Byte4* ⁷ , GW Byte1* ⁷ , GW Byte2* ⁷ , GW Byte3* ⁷ , GW Byte4* ⁷ , Buffer Size

Menu	Items
AUX Menu* ⁴ * ⁹	AUX I/F, AUX Config, Get IPAddress, IP Byte1, IP Byte2, IP Byte3, IP Byte4, SM Byte1, SM Byte2, SM Byte3, SM Byte4, GW Byte1, GW Byte2, GW Byte3, GW Byte4, NetWare, AppleTalk, NetBEUI, AUX Init, Buffer Size
LJ4 Menu	FontSource, Font Number, Pitch* ¹⁰ , Height* ¹⁰ , Symset, Form, Source Symset, Dest Symset, CR Function, LF Function, Tray Assign
GL2 Menu	GLMode, Scale, Origin, Pen, End, Join, Pen0 to Pen6
PS3 Menu* ⁴	Error Sheet, Coloration, Image Protect
ESCP2 Menu	Font, Pitch, Condensed, T.Margin, Text, CGTable, Country, Auto CR, Auto LF, Bit Image, ZeroChar
FX Menu	Font, Pitch, Condensed, T.Margin, Text, CGTable, Country, Auto CR, Auto LF, Bit Image, ZeroChar
I239X Menu	Font, Pitch, Code Page, T.Margin, Text, Auto CR, Auto LF, Alt. Graphics, Bit Image, ZeroChar, CharacterSet

*1 This item appears only when the jobs are stored by using the Quick Print Job feature.

*2 This item appears only when Form Overlay data exists.

*3 This item appears only when the Network I/F setting in the Emulation Menu is on.

*4 These items appear only when the corresponding options are installed.

*5 This Item appears only when there is print job data stored in the printer's Hard Disk Drive to be printed by using the Quick Print Job Menu.

*6 This Item appears only when there is print job data stored in the printer's Hard Disk Drive to be printed by using the Confidential Job Menu.

*7 Available only when Network Config is set to Yes.

*8 When Get IPAddress is set to Auto, all items between and including IP Byte1 and GW Byte4 are not available. Their default values will be used.

*9 The settings are activated after turning the printer off and then on.

*10 The item appears when the appropriate font setting is selected.

Information Menu

From this menu you can check the toner level and the remaining service life of consumable products. You can also print status and sample sheets showing the printer's current settings, available fonts, and a brief summary of available features.

Press the  Down or  Up button to select an item. Press the  Enter button to print a sheet or font sample.

Item	Settings (default in bold)
Status Sheet	-
Reserve Job List* ¹	-
Form Overlay List* ²	-
Network Status Sheet* ³	-
Color Regist Sheet	-
AUX Status Sheet* ⁴	-
PS3 Status Sheet* ⁵	-
PS3 Font Sample* ⁵	-
ESC/Page Font Sample	-
LJ4 Font Sample	-
ESCP2 Font Sample	-
FX Font Sample	-
I239X Font Sample	-
C Toner	E*****F
M Toner	E*****F
Y Toner	E*****F
K Toner	E*****F
Photoconductr	E*****F
Total Pages	0 to 99999999
Color Pages	0 to 99999999
B/W Pages	0 to 99999999

*1 This item appears only when the jobs are stored by using the Quick Print Job feature.

*2 This item appears only when Form Overlay data exists.

*3 This item appears only when the Network I/F setting in the Emulation Menu is on.

*4 Available only when an optional interface card is installed.

*5 Available only when the optional Adobe PostScript 3 ROM module is installed.

Status Sheet, AUX Status Sheet, PS3 Status Sheet

Prints a sheet showing the current printer settings and installed options. These sheets can be useful to confirm whether options have been installed correctly.

Reserve Job List

Prints a list of reserved print jobs stored in the optional Hard Disk Drive.

Form Overlay List

Prints a list of the form overlays stored in the optional Hard Disk Drive.

Network Status Sheet

Prints a sheet showing the working status of the network.

Color Regist Sheet

Prints a sheet to check and adjust the registration position of each color (Yellow, Cyan, and Magenta). If you notice a misalignment of colors, use this sheet to adjust the alignment as explained in "Setup Menu" on page 330.

PS3 Font Sample, LJ4 Font Sample, ESCP2 Font Sample, FX Font Sample, I239X Font Sample

Prints a sample of the fonts available for your selected printer emulation.

C Toner/M Toner/Y Toner/K Toner/Photoconductr

Displays the amount of toner left in the toner cartridges, and the remaining service life of the photoconductor unit, as shown below:

E*****F	(100 to 84%)
E*****F	(83 to 67%)
E****F	(66 to 51%)
E***F	(50 to 34%)
E**F	(33 to 17%)
E*F	(16 to 1%)
EF	(0%)

Total Pages

Displays the total number of pages printed by the printer.

Color Pages

Displays the total number of pages printed in color by the printer.

B/W Pages

Displays the total number of pages printed in black-white by the printer.

Tray Menu

This menu allows you to specify the size and type of paper loaded in the MP tray. Accessing this menu also lets you check the size of the paper currently loaded in the paper cassettes.

The paper type settings in this menu can also be made from your printer driver. Settings you make in your printer driver override these settings, so use your printer driver whenever you can.

Item	Settings (default in bold)
MP Tray Size	A4* , A5, B5, LT* , HLT, LGL, GLT, GLG, EXE, F4, MON, C10, DL, C5, C6, IB5
LC1 Size	A4, LT, A5, B5, LGL, GLG, EXE
LC2 Size**	A4, LT, A5, B5, LGL, GLG, EXE
LC3 Size**	A4, LT, A5, B5, LGL, GLG, EXE
MP Type	Plain , Letterhead, Recycled, Color, Trnsprncy, Labels
LC1 Type	Plain , Letterhead, Recycled, Color
LC2 Type**	Plain , Letterhead, Recycled, Color
LC3 Type**	Plain , Letterhead, Recycled, Color

* Default setting varies according to the country of purchase.

** Available only when the optional paper cassette unit is installed.

MP Tray Size

Select your paper size from this menu.

LC1 Size/LC2 Size/LC3 Size

Displays the paper size loaded in the standard and optional paper cassettes.

MP Type

Lets you set the paper type loaded in the MP tray.

LC1 Type/LC2 Type/LC3 Type

Lets you select the paper type loaded in the standard and optional paper cassettes.

Emulation Menu

Use this menu to select the printer emulation mode. You can specify different emulations for each interface; in other words, for each computer you connect the printer to. Since each emulation mode has its own specific options, make settings in the LJ4, ESC P2, FX, GL2, or I239X menu, as necessary. The settings you can choose from are the same for every interface.

Item	Settings (default in bold)
Parallel	Auto , LJ4, ESCP2, FX, I239X, PS3*, GL2
USB	Auto , LJ4, ESCP2, FX, I239X, PS3*, GL2
Network	Auto , LJ4, ESCP2, FX, I239X, PS3*, GL2
AUX**	Auto , LJ4, ESCP2, FX, I239X, PS3*, GL2

* Available only when the optional Adobe PostScript 3 ROM module is installed.

** Available only when an optional Type-B interface card is installed.

Printing Menu

This menu allows you to make standard print settings, such as Page Size and Orientation, when printing from an application or operating system that does not support your printer driver. Be sure to use the printer driver to make these settings whenever you can, since settings made on your computer always override these settings.

Item	Settings (default in bold)
Page Size	A4* , A5, B5, LT*, HLT, LGL, GLT, GLG, EXE, F4, MON, C10, DL, C5, C6, IB5, CTM
Wide A4	Off , On
Orientation	Port , Land
Resolution	600 , 300
RI Tech	On , Off
Toner Save	Off , On
Image Optimum	Auto , Off, On
Top Offset	-99.0 ... 0.0 ... 99.0 mm in 0.5 increments
Left Offset	-99.0 ... 0.0 ... 99.0 mm in 0.5 increments
T Offset B	-99.0 ... 0.0 ... 99.0 mm in 0.5 increments
L Offset B	-99.0 ... 0.0 ... 99.0 mm in 0.5 increments

* Default setting varies according to the country of purchase.

Page Size

Specifies the paper size.

Wide A4

Selecting **On** decreases the left and right margins from 4 mm to 3.4 mm.

Orientation

Specifies whether the page is printed in portrait or landscape orientation.

Resolution

Specifies the printing resolution.

RITech

Turning RITech on produces smoother and crisper lines, text, and graphics.

Toner Save

When this setting is selected, the printer saves toner by substituting a gray shade for the black inside of characters. The characters are outlined in full black on the right and lower edges.

Image Optimum

When this mode is on, the quality of graphics is reduced. It reduces the amount of graphics data when the data reaches the memory limit, allowing complex documents to be printed.

Top Offset

Makes fine adjustments to the vertical printing position of the page.



Caution:

Make sure that the printed image does not extend beyond the edge of the paper. Otherwise, you may damage the printer.

Left Offset

Makes fine adjustments to the horizontal printing position of the page. This is useful for fine adjustments.



Caution:

Make sure that the printed image does not extend beyond the edge of the paper. Otherwise, you may damage the printer.

T Offset B

Adjusts the vertical printing position on the back of the paper when printing on both sides. Use this if the printout on the back is not where you expected.

L Offset B

Adjusts the horizontal printing position on the back of the paper when printing on both sides. Use this if the printout on the back is not where you expected.

Setup Menu

This menu allows you to make various basic configuration settings related to paper sources, feeding modes, and error handling. You can also use this menu to select the LCD panel display language.

Item	Settings (default in bold)
Lang	English , Français, Deutsch, ITALIANO, ESPAÑOL, SVENSKA, Dansk, Nederl., SUOMI, Português
Time Out	0, 5... 60 ... 300 in 1 minute increments
Paper Source	Auto , MP, LC1, LC2*, LC3*
MP Mode	Normal, Last
Manual Feed	Off , 1st Page, Each Page
Copies	1 to 999
Duplex	Off , On
Binding	Long Edge , Short Edge
Start Page	Front , Back
Paper Type	Normal , Thick, ExtraThk, Trnsprnc, Coated
Page Side	Front , Back
Skip Blank Page**	Off , On
Auto Eject Page	Off , On
Size Ignore	Off , On
Auto Cont	Off , On
Page Protect	Off , On
LCD Contrast	0 ... 8 ... 15
Cyan Regist	-7 ... 0 ... 7 in 1 dot increments
Magenta Regist	-7 ... 0 ... 7 in 1 dot increments
Yellow Regist	-7 ... 0 ... 7 in 1 dot increments

* Available only when the corresponding option is installed.

** Available only when in PCL5e, ESC/Page, ESC/P2, or I239X mode.

Lang

Specifies the language displayed on the LCD panel and that printed on the status sheet.

Time Out

Specifies the length of the time the printer waits when it is ready to print and no new data is received. When this time is up, the printer searches for new print data from other interfaces.

Paper Source

Specifies whether paper feeds into the printer from the MP tray, the standard lower cassette, or from the optional paper cassette unit, when `Normal` is selected as the Paper Type setting.

If you select `Auto`, paper feeds from the paper source containing paper that matches your Paper Size setting.

If an envelope size (`IB5`, `C10`, `C5`, `DL`, `MON`, `C6`) is selected as the Page Size setting, paper always feeds from the MP tray. If you select `Thick`, `ExtraThk`, `Trnspnc`, or `Coated` as the Paper Type setting, paper always feeds from the MP tray.

MP Mode

This setting determines whether the MP tray has the highest or lowest priority when `Auto` is selected as the Paper Source setting in the printer driver. When `Normal` is selected as the MP Mode, the MP tray has the highest priority as the paper source. If you select `Last`, the MP tray has the lowest priority.

Manual Feed

Allows you to select the manual feed mode for the MP tray. For details on the manual feed mode, see “Manually feeding paper” on page 38.

Copies

Designates the number of copies to be printed, from 1 through 999.

Duplex

Turns duplex printing on or off.

Binding

Specifies the binding direction of the printout.

Start Page

Specifies whether printing starts from the front or back of the page.

Paper Type

Specifies the type of paper to be used for printing. The printer adjusts the printing speed according to this setting. The printing speed is reduced when *Thick*, *Extra Thk*, or *Trnsfrnc* is selected.

Page Side

Select *Front* when printing on the front of thick paper (*Thick*) or extra-thick paper (*ExtraThk*).

Select *Back* when printing on the back of thick paper (*Thick*) or extra-thick paper (*ExtraThk*).

Skip Blank Page

Enables you to skip blank pages when printing. This setting is available when you print in the PCL5e, ESC/Page, ESCP2, FX, or I239X mode.

Auto Eject Page

Specifies whether or not to eject paper when the limit specified in the Time Out setting is reached. The default is *Off*, which means paper is not ejected when the time-out limit is reached.

Size Ignore

If you want to ignore a paper size error, select *On*. When you turn this item on, the printer keeps printing even if the image size exceeds the printable area for the specified paper size. This may cause smudges because of the toner that is not transferred onto the paper properly. When this item is turned off, the printer stops printing if a paper size error occurs.

Auto Cont

When you turn this setting on, the printer automatically continues printing after a certain period of time when one of the following errors occurs: Paper Set, Print Overrun, or Mem Overflow. When this option is off, you must press the *Start/Stop* button to resume printing.

Page Protect

Allocates additional printer memory for printing data, as opposed to receiving it. You may need to turn this setting on if you are printing a very complex page. If a *Print Overrun* error message appears on the LCD panel during printing, turn this setting on and reprint your data. This reduces the amount of memory reserved for receiving data so your computer may take longer to send the print job, but it will allow you to print complex jobs. Page Protect usually works best when *Auto* is selected. You will need to increase your printer's memory if memory errors continue to occur.

Note:

Changing the Page Protect setting reconfigures the printer's memory, which causes any downloaded fonts to be deleted.

LCD Contrast

Adjusts the contrast of the LCD panel. Use the  Up and  Down buttons to set the contrast between 0 (lowest contrast) and 15 (highest contrast.)

Cyan Regist

Adjusts the registration position of the color cyan relative to black.

To adjust the registration, select `Color Resist Sheet` on the control panel's Information Menu to print a color registration sheet. Then use the Cyan Regist setting to select the number that corresponds to the cyan and black line segments most closely aligned. See "Checking color registration" on page 248 for more detailed instructions.

Magenta Regist

Adjusts the registration position of the color magenta relative to black.

To adjust the registration, select `Color Resist Sheet` on the control panel's Information Menu to print a color registration sheet. Then use the Magenta Regist setting to select the number that corresponds to the magenta and black line segments most closely aligned. See "Checking color registration" on page 248 for more detailed instructions.

Yellow Regist

Adjusts the registration position of the color yellow relative to black.

To adjust the registration, select `Color Resist Sheet` on the control panel's Information Menu to print a color registration sheet. Then use the Yellow Regist setting to select the number that corresponds to the yellow and black line segments most closely aligned. See "Checking color registration" on page 248 for more detailed instructions.

Quick Print Job Menu

This menu allows you to print or delete print jobs that were stored in the printer's Hard Disk Drive using the Quick Print Job feature (Re-Print Job, Verify Job, Stored Job) of the printer driver's Reserve Job function. For instructions on using this menu, see "Using the Quick Print Job Menu" on page 317.

Confidential Job Menu

This menu allows you to print or delete print jobs stored in the printer's Hard Disk Drive using the Confidential Job feature of the printer driver's Reserve Job function. You need to enter the correct password to access this data. For instructions on using this menu, see "Using the Confidential Job Menu" on page 318.

Reset Menu

This menu allows you to cancel printing and reset the printer settings.

Clear Warning

Clears all warning messages that appear on the LCD panel.

Reset

Stops printing and clears the current job received from the active interface. You may want to reset the printer when there is a problem with the print job itself and the printer cannot print successfully.

Reset All

Stops printing, clears the printer memory, and restores the printer settings to their default values. The print jobs received from all interfaces are erased.

Note:

Performing Reset All clears print jobs received from all interfaces. Be careful not to interrupt someone else's job.

SelectType Init

Restores the control panel menu settings to their default values. Yellow Regist, Magenta Regist, and Cyan Regist settings are not reset.

Parallel Menu

These settings control communication between the printer and the computer when using the parallel interface.

Item	Settings (default in bold)
Parallel I/F	On , Off
Speed	Fast , Normal
Bi-D	Nibble, ECP , Off
Buffer Size	Normal , Maximum, Minimum

Parallel I/F

Allows you to activate or deactivate the parallel interface.

Speed

Specifies the pulse width of the ACKNLG signal when receiving data in the Compatibility mode or Nibble mode. When **Fast** is selected, the pulse width is about 1 μ s. When **Normal** is selected, the pulse width is about 10 μ s.

Bi-D

Allows you to specify the bidirectional communication mode. When you select **Off**, bidirectional communication is disabled.

Buffer Size

Determines the amount of memory to be used for receiving data and printing data. If **Maximum** is selected, more memory is allocated for receiving data. If **Minimum** is selected, more memory is allocated for printing data.

Note:

- To activate Buffer Size settings, you must turn off the printer for more than five seconds then turn it back on. Or, you can perform a Reset All operation, as explained in “Reset Menu” on page 336.*
- Resetting the printer erases all print jobs. Make sure the Ready light is not flashing when you reset the printer.*

USB Menu

These settings control communication between the printer and the computer when using the USB interface.

Item	Settings (default in bold)
USB I/F	On , Off
Buffer Size	Normal , Maximum, Minimum

USB I/F

Allows you to activate or deactivate the USB interface.

Buffer Size

Determines the amount of memory to be used for receiving data and printing data. If **Maximum** is selected, more memory is allocated for receiving data. If **Minimum** is selected, more memory is allocated for printing data.

Note:

- To activate Buffer Size settings, you must turn off the printer for more than five seconds then turn it back on. Or, you can perform a Reset All operation, as explained in "Reset Menu" on page 336.*
- Resetting the printer erases all print jobs. Make sure the Ready light is not flashing when you reset the printer.*

Network Menu

See the Network Guide for each setting.

AUX Menu

See the Network Guide for each setting.

LJ4 Menu

These settings control the fonts and symbol sets when in the LJ4 mode.

Item	Settings (default in bold)
Font Source	Resident , Download, ROM A*
Font Number	0 to 65535 (depending on your settings)
Pitch**	0.44 ... 10.00 ... 99.99 cpi in 0.01-cpi increments
Height**	4.00 ... 12.00 ... 999.75 pt in 0.25-pt increments
SymSet	IBM-US , Roman-8, Roman-9, ECM94-1, 8859-2 ISO, 8859-9 ISO, 8859-10ISO, 8859-15ISO, PcBit775, IBM-DN, PcMultiling, PcE.Europe, PcTk437, PcEur858, Pc1004, WiAnsi, WiE.Europe, WiTurkish, WiBALT, DeskTop, PsText, VeInternati, VeUS, MsPublishin, Math-8, PsMath, VeMath, PiFont, Legal, UK, ANSI ASCII, Swedis2, Italian, Spanish, German, Norweg1, French2, Windows, McText, Pclcelandic, Pclt774, PcTurk1, PcPortugues, PcEt850, PcTurk2, PcCanFrench, PcSI437, PcNordic, 8859-3 ISO, 8859-4 ISO, WiBaltic, WiEstonian, WiLatvian, Mazowia, CodeMJK, BpBRASCIi, BpAbicomp, PcGk437, PcGk851, PcGk869, 8859-7 ISO, WiGreek, Europe3, PcCy855, PcCy866, Pclt866, PcUkr866, Pclit771, 8859-5 ISO, WiCyrillic, Bulgarian, Hebrew7, 8859-8 ISO, Hebrew8, PcHe862, Arabic8, PcAr864, 8859-6 ISO, OCR A, OCR B, Pc866Cyr, Pc866Ukr, WinCyr, ISOCyr, Pc8Grk, Pc851Grk, WinGrk, ISOGrk, Greek8, Pc862Heb, Pc864Ara, HPWARA
Form	5 ... 60/64 ** ... 128 lines
Source SymSet	0 ... 277 ... 3199
Dest SymSet	0 ... 277 ... 3199
CR Function	CR , CR + LF
LF Function	LF , CR + LF
Tray Assign	4, 4K , 5S

* Available only when the optional font ROM module is installed.

** Depending on whether Letter (60) or A4 (64) paper has been selected.

Note:

If you normally use the HP LaserJet 4 printer driver when printing, you should change settings using this driver whenever you can. Printer driver settings always override the LJ4 Menu options.

FontSource

Sets the default font source.

Font Number

Sets the default font number for the default font source. The available number depends on the settings you made.

Pitch

Specifies the default font pitch if the font is scalable and of fixed-pitch. You can select from 0.44 to 99.99 cpi (characters per inch), in 0.01-cpi increments. This item may not appear depending on the Font Source or Font Number settings.

Height

Specifies the default font height if the font is scalable and proportional. You can select from 4.00 to 999.75 points, in 0.25-point increments. This item may not appear depending on the Font Source or Font Number settings.

SymSet

Selects the default symbol set. If the font you selected in Font Source and Font Number is not available in the new SymSet setting, the Font Source and the Font Number settings are automatically replaced with the default value, IBM-US.

Form

Selects the number of lines for the selected paper size and orientation. This also causes a line spacing (VMI) change, and the new VMI value is stored in the printer. This means that later changes in the Page Size or Orientation settings cause changes in the `Form` value, based on the stored VMI.

Source SymSet, Dest SymSet

Available only in certain locations where printers are sold with a special ROM module installed to handle specific languages.

CR Function, LF Function

These functions are included for users of particular operating systems, such as UNIX.

Tray Assign

Changes the assignment for the paper source select command. When `4` is selected, the commands are set as compatible with the HP LaserJet 4. When `4K` is selected, the commands are set as compatible with the HP LaserJet 4000, 5000, and 8000. When `5S` is selected, the commands are set as compatible with the HP LaserJet 5Si.

GL2 Menu

This menu lets you set the printer to emulate a plotter, allowing you to use software which requires a plotter for output. The LJ4GL2 mode is similar to the GL/2 mode supported in the HP LaserJet 4 mode. The GLlike mode emulates some of the HP-GL plotter commands and includes all the commands found in HP's GL/2 mode, as well as two additional commands.

Item	Settings (default in bold)
GL Mode	LJ4GL2 , GLlike
Scale	Off , A0, A1, A2, A3
Origin	Corner , Center
Pen	Pen0 , Pen1, Pen2*, Pen3*, Pen4*, Pen5*, Pen6*
End	Butt , Square, Triangular, Round
Join	Mitered , Miteredbeveled, Triangular, Round, Beveled, None
Pen 0 through 6	0.05 ... 0.35 ... 5.00 mm in 0.05-mm increments

* Available only when `GLlike` is selected as the GL Mode.

Before you start printing in the GL/2 mode

You may need to change the following print options in your application, depending on your output needs. Check these settings to make sure they match the data you are trying to print.

Print Options	Settings
Paper size	Printer's paper size setting
Driver (plotter selection)	HP-GL/2 or HP-GL
Pen configuration	Pen thickness
Plot origin	Center or Corner

Orientation	GLlike offers landscape only LJ4GL2 offers landscape and portrait
-------------	--

If you need to configure the printer settings, first switch to the GL/2 emulation mode, then change the settings using the printer driver, or the control panel menus.

Note:

Settings or data saved in the printer's RAM (such as downloaded fonts) may be erased when you change the emulation mode.

GL Mode

Specifies whether the printer uses a direct emulation of the GL/2 plotter language, or the HP LaserJet 4 emulation of GL/2.

Scale

Specifies whether the output from the software is scaled. The scale factor is based on the output paper size of the application.

Origin

Specifies whether the logical origin of the "plotter" is the corner or the center of the paper.

Pen

Allows you to choose a pen which you can then set the thickness for in the Pen 0 through 6 item. The LJ4GL2 mode supports two pens (0 and 1), while the GLlike mode supports seven pens (0 through 6).

End

Specifies the way in which lines end.

Join

Specifies the way in which lines are joined.

Pens 0 through 6

Allows you to set the thickness of the pens used to make the printout. Pen 0 and Pen 1 are available in the LJ4GL2 mode, and Pen 0 through Pen 6 are available in the GLlike mode.

PS3 Menu

These settings are available only when the optional Adobe PostScript 3 ROM module is installed. For installation instructions, see your Adobe PostScript 3 Kit documentation.

Item	Settings (default in bold)
Error Sheet	Off , On
Coloration	Color , Mono, TrueCol.
Image Protect	Off , On

Error Sheet

When you select **On**, the printer prints out an error sheet.

Coloration

Allows you to specify the method of color printing. **Color** refers to color printing at 1 bit/pixel, **Mono** refers to monochrome printing, while **TrueCol.** refers to color printing at 8 bit/pixel.

Image Protect

Allows you to specify whether to employ lossy compression. Lossy compression refers to a data compression technique in which some amount of data is lost.

ESCP2 Menu

This menu allows you to make settings which affect the printer when it is in the ESC/P 2 emulation mode.

Item	Settings (default in bold)
Font	Courier , Prestige, Roman, Sans Serif, Roman T, Orator S, Sans H, Script, OCR A, OCR B
Pitch	10 , 12, 15 cpi, Prop.
Condensed	Off , On
T. Margin	0.40 ... 0.50 ... 1.50 inches in 0.05-inch increments
Text	1... 62/66 *... 117lines
CGTable	PcUSA , Italic, PcMultilin, PcPortugue, PcCanFrenc, PcNordic, PcTurkish2, Pclcelandic, PcE.Europe, BpBRASCII, BpAbicomp, Roman-8, PcEur858, ISO Latin1, 8859-15ISO, PcSI437, PcTurkish1, 8859-9 ISO, Mazowia, CodeMJK, PcGk437, PcGk851, PcGk869, 8859-7 ISO, PcCy855, PcCy866, PcUkr866, PcLit771, Bulgarian, Hebrew7, Hebrew8, PcHe862, PcAr864, PcAr864Ara, PcAr720, PcLit774, Estonia, ISO Latin2, PcLat866
Country	USA , France, Germany, UK, Denmark, Sweden, Italy, Spain1, Japan, Norway, Denmark2, Spain2, LatinAmeric, Korea, Legal
Auto CR	On , Off
Auto LF	Off , On
Bit Image	Dark , Light, BarCode
ZeroChar	0 , (or the zero character with a slash)

* Depending on whether Letter (62) or A4 (66) paper has been selected.

Font

Selects the font.

Pitch

Selects the pitch (the horizontal spacing) of the font in fixed pitch, measured in cpi (characters per inch). You can also choose proportional spacing.

Condensed

Turns condensed printing on or off.

T. Margin

Sets the distance from the top of the page to the baseline of the first printable line. The distance is measured in inches. The smaller the value, the closer the printable line is to the top.

Text

Sets the page length in lines. For this option, a line is assumed to be 1 pica (1/6 inch). If you change the Orientation, Page Size, or T. Margin settings, the page length setting automatically returns to the default for each paper size.

CG Table

Use the character generator (CG) table option to select the graphics character table or the italics table. The graphics table contains graphic characters for printing lines, corners, shaded areas, international characters, Greek characters, and mathematical symbols. If you select *Italic*, the upper half of the character table is defined as italic characters.

Country

Use this option to select one of the fifteen international symbol sets. See "International character sets" on page 407 for samples of the characters in each country's symbol set.

Auto CR

Specifies whether the printer performs a carriage-return/line-feed (CR-LF) operation whenever the printing position goes beyond the right margin. If you select `Off`, the printer does not print any characters beyond the right margin and does not perform any line wrapping until it receives a carriage-return character. This function is handled automatically by most applications.

Auto LF

If you select `Off`, the printer does not send an automatic line-feed (LF) command with each carriage-return (CR). If `On` is selected, a line-feed command is sent with each carriage-return. Select `On` if your text lines overlap.

Bit Image

The printer is able to emulate the graphics densities set with the printer commands. If you select `Dark`, the bit image density is high, and if you select `Light`, the bit image density is low.

If you select `BarCode`, the printer converts bit images to bar codes by automatically filling in any vertical gaps between dots. This produces unbroken vertical lines that can be read by a bar code reader. This mode will reduce the size of the image being printed, and may also cause some distortion when printing bit image graphics.

ZeroChar

Specifies whether the printer prints a slashed or unslashed zero.

FX Menu

This menu allows you to make settings which affect the printer when it is in the FX emulation mode.

Item	Settings (default in bold)
Font	Courier , Prestige, Roman, Sans Serif, Script, Orator S, OCR A, OCR B
Pitch	10 , 12, 15 cpi, Prop.
Condensed	Off , On
T. Margin	0.40 ... 0.50 ... 1.50 inches in 0.05-inch increments
Text	1... 62/66* ... 117lines
CGTable	PcUSA , Italic, PcMultilin, PcPortugue, PcCanFrenc, PcNordic, PcTurkish2, Pclcelandic, PcE.Europe, BpBRASCI, BpAbicomp, Roman-8, PcEur858, ISO Latin1, 8859-15ISO
Country	USA , France, Germany, UK, Denmark, Sweden, Italy, Spain1, Japan, Norway, Denmark2, Spain2, LatinAmeric
Auto CR	On , Off
Auto LF	Off , On
Bit Image	Dark , Light, BarCode
ZeroChar	0 , (or the zero character with a slash)

* Depending on whether Letter (62) or A4 (66) paper has been selected.

Font

Selects the font.

Pitch

Selects the pitch (the horizontal spacing) of the font in fixed pitch, measured in cpi (characters per inch). You can also choose proportional spacing.

Condensed

Turns condensed printing on or off.

T. Margin

Sets the distance from the top of the page to the baseline of the first printable line. The distance is measured in inches. The smaller the value, the closer the printable line is to the top.

Text

Sets the page length in lines. For this option, a line is assumed to be 1 pica (1/6 inch). If you change the Orientation, Page Size, or T. Margin settings, the page length setting automatically returns to the default for each paper size.

CG Table

Use the character generator (CG) table option to select the graphics character table or the italics table. The graphics table contains graphic characters for printing lines, corners, shaded areas, international characters, Greek characters, and mathematical symbols. If you select *Italic*, the upper half of the character table is defined as italic characters.

Country

Use this option to select one of the fifteen international symbol sets. See "International character sets" on page 407 for samples of the characters in each country's symbol set.

Auto CR

Specifies whether the printer performs a carriage-return/line-feed (CR-LF) operation whenever the printing position goes beyond the right margin. If you select *Off*, the printer does not print any characters beyond the right margin and does not perform any line wrapping until it receives a carriage-return character. This function is handled automatically by most applications.

Auto LF

If you select *Off*, the printer does not send an automatic line-feed (LF) command with each carriage-return (CR). If *On* is selected, a line-feed command is sent with each carriage-return. Select *On* if your text lines overlap.

Bit Image

The printer is able to emulate the graphics densities set with the printer commands. If you select *Dark*, the bit image density is high, and if you select *Light*, the bit image density is low.

If you select *BarCode*, the printer converts bit images to bar codes by automatically filling in any vertical gaps between dots. This produces unbroken vertical lines that can be read by a bar code reader. This mode will reduce the size of the image being printed, and may also cause some distortion when printing bit image graphics.

ZeroChar

Selects whether the printer prints a slashed or unslashed zero.

I239X Menu

The I239X mode emulates IBM® 2390/2391 Plus commands.

These settings are available only when the printer is in the I239X mode.

Item	Settings (default in bold)
Font	Courier , Prestige, Gothic, Orator, Script, Presentor, Sans Serif
Pitch	10 , 12, 15, 17, 20, 24 cpi, Prop.
Code Page	437 , 850, 858, 860, 863, 865
T. Margin	0.30 ... 0.40 ...1.50 inches in 0.05-inch increments
Text	1 ... 63/67* ... 117lines
Auto CR	Off , On
Auto LF	Off , On
Alt. Graphics	Off , On
Bit Image	Dark , Light
ZeroChar	0 , (or the zero character with a slash)
CharacterSet	1** , 2**

* Depends on whether Letter (63) or A4 (67) paper has been selected.

** Depends on whether Letter (1) or A4 (2) paper has been selected.

Font

Selects the font.

Pitch

Selects the pitch (the horizontal spacing) of the font in fixed pitch, measured in cpi (characters per inch). You can also choose proportional spacing.

Code Page

Selects the character tables. Character tables contain the characters and symbols used by different languages. The printer prints text based on the selected character table.

T. Margin

Sets the distance from the top of the page to the baseline of the first printable line. The distance is measured in inches. The smaller the value, the closer the printable line is to the top.

Text

Sets the page length in lines. For this option, a line is assumed to be 1 pica (1/6 inch). If you change the Orientation, Page Size, or T. Margin settings, the page length setting automatically returns to the default for each paper size.

Auto CR

Specifies whether the printer performs a carriage-return/line-feed (CR-LF) operation whenever the printing position goes beyond the right margin. If this setting is off, the printer does not print any characters beyond the right margin and does not perform any line wrapping until it receives a carriage-return character. This function is handled automatically by most applications.

Auto LF

If you select *Off*, the printer does not send an automatic line-feed (LF) command with each carriage-return (CR). If *On* is selected, a line-feed command is sent with each carriage-return. Select *On* if your text lines overlap.

Alt. Graphics

Turns the Alternate Graphics option on or off.

Bit Image

The printer is able to emulate the graphics densities set with the printer commands. If you select `Dark`, the bit image density is high, and if you select `Light`, the bit image density is low.

If you select `BarCode`, the printer converts bit images to bar codes by automatically filling in any vertical gaps between dots. This produces unbroken vertical lines that can be read by a bar code reader. This mode will reduce the size of the image being printed, and may also cause some distortion when printing bit image graphics.

ZeroChar

Selects whether the printer prints a slashed or unslashed zero.

CharacterSet

Selects character table 1 or 2.

Technical Specifications

Paper

Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, EPSON cannot guarantee the quality of any type of paper. Always test samples of paper stock before purchasing large quantities or printing large jobs.

Available paper types

Paper type	Description
Plain paper	General copier paper (Recycled paper is acceptable*)
Envelopes	No paste and no tape No plastic window (unless specifically designed for laser printers)
Labels	The backing sheet should be covered completely, with no gaps between each label
Thick paper	Weight: 106** to 162 g/m (28.2 to 42.3 lb)
Extra thick paper	Weight: 163** to 216 g/m (42.5 to 57.4 lb)
Laser printer paper	EPSON Color Laser Paper
Transparencies	EPSON Color Laser Transparencies
Colored paper	Non-coated
Paper with letterhead	Paper and ink of letterheads must be compatible with laser printers

* Use recycled paper only under normal temperature and humidity conditions. Poor quality paper may reduce print quality, cause paper jams and other problems.

** In general, thick and extra thick paper weighs between 106 g/m and 220 g/m . However, it is described as weighing from 106 to 216 g/m in this guide.

Paper that should not be used

You cannot use the following paper in this printer. It may cause printer damage, paper jams, and poor print quality.

- Media meant for other color laser printers, black-and-white laser printers, color copiers, black-and-white copiers, or ink jet printers

- Previously printed paper by any other color laser printers, black-and-white laser printers, color copiers, black-and-white copiers, ink jet printers, or thermal transfer printers
- Carbon paper, carbonless paper, thermal-sensitive paper, pressure-sensitive paper, acid paper, or paper that uses high-temperature-sensitive ink (around 210 C)
- Labels that peel easily or labels that do not cover the backing sheet completely
- Coated paper or special surface-colored paper
- Paper that has binder holes or is perforated
- Paper that has glue, staples, paper clips, or tape on it
- Paper that attracts static electricity
- Moist or damp paper
- Paper of uneven thickness
- Overly thick or thin paper
- Paper that is too smooth or too rough
- Paper that is different on the front and back
- Paper that is folded, curled, wavy, or torn
- Paper of irregular shape, or paper that does not have right angle corners

Specifications

Plain paper

Weight:	60 to 105 g/m , 16 to 28 lb
Size:	A4 (210 × 297 mm) A5 (148 × 210 mm) B5 (182 × 257 mm) Letter (216 × 279 mm, 8.5 × 11 in.) Legal (216 × 356 mm, 8.5 × 14 in.) Half-Letter (140 mm × 216 mm, 5.5 × 8.5 in.) Government Letter (203 × 267 mm, 8.0 × 10.5 in.) Government Legal (216 × 330 mm, 8.5 × 13 in.) Executive (184 × 267 mm, 7.25 × 10.5 in.) F4 (210 × 330 mm) Custom (88.9 × 139.7 mm to 215.9 × 355.6 mm, 3.5 × 5.5 in. to 8.5 × 14.0 in.)
Paper Sources:	MP tray for all sizes standard lower cassette for A4, A5, B5, Letter, Legal, Government Legal, Executive optional paper cassette unit for A4, A5, B5, Letter, Legal, Government Legal, Executive

Envelopes

Size: Monarch (3 7/8 × 7 1/2 in.)
Commercial 10 (4 1/8 × 9 1/2 in.)
DL (110 × 220 mm)
C5 (162 × 229mm)
C6 (114 × 162 mm)
International B5 (176 × 250 mm, 7 × 9.8 in.)

Paper Source: MP tray only

Labels

Size: A4 (210 × 297 mm)
Letter (216 × 279 mm, 8.5 × 11 in.)

Paper Source: MP tray only

Thick paper

Weight: 106 to 162 g/m , 28.2 to 42.3 lb

Size: 88.9 × 139.7 mm to 215.9 × 355.6 mm
(3.5 × 5.5 in. to 8.5 × 14.0 in.)

Paper Source: MP tray only

Extra thick paper

Weight: 163 to 216 g/m , 42.5 to 57.4 lb

Size: 88.9 × 139.7 mm to 215.9 × 355.6 mm
(3.5 × 5.5 in. to 8.5 × 14.0 in.)

Paper Source: MP tray only

EPSON Color Laser Paper

Size: A4 (210 × 297 mm)
Letter (216 mm × 279 mm, 8.5 × 11 in.)

Paper Sources: MP tray, standard lower cassette, optional
paper cassette unit

EPSON Color Laser Transparencies

Size: A4 (210 × 297 mm)
Letter (216 mm × 279 mm, 8.5 × 11 in.)

Paper Source: MP tray only

Printable area

5-mm minimum margin on all sides

Note:

- The printable area varies, depending on the emulation mode in use.*
- When using ESC/Page language, there is 5-mm minimum margin on all sides.*

Printer

General

Printing method:	Laser beam scanning and dry electrophotographic process
Resolution:	600 dpi, 300dpi
Continuous printing speed* (with A4/Letter):	24 pages per minute or less
First print (with A4/Letter):	Less than 13.2 seconds from the MP tray Less than 13.5 seconds from the standard lower cassette
Warm-up time:	About 30 seconds at normal temperature
Paper feed:	Automatic or manual feed
Paper feed alignment:	Center alignment for all sizes
Duplex	Available paper types are A4, A5, B5, LT, GLG, LGL and EXE of plain paper, EPSON Color Laser Paper
Input paper supply:	
MP tray:	Up to 100 sheets of plain paper, EPSON Color Laser Paper Up to a 10 mm thick stack of envelopes, labels, thick paper, and transparencies
Standard paper cassette:	Up to 500 sheets of plain paper, EPSON Color Laser Paper
Paper output capacity:	Up to 250 sheets of plain paper, EPSON Color Laser Paper
Internal emulation:	HP listed LaserJet 4 emulation (LJ4 mode)

HP-GL/2 emulation (GL2 mode)

ESC/P2 24-pin printer emulation
(ESCP2 mode)

ESC/P 9-pin printer emulation (FX
mode)

IBM Proprinter emulation (I239X mode)

Resident fonts:

84 scalable fonts, and 7 bitmap fonts

RAM:

64 MB, expandable up to 1024 MB
(To increase printer memory to more
than 576 MB, you have to remove the
original 64 MB DIMM and install two
optional DIMMs.)

Environmental

Temperature:	In use:	10 to 32 C (50 to 89.6 F)
	Not in use:	-20 to 40 C (4 to 104 F)
Humidity:	In use:	15 to 85% RH
	Not in use:	5 to 85% RH
Altitude:	3,100 meters (10,170 feet) maximum	

Mechanical

Dimensions and weight:	Height:	44.5 cm (17.5 in.)
	Width:	43.9cm (17.3 in.)*
	Depth:	63.8 cm (25.1 in.)
	Weight:	Approx. 29.8 kg (65.7 lb) without consumables installed

*When extending all trays, 72.9 cm (28.7 in.)

Durability:	5 years or 600,000 pages, whichever comes first
-------------	---

Electrical

	110 V to 120 V Model (Model KAA-3)	220 to 240 V Model (Model KAB-2)
Voltage	110 V-120 V 10%	220 V-240 V 10%
Rated frequency	50 Hz / 60 Hz 3 Hz	50 Hz / 60 Hz 3 Hz
Rated current	Less than 8 A	Less than 4 A

			110 V to 120 V Model (Model KAA-3)	220 to 240 V Model (Model KAB-2)
Power consumption	During printing*	Maximum	900 W	900 W
		Average	600 Wh	600 Wh
	During standby mode		180 Wh	180 Wh
	Average			
Sleep mode		Less than 45 Wh	Less than 45 Wh	

* Includes optional cassette unit.

Standard and approvals

U.S. model:

Safety

UL 60950
CSA No.60950

EMC

FCC Part 15 Subpart B Class B
CSA C108.8 Class B

European model:

Low Voltage Directive 73/23/EEC EN 60950

EMC Directive 89/336/EEC EN 55022 Class B

EN 55024

EN 61000-3-2

EN 61000-3-3

Australian model:

EMC

AS/NZS 3548 Class B

Laser safety

This printer is certified as a Class 1 laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the printer does not produce hazardous laser radiation.

Since radiation emitted by the laser is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation.

CDRH regulations

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration implemented regulations for laser products on August 2, 1976. Compliance is mandatory for products marketed in the United States. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

This laser product conforms to the applicable
requirement of 21 CFR
Chapter I, subchapter J.

SEIKO EPSON CORP.
Hirooka Office
80 Hirooka, Shiojiri-shi, Nagano-ken,
Japan

Interfaces

Parallel interface

Use the IEEE 1284-I compliant parallel interface connector.

ECP mode/Nibble mode

USB interface

USB 1.1

Note:

Only computers equipped with a USB connector and running Mac OS 8.6 to 9.x and X or Windows Me, 98, XP, or 2000 support the USB interface.

Ethernet interface

You can use an IEEE 802.3 100BASE-TX/10 BASE-T straight-through shielded, twisted-pair interface cable with an RJ45 connector.

Options and Consumables

500-Sheet/1000-Sheet Paper Cassette Unit

Product number:	C12C802061* (for 500 sheets) C12C802071* (for 1,000 sheets)
Paper size:	A4, A5, B5, Letter, Legal (LGL), Government Legal (GLG), and Executive
Paper weight:	60 to 105 g/m (16 to 28 lb)
Paper feed:	Two paper cassettes mounted Automatic feed delivery system Cassette capacity up to 500 sheets (for each of cassettes)
Paper types:	Plain paper, EPSON Color Laser Paper
Power supply:	DC 5V and 24V supplied by the printer
Model:	KAA-4 (C12C802061) KAA-2 (C12C802071)

Dimensions and weight:

For 500-Sheet Paper Cassette Unit

Height:	172 mm (6.8 in.)
Width:	439 mm (17.3 in.)
Depth:	563 mm (22.2 in.)
Weight:	14.5kg (32.0 lb) including all cassettes

For 1000-Sheet Paper Cassette Unit

Height:	336mm (13.2 in.)
Width:	439 mm (17.2 in.)
Depth:	563 mm (22.2 in.)
Weight:	19.0 kg (41.9 lb) including all cassettes

* This product conforms to CE marking requirements in accordance with EC Directive 89/336/EEC.

Memory modules

DRAM type:	Synchronous Dynamic RAM Double In-line memory module (SDRAM DIMM)
Memory size:	32 MB, 64 MB, 128 MB, 256 MB, or 512 MB
CAS Latency	CL = 2
Type:	168-pin type, 64 bit, 3.3 V, with SPD* PC 100 compliant
Dimensions:	Within 134 × 36 mm with a thickness of 10 mm A height of less than 40 mm

* SPD stands for Serial Presence Detect, a chip residing on the memory module that contains information about the size, speed, and other specifications of the memory as well as manufacturer information that can be retrieved by the motherboard.

Hard Disk Drive

Product code: C12C824061*

Capacity: 20 GB

* This product conforms to CE marking requirements in accordance with EC Directive 89/336/EEC.

Toner cartridges

Product number: Yellow: S050148*

Magenta: S050147*

Cyan: S050146*

Black: S050149*

Storage temperature: 0 to 35 C (32 to 95 F)

Storage humidity: 15 to 80% RH

Life: Black: Up to 10,000 images

(under the conditions of A4 size paper, continuous printing, and 5% print ratio) Yellow, Magenta, Cyan: Up to 8,000 images

* This product conforms to CE marking requirements in accordance with EC Directive 89/336/EEC.

The actual number of pages you can print with toner cartridges varies depending on the type of printing.

Photoconductor unit

Product number:	S051093*
Storage temperature:	0 to 35 C (32 to 95 F)
Storage humidity:	15 to 80% RH
Life: (when using A4 or Letter size paper)	30,000 pages of continuous printing Service life may be shortened by repeatedly warming up the printer, or by frequently printing on envelopes, labels, thick paper, or transparencies.

* This product conforms to CE marking requirements in accordance with EC Directive 89/336/EEC.

The actual number of pages you can print with a photoconductor unit varies depending on the type of printing.

Transfer unit

Product number:	S053006
Storage temperature:	0 to 35 C (32 to 95 F)
Storage humidity:	15 to 80% RH
Life: (when using A4 or Letter size paper)	25,000 pages of continuous printing Service life may be shortened by repeatedly warming up the printer, or by frequently printing on envelopes, labels, thick paper, transparencies, or paper that is smaller than the print data's page size.

The actual number of pages you can print before replacing the transfer unit varies depending on the type of printing.

Fuser unit 120/220

Product number: S053011/S053012*
Product number varies by location.

Storage temperature: 0 to 35 C (32 to 95 F)

Storage humidity: 15 to 80% RH

Life: 100,000 pages of continuous printing

(when using A4 or

Letter size paper, and
single-side printing)

Service life may be shortened by
repeatedly warming up the printer, or by
frequently printing on envelopes, labels,
thick paper, or transparencies.

* This product conforms to CE marking requirements in accordance with EC
Directive 89/336/EEC.

The actual number of pages you can print before replacing the
fuser unit varies depending on the type of printing.

Working with Fonts

EPSON BarCode Fonts (Windows Only)

EPSON BarCode Fonts let you easily create and print many types of bar codes.

Normally, bar code creation is a laborious process requiring you to specify various command codes, such as Start bar, Stop bar and OCR-B, in addition to the bar code characters themselves. However, EPSON BarCode Fonts are designed to add such codes automatically, allowing you to easily print bar codes that conform to a variety of bar code standards.

EPSON BarCode Fonts support the following types of bar codes.

Bar code Standard	EPSON BarCode	OCR-B	Check Digit	Comments
EAN	EPSON EAN-8	Yes	Yes	Creates EAN (abbreviated version) bar codes.
	EPSON EAN-13	Yes	Yes	Creates EAN (standard version) bar codes.
UPC-A	EPSON UPC-A	Yes	Yes	Creates UPC-A bar codes.
UPC-E	EPSON UPC-E	Yes	Yes	Creates UPC-E bar codes.

Bar code Standard	EPSON BarCode	OCR-B	Check Digit	Comments
Code39	EPSON Code39	No	No	Printing of OCR-B and check digits can be specified with the font name.
	EPSON Code39 CD	No	Yes	
	EPSON Code39 CD Num	Yes	Yes	
	EPSON Code39 Num	Yes	No	
Code128	EPSON Code128	No	Yes	Creates Code128 bar codes.
Interleaved 2 of 5 (ITF)	EPSON ITF	No	No	Printing of OCR-B and check digits can be specified with the font name.
	EPSON ITF CD	No	Yes	
	EPSON ITF CD Num	Yes	Yes	
	EPSON ITF Num	Yes	No	
Codabar	EPSON Codabar	No	No	Printing of OCR-B and check digits can be specified with the font name.
	EPSON Codabar CD	No	Yes	
	EPSON Codabar CD Num	Yes	Yes	
	EPSON Codabar Num	Yes	No	

System requirements

To use EPSON BarCode Fonts, your computer system should meet the following requirements:

Computer: IBM PC series or IBM compatible with an i386SX or higher CPU

Operating system: Microsoft Windows Me, 98, 95, Windows XP, 2000, NT 4.0

Hard disk: 15 to 30 KB free space, depending on the font.

Note:

EPSON BarCode Fonts can only be used with EPSON printer drivers.

Installing EPSON BarCode Fonts

Follow these steps to install EPSON BarCode Fonts. The procedure described here is for installation in Windows 98; the procedure for other Windows operating systems is nearly the same.

1. Make sure that the printer is off and that Windows is running on your computer.
2. Insert the printer software CD-ROM in the CD-ROM drive.

Note:

- If the language section window appears, select your country.*
- If the EPSON Installation Program screen does not appear automatically, double-click the My Computer icon, right-click the CD-ROM icon, and click OPEN in the menu that appears. Then double-click Epsetup.exe.*

3. Click Continue. When the software license agreement screen appears, read the statement and then click **Agree**.
4. In the dialog box that appears, click **Install Software**.



5. Click **Custom**.
6. Select the **EPSON BarCode Font** check box and click **Install**. Then follow the on-screen instructions.




7. When installation is complete, click **OK**.

EPSON BarCode Fonts are now installed on your computer.


Printing with EPSON BarCode Fonts

Follow these steps to create and print bar codes using EPSON BarCode Fonts. The application featured in these instructions is Microsoft WordPad. The actual procedure may differ slightly when printing from other applications.

1. Open a document in your application and enter the characters you want to convert into a bar code.

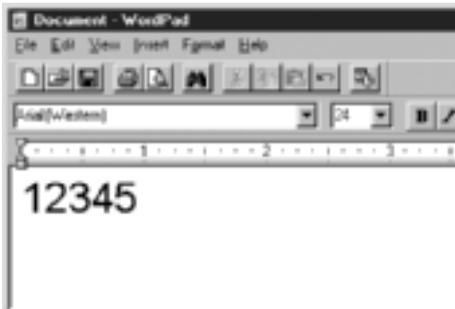

2. Select the characters, then select Font from the Format menu.

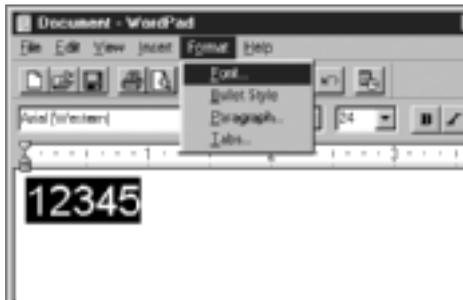


3. Select the EPSON BarCode Font you want to use, then set the font size and click OK.



Note:

In Windows XP, 2000, and NT 4.0, you cannot use font sizes larger than 96 points when printing bar codes.

4. The characters you selected appear as bar code characters similar to those shown below.

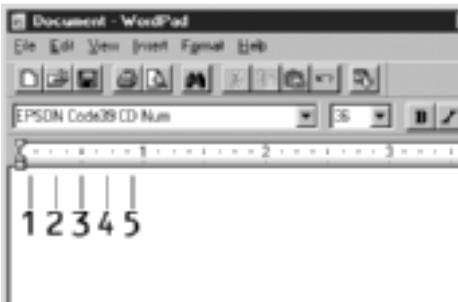

- Select Print from the File menu, then select your EPSON printer and click Properties. Make the following printer driver settings. AcuLaser C4100 is a color printer. See the Color Printer Driver section in the table below.

	Monochrome Printer Driver	Color Printer Driver	Host Based Monochrome Printer Driver
Color	(not available)	Black	(not available)
Print Quality	600 dpi	600 dpi	600 dpi
Toner Save	Not selected	Not selected	Not selected
Zoom Options	Not selected	Not selected	Not selected
Graphic mode (in the Extended Settings dialog box accessed through the Optional Settings tab)	High Quality (Printer)	(not available)	(not available)
Printing Mode (in the Extended Settings dialog box accessed through the Optional Settings tab)	(not available)	High Quality (Printer)	(not available)

- Click OK to print the bar code.

Note:

If there is an error in the bar code character string, such as inappropriate data, the bar code will be printed as it appears on the screen, but it cannot be read by a bar code reader.

Notes on inputting and formatting bar codes

Please note the following when inputting and formatting bar code characters:

- ❑ Do not apply shading or special character formatting, such as bold, italic, or underline.
- ❑ Print bar codes in black and white only.
- ❑ When rotating characters, only specify rotation angles of 90 , 180 , and 270 .
- ❑ Turn off all automatic character and word spacing settings in your application.
- ❑ Do not use features in your application that enlarge or reduce the size of characters in only the vertical or horizontal direction.
- ❑ Turn off your application's auto-correct features for spelling, grammar, spacing, etc.
- ❑ To more easily distinguish bar codes from other text in your document, set your application to show text symbols, such as paragraph marks, tabs, etc.
- ❑ Because special characters such as Start bar and Stop bar are added when an EPSON BarCode Font is selected, the resulting bar code may have more characters than were originally input.
- ❑ For best results, use only the font sizes recommended in "BarCode Font specifications" on page 381 for the EPSON BarCode Font you are using. Bar codes in other sizes may not be readable with all bar code readers.

Note:

Depending on the print density, or on the quality or color of the paper, bar codes may not be readable with all bar code readers. Print a sample and make sure the bar code can be read before printing large quantities.

BarCode Font specifications

This section contains details on the character input specifications for each EPSON BarCode Font.

EPSON EAN-8

- EAN-8 is an eight-digit abbreviated version of the EAN bar code standard.
- Because the check digit is added automatically, only 7 characters can be input.

Character type	Numbers (0 to 9)
Number of characters	7 characters
Font size	52 pt to 130 pt (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 52 pt, 65 pt (standard), 97.5 pt, and 130 pt.

The following codes are inserted automatically and need not be input by hand:

- Left/Right margin
- Left/Right guard bar
- Center bar
- Check digit
- OCR-B

Print sample



EPSON EAN-13

- EAN-13 is the standard 13-digit EAN bar code.
- Because the check digit is added automatically, only 12 characters can be input.

Character type	Numbers (0 to 9)
Number of characters	12 characters
Font size	60 pt to 150 pt (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 60 pt, 75 pt (standard), 112.5 pt, and 150 pt.

The following codes are inserted automatically and need not be input by hand:

- Left/Right margin
- Left/Right guard bar
- Center bar
- Check digit
- OCR-B

Print sample



EPSON UPC-A


- UPC-A is the standard bar code specified by the American Universal Product Code (UPC Symbol Specification Manual).
- Only regular UPC codes are supported. Supplementary codes are not supported.

Character type	Numbers (0 to 9)
Number of characters	11 characters
Font size	60 pt to 150 pt (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 60 pt, 75 pt (standard), 112.5 pt and 150 pt.

The following codes are inserted automatically and need not be input by hand:

- Left/Right margin
- Left/Right guard bar
- Center bar
- Check digit
- OCR-B

Print sample

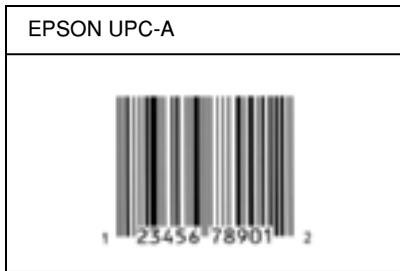

EPSON UPC-E

- UPC-E is the UPC-A zero-suppression (deletes extra zeros) bar code specified by the American Universal Product Code (UPC Symbol Specification Manual).

Character type	Numbers (0 to 9)
Number of characters	6 characters
Font size	60 pt to 150 pt (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 60 pt, 75 pt (standard), 112.5 pt, and 150 pt.

The following codes are inserted automatically and need not be input by hand:

- Left/Right margin
- Left/Right guard bar
- Check digit
- OCR-B
- The numeral "0"

Print sample



EPSON Code39

- Four Code39 fonts are available, allowing you to enable and disable the automatic insertion of check digits and OCR-B.
- The height of the bar code is automatically adjusted to 15% or more of its total length, in conformance to the Code39 standard. For this reason, it is important to keep at least one space between the bar code and the surrounding text to prevent overlapping.
- Spaces in Code39 bar codes should be input as “_” underbars.
- When printing two or more bar codes on one line, separate the bar codes with a tab, or select a font other than a BarCode Font and input the space. If a space is input while a Code39 font is selected, the bar code will not be correct.

Character type	Alphanumeric characters (A to Z, 0 to 9) Symbols (- . space \$ / + %)
Number of characters	No limit

Font size	<p>When OCR-B is not used: 26 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 26 pt, 52 pt, 78 pt, and 104 pt.</p> <p>When OCR-B is used: 36 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 36 pt, 72 pt, 108 pt, and 144 pt.</p>
-----------	--

The following codes are inserted automatically and need not be input by hand:

- Left/Right quiet zone
- Check digit
- Start/Stop character

Print sample

EPSON Code39	EPSON Code39 CD
	
EPSON Code39 Num	EPSON Code39 CD Num
	

EPSON Code128

- Code128 fonts support code sets A, B, and C. When the code set of a line of characters is changed in the middle of the line, a conversion code is automatically inserted.


- ❑ The height of the bar code is automatically adjusted to 15% or more of its total length, in conformance to the Code128 standard. For this reason, it is important to keep at least one space between the bar code and the surrounding text to prevent overlapping.
- ❑ Some applications automatically delete the spaces at the end of lines or change multiple spaces into tabs. Bar codes containing spaces may not be correctly printed from applications that automatically delete spaces from the ends of lines or change multiple spaces into tabs.
- ❑ When printing two or more bar codes on one line, separate the bar codes with a tab, or select a font other than a BarCode Font and input the space. If a space is input while Code128 is selected, the bar code will not be correct.

Character type	All ASCII characters (95 in total)
Number of characters	No limit
Font size	26 pt to 104 pt (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 26 pt, 52 pt, 78 pt, and 104 pt.

The following codes are inserted automatically and need not be input by hand:

- ❑ Left/Right quiet zone
- ❑ Start/Stop character
- ❑ Check digit
- ❑ Change code set character

Print sample

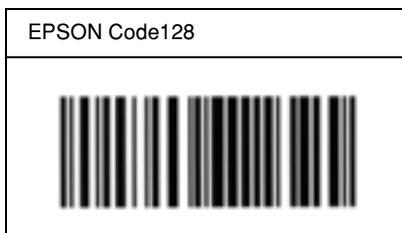

EPSON ITF

- ❑ The EPSON ITF fonts conform to the USS Interleaved 2-of-5 standard (American).
- ❑ Four EPSON ITF fonts are available, allowing you to enable and disable the automatic insertion of check digits and OCR-B.
- ❑ The height of the bar code is automatically adjusted to 15% or more of its total length, in conformance to the Interleaved 2-of-5 standard. For this reason, it is important to keep at least one space between the bar code and the surrounding text to prevent overlapping.
- ❑ Interleaved 2 of 5 treats every two characters as one set. When there are an odd number of characters, EPSON ITF fonts automatically add a zero to the beginning of the character string.

Character type	Numbers (0 to 9)
Number of characters	No limit

Font size	When OCR-B is not used: 26 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 26 pt, 52 pt, 78 pt, and 104 pt. When OCR-B is used: 36 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 36 pt, 72 pt, 108 pt, and 144 pt.
-----------	---

The following codes are inserted automatically and need not be input by hand:

- Left/Right quiet zone
- Start/Stop character
- Check digit
- The numeral “0” (added to the beginning of character strings as needed)

Print sample

EPSON ITF	EPSON ITF CD
	
EPSON ITF Num	EPSON ITF CD Num
	

EPSON Codabar

- Four Codabar fonts are available, allowing you to enable and disable the automatic insertion of check digits and OCR-B.
- The height of the bar code is automatically adjusted to 15% or more of its total length, in conformance to the Codabar standard. For this reason, it is important to keep at least one space between the bar code and the surrounding text to prevent overlapping.
- When either a Start or a Stop character is input, Codabar fonts automatically insert the complementary character.
- If neither a Start nor a Stop character is input, these characters are automatically input as the letter "A".

Character type	Numbers (0 to 9) Symbols (- \$: / . +)
Number of characters	No limit
Font size	When OCR-B is not used: 26 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 26 pt, 52 pt, 78 pt, and 104 pt. When OCR-B is used: 36 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 36 pt, 72 pt, 108 pt, and 144 pt.

The following codes are inserted automatically and need not be input by hand:

- Left/Right quiet zone
- Start/Stop character (when not input)
- Check digit

Print sample

EPSON Codabar	EPSON Codabar CD
	
EPSON Codabar Num	EPSON Codabar CD Num
 A 1 2 3 4 5 6 7 A	 A 1 2 3 4 5 6 7 4 A

Available Fonts

The following table lists the fonts that are installed in your printer. The names of all the fonts appear in your application software's font list if you are using the driver provided with the printer. If you are using a different driver, all of these fonts may not be available.

The fonts provided with the printer are shown below, according to the emulation mode.

LJ4/GL2 mode

Font Name	Family	HP Equivalent
Courier	Medium, Bold, Italic, Bold Italic	Courier
ITC Zapf Dingbats	-	ITC Zapf Dingbats
CG Times	Medium, Bold, Italic, Bold Italic	CG Times
CG Omega	Medium, Bold, Italic, Bold Italic	CG Omega
Coronet	-	Coronet
Clarendon Condensed	-	Clarendon Condensed
Univers	Medium, Bold, Medium Italic, Bold Italic	Univers
Univers Condensed	Medium, Bold, Medium Italic, Bold Italic	Univers Condensed
Antique Olive	Medium, Bold, Italic	Antique Olive
Garamond	Antiqua, Halbfett, Kursiv, Kursiv Halbfett	Garamond
Marigold	-	Marigold
Albertus	Medium, Extra Bold	Albertus
Ryadh	Medium, Bold	Ryadh
Malka	Medium, Bold, Italic	Miryam
Dorit	Medium, Bold	David
Naamit	Medium, Bold	Narkis
Arial	Medium, Bold, Italic, Bold Italic	Arial
Times New	Medium, Bold, Italic, Bold Italic	Times New
Helvetica	Medium, Bold, Oblique, Bold Oblique	Helvetica

Font Name	Family	HP Equivalent
Helvetica Narrow	Medium, Bold, Oblique, Bold Oblique	Helvetica Narrow
Palatino	Roman, Bold, Italic, Bold Italic	Palatino
ITC Avant Garde	Book, Demi, Book Oblique, Demi Oblique	ITC Avant Garde Gothic
ITC Bookman	Light, Demi, Light Italic, Demi Italic	ITC Bookman
New Century Schoolbook	Roman, Bold, Italic, Bold Italic	New Century Schoolbook
Times	Roman, Bold, Italic, Bold Italic	Times
ITC Zapf Chancery Italic	-	ITC Zapf Chancery Medium Italic
Symbol	-	Symbol
SymbolPS	-	SymbolPS
Wingdings	-	Wingdings
Letter Gothic	Medium, Bold, Italic	Letter Gothic
Naskh	Medium, Bold	Naskh
Koufi	Medium, Bold	Koufi
CourierPS	Medium, Bold, Oblique, Bold Oblique	CourierPS
Line Printer	-	Line Printer
OCR A	-	-
OCR B	-	-
Code39	9.37cpi, 4.68cpi	-
EAN/UPC	Medium, Bold	-

When selecting fonts in your application software, choose the font name listed in the HP Equivalent column.

Note:

Depending on the print density, or on the quality or color of the paper, OCR A, OCR B, Code39, and EAN/UPC fonts may not be readable. Print a sample and make sure the fonts can be read before printing large quantities.

ESC/P 2 and FX modes

Font Name	Family
Courier	Medium, Bold
EPSON Prestige	-
EPSON Roman	-
EPSON Sans serif	-
Arial	Medium, Bold
Letter Gothic	Medium, Bold
Times New Roman	Medium, Bold
EPSON Script	-
OCR A	-
OCR B	-

* Available only in ESC/P2 mode.

Note:

Depending on the print density, or on the quality or color of the paper, OCR A and OCR B fonts may not be readable. Print a sample and make sure the fonts can be read before printing large quantities.

I239X mode

Font Name	Family
Courier	Medium, Bold
EPSON Prestige	-
EPSON Gothic	-
EPSON Orator	-
EPSON Script	-
EPSON Presentor	-
EPSON Sans serif	-
OCR B	-

Note:

Depending on the print density, or on the quality or color of the paper, the OCR B font may not be readable. Print a sample and make sure the font can be read before printing large quantities.

Printing font samples

You can print samples of the fonts available in each mode by using the control panel's Information Menu. Follow these steps to print font samples.

1. Make sure that paper is loaded.
2. Make sure the LCD panel displays *Ready* or *Standby*, then press the  Enter button.
3. Press the  Down button to select the font sample for the appropriate mode.

4. Press the  Enter button to print the selected font sample sheet.

Adding More Fonts

You can add a wide variety of fonts to your computer. Most font packages include an installer for this purpose.

See your computer documentation for instructions on installing fonts.

Selecting Fonts

Whenever possible select fonts in your application. See your software documentation for instructions.

If you are sending unformatted text to the printer directly from DOS or if you are using a simple software package that does not include font selection, you can select fonts using the printer's control panel menus when in the LJ4, ESC/P 2, FX, or I239X emulation mode.

Downloading Fonts

Fonts that reside on your computer's hard disk can be downloaded, or transferred, to the printer so they can be printed. Downloaded fonts, also called soft fonts, remain in printer memory until you turn off the printer or otherwise reset it. If you plan on downloading many fonts, make sure your printer has sufficient memory.

Most font packages make it easy to manage fonts by providing their own installer. The installer gives you the option of having the fonts automatically downloaded whenever you start your computer or having fonts downloaded only when you need to print a particular font.

EPSON Font Manager (Windows Only)

EPSON Font Manager provides you with 131 software fonts.

System requirements

To use EPSON Font Manager, your computer system should meet the following requirements:

Computer:	IBM PC series or IBM compatible with an 486 or higher CPU
Operating system:	Microsoft Windows Me, 98, 95, XP, 2000, or NT 4.0 Internet Explorer 4.0 or higher
Hard disk:	At least 9 MB of free space

Installing EPSON Font Manager

Follow these steps to install EPSON Font Manager.

1. Make sure that the printer is off and that Windows is running on your computer.
2. Insert the printer software CD-ROM in the CD-ROM drive.

Note:

- If the language selection window appears, select your country.*

- ❑ *If the EPSON Installation Program screen does not appear automatically, double-click the My Computer icon, right-click the CD-ROM icon, and click OPEN in the menu that appears. Then double-click Epsetup.exe.*
3. Click Continue. When the software license agreement screen appears, read the statement and then click Agree.
 4. In the dialog box that appears, click Install Software.



5. Click Custom.
6. Select the EPSON Font Manager check box and click Install. Then follow the on-screen instructions.



7. When installation is complete, click OK.

EPSON Font Manager is now installed on your computer.

Symbol Sets

Introduction to Symbol Sets

Your printer can access a variety of symbol sets. Many of these symbol sets differ only in the international characters specific to each language.

Note:

Since most software handles fonts and symbols automatically, you will probably never need to adjust the printer's settings. However, if you are writing your own printer control programs, or if you are using older software that cannot control fonts, refer to the following sections for symbol set details.

When you are considering which font to use, you should also consider which symbol set to combine with the font. Available symbol sets vary depending on which emulation mode you use and which font you choose.

In the LJ4 Emulation Mode

The following symbol sets are available in LJ4 emulation mode.

Available typefaces	Symbol set name:
---------------------	------------------

19 Typefaces Courier CG Times Universe Letter Gothic Line Printer	IBM-US (10U)	Roman-8 (8U)
	ECM94-1 (0N)	8859-2 ISO (2N)
	8859-9 ISO (5N)	8859-10ISO (6N)
	IBM-DN (11U)	PcMultilingual (12U)
	PcE.Europe (17U)	PcTk437 (9T)
	WiAnsi (19U)	WiE.Europe (9E)
	WiTurkish (5T)	Legal (1U)
	UK (1E)	Swedis2 (0S)
	Italian (0I)	Spanish (2S)
	German (1G)	Norweg1 (0D)
	French2 (1F)	Roman-9 (4U)
	8859-15ISO (9N)	PcEur858 (13U)
19 Typefaces Courier CG Times Universe Letter Gothic	PcBlt775 (26U)	Pc1004 (9J)
	WiBALT (19L)	DeskTop (7J)
	PsText (10J)	Windows (9U)
	McText (12J)	MsPublishi (6J)
	PiFont (15U)	VeMath (6M)
	VeInternational (13J)	VeUS (14J)
19 Typefaces Courier CG Times Universe Letter Gothic Dorit Malka Naamit Naskh Koufi Ryadh	PsMath (5M)	Math-8 (8M)

19 Typefaces Courier CG Times Universe Letter Gothic Dorit Malka Naamit Naskh Koufi Ryadh Line Printer	ANSI ASCII (0U)	
Courier CG Times Universe Letter Gothic	Pc866Cyr (3R)	Pc866Ukr (14R)
	WinCyr (9R)	ISOCyr (10N)
	Pc8Grk (12G)	Pc851Grk (10G)
	WinGrk (9G)	ISOGrk (12N)
	Greek8 (8G)	

The 19 typefaces refer to those listed below:

- CG Omega
- Coronet
- Clarendon Condensed
- Univers Condensed
- Antique Olive
- Garamond
- Marigold
- Albertus
- Arial
- Times New
- Helvetica
- Helvetica Narrow
- Palatino
- ITC Avant Garde Gothic
- ITC Bookman
- New Century Schoolbook
- Times
- ITC Zapf Chancery Medium Italic
- CourierPS

International character sets for ISO

The following are the available international character sets for ISO.

Character sets:	ANSI ASCII (0U)	Norweg 1 (0D)
	French (0F)	HP German (0G)
	Italian (0I)	JIS ASCII (0K)
	Swedis 2 (0S)	Norweg 2 (1D)
	UK (1E)	French 2 (1F)
	HP Spanish (1S)	German (1G)
	Chinese (2K)	Spanish (2S)
	IRV (2U)	Swedish (3S)
	Portuguese (4S)	IBM Portuguese (5S)
	IBM Spanish (6S)	

In the ESC/P 2 or FX Modes

Character Table	Available typefaces			
	OCR B	Courier	EPSON Roman EPSON Sans serif EPSON Prestige EPSON Script	Letter Gothic Arial Times New
PcUSA	available	available	available	available
PcMultilingual	not available	available	available	available
PcPortuguese	not available	available	available	available
PcCanFrench	not available	available	available	available
PcNordic	not available	available	available	available
PcE.Europe	not available	available	not available	available
PcTurk2	not available	available	not available	available
PcIcelandic	not available	available	not available	available
BpBRASCI	not available	available	not available	available
BpAbicom	not available	available	not available	available
Roman-8	not available	available	available	available
PcEur858	available	available	available	available
ISO Latin1	not available	available	not available	available
8859-15ISO	not available	available	available	available
PcSI437*	not available	available	not available	not available
PcTurk1*	not available	available	not available	not available
8859-9 ISO*	not available	available	not available	not available
Mazowia*	not available	available	not available	not available
CodeMJK*	not available	available	not available	not available

PcGk437*	not available	available	not available	not available
PcGk851*	not available	available	not available	not available
PcGk869*	not available	available	not available	not available
8859-7 ISO*	not available	available	not available	not available
PcCy855*	not available	available	not available	not available
PcCy866*	not available	available	not available	not available
Bulgarian*	not available	available	not available	not available
PcUkr866*	not available	available	not available	not available
Hebrew7*	not available	available	not available	not available
Hebrew8*	not available	available	not available	not available
PcHe862*	not available	available	not available	not available
PcAr864*	not available	available	not available	not available
PcLit771*	not available	available	not available	not available
PcLit774*	not available	available	not available	not available
Estonia*	not available	available	not available	not available
ISO Latin 2*	not available	available	not available	not available
PcLat866*	not available	available	not available	not available
PcAr864Ara*	not available	available	not available	not available
PcAr720*	not available	available	not available	not available

* Available only in ESC/P2 mode.

Times New is a type face compatible with RomanT.

Letter Gothic is a type face compatible with OratorS.

Arial is a type face compatible with SansH.

International character sets

You can select one of the following international character sets using the ESC R command:

Character sets: USA, France, Germany, UK, Japan,
Denmark1, Denmark2, Sweden, Italy,
Spain1, Spain2, Norway, Latin America,
Korea*, Legal*

* Available for ESC/P 2 emulation only

Characters available with the ESC (^) command

To print the characters in the table below, use the ESC (^) command.

CODE	0	1	7
0			▶
1	⊙	←	
2	⊗	↑	
3	▼	≡	
4	⊕	≡	
5	⊕		
6	⊕	—	
7	·	↓	
8	■	↑	
9	○	↓	
A	■	→	
B	⊗	←	
C	⊗	↵	
D	↵	↵	
E	↵	↵	
F	○	▼	△

In the I239X Emulation Mode

The available symbol sets in the I239X mode are PcUSA, PcMultilingual, PcEur858, PcPortuguese, PcCanFrench, PcNordic. See “In the ESC/P 2 or FX Modes” on page 405.

The available fonts are EPSON Sans Serif, Courier, EPSON Prestige, EPSON Gothic, EPSON Presentor, EPSON Orator, and EPSON Script.

In the EPSON GL/ 2 Mode

The available symbol sets in the EPSON GL/ 2 mode are the same as those in LaserJet4 emulation mode. See “In the LJ4 Emulation Mode” on page 401.

Contacting Customer Support

If your EPSON product is not operating properly and you cannot solve the problem using the troubleshooting information in your product documentation, contact customer support services for assistance. If customer support for your area is not listed below, contact the dealer where you purchased your product.

Customer support will be able to help you much more quickly if you give them the following information:

- Product serial number
(The serial number label is usually on the back of the product.)
- Product model
- Product software version
(Click **About**, **Version Info**, or similar button in the product software.)
- Brand and model of your computer
- Your computer operating system name and version
- Names and versions of the software applications you normally use with your product

For users in Latin America

Electronic support services are available 24 hours a day at the following web sites:

Service	Access
World Wide Web	From the Internet, you can reach EPSON's Latin American web site at http://www.latin.epson.com In Brazil, you can reach Epson at http://www.epson.com.br

To speak with a customer support representative, call one of the numbers below:

Country	Telephone number
Argentina	(54 11) 4346-0300
Brazil	(55 11) 4196-6350
Chile	(562) 230-9500
Colombia	(571) 523-5000, (1-800) 377-6627
Costa Rica	(506) 210-9555
México México, D.F. Resto del país	(5255) 5328-4008, 01-800-50-607-00
Perú	(511) 224-2336
Venezuela	(52-212) 240-1111

For users in Australia

EPSON Australia wishes to provide you with a high level of customer service. In addition to your product documentation, we provide the following sources for obtaining information:

Your Dealer

Don't forget that your dealer can often help identify and resolve problems. The dealer should always be the first call for advise on problems; they can often solve problems quickly and easily as well as give advise on the next step to take.

Internet URL <http://www.epson.com.au>

Access the EPSON Australia World Wide Web pages. Worth taking your modem here for the occasional surf! The site provides a download area for drivers, EPSON contact points, new product information and technical support (e-mail).

EPSON Faxback Service

EPSON Faxback service will fax you the latest specifications for most EPSON products offered in Australia. Phone (02) 9903 9075 and the system will guide you through a number of choices before faxing the information to your fax machine.

EPSON Helpdesk

EPSON Helpdesk is provided as a final backup to make sure our clients have access to advise. Operators on the Helpdesk can aid you in installing, configuring and operating your EPSON product. Our Pre-sales Helpdesk staff can provide literature on new EPSON products and advise where the nearest dealer or service agent is located. Many types of queries are answered here.

The Helpdesk numbers are:

Phone:	1300 361 054
Fax:	(02) 9903 9189

We encourage you to have all the relevant information on hand when you ring. The more information you prepare, the faster we can help solve the problem. This information includes your EPSON product documentation, type of computer, operating system, application programs, and any information you feel is required.

For users in Singapore

Sources of information, support, and services available from Epson Singapore are:

World Wide Web (<http://www.epson.com.sg>)

Information on product specifications, drivers for download, Frequently Asked Questions (FAQ), Sales Enquiries, and Technical Support via e-mail are available.

Epson HelpDesk (Phone: (65) 6586 3111)

Our HelpDesk team can help you with the following over the phone:

- Sales enquiries and product information
- Product usage questions or problem
- Enquiries on repair service and warranty

For users in Thailand

Contact for information, support, and services are:

World Wide Web (<http://www.epson.co.th>)

Information on product specifications, drivers for download, Frequently Asked Questions (FAQ), and e-mail are available.

Epson Hotline (Phone: (66)2-670-0333)

Our Hotline team can help you with the following over the phone:

- Sales enquiries and product information
- Product usage questions or problem
- Enquiries on repair service and warranty

For users in Indonesia

Contacts for information, support, and services are:

World Wide Web (<http://www.epson.co.id>)

- Information on product specifications, drivers for download
- Frequently Asked Questions (FAQ), Sales Enquiries, questions through e-mail

Epson Hotline

- Sales enquiries and product information
- Technical support

Phone (62) 21-572 4350

Fax (62) 21-572 4357

EPSON Service Center

Jakarta	Mangga Dua Mall 3rd floor No 3A/B Jl. Arteri Mangga Dua, Jakarta Phone/Fax: (62) 21-62301104
Bandung	Lippo Center 8th floor Jl. Gatot Subroto No.2 Bandung Phone/Fax: (62) 22-7303766
Surabaya	Gd. Bumi Mandiri 7th floor Jl. Jend. Basuki Rachmat No. 129-137 Surabaya Phone/Fax: (62) 31-5479541
Yogyakarta	Hotel Natour Garuda Jl. Malioboro No. 60 Yogyakarta Phone: (62) 274-566353/22-143
Medan	Wisma HSBC 4th floor Jl. Diponegoro No. 11 Medan Phone/Fax: (62) 61-4516173

For users in Hong Kong

To obtain technical support as well as other after-sales services, users are welcome to contact EPSON Hong Kong Limited.

Internet Home Page

EPSON Hong Kong has established a local home page in both Chinese and English on the Internet to provide users with the following information:

- ❑ Product information
- ❑ Answers to Frequently Asked Questions (FAQs)
- ❑ Latest versions of EPSON product drivers

Users can access our World Wide Web home page at:

<http://www.epson.com.hk>

Electronic Bulletin Board System

An electronic bulletin board system (BBS) is also available to obtain product information and the latest versions of product drivers. You can log on to the following number for the BBS service:

BBS: (852) 2827-4244

Technical Support Hotline

You can also contact our technical staff at the following telephone and fax numbers:

Phone: (852) 2585-4399

Fax: (852) 2827-4383

For users in Malaysia

Contacts for information, support, and services are:

World Wide Web (<http://www.epson.com.my>)

- ❑ Information on product specifications, drivers for download
- ❑ Frequently Asked Questions (FAQ), Sales Enquiries, questions through e-mail

Epson Trading (M) SDN. BHD

Head Office.

Phone: 603-56288288

Fax: 603-56212088

Epson Helpdesk

- ❑ Sales enquiries and product information (Infoline)

Phone: 603-56288222

- ❑ Enquiries on repair services & warranty, product usage and technical support (Techline)

Phone: 603-56288333

For users in India

Contacts for information, support, and services are:

World Wide Web (<http://www.epson.co.in>)

Information on product specifications, drivers for download, Frequently Asked Questions (FAQ), Products Enquiry, and Technical Query are available.

Epson India Head Office - Bangalore:

Phone: 5321 266-70

Fax: 5581439/5321095

Epson India Regional Offices:

Mumbai	Phone: 8261516-17 Fax: 8257287
Delhi	Phone: 6447201-06 Fax: 6447205
Chennai	Phone: 8203940/41 Fax: 8272463
Kolkata	Phone: 2871355/56 Fax: 2871357
Hyderabad	Phone: 6329335/36
Cochin	Phone: 361638/362677 Fax: 352940
Pune	Phone: 4335460-ext 214 Fax: 4330881
Ahmedabad	Phone: 6407176/77

Toll Free Telephone Support

To learn more about Epson products or to avail service support, please call 1600 440011. This is a toll-free number and can be accessed (9 A.M to 9 P.M) anywhere in the country.

For users in the Philippines

To obtain technical support as well as other after sales services, users are welcome to contact the EPSON Philippines Corporation at the telephone and fax numbers and e-mail address below:

Phone: (63) 2-813-6567

Fax: (63) 2-813-6545

E-mail: customersupport@epc.epson.com.ph

World Wide Web (<http://www.epson.com.ph>)

Information on product specifications, drivers for download, Frequently Asked Questions (FAQ), and E-mail Enquiries are available.

Epson Helpdesk (Phone: (63) 2-813-6567)

Our Hotline team can help you with the following over the phone:

- Sales enquiries and product information
- Product usage questions or problems
- Enquiries on repair service and warranty

Glossary

ASCII

American Standard Code for Information Interchange. A standardized way of assigning codes to characters and control codes. The system is widely used by manufacturers of computers, printers, and software.

bitmap font

The dot-by-dot representation of a font. Bitmap fonts are displayed on computer screens and printed on dot matrix printers. See *outline font*.

buffer

See *memory*.

character set

A collection of letters, numbers, and symbols used in a particular language.

ColorSync

Macintosh software that is designed to help you get WYSIWYG (what you see is what you get) color output. This software prints colors as you see them on your screen.

cpi (characters per inch)

A measure of the size of fixed-width text characters.

CR (carriage return)

A control code to return the printing position to the start of the next line after printing one line.

default

A value or setting that takes effect when the printer is turned on, reset, or initialized.

download

To transfer information from the computer to the printer.

downloaded font

A font that is loaded into the printer's memory from an outside source, such as a computer. Also called soft font.

dpi (dots per inch)

The number of dots per inch is a measure of printer resolution. The higher the number of dots, the higher the resolution.

driver

See *printer driver*.

drum

The part of the printer mechanism where the image is formed and transferred to paper.

emulation

See *printer emulation*.

FF (Form Feed)

A control code to break the page.

fixed-width font

A font whose characters are allotted the same amount of horizontal space, no matter the width of the character. Thus the uppercase *M* receives the same amount of space as the letter *l*.

font

A set of characters and symbols that share a common typographic design and style.

font family

The collection of all sizes and styles of a font.

halftone

A grayscale image that is composed of small dots. The dots can be close together to create black or more widely spaced to create gray or white areas in the image. Newspaper photographs are common examples of halftones.

initialization

The act of returning the printer to its defaults (fixed set of conditions).

interface

The connection between the printer and the computer. A parallel interface transmits data one character or code at a time, while a serial interface transmits data one bit at a time.

landscape

Printing that is oriented sideways on the page. This orientation gives you a page that is wider than it is high and is useful for printing spreadsheets.

LF (Line Feed)

A control code to start a new line.

memory

The part of the printer's electronic system that is used to store information. Some information is fixed and is used to control how the printer operates. Information that is sent to the printer from the computer (such as downloaded fonts) is stored in memory temporarily. See also *RAM* and *ROM*.

orientation

Refers to the direction in which characters are printed on a page. This direction is either portrait, where the length of the page is longer than its width, or landscape, where the width is longer than its length.

outline font

A font whose outline is described mathematically, allowing it to be rendered (printed or drawn) smoothly at any size.

PCL

The command language built into the Hewlett-Packard® LaserJet® series printers.

photoconductor unit

A component of the printer that contains a photosensitive print drum, developer unit, and intermediate transfer unit. The photoconductor fixes the toner on the paper using heat and pressure.

pitch

A measure of the number of characters per inch (cpi) for fixed-width fonts.

point size

The height of a particular font as measured from the top of the tallest character to the bottom of the lowest. A point is a typographic unit of measure equivalent to 1/72 of an inch.

portrait

Printing that is oriented upright on the page (as opposed to landscape, in which printing is oriented sideways on the page). This is the standard orientation for printing letters or documents.

ppm (pages per minute)

The number of pages can be printed in one minute.

printer driver

Software that sends instructions to the printer to tell it what to do. For example, your printer driver accepts print data from your word processor application and sends instructions to the printer on how to print this data.

printer emulation

A set of operating commands that determines how data sent from the computer is interpreted and acted upon. Printer emulations replicate existing printers, such as the HP LaserJet 4.

proportional font

A font whose characters have varying amounts of horizontal space depending on the width of the character. Thus the uppercase *M* takes up more horizontal space than the lowercase *l*.

RAM

Random Access Memory. The portion of the printer's memory used as a buffer and for storing user-defined characters. All data stored in RAM is lost when the printer is turned off.

reset

To refresh the printer's memory and erase the current print jobs.

resident font

A font that is stored permanently in the printer's memory.

resolution

A measure of the fineness and clarity of images produced by the printer or monitor. Printer resolution is measured in dots per inch. Monitor resolution is measured in pixels.

RI Tech

Resolution Improvement Technology. A feature that smooths the jagged edges of printed lines or shapes.

ROM

Read Only Memory. A portion of memory that can only be read and cannot be used for data storage. ROM retains its contents when you turn off the printer.

sans serif font

A font lacking serifs.

scalable font

See *outline font*.

serif

The small decorative strokes that come off the main lines of a character.

sRGB

A standard default red green blue (RGB) color space that is device independent.

status sheet

A report that lists the printer settings and other printer information.

symbol set

A collection of symbols and special characters. Symbols are assigned to specific codes in a character table.

toner

The colored powder contained in the toner cartridges that is used to print images on the paper.

TrueType

An outline font format that was developed jointly by Apple® Computer and Microsoft Corporation. TrueType fonts are outline fonts that can be easily resized for screen display or for printing.

Index

Numerics

- 500-Sheet/1000 Sheet Optional Paper Cassette Unit
 - installing, 184
- 500-Sheet/1000-Sheet Optional Paper Cassette Unit
 - about, 184
- 500-Sheet/1000 Sheet Paper Cassette Unit
 - specifications, 367
- 550-Sheet Universal Paper Cassette Unit
 - specifications, 367

A

- Additional Driver
 - using, 162
- Adobe PostScript 3 ROM module
 - about, 209
 - installing, 209
 - removing, 213

C

- Clients
 - with Macintosh, 179
 - with Windows Me, 98, or 95, 169
 - with Windows NT 4.0, 174
 - with Windows XP or 2000, 170
- Confidential Job (Macintosh), 146
- Confidential Job (Windows), 92
- ConfidentialJob Menu, 336
- Consumables
 - fuser unit, 234
 - photoconductor unit, 228
 - replacement messages, 221
 - transfer unit, 238
- Contacting EPSON, 409
- Control panel
 - settings, 313
- Control panel menus
 - overview of available menus, 319
- Control panel settings

when to use, 313
Customer support, 409

D

Duplex Unit
specifications, 368

E

Envelopes
loading, 51
specifications, 359
the use of, 50

EPSON BarCode Fonts
about, 373
formatting, 379
inputting, 379
installing, 375
printing, 377
specifications, 381
system requirements, 375

EPSON Color Laser Paper
specifications, 360

EPSON Color Laser Transparencies
specifications, 360

EPSON Status Monitor 3
about, 94
about (Macintosh), 148
accessing, 97
accessing (Macintosh), 148
monitoring preferences, 100
monitoring preferences (Macintosh), 151
printer status, 98
printer status (Macintosh), 149
Status Alert window, 102
Status Alert Window (Macintosh), 152

Extra thick paper
specifications, 359

F

Fonts
adding, 397
available, 392

- downloading, 397
- EPSON BarCode Fonts, 373
- selecting, 397

Fuser unit

- handling precautions, 234
- replacing, 234
- specifications, 371

G

Guides

- Administrator's Guide, 1
- Quick Reference, 1
- Reference Guide, 1
- Setup Sheet, 1

H

Hard Disk Drive

- about, 193
- installing, 194
- removing, 198

I

Imaging cartridges

- handling precautions, 222
- replacing, 223

Installing

- 550-Sheet Universal Paper Cassette Unit, 184
- Adobe PostScript 3 ROM module, 209
- Hard Disk Drive, 194
- Interface cards, 216
- memory modules, 200

Interface cards

- installing, 216
- removing, 219

J

Job Management function

- Setting, 106
- Using, 102

L

Labels

- driver settings, 52
- specifications, 359
- the use of, 52

Loading paper

- custom size paper, 54
- envelopes, 51
- transparencies, 49

M

Memory modules

- installing, 200
- removing, 205
- specifications, 368

O

Options

- 500-Sheet/1000-Sheet Optinal Paper Cassette Unit, 184
- Adobe PostScript 3 ROM module, 209
- Hard Disk Drive, 193
- memory modules, 200

Output tray, 47

P

Paper

- loading the optional paper cassette unit, 42
- printable area, 360
- prohibited, 356
- specifications, 358
- supported media types, 356

Paper jams

- cover A (Jam A), 254
- cover A, paper cassettes and cover B (JAM ABC), 265
- cover A and paper cassettes (Jam AC), 258
- cover B (Jam B), 263
- covers A and B (Jam AB), 252
- MP tray, 266
- precautions when clearing jams, 251

Paper sources

- , 37

- 500-Sheet / 1000-Sheet Optional Paper Cassette Unit, 36
 - for EPSON Color Laser Paper, 48
 - for EPSON Color Laser Transparencies, 48
 - MP tray, 35
 - selecting, 37
 - Standard lower paper cassette, 36
- Parallel interface
 - specifications, 366
- Password
 - entering for Confidential Job, 318
 - for Confidential Job (Macintosh), 147
 - for Confidential Job (Windows), 93
- Photoconductor unit
 - handling precautions, 228
 - replacing, 229
 - specifications, 369, 370
- Precautions
 - during operation, 15
 - power on/off, 19
- Printer
 - available optional products, 25
 - cleaning, 242
 - consumable products, 27
 - locating, 246
 - parts, 22
 - resetting, 311
 - settings (Macintosh), 118
 - settings (Windows), 58
 - sharing, 159
 - sharing (Macintosh), 178
 - specifications, 361
- Printer driver
 - about, 57
 - about (Macintosh), 117
 - accessing, 57
 - accessing (Macintosh), 117
 - uninstalling, 110
 - uninstalling (Macintosh), 156
- Printer settings
 - automatic setting (Macintosh), 118
 - automatic setting (Windows), 58
 - customizing settings (Macintosh), 122
 - customizing settings (Windows), 62
 - duplex printing, 82
 - duplex printing (Macintosh), 135

- extended settings, 83
- extended settings (Macintosh), 136
- feeding paper manually, 38
- HDD form overlay (Windows), 79
- overlay, 73
- predefined settings (Macintosh), 119
- predefined settings (Windows), 59
- print layout, 67
- print layout (Macintosh), 125
- print quality (Macintosh), 118
- print quality (Windows), 58
- resizing printouts, 65
- resizing printouts (Macintosh), 124
- saving customized settings (Macintosh), 123
- saving customized settings (Windows), 64
- watermark, 68
- watermark (Macintosh), 128

Q

- quality (Macintosh), 118
- quality (Windows), 58
- Quick Print Job Menu, 317, 336

R

- Removing
 - Adobe PostScript 3 ROM module, 213
 - Hard Disk Drive, 198
 - interface cards, 219
 - memory modules, 205
- Re-Print Job (Macintosh), 140
- Re-Print Job (Windows), 88
- Reserve Job
 - Re-Print Job (Macintosh), 140
 - Re-Print Job (Windows), 88
- Reserve Job (Macintosh), 139
 - Confidential Job (Macintosh), 146
 - Stored Job (Macintosh), 144
 - Verify Job (Macintosh), 142
- Reserve Job (Windows), 87
 - Confidential Job (Windows), 92
 - Stored Job (Windows), 91
 - Verify Job (Windows), 89
- Resetting the printer, 311

S

Safety

precautions, 15

Specifications

photoconductor unit, 369

Status sheet

printing, 267

Stored Job (Macintosh), 144

Stored Job (Windows), 91

Symbol sets

EPSON GL/ 2 mode, 408

ESC/P 2 mode, 405

FX mode, 405

I239X mode, 408

international character sets, 407

introduction, 401

ISO sets, 404

LJ4 mode, 401

T

Technical support, 409

Thick paper

driver settings, 53

specifications, 359

Toner cartridges

specifications, 369

Transfer unit

handling precautions, 238

replacing, 239

specifications, 370

Transparencies

driver settings, 48, 54

loading, 49

the use of, 48

Transporting the printer

for long distances, 242

for short distances, 243

Troubleshooting

error messages, 296

LCD panel messages, 296

operational problems, 269

paper handling problems, 284

printout problems, 271

print quality problems, 276

U

Uninstalling

printer software, 110

printer software (Macintosh), 156

USB device driver, 113

USB connection

setting (Macintosh), 154

settings, 107

Using

Reserve Job (Macintosh), 139

Reserve Job (Windows), 87

V

Verify Job (Macintosh), 142

Verify Job (Windows), 89