EPSON STYLUS™ CX3600 Series

Setup Guide

4049840-00
xxxx
English

1. Unpacking
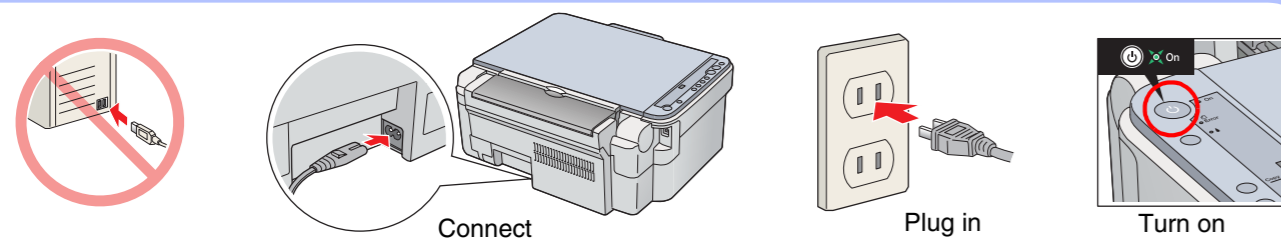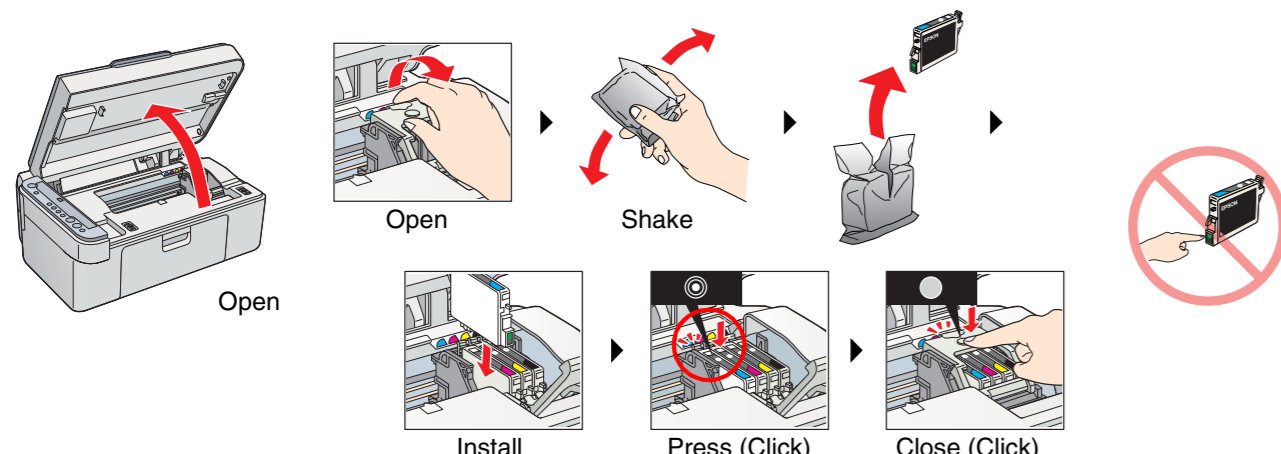

Setup Guide   Basic Operation Guide

2. Removing Protective Materials and Affix a Panel Sticker

Open   Remove   Close

3. Turning On
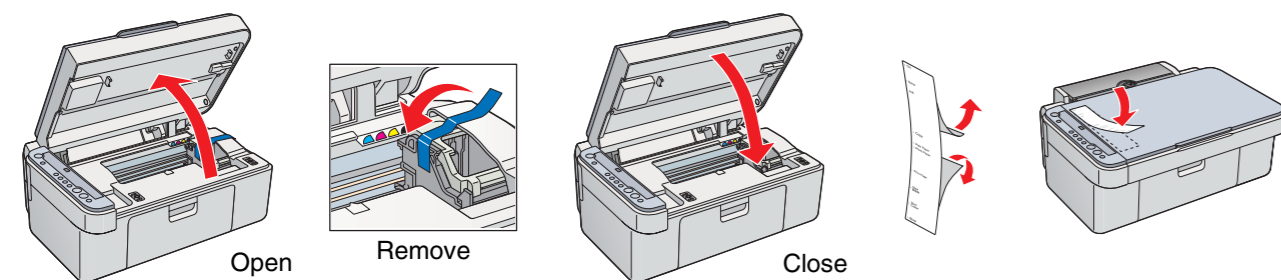
Connect   Plug in   Turn on

4. Installing Ink Cartridges

Open   Shake

Open   Install   Press (Click)   Close (Click)

5. Ink Charging

2 min.

Close   Press the ◊ Ink button   Wait   Flashing   On
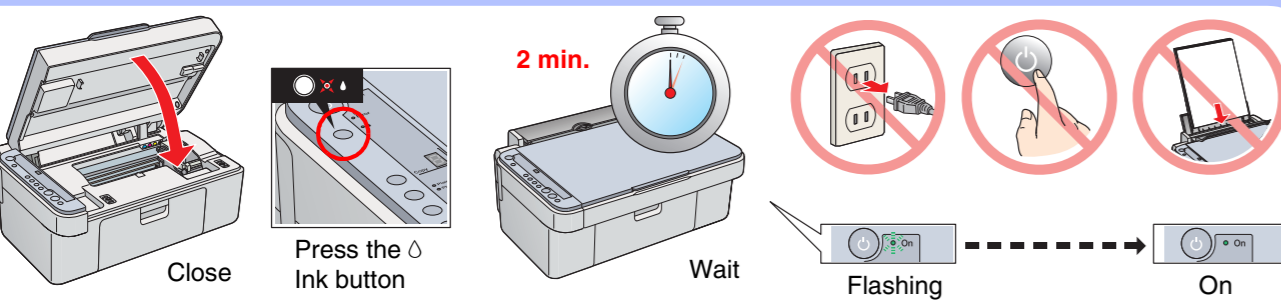
6. Loading Paper

7. Making Copies

You can make up to 9 (1-9) copies, or 100 (-) copies.
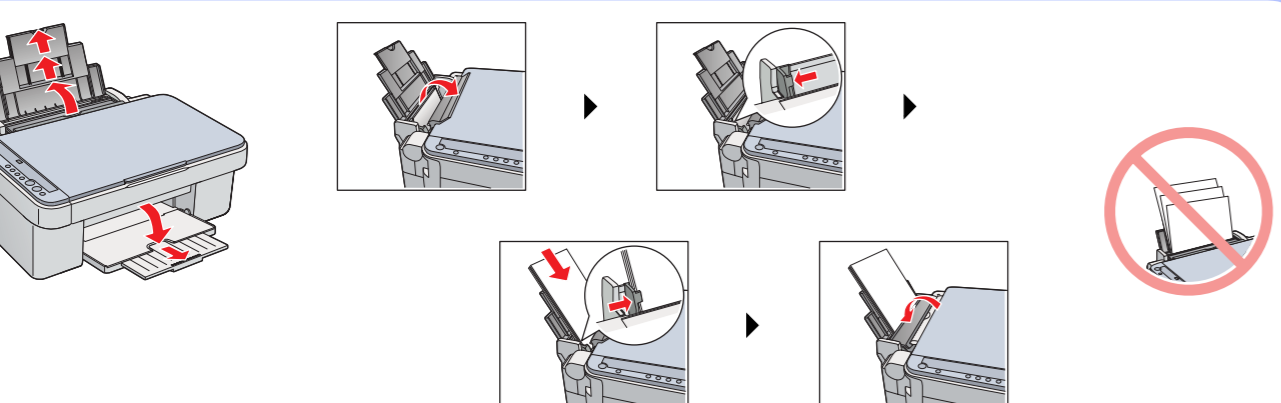
Select   Select   Press
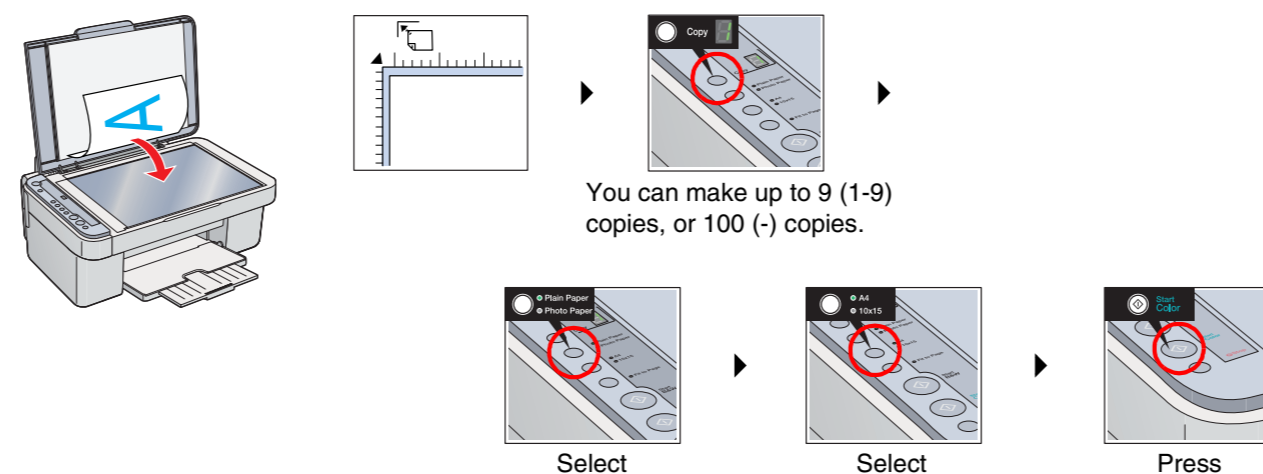
8. Connecting to a Computer and Installing the Software

Turn off   Connect (Check the orientation)   Insert
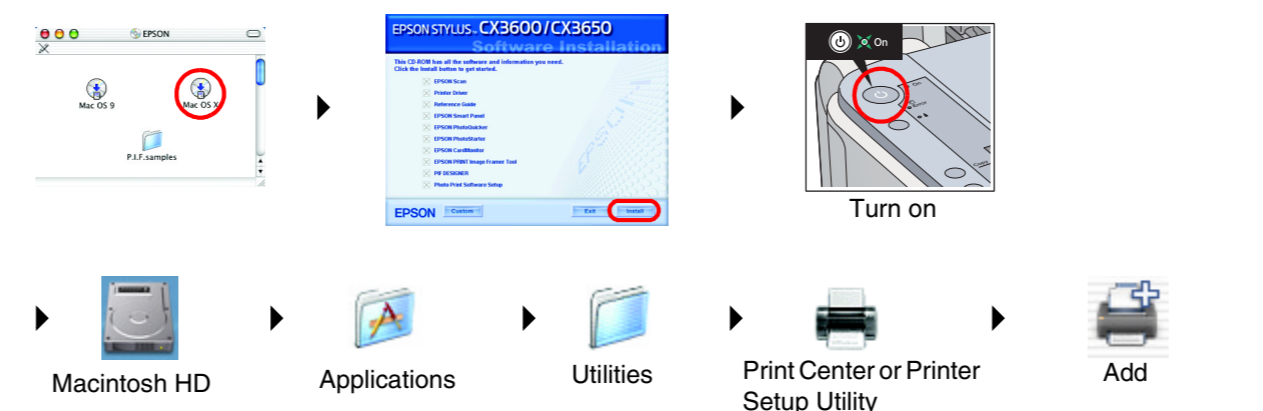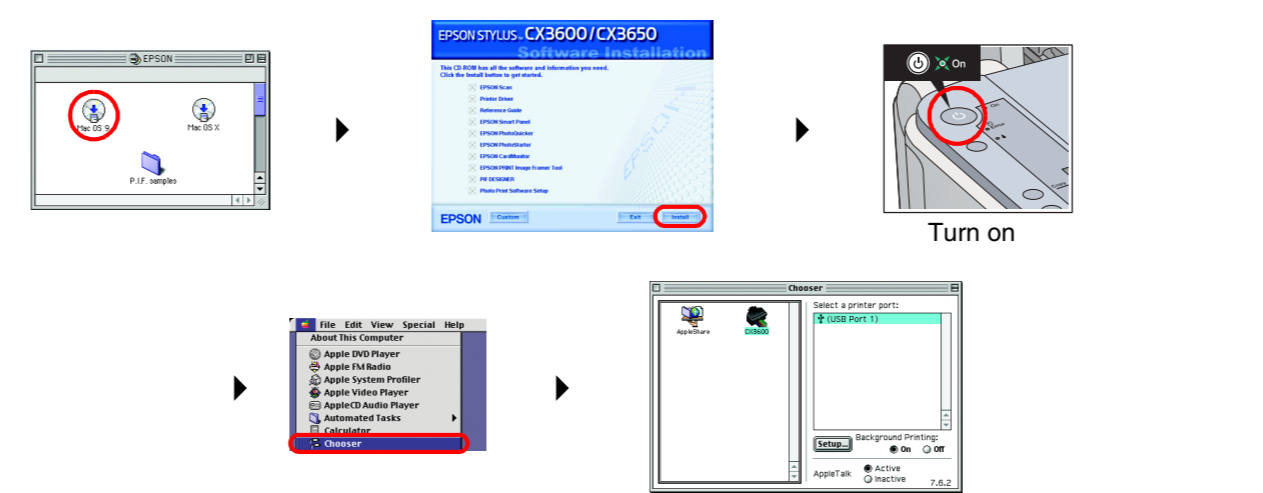
For Windows

Turn on
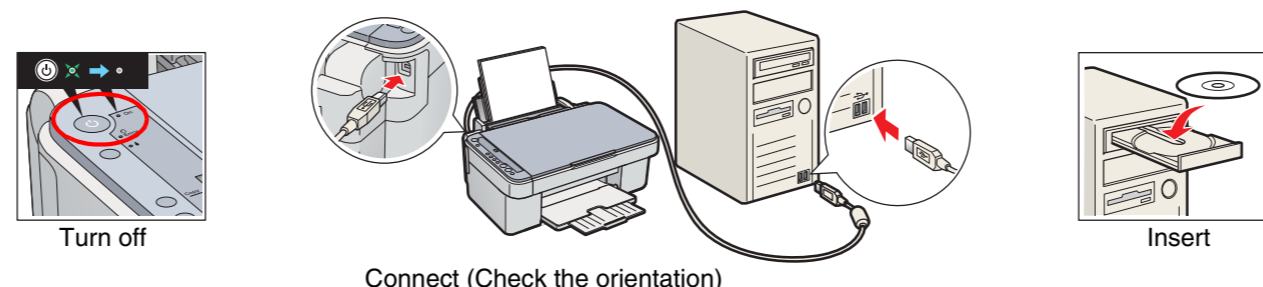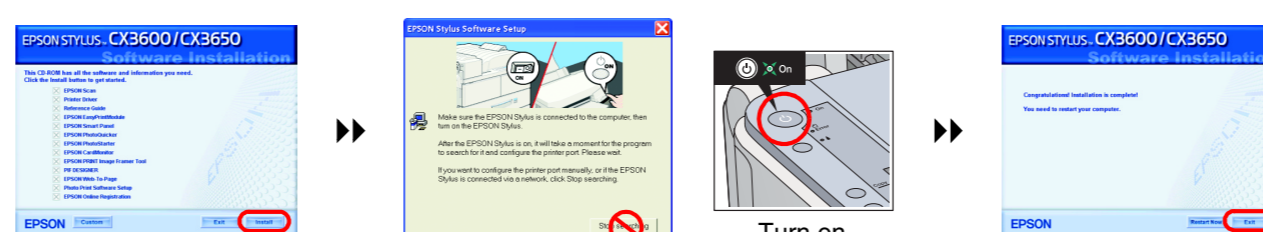
❑ If the installer dialog box does not appear, double-click CD-ROM icon.
❑ A screen appears after installation has been completed successfully. Restart your computer to start using this product from your computer.
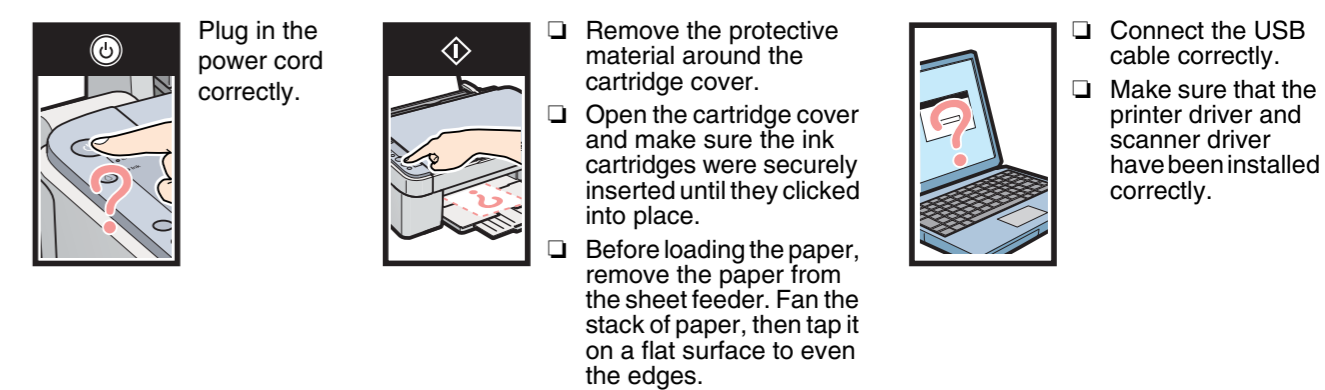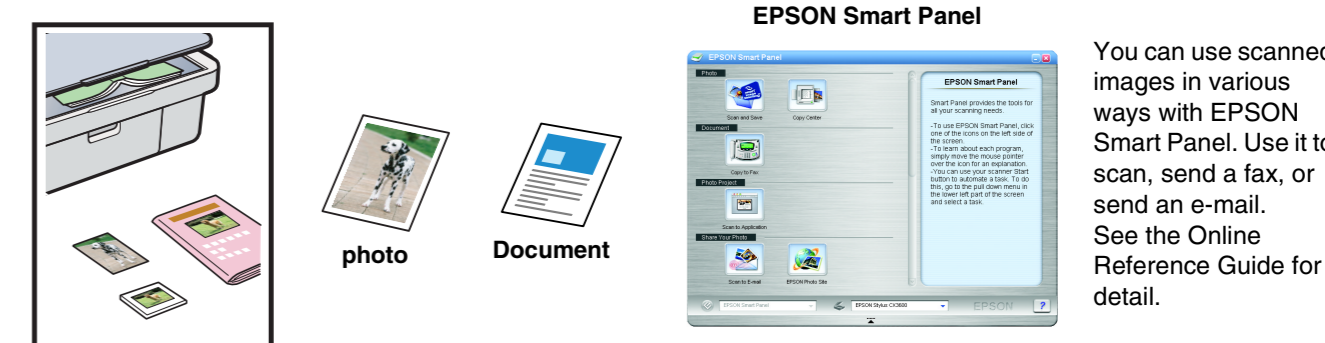
For Mac OS X

Turn on

Macintosh HD   Applications   Utilities   Print Center or Printer Setup Utility   Add

For Mac OS 9

Turn on

Troubleshooting

Plug in the power cord correctly.

❑ Remove the protective material around the cartridge cover.
❑ Open the cartridge cover and make sure the ink cartridges were securely inserted until they clicked into place.
❑ Before loading the paper, remove the paper from the sheet feeder. Fan the stack of paper, then tap it on a flat surface to even the edges.

❑ Connect the USB cable correctly.
❑ Make sure that the printer driver and scanner driver have been installed correctly.

Features

Copying

Borderless   Small Margin

For more information on using the copy functions, see the Basic Operation Guide.

Scanning

EPSON Smart Panel

photo   Document

You can use scanned images in various ways with EPSON Smart Panel. Use it to scan, send a fax, or send an e-mail. See the Online Reference Guide for detail.

Printing

EPSON PhotoQuicker

You can print documents and web pages from your applications. You can also make photos, postcards, and posters from your computer. It is easy to make those using the software "EPSON PhotoQuiker". See the Online Reference Guide for detail.

Getting More Information

Basic Operation Guide	Describes the basic procedures for copying, printing, scanning and other information.
Online Reference Guide	Describes how to print and scan in detail. Maintenance and troubleshooting tips, in addition to technical and customer support information are also included. Double-click the ESCX3600 Reference Guide icon on the desktop.