MF1081-01



CMOS 4-BIT SINGLE CHIP MICROCOMPUTER **E0C63158**

DEVELOPMENT TOOL MANUAL



SEIKO EPSON CORPORATION

NOTICE

No part of this material may be reproduced or duplicated in any form or by any means without the written permission of Seiko Epson. Seiko Epson reserves the right to make changes to this material without notice. Seiko Epson does not assume any liability of any kind arising out of any inaccuracies contained in this material or due to its application or use in any product or circuit and, further, there is no representation that this material is applicable to products requiring high level reliability, such as medical products. Moreover, no license to any intellectual property rights is granted by implication or otherwise, and there is no representation or warranty that anything made in accordance with this material will be free from any patent or copyright infringement of a third party. This material or portions thereof may contain technology or the subject relating to strategic products under the control of the Foreign Exchange and Foreign Trade Control Law of Japan and may require an export license from the Ministry of International Trade and Industry or other approval from another government agency. Please note that "EOC" is the new name for the old product "SMC". If "SMC" appears in other manuals understand that it now reads "EOC".

MS-DOS and EDLIN are registered trademarks of Microsoft Corporation, U.S.A. PC-DOS, PC/AT, VGA, EGA and IBM are registered trademarks of International Business Machines Corporation, U.S.A. NEC PC-9801 Series and NEC are registered trademarks of NEC Corporation. All other product names mentioned herein are trademarks and/or registered trademarks of their respective owners.

CONTENTS

CHAPTER 1	O_{UI}	TLINE OF PACKAGE			1
	1.1	Preface		. 1	
	1.2	Provided Floppy Disks		. 1	
	1.3	Outline of Software Tool		. 2	
		1.3.1 HEX data converter <hex63158></hex63158>			
		1.3.2 Function option generator <fog63158></fog63158>			
		1.3.3 Mask data checker <mdc63158></mdc63158>			
		1.3.4 Parameter file for ICE63 <par63158.par></par63158.par>			
	1 1	1.3.5 HEX file for function option setting <c3158xxx.fsa></c3158xxx.fsa>		2	
	1.4	Installation Procedure	•••••	. 3	
CHAPTER 2	HE	X DATA CONVERTER (hex63158)			4
	2.1	Outline of hex63158		. 4	
	2.2	Execution Flow and Input/Output Files		. 4	
	2.3	Operation Procedure			
		2.3.1 Starting procedure			
		2.3.2 End procedure			
	2.4	Error and Warning Messages		. 6	
		2.4.1 Start-up error			
		2.4.2 Input file format error (1)	6		
		2.4.3 Input file format error (2) 2.4.4 System error			
	2.5	hex63158 Execution Example		. 7	
	-				•
CHAPTER 3	FU	NCTION OPTION GENERATOR (fog63158)			8
	3.1	Outline of fog63158		. 8	
				0	
	3.2	Execution Flow and Input/Output Files		. ð	
	3.2 3.3	Execution Flow and Input/Output Files Option List			
		Option List		. 9	
	3.3	· ·		. 9	
	3.3	Option List Operation Procedure	11	. 9	
	3.3	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file)	11 12 13	. 9	
	3.3	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection	11 12 13 14	. 9	
	3.3	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation	11 12 13 14 15	. 9	
	3.3 3.4	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation 3.4.6 End procedure	11 12 13 14 15 15	.9 11	
	3.3 3.4 3.5	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation 3.4.6 End procedure Error Message	11 12 13 14 15 15	.9 11 15	
	3.3 3.4	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation 3.4.6 End procedure	11 12 13 14 15 15	.9 11 15	
CHAPTER 4	3.3 3.4 3.5 3.6	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation 3.4.6 End procedure Error Message	11 12 13 14 15 15	.9 11 15 16	19
CHAPTER 4	3.3 3.4 3.5 3.6	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation 3.4.6 End procedure Error Message Sample Files	11 12 13 14 15 15	.9 11 15 16	19
CHAPTER 4	3.3 3.4 3.5 3.6 M A	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation 3.4.6 End procedure Error Message Sample Files	11 12 13 14 15 15	.9 11 15 16 19	19
CHAPTER 4	3.3 3.4 3.5 3.6 M A 4.1	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation 3.4.6 End procedure Error Message Sample Files Outline of mdc63158	11 12 13 14 15 15	.9 11 15 16 19 19	19
CHAPTER 4	3.3 3.4 3.5 3.6 M A 4.1 4.2	Option List Operation Procedure	11 12 13 14 15 15	.9 11 15 16 19 19	19
CHAPTER 4	3.3 3.4 3.5 3.6 M A 4.1 4.2	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation 3.4.6 End procedure Error Message Sample Files Outline of mdc63158 Execution Flow and Input/Output Files Operation Procedure	11 12 13 14 15 15 15 	.9 11 15 16 19 19	19
CHAPTER 4	3.3 3.4 3.5 3.6 M A 4.1 4.2	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation 3.4.6 End procedure Error Message Sample Files Outline of mdc63158 Operation Flow and Input/Output Files Operation Procedure 4.3.1 Copying each data files 4.3.2 Starting procedure		.9 11 15 16 19 19	19
CHAPTER 4	3.3 3.4 3.5 3.6 M A 4.1 4.2	Option List Operation Procedure 3.4.1 Starting procedure 3.4.2 Setting new function options (Input new file) 3.4.3 Modifying function option settings (Edit file) 3.4.4 Option selection 3.4.5 HEX file generation 3.4.6 End procedure Error Message Sample Files Outline of mdc63158 Execution Flow and Input/Output Files Operation Procedure 4.3.1 Copying each data files 4.3.2 Starting procedure		.9 11 15 16 19 19	19

Error Messages		24
Packed File		25
4.5.1 Configuration of packed file		
50 51 5		
	 4.4.1 Start-up error	Error Messages24.4.1 Start-up error244.4.2 ROM data error244.4.3 Function option data error244.4.4 File access error24Packed File24.5.1 Configuration of packed file254.5.2 ROM data format25

CHAPTER 1 OUTLINE OF PACKAGE

1.1 Preface

The "E0C63158 Development Tool" package is a software development tool package for the CMOS -bit single chip microcomputer E0C63 Family, and consists of software tools necessary for debugging by the ICE63 and mask option setting for the E0C63158. The "E0C63 Family Assembler" package common to all the family models is also necessary for the software development in addition to this package.

- 1) HEX data converter hex63158
- 2) Function option generator fog63158

- 5) HEX sample file for function option setting c3158xxx.fsa

1.2 Provided Floppy Disks

This package includes the following floppy disks which are necessary for debugging by the ICE63 and mask option setting of the IC for the E0C63158 development.

1)	3.5" floppy disk for NEC PC9801	1
2)	3.5" floppy disk for IBM-PC/AT	1
3)	E0C63158 Development Tool Manual (English)	1
4)	E0C63158 Development Tool Manual (Japanese)	1

The type of the personal computer that can be used with the development system and the restrictions are as follows:


1)	Model:	IBM-PC/AT or compatible model
		NEC PC9801 Series or compatible model
2)	OS:	MS-DOS or PC-DOS, ver. 3.3 or higher
3)	RAM capacity:	6 0K bytes
4)	Disk drive:	3.5 inches (1.2M: PC9801 and the compatible)
		3.5 inches (1. M: IBM-PC/AT and the compatible)
5)	Necessary software:	General purpose editor

* This software operates in the real mode and does not use EMS and protected memory.

Keep the original disk in a safe place as a backup after copying the contents to hard disk or other floppy disk.

1.3 Outline of Software Tool

The software tools included in this package take position indicated in the following Figure 1.3.1 (parts with a halftone) on the whole software development.

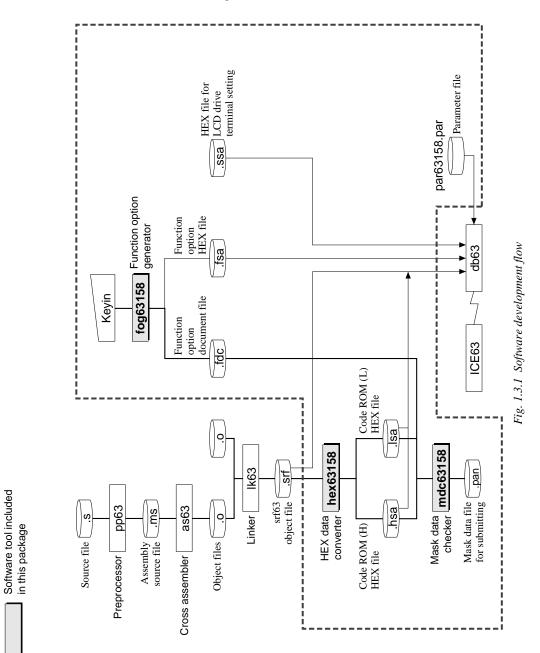

The following shows the outline of the basic function of each software.

1.3.1 HEX data converter <hex63158>

The HEX data converter hex63158 converts the file output by the linker (lk63) for the E0C63 Family into a HEX file (Motorola S2 format). At the same time, it fills unused ROM space with FFH data. <u>The completed program should be finally verified by loading the HEX file output from this tool to the ICE63</u>.

1.3.2 Function option generator <fog63158>

In the E0C63158, some hardware specifications such as an I/O port function can be selected as mask option. The function option generator fog63158 is a tool that can interactively select the E0C63158 mask option settings and generates the mask option setting file for the ICE63 and the function option document file for generating the IC mask pattern.

1.3.3 Mask data checker <mdc63158>

The mask data checker mdc63158 is a software tool that checks the ROM data and option data developed and generates a file for submitting to Seiko Epson.

1.3.4 Parameter file for ICE63 <par63158.par>

This is a parameter file for setting the ICE63 so that the ICE63 will be compatible with each model. Place this file in the directory where the tools for the "E0C63 Family Assembler" package are installed.

Note: Notes on use of db63 (ICE63)

The E0C63158 has data memory (RAM) space from 0x0000 to 0x01ff. If the stack pointer SP1 is set at 0x80 that actually indicates addresses 0x0200 to 0x0203, the read data will be undefined because the contents of the memory (0x200 to 0x0203) indicated with the SP1 are loaded to the queue register.

In the free run mode of the db63 (ICE63), a break will occur if an access as above is performed in order to prevent reading of undefined data. Therefore, the stack pointer SP1 must be set within the range of data memory (RAM) space available in the E0C63158.

1.3.5 HEX file for function option setting <c3158xxx.fsa>

This file is used to define the function option and other settings of each model into the ICE63. This file is included in the package as a sample.

Create an actual use file using the function option generator fog63158.

1.4 Installation Procedure

This package does not include an installer program. Please copy the all files to the working directory.

CHAPTER 2 HEX DATA CONVERTER (hex63158)

2.1 Outline of hex63158

The HEX data converter utility hex63158 converts the file (~.srf) output by the linker (lk63) for the E0C63 Family into a HEX file (Motorola S2 format).At the same time, it fills unused ROM space with FFH data. The completed program should be finally verified by loading the HEX files output from this tool to the ICE63. Then create data for submitting to Seiko Epson from the HEX files using the mask data checker (mdc63158).

2.2 Execution Flow and Input/Output Files

Figure 2.2.1 shows the hex63158 execution flow .

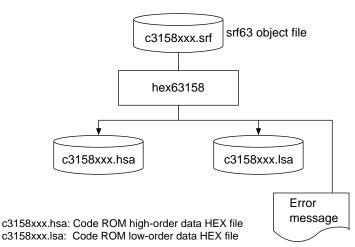


Fig. 2.2.1 hex63158 execution flow

Note: Since the customer code is entered in the xxx part of the file name, it should be as designated by Seiko Epson.

The hex63158 inputs an object file (srf63 format) and generates two HEX files (Motorola S2 format). The object file name is used as the output file name except for the extension. For example, if the object file name is "c31580a0.srf", the hex63158 outputs two files as below:

1) c31580a0.hsa 2) c31580a0.lsa

(1) Input file

• Object file (~.srf)

This is an srf63 format object file output from the linker lk63.

(2) Output files

• Code ROM high-order data HEX file (~.hsa)

The hex63158 outputs this file in Motorola S2 format. This file contains high-order 5 bits of the codes (13 bits each) in the object file.

• Code ROM low-order data HEX file (~.lsa)

The hex63158 outputs this file in Motorola S2 format. This file contains low-order 8 bits of the codes (13 bits each) in the object file.

2.3 Operation Procedure

2.3.1 Starting procedure

(1) Starting command

Enter the command as following format at the DOS command level (state in which a prompt such as A> is displayed).

hex63158 <Object file name[.srf]> J

indicates the Return key.

A parameter enclosed by [] can be omitted.

The input file should be placed in the current directoryThe output files are also generated in the current directory

(2) Start-up message

When the hex63158 starts up, the following message is displayed.

Example: File name: c31580a0.srf

```
A>hex63158 c31580a0.srf
E0C63158 HEX Data Converter Ver.x.xx
Copyright (C) SEIKO EPSON CORP. 199x
Now checking the SROFF file ...
```

2.3.2 End procedure

When a series of operations is completed, the hex63158 displays the following message and returns to the DOS command level.

(1) When terminated normally

The hex63158 displays the following message after generating the output files and returns to the DOS command level.

```
Now checking the SROFF file ...
OK.
A>
```

(2) When an error occurs

The hex63158 displays an error message and returns to the DOS command level. The output file is not generated.

```
Now checking the SROFF file ...
Error:<Error message>
A>
```

(3) When a warning occurs

The hex63158 displays a warning message, but continues the processing. It returns to the DOS command level after generating the output files.

```
Now checking the SROFF file ...
Warnig:<Warning message>
OK.
A>
```

2.4 Error and Warning Messages

The hex63158 error messages and warning message are listed below.

2.4.1 Start-up error

Message	Explanation
Usage: hex63 <file name=""></file>	The start-up parameter is incorrect.
Error: "xxxxxxxxxxxxx file is not found.	The specified object file is not found.

2.4.2 Input file format error (1)

Message	Explanation
Error: The start address is out of range.	The start address is out of the ROM capacity range.
Error: The end address is out of range.	The end address is out of the ROM capacity range.
Error: Input file is not E0C63 Sroff file.	The object file specified is not an srf63 file for the E0C63 Family.

2.4.3 Input file format error (2)

When an error message as shown below appears, try to execute the hex63158 again after re-creating the srf63 file. If a similar error still results, please notify Seiko Epson of the situation and the error message displayed.

Message	Explanation
Error: The start address offset error.	The start address is incorrect.
Error: Code conflicted at XXXXH.	A conflict occurred at address XXXXH in the code ROM.
Error: Information chain empty.	The information is empty.
Error: Chain information size is greater than file size.	The chain information size is greater than the file size.
Error: Chain seek address is greater than file size.	The chain seek address is greater than the file size.
Error: File control flag error.	The file control flag in the link format is incorrect.
Error: Entry address error.	The entry address is not 0x00000110.
Error: Section address error.	The section address is out of the 0x00000000 to 0x0000ffff range.
Error: Section ID error.	The section ID is out of the 0x0000 to 0x00ff range.
Warnig: Section information chain is not found.	There is no section information chain.

2.4.4 System error

Message	Explanation
Error: File open error.	The file cannot be opened.
Error: File write erorr.	The file cannot be written.
Error: File read error.	The file cannot be read.
Error: Memory allocate error.	Memory is insufficient.

2.5 hex63158 Execution Example

The following shows an example of when an srf63 format file ("c31580a0.srf") is converted into a Motorola S2 format file ("c31580a0.hsa", "c31580a0.lsa").

A><u>hex63158 c31580a0.srf</u> J

Example of input file

<c31580a0.srf></c31580a0.srf>
Hoy dump output

Hex dump o	utpu	lt																
00000000	00	0A	00	00	01	10	63	00	00	00	00	10	00	00	00	90	С	
00000010	00	00	00	3C	00	01	00	00	00	02	00	00	01	10	00	00	<	
00000020	00	00	00	00	00	00	00	00	00	68	00	00	00	10	00	00		h
00000030	00	01	00	00	00	88	00	00	00	06	00	00	00	00	00	00		
00000040	00	02	00	00	00	02	00	00	80	00	00	00	00	00	00	00		
00000050	00	00	00	00	00	78	00	00	00	10	00	00	00	01	00	00	х	
00000060	00	8E	00	00	00	02	00	01	00	00	00	00	00	00	00	00		
00000070	00	00	00	02	02	4C	31	00	00	00	00	00	00	00	00	00	L1	
00000080	00	00	00	02	02	4C	32	00	1E	F2	19	72	18	72	0A	0F	L2	r r
00000090	00	00	00	00	00	00	00	в4	00	00	00	0D	00	00	00	01		
0A000000	00	00	00	C1	00	00	00	3C	00	00	00	FD	00	00	00	20		<
000000B0	00	00	00	02	00	00	00	08	73	61	6D	70	6C	65	2E	73		sample.s
000000C0	00	$\mathbf{F}\mathbf{F}$	\mathbf{FF}	00	00	00	00	00	00	00	00	00	00	00	00	00		
00000D0	06	00	00	00	00	00	00	00	00	00	00	00	07	00	00	00		
000000E0	00	00	01	00	00	00	00	00	08	00	00	00	00	00	02	00		
000000F0	00	\mathbf{FF}	FΕ	00	00	00	00	00	00	00	00	00	00	00	00	00		
00000100	00	00	02	00	00	00	00	00	00	02	4C	31	00	00	00	01		L1
00000110	00	02	00	00	00	00	00	01	02	4C	32							L2

Example of output file

<c31580a0.hsa>

: : : : : : : S80400000FB

<c31580a0.lsa>

: : : : : : : S80400000FB

CHAPTER 3 FUNCTION OPTION GENERATOR (fog63158)

3.1 Outline of fog63158

The E0C63158 -bit single ship microcomputer has 1 1 mask options to select hardware specifications such as I/O port functions. By modifying the IC mask patterns of the E0C63158 according to the options selected, the system can be customized to meet the specifications of the target system.

The function option generator fog63158 is a software tool for generating the document file used to generate IC mask patterns. The mask options for the E0C63158 can be interactively selected. From the data file created with fog63158, the E0C63158 mask pattern is automatically generated by a CAD machine at Seiko Epson.

In addition, HEX data in the Motorola S2 format necessary for debugging using the ICE63 can be created. By downloading this data file from the host machine when debugging with the ICE63, the same option functions as the actual IC can be realized on the ICE63.

3.2 Execution Flow and Input/Output Files

Figure 3.2.1 shows the fog63158 execution flow .

(1) Option list creation

Select the E0C63158 mask options that meet the target system and record them in the option list (see Section 3.3).

(2) fog63158 execution

Start the fog63158 and select the mask options according to the display on screen. Since options can be selected using the interactive format, a device such as a source file is not necessary . In addition, when correcting the contents, once it has been set, the necessary points alone can be corrected by inputting the file that was output by the fog63158.

As a result, the fog63158 outputs the following two files.

• Function option document file (c3158xxx.fdc) This file contains the mask option setting data and is used for generating a mask pattern of the IC at Seiko Epson. The option setting data in this file can be modified by loading it to the fog63158. This file should be packed with the completed program files for submitting to Seiko Epson.

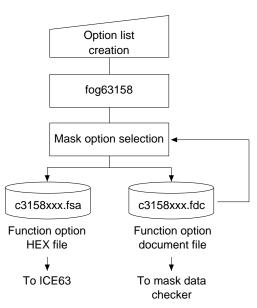


Fig. 3.2.1 fog63158 execution flow

• Function option HEX file (c3158xxx.fsa)

This file is a Motorola S2 format data file for setting the E0C63158 mask options to the ICE63. When debugging programs with the ICE63, this file should be loaded into the ICE63 using a command from the db63 debugger for the ICE63.

- *1 Since the customer code is entered in the xxx part of the file name, it should be as designated by Seiko Epson.
- *2 Pack the document file and the program files using the mask data checker and submit it to Seiko Epson.
- *3 Refer to the "E0C63 Family Assembler Package Manual" for the method of downloading the mask options into the ICE63.

3.3 Option List

The following options can be set for the E0C63158.

Multiple selections are available in each option item as indicated in the Option List. Using "E0C63158 Technical Manual" as reference, select the specifications that meet the target system and check the appropriate box. Be sure to record the specifications for unused functions too, according to the instructions provided.

The option selection is done interactively on the screen during the fog63158 execution, using this option list as reference.

1 PACKAGE TYPE SELECT

□ 1. CHIP □ 2. QFP12- 8 □ 3. QFP13-6

2 OSC3 SYSTEM CLOCK

□ 1. Not Use □ 2. Use <Ceramic (2 MHz)>

□ 3. Use <CR (2 MHz)>

3 OSC1 SYSTEM CLOCK

□ 1. CR YSTAL(32.768 kHz) □ 2. CR

4 MULTIPLE KEY ENTRY RESET COMBINATION

🗆 1. Not Use

□ 2. Use <K00, K01, K02, K03>

- □ 3. Use <K00, K01, K02>
- □ . Use <K00, K01>

5 MULTIPLE KEY ENTRY RESET TIME AUTHORIZE

 \Box 1. Not Use \Box 2. Use

6 INPUT PORT PULL UP RESISTOR

• K00	\Box 1. With Resistor	🗆 2. Gate Direct
• K01	\Box 1. With Resistor	🗆 2. Gate Direct
• K02	\Box 1. With Resistor	🗆 2. Gate Direct
• K03	\Box 1. With Resistor	🗆 2. Gate Direct
• K10	\Box 1. With Resistor	🗆 2. Gate Direct
• K11	\Box 1. With Resistor	🗆 2. Gate Direct
• K12	\Box 1. With Resistor	🗆 2. Gate Direct
• K13	\Box 1. With Resistor	🗆 2. Gate Direct
• K20	🗆 1. With Resistor	🗆 2. Gate Direct

7 OUTPUT PORT OUTPUT SPECIFICATION

- R1* 🗆 1. Complementary
- R2* □ 1. Complementary
- \Box 2. Nch Open Drain
- □ 2. Nch Open Drain

E0C63158 DEVELOPMENT TOOL MANUAL fog63158

8 I/O PORT OUTPUT SPECIFICATION

- P1* □ 1. Complementary □ 2. Nch Open Drain • P20 1. Complementary □ 2. Nch Open Drain • P21 1. Complementary □ 2. Nch Open Drain • P22 1. Complementary □ 2. Nch Open Drain • P23 1. Complementary □ 2. Nch Open Drain • P30 1. Complementary □ 2. Nch Open Drain • P31 1. Complementary □ 2. Nch Open Drain • P32 1. Complementary □ 2. Nch Open Drain • P33 1. Complementary • P 0 □ 1. Complementary • P 1 □ 1. Complementary • P 2 1. Complementary • P 3 1. Complementary 9 I/O PORT PULL UP RESISTOR • P1* \Box 1. With Resistor 2. Gate Direct
- - P20 1. With Resistor
 - P21 1. With Resistor
 - P22 1. With Resistor
 - P23 1. With Resistor
 - P30 1. With Resistor
 - P31 1. With Resistor
 - P32 1. With Resistor
 - P33 1. With Resistor
 - P 0 1. With Resistor
 - P 1 1. With Resistor
 - P 2 1. With Resistor
 - P 3 1. With Resistor

- - □ 2. Nch Open Drain
 - □ 2. Nch Open Drain
- 2. Gate Direct
- 2. Gate Direct
- □ 2. Gate Direct 2. Gate Direct
- 2. Gate Direct
- 2. Gate Direct
- □ 2. Gate Direct
- □ 2. Gate Direct
- 2. Gate Direct
- 2. Gate Direct
- □ 2. Gate Direct
- 2. Gate Direct

10 SERIAL PORT INTERFACE POLARITY

- □ 1. Positive
- □ 2. Negative

11 SOUND GENERATOR POLARITY FOR OUTPUT

- □ 1. Positive
- □ 2. Negative

3.4 Operation Procedure

3.4.1 Starting procedure

(1) Starting command

fog63158 J

☐ indicates the Return key.

(2) Start-up message

A>fog63158 E0C63158 Function Option Generator Version x.xx Copyright (C) SEIKO EPSON CORP. 199x This software makes the following files. c3158xxx.fsa ... function option HEX file. c3158xxx.fdc ... function option document file.

(3) Operation selection menu

*** Operation select menu *** 1. Input new file 2. Edit file 3. Return to dos Please select No. ? To start fog63158, enter "fog63158" at the DOS command level (a state in which a prompt such as A> is displayed). The "fog63158.exe" program should be previously copied into the working directory

When the fog63158 starts up, the start-up message is displayed.

The following explains the actual operation method of the fog63158 according to the screen displayed.

To suspend execution, press the "CTRL" and "C" keys together; the sequence returns to the DOS command level. It is possible by pressing "ST OP" key depending on the PC used.

The operation selection menu is displayed on the screen.

Enter a number from 1 to 3 to select a subsequent operation.

The items indicate the following.

1. Input new file:	Used to set new function option file.
2. Edit file:	Used to read the already-generated function option document file and set or modify the option contents. In this case, the current directory must contain the function option docu- ment file (c3158xxx.fdc) generated by "1. Input new file".
3. Return to DOS:	Used to terminate the fog63158 and return to the DOS command level.

E0C63158 DEVELOPMENT TOOL MANUAL fog63158

3.4.2 Setting new function options (Input new file)

This section explains how to set new function option file.

* In the examples, 🖵 indicates the Return key.

(1) Please select No. ?

Select "1. Input new file" on the operation selection menu.

(2) Please input file name ?

Enter the function option document (and HEX) file name to be generated. Do not enter the extension of the file name.

Furthermore, in case a function option document file with the same name as the file name specified in the current directory exists, the user is asked whether overwritten is desired. Enter "Y" or "N" accordingly.

Please input file name ? c3158xxx. File exists. Overwrite (y/n) ?

(3) Please input user's name ?

Enter your company name.

Up to 0 characters may be entered. If 1 or more characters are entered, they are ignored. "[" and "]" are converted into "(" and ")" to record in the document file.

(4) Please input any comment

Enter any comment. Up to 50 characters may be entered in one line. If 51 or more characters are entered in one line, they are ignored. Up to 10 comment lines may be entered. To end entry of comments, press the Return key at the beginning of the line. Small letters entered are converted into capital letters to record in the document file.

Furthermore, include the following in comment lines:

- Department, division, and section names
- Company address, phone number, and FAX number
- Other information, including technical information

Moreover, the below symbols for the inputting of (3) and () cannot be used. When those symbols are input, it displays an "Illegal character" error message, then again returns to the input status for that line. "\$", "\"("¥"), "|", "`(back-quote)" ... input disabled

Next, start mask option setting for the E0C63158. For new settings, select options Option No. 1 to No. 1 1 sequentially and interactively

See "3. . Option selection" for the selection procedure of each function option.

3.4.3 Modifying function option settings (Edit file)

This section explains how to modify the settings in the function option file.

* In the examples, 🖵 indicates the Return key.

```
*** Operation select menu ***
        1. Input new file
        2. Edit file
        3. Return to dos
Please select No. ? 24
                                                 ...(1)
*** Source file(s) ***
C31580A0
            C31580B0
                            C31580C0
                                                ...(2)
Please input file name ? c31580A0 🖵
                                                ...(3)
Please input user's name ? 🖵
                                                ...(4)
Please input any comment
                                                ...(5)
(one line is 50 chr) ? 🖵
Please input edit no.(End=e) ? 2 🖵
                                                 ...(6)
```

(1) Please select No. ?

Select "2. Edit file" on the operation selection menu.

(2) *** Source file(s) ***

Will display the function option document files on the current drive.

If no modifiable source exists, the following message is displayed and the program is terminated. Function option document file is not found.

(3) Please input file name ?

Enter a file name. Do not enter the extension of the file name. If the specified function option document file (c3158xxx.fdc) is not in the current directory an error message like the one below is output, prompting entry of other file name.

Please input file name ? c31580a0 Function option document file is not found.

(4) Please input user's name ?

When modifying the company name, enter a new name. The previously entered name may be used by pressing the Return key.

(5) Please input any comment

When modifying a comment, enter all the comment lines anew beginning with the first line; comment data cannot be partially modified. Previously entered comment data can be used by pressing the Return key. The input conditions are the same as for new settings.

(6) Please input edit No. (End = e) ?

Enter the number (1–11) of the option to be modified, then start setting the option contents (See "3. . Option selection").

When selection of one option is complete, the system prompts entry of another function option number. Repeat selection until all options to be modified are selected.

If the Return key is pressed without entering a number the option of the subsequent number can be selected.

Enter "E I" to end option selection. Then, move to generate for the function option HEX file.

Example: • When modifying the settings of the option of No. 2

```
Please input edit No.(End=e) ? 2 🕘
```

• When ending setting Please input edit No.(End=e) ? E.

E0C63158 DEVELOPMENT TOOL MANUAL fog63158

3.4.4 Option selection

Selection procedure for function options are described below.

Option selection is done interactively For new settings (Input new file), set all options Option No. 1 to No. 11 sequentially; to modify settings (Edit file), the specified option number may be set directly

(1) Example of option selection

```
*** Option No.2 ***
--- OSC3 SYSTEM CLOCK ---


1. Not Use
2. Use <CERAMIC(2MHz)>
3. Use <CR(2MHz)>
Please select No.(1) ? 1.

1. Not Use selected
```

The selections for each option correspond one to one to the option list. While referring to the contents recorded in the option list, enter the selection number.

In the message that prompts entry, the value in parentheses () indicates the default value in case of new settings, or the previously set value in case of setting modification. This value is set when only the Return key is pressed. Furthermore, in the selection examples, "]" indicates the Return key input.

(2) Modifying procedure when wrong number is selected in new setting (Input new file)

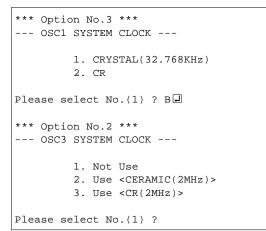

To modify previously set option in the new setting process (Input new file), enter "B." to return 1 step back to the previous function option setting operation.

3.4.5 HEX file generation

When function option settings are completed, the following message is output to ask the user whether to generate the function option HEX file.

```
End of option setting.
Do you make HEX file (y/n) ? yIJ
```

Enter "Y" to generate the HEX file (c3158xxx.fsa). If "N" is entered, no HEX file is generated and only document file (c3158xxx.fdc) is generated.

Since the function option HEX file (c3158xxx.fsa) is needed when debugging the target program with the ICE63, normally set "Y".

Furthermore, when debugging with the ICE63, download the generated HEX file into the ICE63.

When the above operation is completed, the fog63158 generates the function option HEX file and function option document file. And then the following message is output and the sequence returns to the operation selection menu. However, when "N" is input in the above selection for the function option HEX file, the end message shown below is not displayed.

Making file(s) is completed.

3.4.6 End procedure

```
*** Operation select menu ***
1. Input new file
2. Edit file
3. Return to dos
```

When a series of operations are completed, the sequence returns to the operation selection menu. Execution of the fog63158 can be terminated by selecting "3. Return to DOS" on this menu.

The fog63158 can be forcibly terminated by pressing the "CTRL" and "C" keys together during this software execution. (It is possible by pressing "ST OP" key depending on the PC used.) However, in this case, the correct function option HEX file and function option document file are not generated.

3.5 Error Message

Table 3.5.1 lists the fog63158 error messages.

Message	Explanation			
Illegal character!!	There is an input character error.			
	An input disable character has been input.			
Function option document file is not found.	There is no document file at the time of the setting modification (Edit			
	file).			
	There is no document file with the input file name at the time of the			
	setting modification (Edit file).			
File name error.	9 characters or more have been input for the file name input.			
Bad function option document filefilename-	A function option document file other than for the E0C63158 is			
	specified during modification (Edit file).			
Error: File write error.	The function option document file or function option HEX file cannot			
	be created. This error may occur if there is no disk space.			
Can't open file : finename	The file cannot be opened. This error may occur when too many files			
	exist in the current directory.			

Table 3.5.1 fog63158 error message list

Example of function option document file

3.6 Sample Files

```
* E0C63158 FUNCTION OPTION DOCUMENT V x.xx
* FILE NAME
           C31580A0.FDC
* USER'S NAME SEIKO EPSON CORP.
* COMMENT
           TOKYO DESIGN CENTER
           421-8 HINO HINO-SHI TOKYO 191-8501 JAPAN
* #E0C63158 OPTION
*** OPTION NO.1 ***
* --- PACKAGE TYPE SELECT ---
*
   CHIP ----- SELECTED
OPT0101 01
* *** OPTION NO.2 ***
*
--- OSC3 SYSTEM CLOCK ---
*
   NOT USE ----- SELECTED
OPT0201 01
* *** OPTION NO.3 ***
* --- OSC1 SYSTEM CLOCK ---
*
CRYSTAL(32.768KHZ) ----- SELECTED
OPT0301 01
*** OPTION NO.4 ***
+
*
 --- MULTIPLE KEY ENTRY RESET COMBINATION ---
    NOT USE ----- SELECTED
OPT0401 01
* *** OPTION NO.5 ***
*
--- MULTIPLE KEY ENTRY RESET TIME AUTHORIZE ---
*
   NOT USE ----- SELECTED
OPT0501 01
*
*** OPTION NO.6 ***
*
 --- INPUT PORT PULL UP RESISTOR ---
*
                    WITH RESISTOR ----- SELECTED
    K00
*
                                ----- SELECTED
    K01
                    WITH RESISTOR
*
    K02
                     WITH RESISTOR
                                -----
                                               SELECTED
    K03
                     WITH RESISTOR
                                 _____
                                               SELECTED
*
    K10
                     WITH RESISTOR
                                _____
                                               SELECTED
*
    K11
                    WITH RESISTOR
                                _____
                                               SELECTED
*
    K12
                    WITH RESISTOR -----
                                               SELECTED
                    WITH RESISTOR -----
*
    K13
                                               SELECTED
    K20
                    WITH RESISTOR ----- SELECTED
OPT0601 01
OPT0602 01
OPT0603 01
OPT0604 01
OPT0605 01
OPT0606 01
OPT0607 01
OPT0608 01
OPT0609 01
* *** OPTION NO.7 ***
* --- OUTPUT PORT OUTPUT SPECIFICATION ---
    R1*
                     COMPLEMENTARY ----- SELECTED
```

* R2*	COMPLEMENTARY	 SELECTED
OPT0701 01		
OPT0702 01 *		
* *** OPTION NO.8 ***	*	
* I/O PORT OUTPUT		
* P1*	COMPLEMENTARY	 SELECTED
* P20	COMPLEMENTARY	 SELECTED
* P21	COMPLEMENTARY	 SELECTED
* P22	COMPLEMENTARY	 SELECTED
* P23	COMPLEMENTARY	 SELECTED
* P30	COMPLEMENTARY	 SELECTED
* P31	COMPLEMENTARY	 SELECTED
* P32	COMPLEMENTARY	 SELECTED
* P33	COMPLEMENTARY	 SELECTED
* P40	COMPLEMENTARY	 SELECTED
* P41	COMPLEMENTARY	 SELECTED
* P42	COMPLEMENTARY	 SELECTED
* P43	COMPLEMENTARY	 SELECTED
OPT0801 01		
OPT0802 01		
OPT0803 01		
OPT0804 01		
OPT0805 01		
OPT0806 01		
OPT0807 01		
OPT0808 01		
OPT0809 01		
OPT0810 01		
OPT0811 01		
OPT0812 01		
000002 01		
OPT0812 01 OPT0813 01		
OPT0813 01	*	
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL U		
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL U * P1*		 SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL T * P1* * P20	JP RESISTOR WITH RESISTOR WITH RESISTOR	 SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL T * P1* * P20 * P21	JP RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR	
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL T * P1* * P20 * P21 * P22	JP RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL T * P1* * P20 * P21 * P22 * P23	JP RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL T * P1* * P20 * P21 * P22 * P23 * P30	JP RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL T * P1* * P20 * P21 * P22 * P23 * P30 * P31	JP RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL T * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32	JP RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL T * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33	JP RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL T * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * *** OPTION NO.9 *** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43 OPT0901 01	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * * *** OPTION NO.9 *** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43 OPT0901 01 OPT0902 01	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * * *** OPTION NO.9 *** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43 OPT0901 01 OPT0902 01 OPT0902 01 OPT0903 01	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * * *** OPTION NO.9 **** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43 OPT0901 01 OPT0902 01 OPT0903 01 OPT0904 01	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * * *** OPTION NO.9 **** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43 OPT0901 01 OPT0902 01 OPT0902 01 OPT0903 01 OPT0904 01 OPT0905 01	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * * *** OPTION NO.9 **** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43 OPT0901 01 OPT0902 01 OPT0902 01 OPT0903 01 OPT0905 01 OPT0905 01 OPT0906 01	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * * *** OPTION NO.9 **** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43 OPT0901 01 OPT0902 01 OPT0902 01 OPT0903 01 OPT0905 01 OPT0905 01 OPT0906 01 OPT0907 01	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * * *** OPTION NO.9 **** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43 OPT0901 01 OPT0902 01 OPT0902 01 OPT0903 01 OPT0905 01 OPT0905 01 OPT0906 01 OPT0907 01 OPT0908 01	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * * *** OPTION NO.9 *** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43 OPT0901 01 OPT0902 01 OPT0902 01 OPT0903 01 OPT0905 01 OPT0905 01 OPT0906 01 OPT0906 01 OPT0907 01 OPT0908 01 OPT0908 01 OPT0909 01	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * * *** OPTION NO.9 *** *	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED
OPT0813 01 * * * *** OPTION NO.9 *** * I/O PORT PULL U * P1* * P20 * P21 * P22 * P23 * P30 * P31 * P32 * P33 * P40 * P41 * P42 * P43 OPT0901 01 OPT0902 01 OPT0902 01 OPT0903 01 OPT0905 01 OPT0905 01 OPT0906 01 OPT0906 01 OPT0907 01 OPT0908 01 OPT0908 01 OPT0909 01	JP RESISTOR WITH RESISTOR	 SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED SELECTED

EOC63158 DEVELOPMENT TOOL MANUAL fog63158 * *** OPTION NO.10 *** * --- SERIAL INTERFACE POLARITY ---* POSITIVE ----- SELECTED OPT1001 01 * * *** OPTION NO.11 *** * --- SOUND GENERATOR POLARITY FOR OUTPUT ---* POSITIVE ----- SELECTED OPT1101 01 *EOF

Example of function option HEX file (Motorola S2 format)

CHAPTER 4 MASK DATA CHECKER (mdc63158)

4.1 Outline of mdc63158

The mask data checker mdc63158 is a software tool that checks the format of the input files, code ROM files (c3158xxx.hsa, c3158xxx.lsa) generated by the hex63158 and the function option document file (c3158xxx.fdc) generated by the fog63158, and generates a data file (c3158xxx.pan) for generating mask patterns. Submit the file generated through this software tool to Seiko Epson. Moreover, the mdc63158 has a function to restore the generated data file (c31580a0.pan) to the original file format.

4.2 Execution Flow and Input/Output Files

Figure .2.1 shows the mdc63158 execution flow .

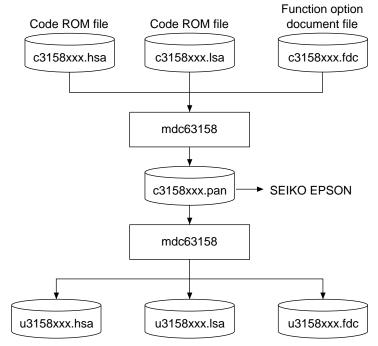


Fig. 4.2.1 mdc63158 execution flow

E0C63158 DEVELOPMENT TOOL MANUAL *mdc63158*

(1) Preparation of code ROM files (c3158xxx.hsa, c3158xxx.lsa)

Prepare the code ROM HEX files output from the HEX data converter (hex63158).

(2) Preparation of function option data file (c3158xxx.fdc)

Prepare the function option document file output from the function option generator (fog63158).

(3) Packing of data

Using the mask data checker (mdc63158), compile the code ROM files and function option document file in one data file for masking (c3158xxx.pan). This packing file should be sent to Seiko Epson.

(4) Unpacking of data

The data file for masking (c3158xxx.pan) generated by packing process can be restored to the original file using the mask data checker (mdc63158).

Note: Since the customer code is entered in the xxx part of the file name, it should be as designated by Seiko Epson.

4.3 Operation Procedure

4.3.1 Copying each data files

When submitting data to Seiko Epson, copy on the work disk the data generated from the HEX converter (hex63158) and the function option generator (fog63158).

Be sure to assign the following file names. Since the customer code is entered in the xxx part of the file name, it should be as designated by Seiko Epson.

1) Code ROM files:	c3158xxx.hsa
	c3158xxx.lsa

2) Function option document file: c3158xxx.fdc

4.3.2 Starting procedure

(1) Starting command

To start mdc63158, enter the command as following format at the DOS command level (state in which a prompt such as A> is displayed).

mdc63158 {-p | -u} <file name> -

☐ indicates the Return key.

 $\{-p \mid -u\}$ indicates either one can be specified.

(2) Option

The options below have been set for the start-up command of the mdc63158.

-p

Specification of packing. When specifying this option, **an output file name must also be specified**. In this case, the code ROM files (~.hsa, ~.lsa) and function option document file (~.fdc) must have the same name (excluding the extension) as the specified output file name.

Furthermore, generation of the output file and reading of the input files are done only for the current directory.

Example: mdc63158 -p c31580a0.pa0 🖵

-u

Specification of unpacking. When specifying this option,**an input file name must also be specified**. Furthermore, reading of the input file and generation of the output files are done only for the current directory.

Example: mdc63158 -u c31580a0.pa0 🖵

Default (When option has not been specified)

When an option has not been specified, it is designed such that pack/unpack processing can be selected from the operation menu displayed, following start-up. It is set-up such that the packing file name to be output or input can also be specified according to the message displayed.

(3) Start-up message

When the mdc63158 starts up, the following message is displayed.

Example: When option has not been specified.

```
E0C63158 Mask Data Checker Version x.xx
Copyright (C) SEIKO EPSON CORP. 199x
----< Operation menu >>---
1. Pack
2. Unpack
Please select No.? 1
```

When an option is not specified at the time the start-up command is input, the operation menu is displayed and the user is prompted to select operation. When creating a mask data for submission to Seiko Epson, select "1"; when the mask data is to be split and restored to the original format, select "2". When an option has been specified at the time of start-up of the mdc63158, it executes directly the selected packing or unpacking process without displaying this operation menu.

Note: In the OS environment setup file "CONFIG.SYS", the number of files that can be opened at the same time must be set at least 10. Example: FILES = 20

4.3.3 Packing of data

When generating data for submission to Seiko Epson, select packing option at the time of start-up of the mdc63158 (see ".3.2 Starting procedure").

(1) Input file name

When the operation menu item 1, "Pack", is selected after starting up the mdc63158 in default (without option specification), the mdc63158 prompts to enter **a file name to be generated**.

Moreover, when the -p option has been specified at the mdc63158 start-up, it executes directly the packing process without displaying the operation menu and confirmation message of the file name to be generated.

```
Input files are: C3158xxx.HSA
C3158xxx.LSA
C3158xxx.FDC
Output file is : C3158xxx.PAn
Please input pack file name(C3158xxx.PAn) ? c31580a0.pa0
```

Since the customer code is entered in the xxx part of the file name, it should be as designated by Seiko Epson.

Moreover, after submitting the masking data to Seiko Epson and there is need to re-submit the mask data for reasons such as faulty programs, etc., increase the numeric value of "n" by one when the input is made. For example, when re-submitting data after "c3158xxx.pa0" has been submitted, the pack file name should be entered as "c3158xxx.pa1".

(2) Packing process

Access to the input files when packing data is done only for code ROM files (~.hsa, ~.lsa) and function option document file (.fdc) that have the same name (excluding the extension) as the specified output file name on the current directory

If there is no problem in inputting of the file name and the contents of the input files, the input data are packed to generate the mask data and displays the generated file name.

With this, the data file for masking is generated. Submit this file to Seiko Epson.

```
Input files are: C31580A0.HSA
C31580A0.LSA
C31580A0.FDC
Output file is : C31580A0.PA0
```

4.3.4 Unpacking data

When restoring the packed data to original file format, select unpacking option at the time of start-up of the mdc63158 (see " .3.2 Starting procedure").

(1) Input file name

When the operation menu item 2, "Unpack", is selected after starting up the mdc63158 in default (without option specification), the mdc63158 prompts to entera file name to be unpacked.

When the -u option has been specified at mdc63158 start-up, it executes directly the unpacking processing without displaying the operation menu and confirmation message of the unpacking file name to be input.

```
Input file is : C3158xxx.PAn
Output files are: U3158xxx.HSA
U3158xxx.LSA
U3158xxx.FDC
Please input pack file name(C3158xxx.PAn) ? c31580a0.pa0
```

Since the customer code is entered in the xxx part of the file name, it should be as designated by Seiko Epson.

(2) Unpacking process

The mdc63158 finds the specified file from the current directory and loads it for unpacking.

```
Input file is : C31580A0.PA0
Output files are: U31580A0.HSA
U31580A0.LSA
U31580A0.FDC
```

If there is no problem in the entering of the file name and the input file, the mdc63158 unpacks the file to restore it to the original format files.

The first character of the unpacked file names are replaced with "U".

4.3.5 End procedure

When a series of operations is completed, the mdc63158 displays the following message and returns to the DOS command level.

(1) When terminated normally

```
Pack/Unpack Completed A>
```

(2) When an error occurs

```
Pack file name (C31580K0) error. A>
```

The output file is generated in the same directory as the input file.

When an error has occurred, the file is not generated.

E0C63158 DEVELOPMENT TOOL MANUAL *mdc63158*

4.4 Error Messages

In the packing operation, ROM data file and option file are checked; in the unpacking operation, the packed file is checked. If there is any abnormal each format, the message below is displayed. The mdc63158 error message lists are indicated below .

4.4.1 Start-up error

Message Explanation	
Usage: mdcxxxx [-p,-u] [filename]	The start-up parameter is incorrect.
"xxxxxxxxx.xxx" file is not found.	The specified file is not found.
Pack file name (xxxxxxxxxx) error.	A wrong pack file name is specified for packing.
Packed file name (xxxxxxxxxx) error.	A wrong pack file name is specified for unpacking.

4.4.2 ROM data error

When an error message as shown below appears, try to execute the mdc63158 again after checking and re-creating each file. If a similar error still results, please notify Seiko Epson of the situation and the error message displayed.

Message	Explanation	
Hex data error : Not S record.	The data does not begin with "S".	
Hex data error : Data is not sequential.	The data is not described in the ascending order.	
Hex data error : Illegal data.	There is an illegal character.	
Hex data error : Too many data in one line.	There are too many data in 1 line.	
Hex data error : Check sum error.	The checksum is not correct.	
Hex data error : ROM capacity over.	The data capacity is too large.	
Hex data error : Not enough the ROM data.	The data capacity is too small.	
Hex data error : Illegal start mark.	The start mark is incorrect. (during unpacking)	
Hex data error : Illegal end mark.	The end mark is incorrect. (during unpacking)	
Hex data error : Illegal comment.	The model name at the beginning of the data is incorrect.	
	(during unpacking)	

4.4.3 Function option data error

When an error message as shown below appears, try to execute the mdc63158 again after checking and re-creating the file. If a similar error still results, please notify Seiko Epson of the situation and the error message displayed.

Message	Explanation	
Option data error : Illegal option number.	The option number is incorrect.	
Option data error : Illegal select number.	The option select number is incorrect.	
Option data error : Data is not enough.	There is not enough option data.	
Option data error : Illegal start mark.	The start mark is incorrect. (during unpacking)	
Option data error : Illegal end mark.	The end mark of the option data is incorrect. (during unpacking)	
Option data error : Illegal comment.	The model name at the beginning of the option data is incorrect.	
	(during unpacking)	

4.4.4 File access error

Message	Explanation	
Directory Full.	The directory is full.	
Disk Write Error.	Writing on the file is failed. This error may occur if there is no dis	
	space.	

4.5 Packed File

4.5.1 Configuration of packed file

The packed file is configured according to the following format:

	*				
Model name	* E0C63158 MASK DATA VER x.xx				
	- *				
Code ROM start mark	- \PROM				
Master slice model name	- E0C63158xxx PROGRAM ROM				
	☐ S224000000				
Code ROM	S80400000FB				
	S224000000				
	: : : : : : :				
	L \$80400000FB				
End mark	— \END				
Function option start mark					
<pre>* E0C63158 FUNCTION OPTION DOCUMENT V x.xx</pre>					
	*				
	* FILE NAME C3158xxx.FDC				
	* USER'S NAME SEIKO EPSON				
	* COMMENT FOR SAMPLE				
	*				
Function option	* #E0C63158 OPTION				
-	* *** OPTION NO.1 ***				
	* PACKAGE TYPE SELECT * CHIP				
	* CHIP SELECTED OPT0101 01				
	OPT1101 01				
	×EOF				
End mark	— \END				
	* \ comptimes appears as ¥ depending on the newspal computer heing used				

 $* \setminus$ sometimes appears as F, depending on the personal computer being used.

4.5.2 ROM data format

Each ROM data is configured as follows, using Motorola S2 format:

Sx Count	Address (3 bytes)	Data •• Data	Checksum	CR, LF	
					 ASCII codes 0DH and 0AH 1's complements resulting from adding all bytes of data in 1 line (Hex number) 8-bit data (Hex number) Address is given (Hex number) Total byte number including address, data byte and checksum (Hex number) Data record: "S2", End record: "S8"