

# Where to Find Information

## ***Setup Guide***

Provides you with information on assembling the printer and installing the printer software.

## ***Reference Guide (this manual)***

Provides you with detailed information on the printer's functions, optional products, maintenance, troubleshooting, and technical specifications.

## ***Network Guide***

Provides network administrators with information on both the printer driver and network settings.

You need to install this guide from the software installation CD to your computer's hard disk before referring it.

## ***Paper Jam Guide (PDF guide)***

Provides you with solutions to paper jam problems that you may need to refer to on a regular basis. We recommend printing this guide and keeping it near the printer.

## ***Online Help for printer software***

Click **Help** for detailed information and instructions on the printer software that controls your printer. Online help is automatically installed when you install the printer software.

# EPSON®

Laser Printer

# EPL-N7000

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION and its affiliates shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

Adobe, the Adobe logo and PostScript3 are trademarks of Adobe Systems Incorporated, which may be registered in certain jurisdictions.

The PCL6 compatible interpreter is a customized version of IPS-PRINT SIX © developed by Xionics Document Technologies, Inc., a subsidiary of Oak Technology, Inc.

NEST Office Kit Copyright © 1996, Novell, Inc. All rights reserved.

IBM and PS/2 are registered trademarks of International Business Machines Corporation. Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States of America and other countries.

EPSON and EPSON ESC/P are registered trademarks and EPSON ESC/P 2 is a trademark of SEIKO EPSON CORPORATION.

Coronet is a trademark of Ludlow Industries (UK) Ltd.

---

Marigold is a trademark of Arthur Baker and may be registered in some jurisdictions.

CG Times and CG Omega are trademarks of Agfa Monotype Corporation and may be registered in certain jurisdictions.

Arial, Times New Roman and Albertus are trademarks of The Monotype Corporation and may be registered in certain jurisdictions.

ITC Avant Garde Gothic, ITC Bookman, ITC Zapf Chancery and ITC Zapf Dingbats are trademarks of International Typeface Corporation and may be registered in some jurisdictions.

Antique Olive is a trademark of Fonderie Olive.

Helvetica, Palatino, Times, Univers, Clarendon, New Century Schoolbook, Miriam and David are trademarks of Heidelberger Druckmaschinen AG which may be registered in certain jurisdictions.

Wingdings is a trademark of Microsoft Corporation and may be registered in some jurisdictions.

HP and HP LaserJet are registered trademarks of the Hewlett-Packard Company.

Microsoft® and Windows® are registered trademarks of Microsoft Corporation.

*General Notice:* Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

Copyright © 2003 by SEIKO EPSON CORPORATION, Nagano, Japan.

---

# Contents

---

## Chapter 1 *Getting to Know Your Printer*

---

Printer Parts . . . . .	2
Front view . . . . .	2
Rear view . . . . .	2
Inside the printer . . . . .	3
Control panel . . . . .	3
Options and Consumable Products . . . . .	5
Options . . . . .	5
Consumable products . . . . .	6
Printer Features . . . . .	7
Adobe PostScript 3 mode . . . . .	7
Reserve Job function . . . . .	7
HDD Form Overlay function . . . . .	8
Wide variety of fonts . . . . .	8
Toner Save mode . . . . .	8
Resolution Improvement Technology (RITech) . . . . .	9
Duplex printing . . . . .	9
Various Printing Options . . . . .	10
4-Bin Mailbox . . . . .	10
Duplex printing . . . . .	11
Fit-to-page printing . . . . .	11
Pages per sheet printing . . . . .	12
Watermark printing . . . . .	12
Overlay printing . . . . .	13
Using the Reserve Job function . . . . .	13

---

## Chapter 2 *Paper Handling*

---

Paper Sources . . . . .	16
MP tray . . . . .	16
Standard paper cassette . . . . .	17
Optional 500-Sheet Universal Paper Cassette Unit A3 . . . . .	17

Selecting a paper source .....	17
Loading Paper .....	21
MP tray .....	21
Standard and optional paper cassettes .....	23
Output tray .....	31
Printing on Special Media .....	32
Envelopes .....	32
Labels .....	34
Thick paper .....	35
Transparencies .....	36
Loading a custom paper size .....	36

### ***Chapter 3 Using the Standard Printer Driver***

---

About the standard printer driver .....	38
System Requirements .....	38
Installing the standard printer driver .....	38
Accessing the standard printer driver .....	38
Standard printer driver settings .....	39
Making the print quality setting .....	39
Resizing printouts .....	41
Modifying the print layout .....	44
Using a watermark .....	45
Using an overlay .....	50
Using HDD Form Overlay .....	55
Printing with the Duplex Unit .....	58
Making Extended Settings .....	60
Making the Optional Settings .....	63
Using the Reserve Job Function .....	65
Re-Print Job .....	66
Verify Job .....	67
Stored Job .....	69
Confidential Job .....	70
Monitoring Your Printer Using EPSON Status Monitor 3 .....	72
About EPSON Status Monitor 3 .....	72
Installing EPSON Status Monitor 3 .....	73
Accessing EPSON Status Monitor 3 .....	76
Getting printer status details .....	77

Setting Monitoring Preferences . . . . .	79
Status Alert window . . . . .	81
Using the Job Management function . . . . .	81
Stopping monitoring . . . . .	85
Setting monitored printers . . . . .	86
Setting Up the USB Connection . . . . .	86
Canceling Printing . . . . .	89
Uninstalling the Printer Software . . . . .	90
Uninstalling the printer driver . . . . .	90
Uninstalling the USB device driver . . . . .	93

#### ***Chapter 4 Using the PostScript Printer Driver (Windows)***

---

About the PostScript Printer Driver . . . . .	98
Hardware requirements . . . . .	98
System requirements . . . . .	98
Using the PostScript Printer Driver with Windows . . . . .	99
Windows Me, Windows 98, Windows 95 users . . . . .	99
Windows NT 4.0 users . . . . .	113
Windows XP, Windows 2000 users . . . . .	123
Using online help . . . . .	135
Reserve Job function . . . . .	135
Using AppleTalk under Windows 2000 or Windows NT 4.0 . . . . .	137

#### ***Chapter 5 Using the PostScript Printer Driver (Macintosh)***

---

About the PostScript Printer Driver . . . . .	140
Hardware requirements . . . . .	140
System requirements . . . . .	140
Using the PostScript Printer Driver with Macintosh . . . . .	142
Mac OS 8.6, Mac OS 9.x users . . . . .	142
Mac OS X users . . . . .	164

## **Chapter 6 *Setting Up Your Printer on a Network***

---

Sharing the printer .....	186
Setting up your printer as a shared printer.....	187
Using an additional driver .....	189
Setting for the clients .....	194
Using AppleTalk Under Windows 2000 or Windows NT 4.0 ..	202
Installing the printer driver from the CD-ROM .....	203

## **Chapter 7 *Installing Options***

---

500-Sheet Universal Paper Cassette Unit A3.....	206
4-Bin Mailbox.....	212
Duplex Unit .....	228
Hard Disk Drive .....	232
Formatting the Hard Disk Drive .....	242
Memory Module .....	243
Interface Cards .....	252

## **Chapter 8 *Replacing the Consumable Product***

---

Precautions During Replacement.....	256
Replacement Messages.....	256
Replacing the Imaging Cartridge .....	257
Cleaning the Printer .....	269
Transporting the Printer.....	269

## **Chapter 9 *Troubleshooting***

---

Clearing Jammed Paper .....	277
Precautions for clearing jammed paper .....	277
Paper jam-paper cassette.....	278
Paper jam-MP tray .....	282
Paper jam-inside the printer.....	284
Paper jam-4-Bin Mailbox.....	295
Paper jam-Duplex Unit .....	302

Printing a Status Sheet . . . . .	304
Operational Problems . . . . .	306
The Ready light does not turn on . . . . .	306
The printer does not print (Ready light off) . . . . .	307
The Ready light is on but nothing prints . . . . .	307
The optional product is not available . . . . .	308
Printout Problems . . . . .	308
The font cannot be printed . . . . .	308
Printout is garbled . . . . .	309
The printout's orientation on the page is not correct . . . . .	309
Graphics do not print correctly . . . . .	310
Print Quality Problems . . . . .	311
The background is dark or dirty . . . . .	311
White dots appear in the printout . . . . .	311
Print quality or tone is uneven . . . . .	312
Half-tone images print unevenly . . . . .	312
Toner smudges . . . . .	313
Areas are missing in the printed image . . . . .	313
Completely blank pages are output . . . . .	314
The printed image is light or faint . . . . .	314
The non-printed side of the page is dirty . . . . .	316
Memory Problems . . . . .	316
Print quality decreased . . . . .	316
Insufficient memory for current task . . . . .	317
Insufficient memory to print all copies . . . . .	317
Paper Handling Problems . . . . .	317
Paper does not feed properly . . . . .	317
Problems Printing in the PostScript 3 Mode . . . . .	318
Windows users . . . . .	318
Macintosh users . . . . .	326
Problems Using Options . . . . .	331
The message Invalid AUX/IF Card appears on the LCD panel . . . . .	332
Paper does not feed from the optional paper cassette . . . . .	332
Feed jam when using the optional paper cassette . . . . .	333
An installed option cannot be used . . . . .	333
Correcting USB Problems . . . . .	333
USB connections . . . . .	333
Windows operating system . . . . .	334

- Printer software installation . . . . . 334
- Status and Error Messages . . . . . 341
- Canceling Printing . . . . . 352
  - Using the Cancel Job button . . . . . 352
  - Using the Reset menu . . . . . 353
- Contacting Customer Support . . . . . 354

**Appendix A Technical Specifications**

---

- Paper . . . . . 366
  - Available paper types . . . . . 366
  - Paper that should not be used . . . . . 367
  - Specifications . . . . . 368
  - Printable area . . . . . 370
- Printer . . . . . 371
  - General . . . . . 371
  - Environmental . . . . . 373
  - Mechanical . . . . . 373
  - Electrical . . . . . 373
  - Safety and approvals . . . . . 374
  - PostScript . . . . . 376
- Interfaces . . . . . 376
  - Parallel interface . . . . . 376
  - USB interface . . . . . 376
  - Ethernet interface . . . . . 377
- Options and Consumable . . . . . 378
  - 500-Sheet Universal Paper Cassette Unit A3 . . . . . 378
  - 4-Bin Mailbox . . . . . 379
  - Duplex Unit . . . . . 380
  - Hard Disk Drive . . . . . 380
  - Memory modules . . . . . 381
  - Imaging cartridge . . . . . 381
- Safety Information . . . . . 382
  - Safety Precautions . . . . . 382
  - Important Safety Instructions . . . . . 384
  - Power On/Off Cautions . . . . . 385
  - Warnings, Cautions, and Notes . . . . . 385

## **Appendix B Functions of the Control Panel**

---

Using the Control Panel Menus . . . . .	388
When to make control panel settings . . . . .	388
How to access the control panel menus . . . . .	388
Printing and Deleting Reserve Job Data . . . . .	392
Using the Quick Print Job Menu . . . . .	392
Using the Confidential Job Menu . . . . .	393
Control Panel Menus . . . . .	394
Control panel menu summary . . . . .	394
Information Menu . . . . .	397
Tray Menu . . . . .	399
Emulation Menu . . . . .	401
Printing Menu . . . . .	401
Setup Menu . . . . .	404
Quick Print Job Menu . . . . .	409
Confidential Job Menu . . . . .	410
Reset Menu . . . . .	410
Parallel Menu . . . . .	411
USB Menu . . . . .	412
Network Menu . . . . .	413
AUX Menu . . . . .	413
LJ4 Menu . . . . .	414
GL2 Menu . . . . .	417
PS3 Menu . . . . .	419
ESCP2 Menu . . . . .	420
FX Menu . . . . .	423
I239X Menu . . . . .	425

## **Appendix C Working with Fonts**

---

Available Fonts . . . . .	430
LJ4/GL2 mode . . . . .	431
ESC/P 2 and FX modes . . . . .	433
I239X mode . . . . .	434
PS 3 mode . . . . .	434
Printing font samples . . . . .	435
Adding More Fonts . . . . .	435

- Selecting Fonts . . . . . 436
- Downloading Fonts . . . . . 436
- EPSON Font Manager . . . . . 437
  - System requirements . . . . . 437
  - Installing EPSON Font Manager . . . . . 437
- EPSON BarCode Fonts . . . . . 439
  - System requirements . . . . . 441
  - Installing EPSON BarCode Fonts . . . . . 441
  - Printing with EPSON BarCode Fonts . . . . . 443
  - BarCode Font specifications . . . . . 448

**Appendix D Symbol Sets**

---

- Introduction to Symbol Sets . . . . . 462
- In the LJ4 Emulation Mode . . . . . 463
  - International character sets for ISO . . . . . 466
- In the ESC/P 2 or FX Modes . . . . . 467
  - International character sets . . . . . 469
  - Characters available with the ESC (^ command . . . . . 470
- In the I239X Emulation Mode . . . . . 470
- In the EPSON GL/ 2 Mode . . . . . 471

**Appendix E Postscript Font Samples**

---

**Glossary**

---

**Index**

---

---


## Getting to Know Your Printer

Printer Parts .....	2
Front view .....	2
Rear view .....	2
Inside the printer .....	3
Control panel .....	3
Options and Consumable Products .....	5
Options .....	5
Consumable products .....	6
Printer Features .....	7
Adobe PostScript 3 mode .....	7
Reserve Job function .....	7
HDD Form Overlay function .....	8
Wide variety of fonts .....	8
Toner Save mode .....	8
Resolution Improvement Technology (RITech) .....	9
Duplex printing .....	9
Various Printing Options .....	10
4-Bin Mailbox .....	10
Duplex printing .....	11
Fit-to-page printing .....	11
Pages per sheet printing .....	12
Watermark printing .....	12
Overlay printing .....	13
Using the Reserve Job function .....	13


---

# Printer Parts


## Front view

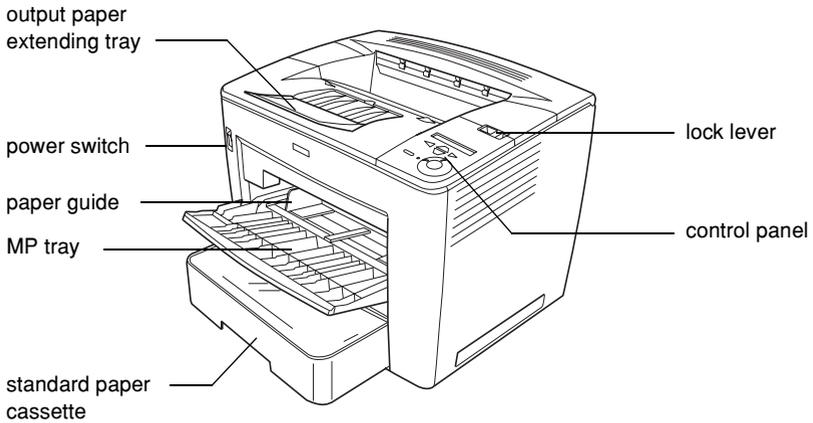


## Rear view

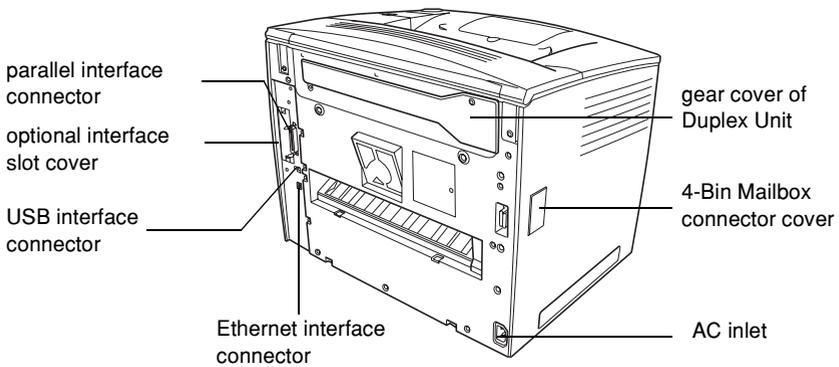

# Inside the printer

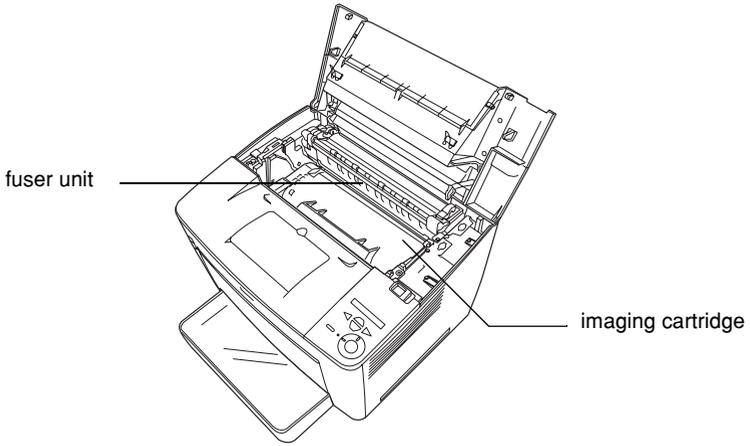

# Control panel

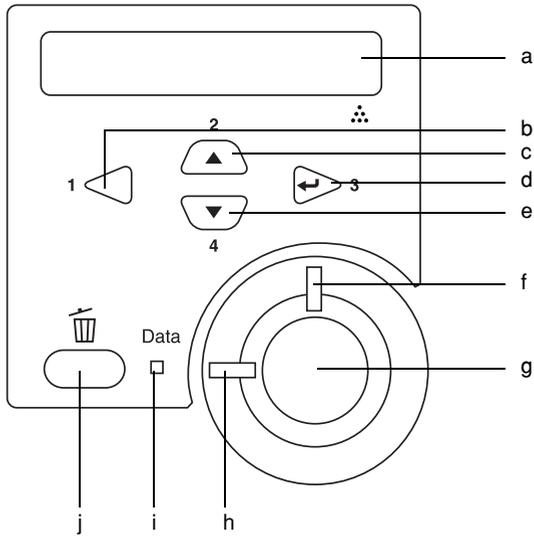

- a. LCD panel                      Displays printer status messages and control panel menu settings.
  
- b. Back button                    Use these buttons to access the control panel menus, where you can make printer settings and check the status of consumable products. For instructions on how to use these buttons, see “Using the Control Panel Menus” on page 388.
- c. Up button
- d. Enter button
- e. Down button
  
- f. Error light                      On or flashes when an error is detected.
  
- g. Start/Stop button            Switches the printer between ready and offline status while no error has occurred. When the printer is offline and the data light is on, press it down for more than two seconds to print the specified copies of the first page of the print job that the printer is currently receiving.  
When the error light is flashing, press this button to clear the error and switch the printer to ready status.  
When the error light is on, perform the necessary procedures to clear the error, and then press this button to switch the printer to ready status.

**Note:**

*When the error light is flashing, the printer may automatically switch to ready status if you set Auto Continue to ON with the control panel menu. See “Setup Menu” on page 404 for more information.*

- h. Ready light      On when the printer is ready, indicating that the printer is ready to receive and print data.  
Off when the printer is not ready.
- i. Data light      On or flashes when the printer is processing data, or when print data is stored in the print buffer (the section of printer memory reserved for receiving data) but not yet printed.  
Off when no data remains in the print buffer.
- j. Cancel Job button      Press once to cancel the current print job. Press it down for more than two seconds to delete all data in the print buffer, all jobs, and all data the printer is receiving or currently printing.

---

## ***Options and Consumable Products***

### ***Options***

You can add to your printer's capabilities by installing any of the following options.

#### ***500-Sheet Universal Paper Cassette Unit A3 (C12C813672)***

This unit increases paper feeding capacity up to 500 sheets of paper, and you can install up to three units. For details, see "500-Sheet Universal Paper Cassette Unit A3" on page 206.

### *4-Bin Mailbox (C12C813692)*

The 4-Bin Mailbox is equipped with four bins (output trays). You can specify a different output tray for each print job according to the content or user of the printed documents. For details, see “4-Bin Mailbox” on page 212.

### *Hard Disk Drive (C12C824061)*

This option expands the printer’s capacity by allowing you to print complex and large print jobs at high speed. This option also enables you to use the Reserve Job function. By using the Reserve Job function, you can store print jobs in the printer’s hard disk and print them later directly from the printer’s control panel. For details, see “Hard Disk Drive” on page 232.

### *Duplex Unit (C12C813682)*

The Duplex Unit provides for automatic printing on both sides of the paper. For details, see “Duplex Unit” on page 228.

### *Memory Module*

Adding an optional memory module expands your printer’s memory, allowing you to print complex and graphics-intensive documents. For details, see “Memory Module” on page 243.

#### *Note:*

*Make sure that the DIMM you purchase is compatible with EPSON products. For details, contact the store where you purchased this printer or an EPSON qualified service representative.*

## **Consumable products**

### *Imaging Cartridge (S051100)*

The life of the cartridge is monitored by the printer. The printer lets you know when replacements are needed.

---

## **Printer Features**

The printer comes with a full set of features that contributes to ease of use and consistent, high-quality output. The main features are described below.

### **Adobe PostScript 3 mode**

The printer's Adobe PostScript 3 mode enables you to print documents formatted for PostScript printers. Seventeen scalable fonts are included. IES (Intelligent Emulation Switch) and SPL (Shared Printer Language) support allow the printer to switch between the PostScript mode and other emulations as print data is received at the printer.

### **Reserve Job function**

The Reserve Job function lets you store a print job on the printer's Hard Disk Drive and reprint it directly from the printer's control panel at any time without using your computer. You can also print one copy in order to verify the content before printing multiple copies. If the content of the print job is confidential, you can set a password to limit access to it. For more information, see "Using the Reserve Job Function" on page 65.

**Note:**

*You need an optional Hard Disk Drive to be installed in your printer in order to use the Reserve Job function. See "Hard Disk Drive" on page 232 for instructions.*

## **HDD Form Overlay function**

Enables faster printing with form overlays by allowing you to save the overlay data on the optional Hard Disk Drive instead of your computer. For details, see “Using HDD Form Overlay” on page 55.

### **Note:**

- ❑ *You need an optional Hard Disk Drive to be installed in your printer in order to use the HDD Form Overlay function. See “Hard Disk Drive” on page 232 for instructions.*
- ❑ *The HDD Form Overlay function is not available in the PostScript 3 mode.*

## **Wide variety of fonts**

The printer comes with a selection of 93 Laser-Jet compatible scalable fonts, and 7 bitmap fonts in LJ4 emulation mode to provide you with the fonts you need to create professional-looking documents.

## **Toner Save mode**

To reduce the amount of toner used in printing documents, you can print rough drafts using the Toner Save mode.

## ***Resolution Improvement Technology (RITech)***

Resolution Improvement Technology (RITech) is an original EPSON printer technology that works by smoothing out the jagged edges of diagonal and curved lines in both text and graphics. Enhanced MicroGray improves the halftone quality of graphics. With the driver provided, the printer's 600 dpi (dots per inch) resolution is enhanced by RITech and Enhanced MicroGray technology.

## ***Duplex printing***

EPSON provides optional Duplex Unit, allowing you to easily print on both sides of the page. You can produce professional quality double-sided documents. Use this feature with any print job to cut costs and save resources.

## Chapter 2


---

### **Various Printing Options**

This printer provides you with a variety of different printing options. You can print in various formats, or can print using many different types of paper. Choose to use the appropriate one according to your printing needs.

#### **4-Bin Mailbox**

Lets you specify a different output tray for each print job according to the content or user of the printed documents.

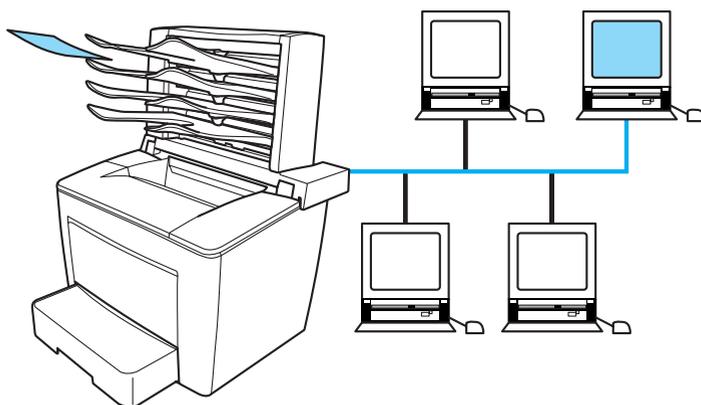

See “4-Bin Mailbox” on page 212 and “Using the 4-Bin Mailbox” on page 63 for details.

## Duplex printing

Lets you print on both sides of paper.




See “Duplex Unit” on page 228 and “Printing with the Duplex Unit” on page 58 for details.

**Note:**

*You need the optional Duplex Unit installed in your printer in order to use this printing option. See “Duplex Unit” on page 228 for instructions.*

## Fit-to-page printing


Lets you automatically enlarge or reduce the size of your document to fit the paper size you selected.

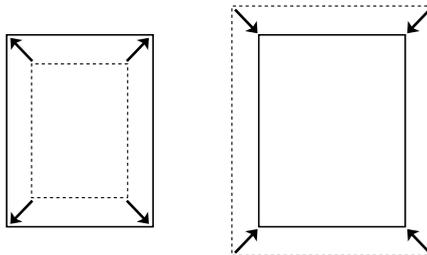

See “Resizing printouts” on page 41 for details.

## ***Pages per sheet printing***

Lets you print two or four pages on a single sheet.

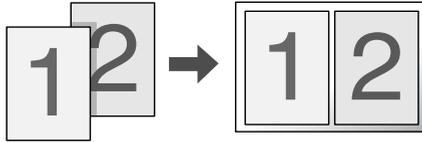

See “Modifying the print layout” on page 44 for details.

## ***Watermark printing***


Lets you print a text or image with a watermark. For example, you can put “Confidential” on an important document.



See “Using a watermark” on page 45 for details.

## Overlay printing

Lets you prepare standard forms or template on your printout that you can use as overlays when printing other documents.

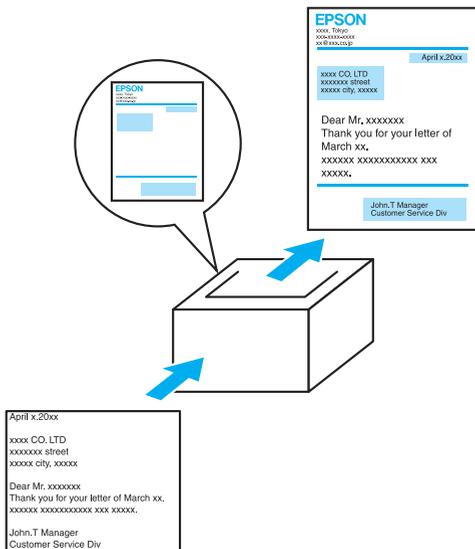

See “Using an overlay” on page 50 for details.

**Note:**

*The Overlay printing function is not available in the PostScript 3 mode.*

## Using the Reserve Job function

Lets you print jobs that you stored in the printer’s Hard Disk Drive later directly from the printer’s control panel.

See “Hard Disk Drive” on page 232 and “Using the Reserve Job Function” on page 65 for details.



## Chapter 2

# Paper Handling

---

Paper Sources . . . . .	16
MP tray . . . . .	16
Standard paper cassette . . . . .	17
Optional 500-Sheet Universal Paper Cassette Unit A3 . . . . .	17
Selecting a paper source . . . . .	17
Loading Paper. . . . .	21
MP tray . . . . .	21
Standard and optional paper cassettes. . . . .	23
Output tray. . . . .	31
Printing on Special Media. . . . .	32
Envelopes . . . . .	32
Labels . . . . .	34
Thick paper . . . . .	35
Transparencies. . . . .	36
Loading a custom paper size. . . . .	36

---

## Paper Sources

This section describes the combinations of paper sources and paper types that you can use.

### MP tray

Paper Type	Paper Size	Capacity
Plain paper Weight: 60 to 90 g/m	A3, A4, A5, B4, B5, F4, Letter (LT), Half-Letter (HLT), Legal (LGL), Executive (EXE), Government Legal (GLG), Government Letter (GLT), B (Ledger)  Custom-size paper: 86.0 × 139.7 mm minimum 297.0 × 432.0 mm maximum	Up to 250 sheets (64 g/m ) Up to 200 sheets (75 g/m )
Envelopes Weight: 70 to 105 g/m	Monarch (MON), C10, DL, C5, C6, ISO-B5  Custom-size envelope: 86.0 × 139.7 mm minimum 297.0 × 432.0 mm maximum	Up to 20 sheets
Labels, Transparencies	A4, Letter (LT)	Up to 20 sheets
Thick paper Weight: 90 to 163 g/m	A3, A4, A5, B4, B5, F4, Letter (LT), Half-Letter (HLT), Legal (LGL), Executive (EXE), Government Legal (GLG), Government Letter (GLT), B (Ledger)  Custom-size paper: 86.0 × 139.7 mm minimum 297.0 × 432.0 mm maximum	Up to 20 sheets

## Standard paper cassette

Paper Type	Paper Size	Capacity
Plain paper Weight: 60 to 90 g/m	A3, A4, B4, B5, Letter (LT), Legal (LGL), Government Letter (GLT), B (Ledger)	Up to 550 sheets (64 g/m ) Up to 500 sheets (75 g/m ) (Total thickness: less than 57 mm)

2

## Optional 500-Sheet Universal Paper Cassette Unit A3

Paper Type	Paper Size	Capacity
Plain paper Weight: 60 to 90 g/m	A3, A4, B4, B5, Letter (LT), Legal (LGL), Government Letter (GLT), B (Ledger)	Up to 550 sheets (64 g/m ) Up to 500 sheets (75 g/m ) (Total thickness: less than 57 mm)

## Selecting a paper source

You can specify a paper source manually, or set the printer to select the paper source automatically.

### Manual selection

You can use the printer driver or the printer's control panel to select a paper source manually.

- Using the printer driver

Access the printer driver, click the **Basic Settings** tab, and select the paper source that you want to use from the Paper Source list. Then click OK.

- ❑ Using the printer's control panel

Access the control panel's Setup Menu, then select **Paper Source** and specify the paper source you want to use. See "Setup Menu" on page 404 for more information.

### **Auto selection**

If you want the printer to select the paper source containing the appropriate size of paper automatically, select **Auto Selection** in the printer driver or **Auto** using the printer's control panel.

The printer will search for a paper source containing the specified paper size in the following order.

#### **Standard configuration:**

MP Tray  
Lower Cassette 1

#### **Note:**

- ❑ *If you make paper size settings or paper source settings in your application, these settings may override the printer driver settings.*
- ❑ *If you select an envelope for the Paper Size setting, it can be fed only from the MP tray regardless of the Paper Source setting.*
- ❑ *You can change the priority of the MP tray by using the MP Mode setting in the control panel's Setup Menu. For details, see "Setup Menu" on page 404.*

*With the optional 500-Sheet Universal Cassette Unit A3 installed:*

MP Tray  
Lower Cassette 1  
Lower Cassette 2  
Lower Cassette 3  
Lower Cassette 4

**Note:**

- ❑ *If you make paper size settings or paper source settings in your application, these settings may override the printer driver settings.*
- ❑ *If you select an envelope for the Paper Size setting, it can be fed only from the MP tray regardless of the Paper Source setting.*
- ❑ *You can change the priority of the MP tray by using the MP Mode setting in the control panel's Setup Menu. For details, see "Setup Menu" on page 404.*

### **Manually feeding paper**

Manual feeding is similar to normal paper feeding, except that you need to press the ○ Start/Stop button to start printing.

You can either choose to press the ○ Start/Stop button once to start printing all pages, or press the ○ Start/Stop button to print each page one by one.

Follow these steps to feed paper manually:

1. Access the printer driver by one of the following methods:
  - ❑ To access the printer driver from your application, select Print or Page Setup from the File menu. You also need to click Setup, Options, Properties, or a combination of these buttons.

- ❑ To access the printer driver from Windows Me, 98, 95, XP, 2000, or NT 4.0, click **Start**, point to **Settings**, and click **Printers**. Next, right-click the **EPSON EPL-N7000 Advanced** icon and click **Properties** (in Windows Me, 98, or 95), **Printing Preferences** (in Windows XP or 2000), or **Document Defaults** (in Windows NT 4.0).
- 2. Click the **Basic Settings** tab, then click the **Manual Feed** check box.
- 3. Click the **Each Page** check box to feed all pages manually one by one.  
To feed only the first page manually, leave the check box unchecked.
- 4. Select the correct paper size from the **Paper Size** list.
- 5. If paper of the selected size is already loaded, proceed to the next step. Otherwise, remove any paper remaining in the tray. Load a sheet or a stack of the selected size paper with the printable side up. Adjust the paper guide to the size of the paper you are loading.

**Note:**

*Make sure to load paper with the printable surface facing up.*

- 6. Send the print data from the computer. The LCD panel shows **Manual Feed** and the selected page size.
- 7. Press the **Start/Stop** button to start printing.

If you checked the **Each Page** check box in step 3, press the **Start/Stop** button to print each page.  
Otherwise, all pages are printed automatically.

---

## Loading Paper


This section describes how to load paper into the MP tray and the paper cassettes. If you use special media such as transparencies or envelopes, see also “Printing on Special Media” on page 32.

2


### MP tray

Follow these steps to load paper into the MP tray:


1. Open the MP tray.

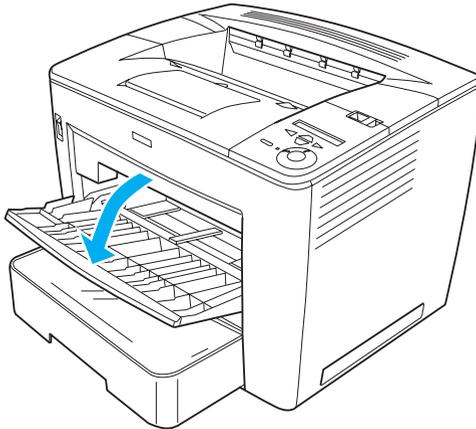

2. While squeezing the guide lock on the right side of the paper guide, slide the paper guide to accommodate the paper you are loading.

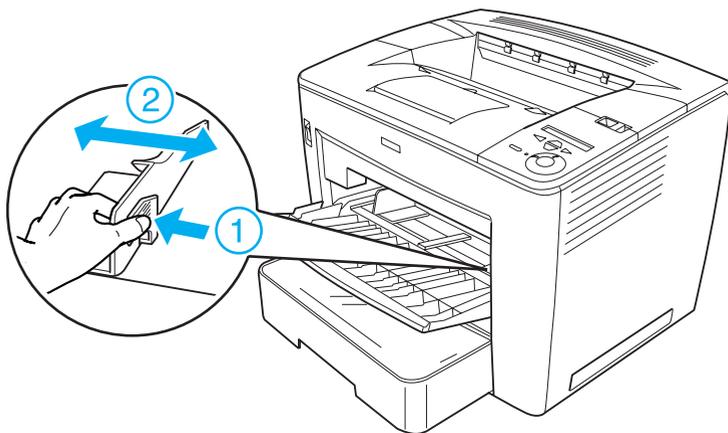


3. Fan a stack of paper and tap it on a flat surface to even the edges, and then set the paper into the MP tray with the printable surface facing up.

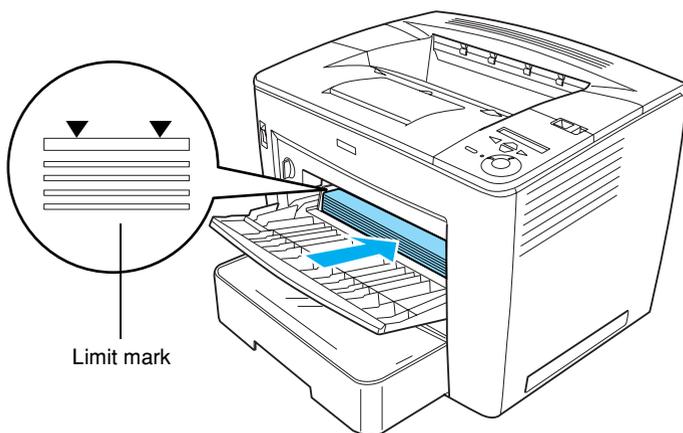

**Note:**

- ❑ You can load up to 200 sheets of plain paper (75 g/m<sup>2</sup>, 20 lb).
  - ❑ Make sure to load the paper as far as it will go inside the MP tray.
  - ❑ Make sure that you do not load paper beyond the limit mark.
4. While squeezing the guide lock on the right side of the paper guide, adjust the paper guide to the size of the paper.

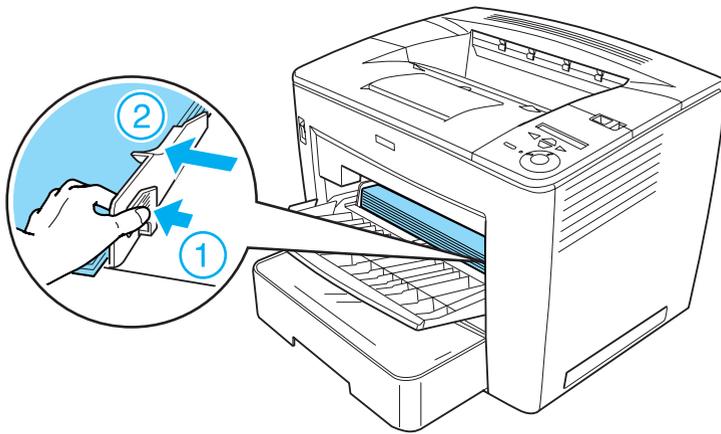**Note:**

Make sure to load the paper as far as it will go inside the MP tray.


## **Standard and optional paper cassettes**

The paper-loading procedure is the same for the standard paper cassette and the optional 500-Sheet Universal Paper Cassette Unit A3.


The paper sizes and types supported by the optional 500-Sheet Universal Paper Cassette Unit A3 are the same as the standard paper cassette. For more information, see “Optional 500-Sheet Universal Paper Cassette Unit A3” on page 17.

Follow these steps to load paper into the standard and optional paper cassettes. The illustrations show the standard cassette.


1. Pull the paper cassette out until it stops.

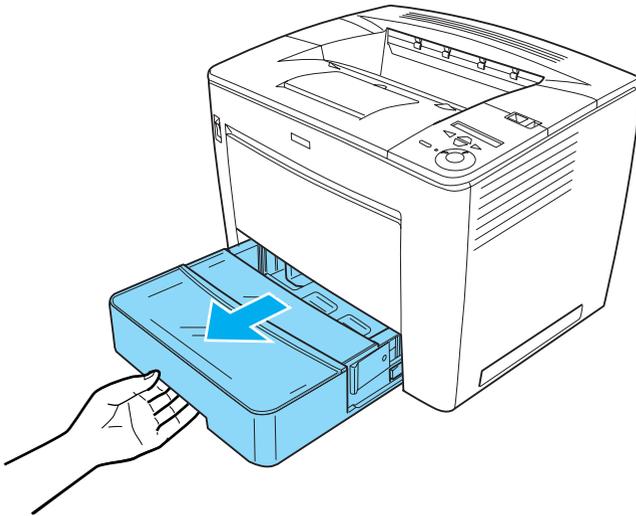


2. While pressing the gray stoppers on both sides of the paper cassette, pull the cassette out of the printer.

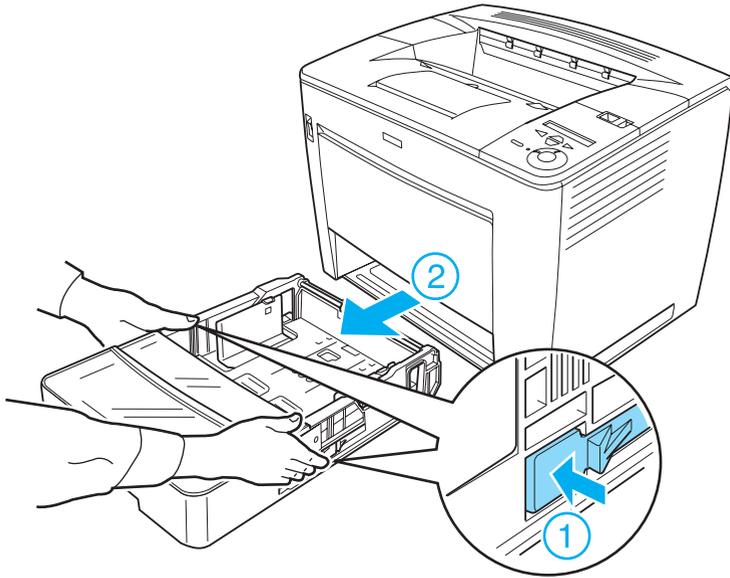

3. Remove the cassette cover.

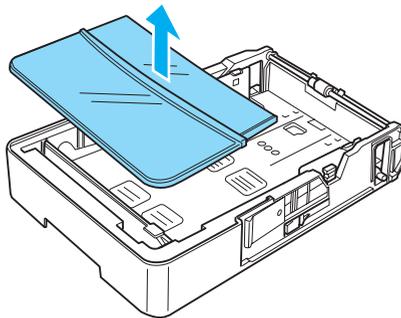


4. Check if the paper size detector is set to the size of the paper you are loading.

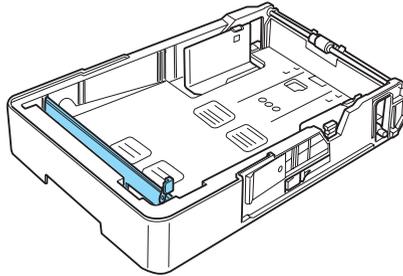


In the illustration above, the paper size detector is set to A3. If your paper cassette is in the same condition and you are loading A3 paper, proceed to step 7.

To set the paper size detector to other sizes, proceed to the next step.

5. Raise the gray stopper located at the right end of the paper size detector, and push the detector to the right. Then, pull up the left end of the paper size detector to remove it from the paper cassette.

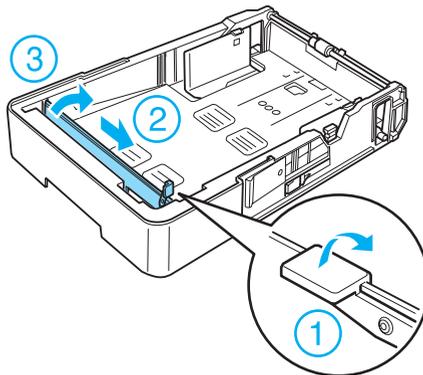

6. Insert the paper size detector at the location of the desired paper size. Push the paper size detector to the left, and then push down the gray stopper to secure the detector, as shown below.

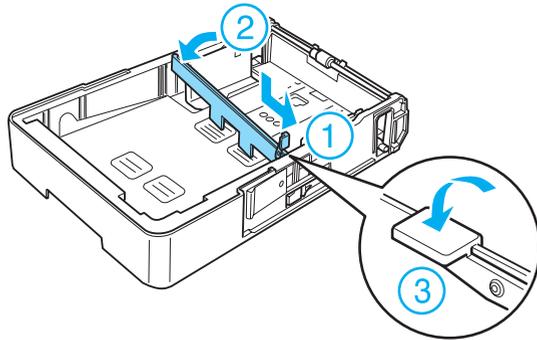


**Note:**


*In the illustration above, the paper size detector is inserted at the location for A4 size.*

7. Fan a stack of paper and tap it on a flat surface to even the edges. Then load it into the paper cassette with the printable surface facing up.

When loading A4 size or smaller

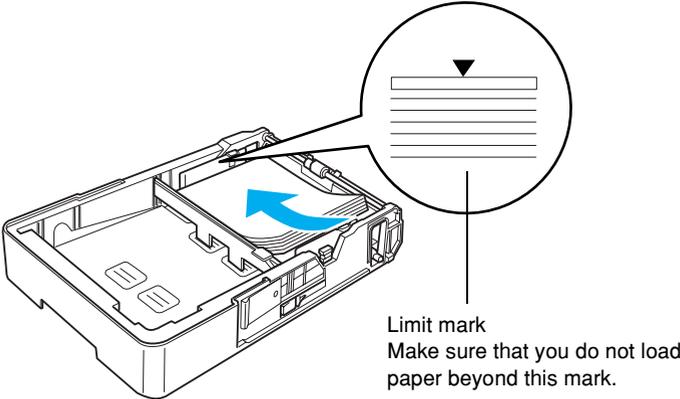


When loading A3, B4, or Ledger size

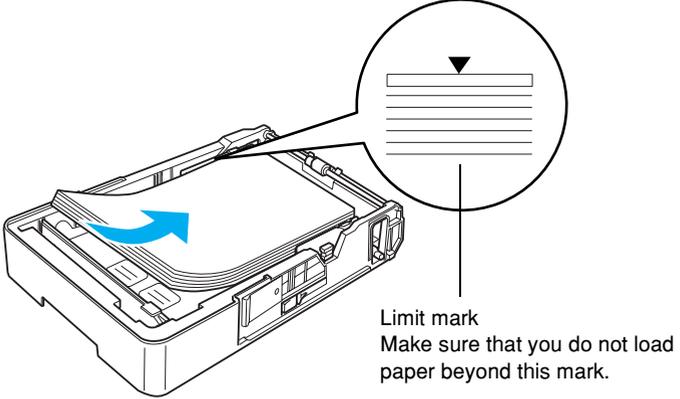


**Note:**  
*You can load up to 500 sheets of plain paper (75 g/m<sup>2</sup>, 20 lb).*


- 8. While squeezing the guide lock, adjust the paper guide to the size of the loaded paper, as shown below.

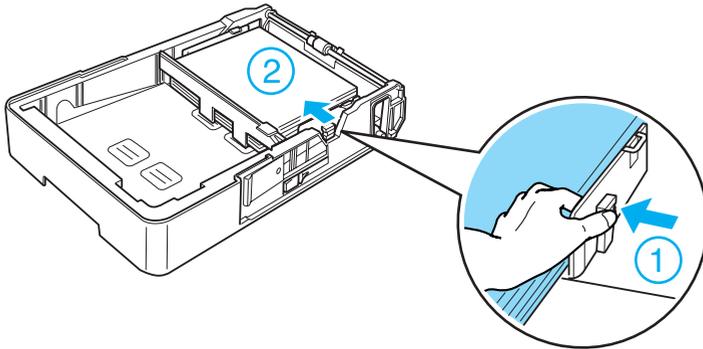

- 9. Replace the cassette cover.

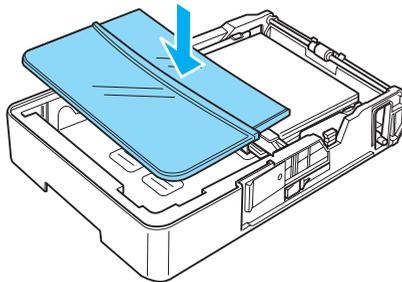

10. Carefully insert the paper cassette into the printer.

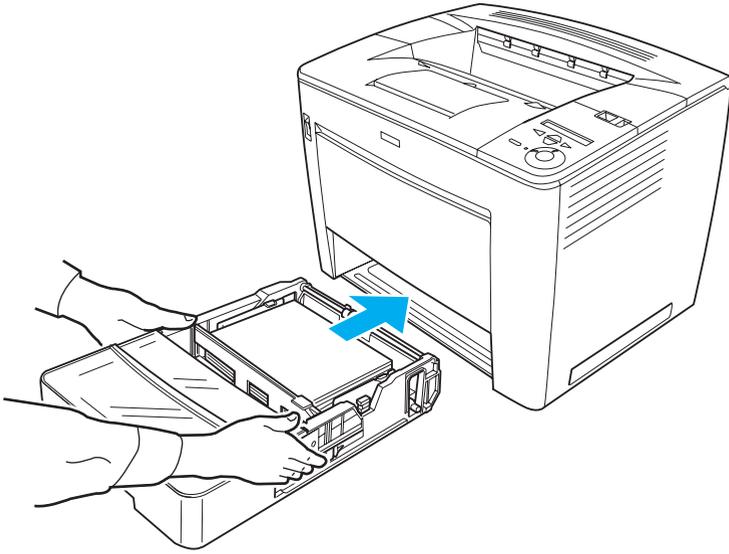


**Note:**

*Make sure to push in the cassette as far as it will go inside the printer.*

## Output tray

The output tray is located on the top of the printer. Since printouts are output face-down, this tray is also referred to as the face-down tray. This tray can hold up to 500 sheets. Raise the output paper extending tray to prevent your printouts from slipping off the printer when printing on B4 paper or larger.

2

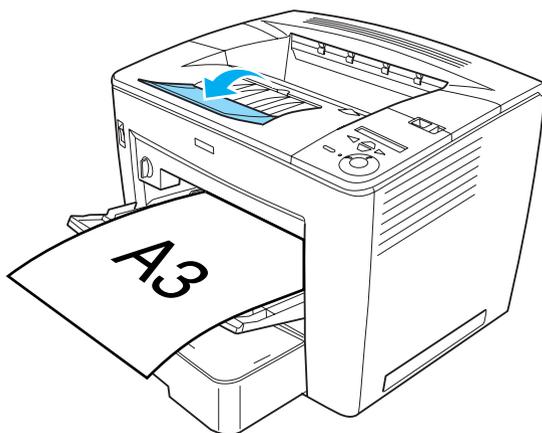

### Outputting to the 4-Bin Mailbox

You can specify a different output tray for each print job if the optional 4-Bin Mailbox is installed on the printer. This feature is useful when the printer is connected to more than one computer. You can avoid mixing up printouts by assigning a different output tray to each user. See “Using the 4-Bin Mailbox” on page 63 for instructions on how to specify an output tray for a print job.

**Note:**

- ❑ See “4-Bin Mailbox” on page 212 for instructions on installing the 4-Bin Mailbox.

- ❑ See “4-Bin Mailbox” on page 379 for information on paper that you can output to the 4-Bin Mailbox.

---

## Printing on Special Media

You can print on special media such as envelopes, transparencies, thick paper, and labels.

### **Note:**

*Since the quality of any particular brand or type of media may be changed by the manufacturer at any time, EPSON cannot guarantee the quality of any type of media. Always test samples of media stock before purchasing large quantities or printing large jobs.*

## Envelopes

You can load up to 20 envelopes into the MP tray, depending on the envelope thickness (70 to 105 g/m ).

The print quality of envelopes may be irregular because different parts of an envelope have different thicknesses. Print one or two envelopes to check the print quality.



### **Caution:**

*Do not use window envelopes unless they are specifically designed for laser printers. The plastic on most window envelopes will melt when it comes into contact with the fuser.*

### **Note:**


- ❑ *Depending on the quality of envelopes, the printing environment, and the printing procedure, envelopes might be wrinkled. Do a test print before you print large quantities.*
- ❑ *Duplex printing is not available for envelopes.*
- ❑ *You cannot output envelopes to the optional 4-Bin Mailbox.*

The following table shows important settings you have to make when using envelopes.

MP Tray Size setting in the Tray Menu	Mon, C10, DL, C5, C6, IB5
Printer driver settings	Paper Size: Mon, C10, DL, C5, C6, IB5 Paper Source: MP Tray Paper Type: Thick

Please note the following tips for handling envelopes:

- Load envelopes with the short edge first and the printable surface facing up, as shown below.

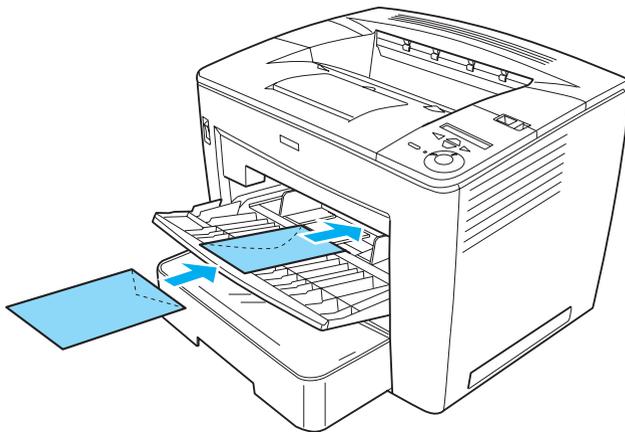

- Do not use an envelope that has glue or tape on it.




**Caution:**

*Make sure that the size of the envelopes meets the following size requirements:*

*Minimum width: 86.0 mm*

*Minimum length: 139.7 mm*

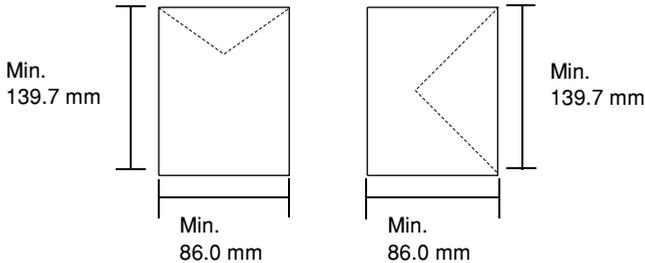

## Labels

You can load up to 20 sheets of labels into the MP tray. However, you may need to feed some labels one sheet at a time, or load them manually.

**Note:**

- Depending on the quality of labels, the printing environment, or the printing procedure, labels might be wrinkled. Do a test print before you print on a lot of labels.
- Duplex printing is not available for labels.
- You cannot output labels to the optional 4-Bin Mailbox.

The following table shows important settings you have to make when using labels.

MP Tray Size setting in the Tray Menu	Auto (or A4, LT)
---------------------------------------	------------------

Printer driver settings	Paper Size: A4, LT Paper Source: MP Tray Paper Type: Labels
-------------------------	---

**Note:**

- You should only use labels designed for monochrome laser printers or monochrome plain-paper copiers.
- To prevent the label adhesive from coming into contact with printer parts, always use labels that completely cover the backing sheet, with no gaps between the individual labels.
- Press a sheet of paper on top of each sheet of labels. If the paper sticks, do not use those labels in your printer.
- You may have to select **Thick** for the Paper Type setting in the Setup Menu.

**Thick paper**

You can load up to 20 sheets of thick paper into the MP tray, depending on the paper thickness (90 to 163 g/m ).

The following table shows important settings you have to make when using thick paper.

Printer driver settings	Paper Size: A3, A4, A5, B4, B5, LT, HLT, EXE, LGL, GLG, B, GLT, F4 Paper Source: MP Tray Paper Type: Thick
-------------------------	--

**Note:**

*When printing on thick paper, you cannot use the optional Duplex Unit. To print on both sides of thick paper, set the Page side setting on the control panel's Setup Menu to **Back** or **Front**, then print manually.*

## Transparencies

You can load up to 20 transparencies into the MP tray.

The following table shows important settings you have to make when using transparencies.

MP Tray Size setting in the Tray Menu	Auto (or A4, LT)
Printer driver settings	Paper Size: A4, LT Paper Source: MP Tray Paper Type: Transparency

## Loading a custom paper size

You can load non-standard size paper into the MP tray as long as it meets the following size requirements:

86.0 × 139.7 mm to 297.0 × 432.0 mm for the MP tray.

Printer driver settings	Paper Size: User Defined Size Paper Source: MP Tray Paper Type: Plain or Thick
-------------------------	--

- ❑ Access the printer driver, and then select **User-Defined Size** from the Paper Size list on the Basic Settings menu. In the User Defined Paper Size dialog box, adjust the Paper Width, Paper Length, and Unit settings to match your custom paper. Then click OK to save your custom paper size.
- ❑ If you cannot use the printer driver as explained above, make this setting at the printer by accessing the control panel's Printing Menu and selecting **CTM** (custom) as the Page Size setting.

## Chapter 3

# Using the Standard Printer Driver

About the standard printer driver . . . . .	38
System Requirements . . . . .	38
Installing the standard printer driver . . . . .	38
Accessing the standard printer driver . . . . .	38
Standard printer driver settings . . . . .	39
Making the print quality setting . . . . .	39
Resizing printouts . . . . .	41
Modifying the print layout . . . . .	44
Using a watermark . . . . .	45
Using an overlay . . . . .	50
Using HDD Form Overlay . . . . .	55
Printing with the Duplex Unit . . . . .	58
Making Extended Settings . . . . .	60
Making the Optional Settings . . . . .	63
Using the Reserve Job Function . . . . .	65
Re-Print Job . . . . .	66
Verify Job . . . . .	67
Stored Job . . . . .	69
Confidential Job . . . . .	70
Monitoring Your Printer Using EPSON Status Monitor 3 . . . . .	72
About EPSON Status Monitor 3 . . . . .	72
Installing EPSON Status Monitor 3 . . . . .	73
Accessing EPSON Status Monitor 3 . . . . .	76
Getting printer status details . . . . .	77
Setting Monitoring Preferences . . . . .	79
Status Alert window . . . . .	81
Using the Job Management function . . . . .	81
Stopping monitoring . . . . .	85
Setting monitored printers . . . . .	86
Setting Up the USB Connection . . . . .	86
Canceling Printing . . . . .	89
Uninstalling the Printer Software . . . . .	90
Uninstalling the printer driver . . . . .	90
Uninstalling the USB device driver . . . . .	93

---

## ***About the standard printer driver***

The standard printer driver lets you choose from a wide variety of settings to get the best results from your printer. The printer driver also includes EPSON Status Monitor 3, which is accessed through the Utility tab. EPSON Status Monitor 3 lets you check the status of your printer. See “Monitoring Your Printer Using EPSON Status Monitor 3” on page 72 for more information.

## ***System Requirements***

To use the printer driver, your computer must be running one of the following operating systems:

- Microsoft Windows 98/95
- Microsoft Windows Millennium Edition
- Microsoft Windows NT 4.0
- Microsoft Windows 2000
- Microsoft Windows XP

## ***Installing the standard printer driver***

The printer driver gives you complete control over your printer with Microsoft Windows Me, 98, 95, XP, 2000, and NT 4.0. With it, you can make various settings such as print quality and paper size. For instructions on installing the standard printer driver, see the *Setup Guide*.

---

## ***Accessing the standard printer driver***

You can access the printer driver directly from any application programs, or from your Windows operating system.

The printer settings made from many Windows applications override settings made when the printer driver is accessed from the operating system, so you should access the printer driver from your application to make sure you get the result you want.

**Note:**

*Online help provides details on printer driver settings.*

- ❑ To access the printer driver from your application, click the **Print** or **Page Setup** command on the **File** menu. You may also need to click **Setup**, **Options**, **Properties**, or a combination of these buttons, depending on the application used.
- ❑ To access the printer driver from Windows, click **Start**, point to **Settings**, and click **Printers**. Next, right-click the **EPSON EPL-N7000 Advanced** icon and click **Properties** (in Windows Me, 98, or 95), **Printing Preferences** (in Windows XP or 2000) or **Document Defaults** (in Windows NT 4.0).

---

## ***Standard printer driver settings***

### ***Making the print quality setting***


You can change the print quality of printouts through settings in the printer driver. With the printer driver, you can make the print settings by choosing from a list of predefined settings, or customizing the settings.

#### ***To change the print quality of printouts***

Follow these steps to change the print quality setting:

1. Click the **Basic Settings** tab.

2. Choose the desired resolution from the Print Quality pop-up list.

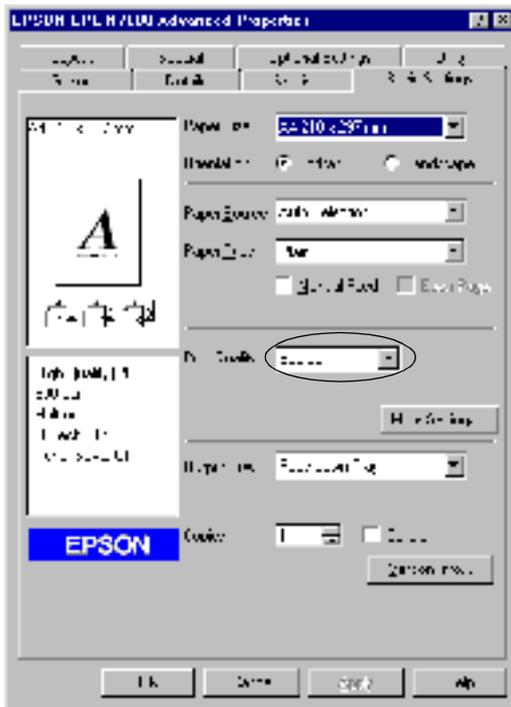

3. If necessary, click the More Settings button to make the desired settings, and then click OK.

**Note:**

*For details on each setting in the More Settings dialog box, see online help.*

4. Click OK to accept the settings.


## Resizing printouts

You can have your document enlarged or reduced during printing.

### To automatically resize pages to fit the output paper

Follow these steps to resize the pages:

1. Click the Layout tab.
2. Select the Zoom Options check box. Then select the desired paper size from the Output Paper drop-down list. The page will be printed to fit on the paper you have selected.

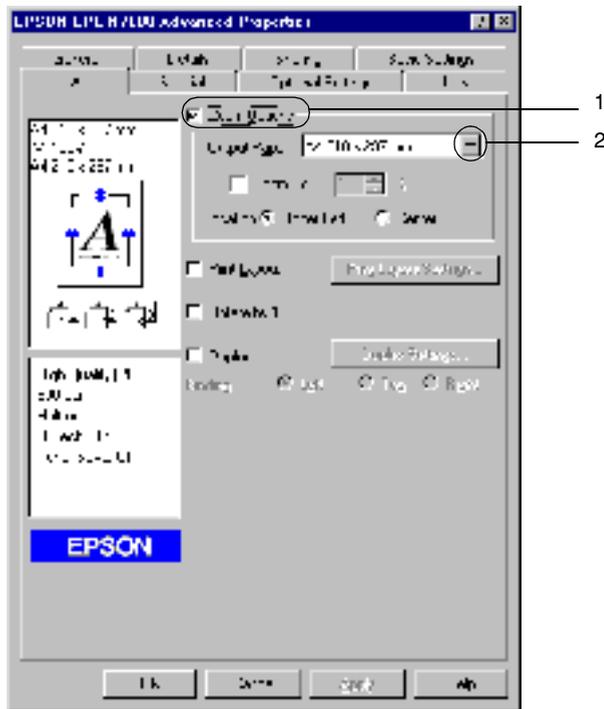


3. Click the **Upper Left** button (to print the reduced page image at upper left corner of the paper) or the **Center** button (to print the reduced page image with centering) for the **Location** setting.
4. Click **OK** to accept the settings.

***To resize pages by a specified percentage:***

Follow these steps to resize the pages by percentage:

1. Click the **Layout** tab.
2. Select the **Zoom Options** check box.

3. Select the Zoom To check box. Then specify the magnification percentage in the box.

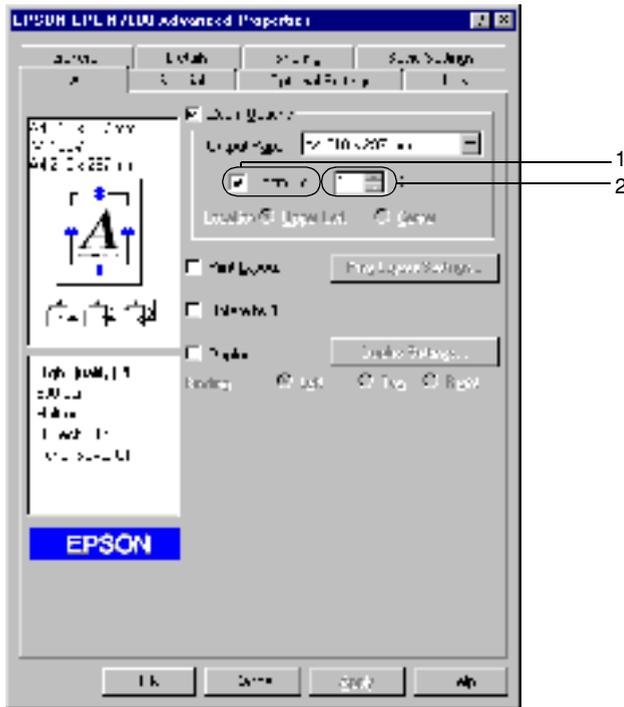

**Note:**

The percentage can be set between 50% and 200% in 1% increments.

4. Click OK to accept the settings.


If necessary, select the paper size to be printed from the Output Paper drop-down list.

## Modifying the print layout


Your printer can print either two or four pages onto a single page by automatically resizing the pages to fit the specified paper size. You can also choose to print the pages surrounded by a frame.

Follow these steps to modify the print layout:

1. Click the Layout tab.
2. Select the Print Layout check box, and then click Print Layout Settings. The Print Layout Settings dialog box appears.

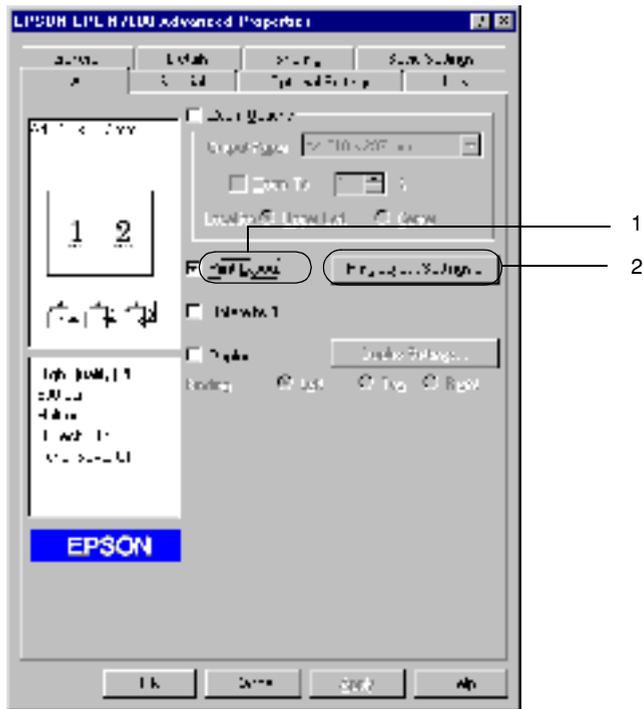

3. Select the number of pages you want to print on one sheet of paper. Then select the page order in which the pages are printed on each sheet.

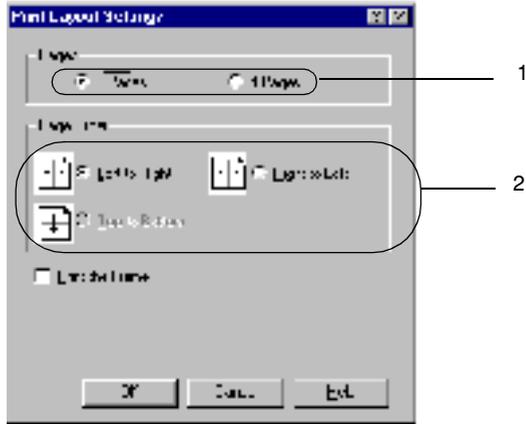

4. Select the Print the Frame check box if you want to print the pages surrounded by a frame.

**Note:**

*The Page Order choices depend on the number of pages selected above, and the paper orientation (Portrait or Landscape) selected on the Basic Settings menu.*


5. Click OK to accept the settings and return to the Layout menu.

## **Using a watermark**


Your printer enables you to print with watermarks. You can select from a list of predefined watermarks, or you can make an original watermark with text or a bitmap file. The Watermark dialog box also allows you to make a variety of detailed watermark settings. For example, you can select the size, intensity, and position of your watermark.

Follow these steps to print with watermark:

1. Click the **Special** tab.
2. Select the **Watermark** check box. Then click **Watermark Settings**. The **Watermark** dialog box appears.

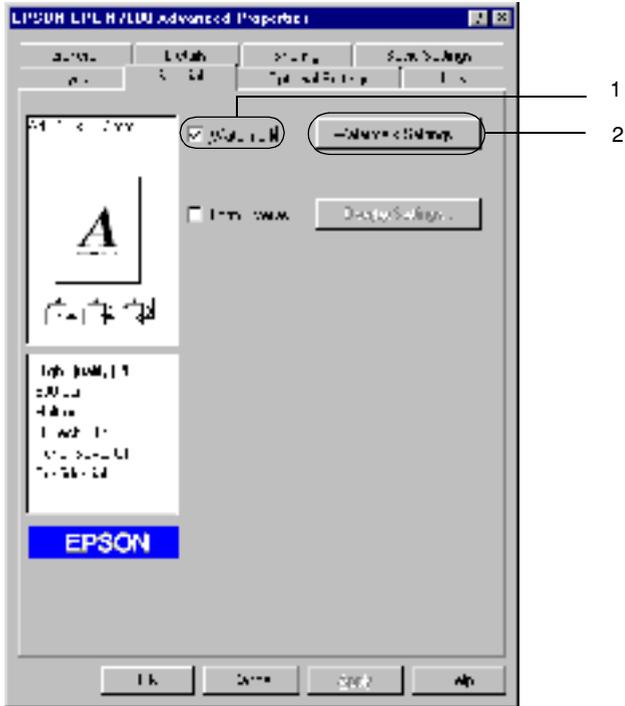

3. Select a watermark from the Watermark Name drop-down list.

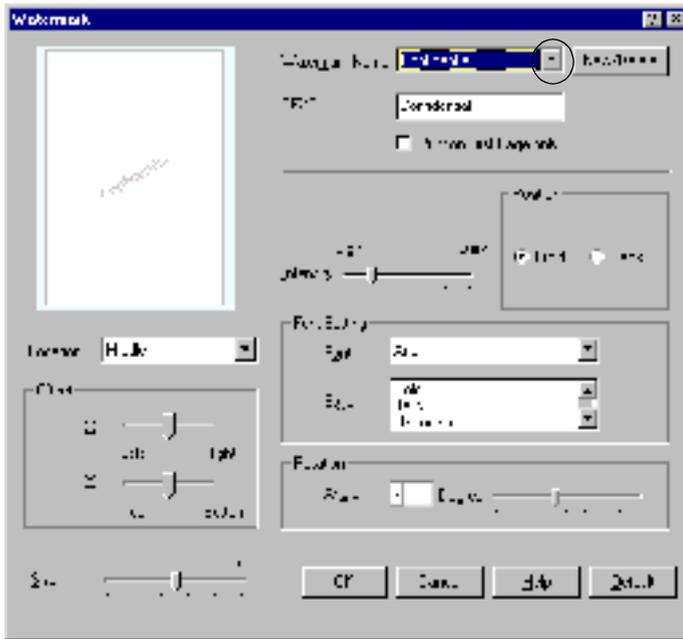


4. Adjust the image intensity of the watermark with the Intensity slider bar.
5. Select Front (to print the watermark in the foreground of the document) or Back (to print the watermark in the background of the document) for the Position setting.
6. Select the location on the page where you want to print the watermark from the Location drop-down list.
7. Adjust the horizontal or vertical Offset position.
8. Adjust the size of the watermark with the Size slider bar.
9. Click OK to accept the settings and return to the Special menu.


## Making a new watermark

Follow these steps to create a new watermark:

1. Click the Special tab.
2. Select the Watermark check box.
3. Click Watermark Settings. The Watermark dialog box appears.
4. Click New/Delete. The User Defined Watermarks dialog box appears.

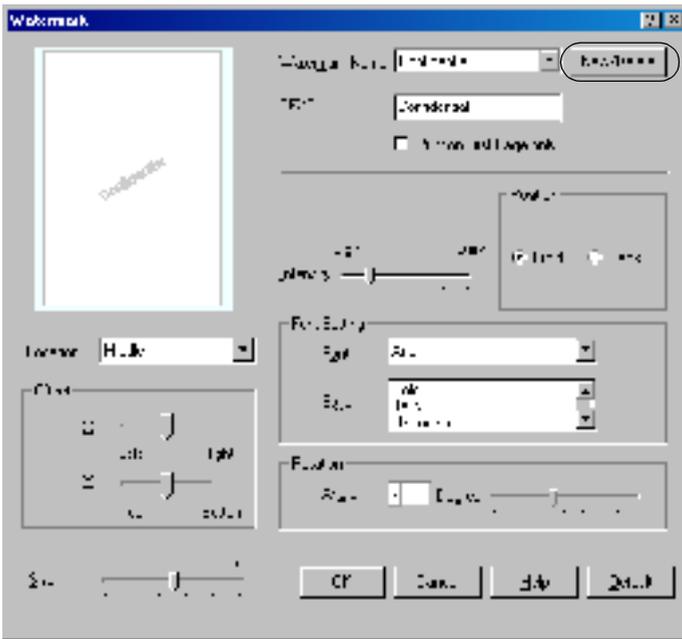

5. Select **Text** or **BMP** and type a name for the new watermark in the Name box.

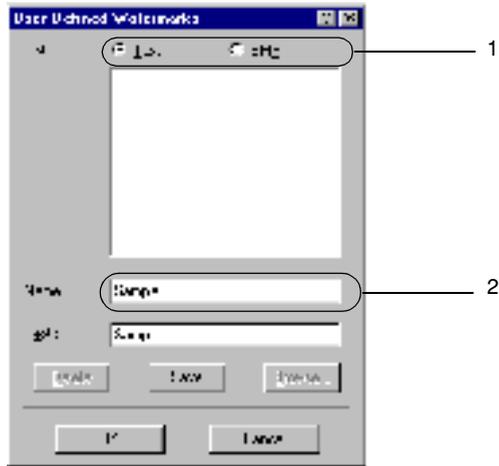

**Note:**

*This screen appears when you select the **Text** button.*

6. If you select **Text**, type the watermark text in the **Text** box. If you select **BMP**, click **Browse**, select the BMP file you want to use, then click **OK**.
7. Click **Save**. Your watermark will appear in the **List** box.
8. Click **OK** to register the new watermark settings.

**Note:**

*You can register up to 10 watermarks.*

## ***Using an overlay***

The Overlay Settings dialog box allows you to prepare standard forms, or templates, that you can use as overlays when printing other documents. This feature can be useful for creating corporate letterheads or invoices.

### ***Note:***


*The overlay function is available only when High Quality (Printer) is selected for the Graphic Mode setting in the Extended Settings dialog box from the Optional Settings menu.*

## ***Creating an overlay***

Follow these steps to create and save a form overlay file:


1. Open your application and create the file that you want to use as an overlay.
2. When the file is ready to be saved as an overlay, choose **Print** or **Print Setup** from the File menu of your application. Then click **Printer, Setup, Options, Properties**, or a combination of these buttons, depending on your application.
3. Click the **Special** tab.

4. Select the Form Overlay check box, and then click Overlay Settings. The Overlay Settings dialog box appears.

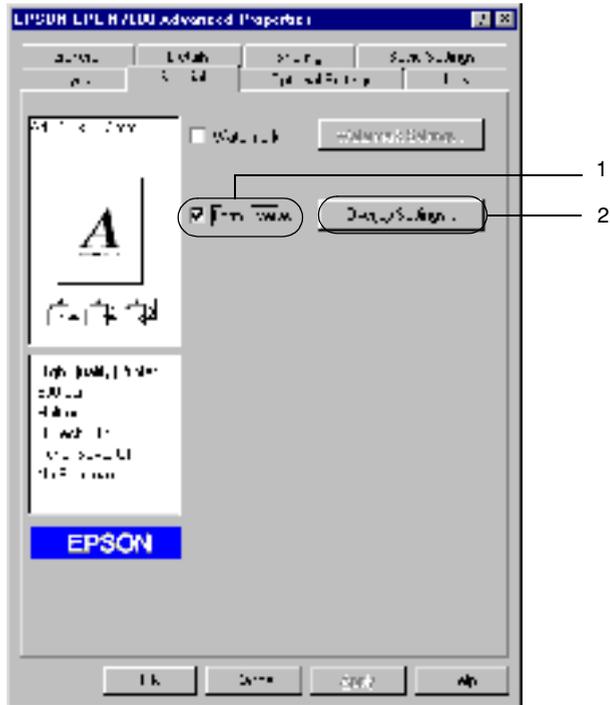


3

- Click the Create Overlay Data button, and then click Settings. The Form Settings dialog box appears.

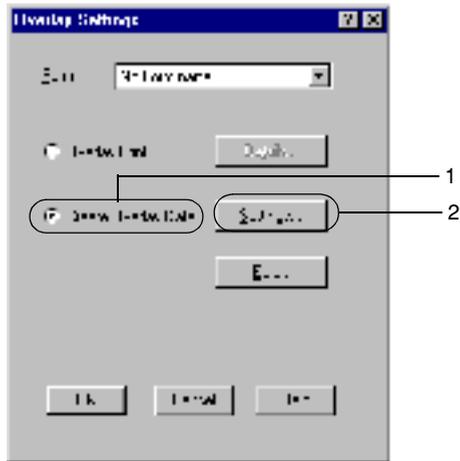

- Select the Use Form Name check box, and then click Add Form Name. The Add Form dialog box appears.

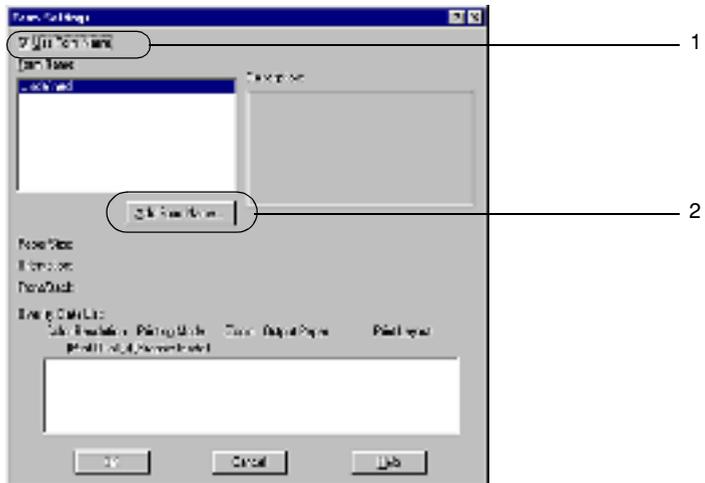

7. Type the form name in the Form Name box and its description in the Description box.




8. Click the To Front or To Back button to specify whether the overlay will be printed as the background or foreground of the document.
9. Click Register to accept the settings and return to the Form settings dialog box.
10. Click OK in the Form Settings dialog box.
11. Click OK in the Overlay Settings dialog box.
12. Print the file saved as overlay data. It is possible to save any kind of file as an overlay. The overlay data is created.

### ***Printing with an overlay***

Follow these steps to print a document with overlay data:

1. Open the file to print with overlay data.

2. From the application, access the printer driver. Open the File menu and choose Print or Print Setup. Then click Printer, Setup, Options, Properties, or a combination of these buttons, depending on the application you are using.
3. Click the Special tab.
4. Select the Form Overlay check box, and click Overlay Settings to open the Overlay Settings dialog box.
5. Choose the form from the Form list, and then click OK to return to the Special menu.

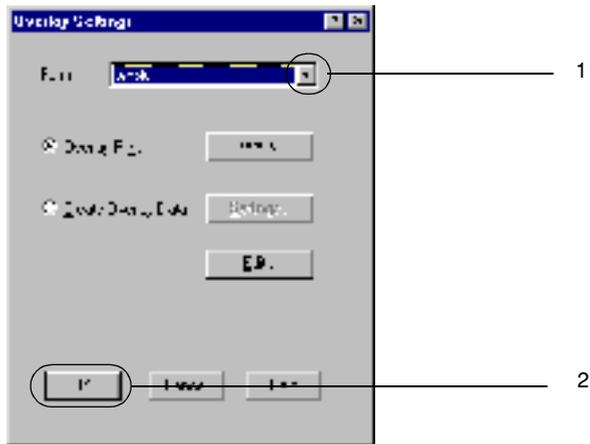

6. Click OK to print the data.

### ***Different printer settings overlay data***

The overlay data is made with the current printer settings (such as 600 dpi for the resolution). If you want to make the same overlay with different printer settings (such as 300 dpi), follow the instructions below.

1. Re-access the printer driver as described in step 2 in “Creating an overlay” on page 50.
2. Make the desired printer settings and exit the printer driver.
3. Send the same data that you made in the application to the printer, as in step 12 under “Creating an overlay” on page 50.

This setting is available only for Form Name data.

## **Using HDD Form Overlay**

This function enables faster printing with form overlay data. Windows users can use the form data registered in the optional Hard Disk Drive installed in the printer. However, only an administrator can register or delete form data in the Hard Disk Drive. You can access this function from the Form Selection dialog box in the printer driver.

### **Note:**

- This function is not available if the optional Hard Disk Drive is not installed.*
- Use this function by inputting the registered form name after printing the Print List.*
- When the document’s resolution, paper size or paper orientation settings are different from the form overlay data that you use, you cannot print the document with the form overlay data.*
- This function is available only in the ESC/Page mode.*

## **Registering the form overlay data on the Hard Disk Drive**

Only a network administrator using Windows XP/2000/NT 4.0 is allowed to register the form overlay data on the optional Hard Disk Drive. See the *Network Guide* for details.

## ***Printing with HDD form overlay***

All Windows users can use the registered form data in the optional Hard Disk Drive.

Follow these steps to print with form data registered in the Hard Disk Drive:

1. Select the **Special** tab.
2. Select the **Form Overlay** check box, and then click the **Overlay Settings** button. The **Overlay Settings** dialog box appears.
3. Select **No Form name** in the **Form** text box, and then click **Details**. The **Form Selection** dialog box appears.

***Note:***

*Make sure that **No Form Name** is selected. If any form name is selected, another dialog box will appear.*

4. Click **Printer's HDD**, and then enter the registered form name.

**Note:**

If you need the list of the registered form data, click **Print List** to print it and confirm the form name.

Also, if you need a sample print-out of the form data, enter the form name and then click the **Print Sample** button.



5. Choose **To Back** or **To Front** to print the form data as the background or foreground of the document. Then click **OK** and return to the **Special** menu.
6. Click **OK** to print the data.

### ***Deleting the form overlay data in the Hard Disk Drive***

Only a network administrator using Windows XP/2000/NT 4.0 is allowed to delete or edit the form overlay data in the optional Hard Disk Drive. See the *Network Guide* for details.

## ***Printing with the Duplex Unit***


By installing the optional Duplex Unit, you can print on both sides of the paper. When printing for binding, the binding edge can be specified as required to produce the desired page order.

As an ENERGY STAR® partner, EPSON recommends the use of the duplex printing function. Refer to ENERGY STAR® Compliance for more information on the ENERGY STAR® program.

Follow these steps to print using the Duplex Unit:

1. Click the Layout tab.


2. Select the Duplex check box. Then select the Left, Top, or Right button as the Binding position.

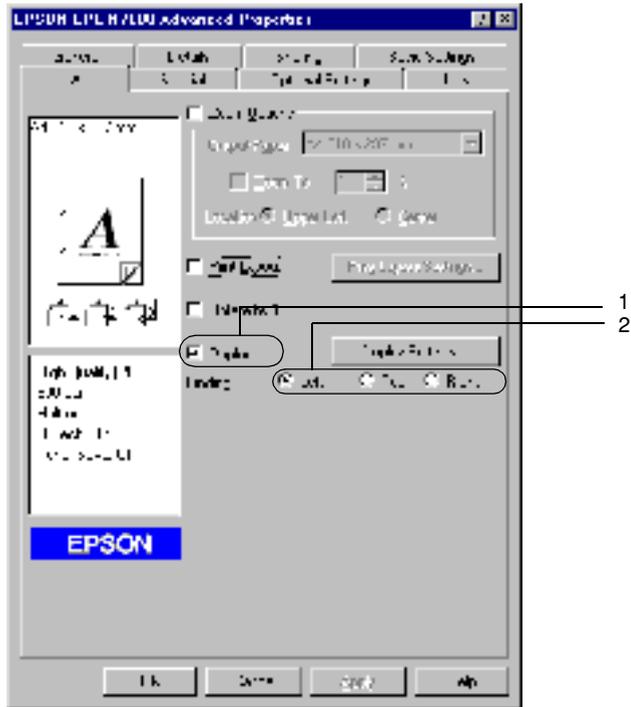

3

3. Click Duplex Settings to open the Duplex Settings dialog box.

- Specify the Binding Margin for the front and back sides of the paper. Then select whether the front or back side of the paper is to be printed as the Start Page.

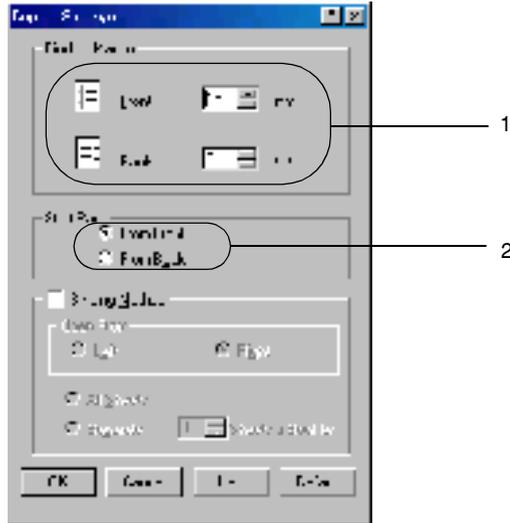

- When printing for binding as a booklet, click the Binding Method check box and make the appropriate settings. For details on each setting, see online help.
- Click OK to accept the settings and return to the Layout menu.

## ***Making Extended Settings***

You can make detailed settings such as font setting or offset setting in the Extended Settings dialog box. To open the dialog box, click Extended Settings on the Optional Settings menu.

1. **Graphic Mode:** Specify the graphic mode.  
In the High Quality (Printer) mode, the driver sends the printing data to the printer using ESC/Page language as much as possible.  
In the High Quality (PC) mode, rendering is done in your computer and the driver sends the printing data to the printer using a low level language.
2. **Print True Type fonts as bitmap button:** Select this button to print, as bitmap, the True Type fonts that are not substituted with device fonts in the document.
3. **Print True Type fonts with substitution button:** Select this button to print the True Type fonts in the document as device fonts. This function is not available when the Graphic Mode setting is set to High Quality (PC).
4. **Setting button:** Click this button to open the Font Substitution dialog box. This button is available when the Print True Type fonts with substitution button is selected.
5. **Uses the settings specified on the printer button:** Select this button to use the Offset, Skip blank page, and Ignore the selected paper size settings on the control panel.
6. **Uses the settings specified on the driver button:** Select this button to use the Offset, Skip blank page, and Ignore the selected paper size settings in the printer driver.

7. **Offset** Makes fine adjustments to the printing position on the front and the back of data on a page in 1.0 mm increments.
8. **Density:** Sets the print density. The options are 1 through 5.
9. **Skip Blank Page check box:** When you select this check box, the printer skips blank pages.
10. **Ignore the selected paper size check box:** When you select this check box, the printer prints on any paper loaded in the printer, regardless of size.
11. **High Speed Graphics Output check box:** Select this check box to optimize the printing speed of graphics, composed of line drawings such as overlaid circles and squares.  
  
Clear this check box if graphics do not print correctly.
12. **Uses the spooling method provided by the operating system check box:** Select this check box to enable the Spool function for Windows XP, 2000, or NT 4.0.
13. **Default button:** Click this button to return the driver settings to the initial settings.
14. **Help button:** Click this button to open online help.
15. **Cancel button:** Click this button to exit the dialog box or printer driver without saving your settings.

16. OK button: Click this button to save your settings and to exit the dialog box or printer driver.

## ***Making the Optional Settings***

You can update the installed option information manually if you have installed options to your printer.

Follow these steps to update your printer's settings after installing options:

1. Click the Optional Settings tab, and then select the Update the Printer Option Info Manually button.
2. Click Settings. The Optional Settings dialog box appears.
3. Make the settings for each installed option, and then click OK.


## ***Using the 4-Bin Mailbox***

You need to make the setting for the output tray to use the optional 4-Bin Mailbox.

Follow these steps to select the output tray:

1. Click the Basic Settings tab.

2. Select the output tray that you want to use from the Output Tray drop-down list, and then click OK.

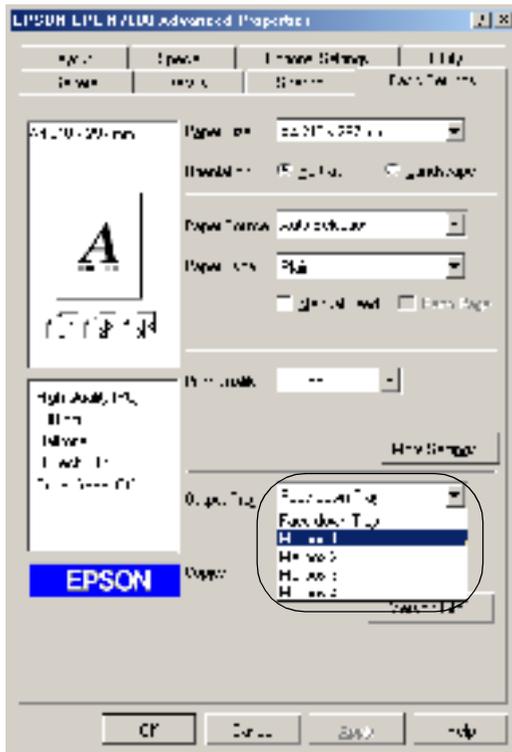

**Note:**

See "4-Bin Mailbox" on page 379 for information on paper that you can output to the 4-Bin Mailbox.

---

## Using the Reserve Job Function

The Reserve Job function allows you to store print jobs in the printer's Hard Disk Drive and to print them later directly from the printer's control panel. Follow the instructions in this section to use the Reserve Job function.

**Note:**

*You need an optional Hard Disk Drive to be installed in your printer in order to use the Reserve Job function. Make sure that the drive is correctly recognized by the printer driver before you start using the Reserve Job function.*

The table below gives an overview of the Reserve Job options. Each option is described in detail later in this section.

Reserve Job Option	Description
Re-Print Job	Lets you print the job now and store it for later reprinting.
Verify Job	Lets you print one copy now to verify the content before printing multiple copies.
Stored Job	Lets you save the print job without printing it now.
Confidential Job	Lets you apply a password to the print job and save it for later printing.

Jobs stored in the Hard Disk Drive are handled differently depending on the Reserve Job option. Refer to the tables below for details.

Reserve Job Option	Maximum Number of Jobs	When Maximum is Exceeded	When Drive is Full
Re-Print Job + Verify Job	64 (combined total)	Oldest job automatically replaced with newest	Oldest job automatically replaced with newest

Reserve Job Option	Maximum Number of Jobs	When Maximum is Exceeded	When Drive is Full
Stored Job	64	Delete old jobs manually	Delete old jobs manually
Confidential Job	64		

Reserve Job Option	After Printing	After Turning Off Printer or Using Reset All
Re-Print Job	Data remains in hard drive	Data is cleared
Verify Job		
Stored Job		Data remains in hard drive
Confidential Job	Data is cleared	Data is cleared


## ***Re-Print Job***

The Re-Print Job option allows you to store the job you are currently printing so that you can reprint it later directly from the control panel.

Follow these steps to use the Re-Print Job option:

1. Click the **Basic Settings** tab.
2. Select the **Collate in Printer** check box. Specify the number of copies to be printed, and make other printer driver settings as appropriate for your document.
3. Click the **Optional Settings** tab and click **Reserve Jobs Settings**. The Reserve Job Settings dialog box appears.

4. Select the Reserve Job On check box and click the Re-Print Job button.

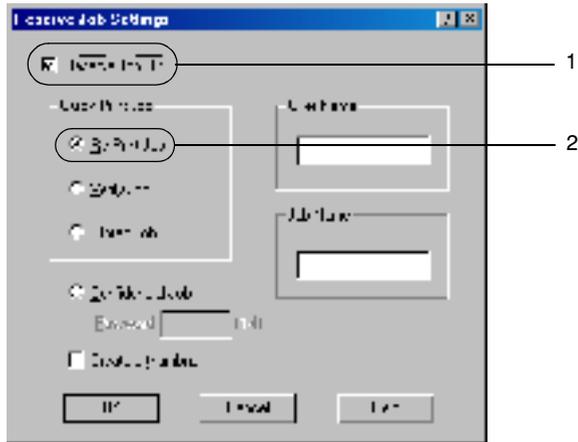

5. Enter a user name and job name in the corresponding text boxes.

**Note:**

*If you want to create a thumbnail of the first page of a job, select the **Create a thumbnail** check box. Thumbnails can be accessed by entering `http://` followed by the internal print server's IP address in a Web browser.*

6. Click OK. The printer prints your document, and stores the print job data on the Hard Disk Drive.

To reprint or delete this data using the printer's control panel, see "Printing and Deleting Reserve Job Data" on page 392.

## **Verify Job**

The Verify Job option allows you to print one copy in order to verify the contents before printing multiple copies.



6. Click OK. The printer prints one copy of your document, and stores the print data with information on the number of remaining copies on the Hard Disk Drive.

After you have confirmed the printout, you can print the remaining copies or delete this data using the printer's control panel. See "Printing and Deleting Reserve Job Data" on page 392 for instructions.


## **Stored Job**

The Stored Job option is useful for storing documents you print on a regular basis, such as invoices. The stored data remains on the Hard Disk Drive even if you turn off the printer or reset it using the Reset All function.

Follow these steps to store print data using the Stored Job option:

1. Click the Basic Settings tab.
2. Select the Collate in Printer check box. Specify the number of copies to be printed, and make other printer driver settings as appropriate for your document.
3. Click the Optional Settings tab, and then click Reserve Jobs Settings. The Reserve Job Settings dialog box appears.

4. Select the Reserve Job On check box and the Stored Job radio button.

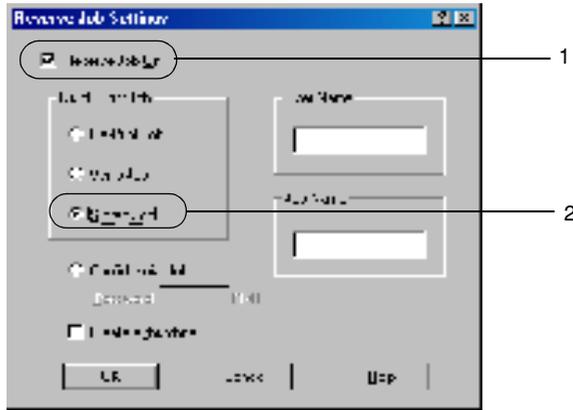

5. Enter a user name and job name in the corresponding text boxes.

**Note:**

If you want to create a thumbnail of the first page of a job, select the **Create a thumbnail** check box. Thumbnails can be accessed by entering *http://* followed by the internal print server's IP address in a Web browser.

6. Click OK. The printer stores the print data in the Hard Disk Drive.


To print or delete this data using the printer's control panel, see "Printing and Deleting Reserve Job Data" on page 392.

## **Confidential Job**

The Confidential Job option allows you to apply passwords to print jobs stored on the Hard Disk Drive.

Follow these steps to store print jobs with a password:

1. Make printer driver settings as appropriate for your document.
2. Click the Optional Settings tab, and then click the Reserve Jobs Settings button. The Reserve Jobs Settings dialog box appears.
3. Select the Reserve Job On check box and the Confidential Job radio button.

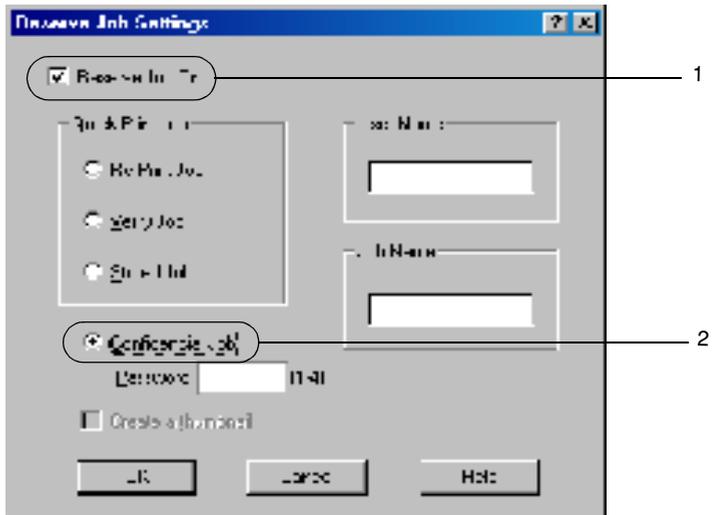

4. Enter a user name and job name in the corresponding text boxes.
5. Set the password for the job by entering a four-digit number in the password text box.

**Note:**

- Passwords must be four digits.
- Only numbers from 1 through 4 can be used for passwords.

- ❑ *Keep passwords in a safe place. You must enter the correct password when printing a Confidential Job.*
6. Click OK. The printer stores the print job in the Hard Disk Drive.

To print or delete this data using the printer's control panel, see "Printing and Deleting Reserve Job Data" on page 392.

---

## **Monitoring Your Printer Using EPSON Status Monitor 3**

### **About EPSON Status Monitor 3**

EPSON Status Monitor 3 is a utility program that monitors your printer and gives you information about its current status. For example, you can find out the amount of remaining toner through this utility. If a print error occurs, the utility provides you with a message describing the error. EPSON Status Monitor 3 is accessed from within the printer driver. See the following section for more information.

#### **Note for Windows XP users:**

- ❑ *Shared Windows XP LPR connections and shared Windows XP Standard TCP/IP connections with Windows clients do not support the Job Management function of the EPSON Status Monitor 3.*
- ❑ *EPSON Status Monitor 3 is not available when printing from a Remote Desktop connection.*

#### **Note for Netware users:**

*When monitoring NetWare printers, a Novell Client that corresponds to your operating system must be used. Operation is confirmed for the versions below.*

- ❑ *For Windows 98, 95, or Me:  
Novell Client 3.32 for Windows 95/98*
- ❑ *For Windows XP, 2000, or NT 4.0:  
Novell Client 4.83+SP1 for Windows NT/2000/XP*

## **Installing EPSON Status Monitor 3**

# 3

Follow these steps to install EPSON Status Monitor 3:

1. Make sure that the printer is turned off and that Windows is running on your computer.
2. Insert the printer software CD-ROM into the CD-ROM drive on your computer.


**Note:**

- ❑ *If the language selection window appears, select your country.*
  - ❑ *If the EPSON Installation Program screen does not appear automatically, double-click the My Computer icon, right-click the CD-ROM icon, and click **OPEN** in the menu that appears. Then double-click **Epsetup.exe**.*
3. Click **Continue**. When the software license agreement screen appears, read the statement and then click **Agree**.

4. In the dialog box that appears, click Install Software.



5. Click Custom.
6. Select the EPSON Status Monitor 3 check box and click Install.

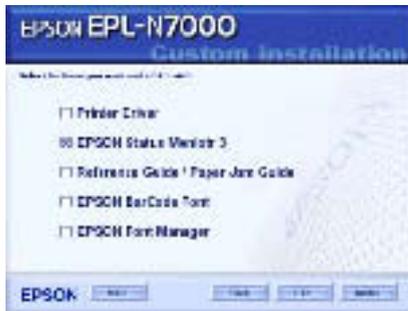


7. In the dialog box that appears, make sure that your printer's icon is selected, and click OK. Then follow the on-screen instructions.



8. When installation is complete, click OK.


## Accessing EPSON Status Monitor 3

To access EPSON Status Monitor 3, open the printer software, click the Utility tab, then click the EPSON Status Monitor 3 button.

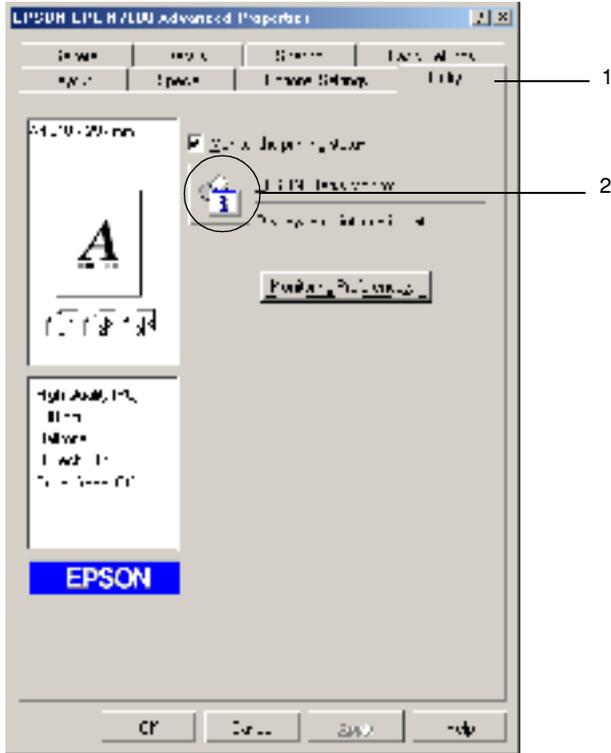

## Getting printer status details

You can monitor printer status and obtain information on consumable products using the EPSON Status Monitor 3 dialog box.

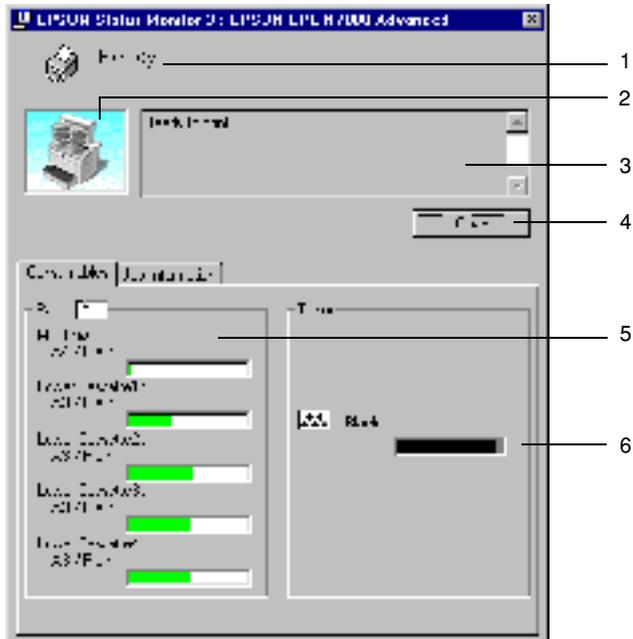


1. Icon/Message: The icon and message show the printer status.
2. Printer image: The image at the upper left shows the printer status graphically.

3. Text box: The text box next to the printer image displays the current status of the printer. When a problem occurs, the most probable solution is displayed.
4. Close button: Clicking this button closes the dialog box.
5. Paper: Displays the paper size, paper type and the approximate amount of paper remaining in the paper source. Information for the optional cassette is displayed only if this option is installed.
6. Toner: Indicates the amount of remaining toner. The toner icon flashes if the toner is low.

## Setting Monitoring Preferences

To make specific monitoring settings, click **Monitoring Preferences** in the Utility menu of the printer driver. The Monitoring Preferences dialog box appears.

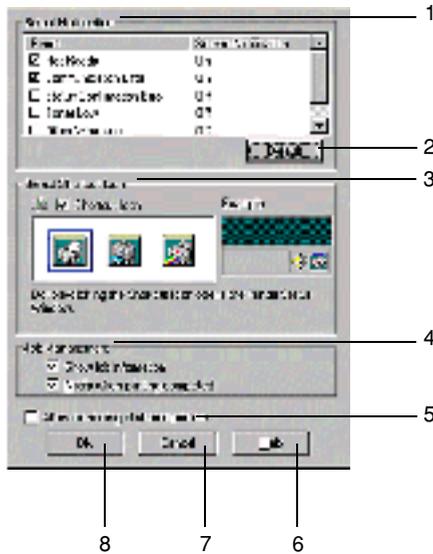


The following settings and buttons appear in the dialog box:

1. **Select Notification:** Use the check boxes in this area to select the types of error that you wish to be notified about.
2. **Default button:** Restores the default settings.

3. **Select Shortcut Icon:** To use the shortcut icon, select the **Shortcut Icon** check box and choose an icon. The icon you select appears on the right side of the task bar. Once the shortcut icon is in the task bar, you can double-click it to open the EPSON Status Monitor 3 dialog box. Alternatively, you can right-click the shortcut icon and select **Monitoring Preferences** to open the **Monitoring Preferences** dialog box, and **EPSON EPL-N7000 Advanced** to open the EPSON Status Monitor 3 dialog box.
  
4. **Job management:** To display the job information menu in the EPSON Status Monitor 3 window, select the **Show job information** check box.  
  
To display a notification message when your print job is finished, select the **Notify when printing completed** check box.
  
5. **Allow monitoring of shared printers check box:** When this check box is selected, a shared printer can be monitored by other computers.
  
6. **Help button:** Opens online help for the **Monitoring Preferences** dialog box.
  
7. **Cancel button:** Cancels any changes.
  
8. **OK button:** Saves new changes.

## Status Alert window

The Status Alert window indicates what type of error has occurred and offers you a possible solution. The window closes automatically once the problem is cleared.

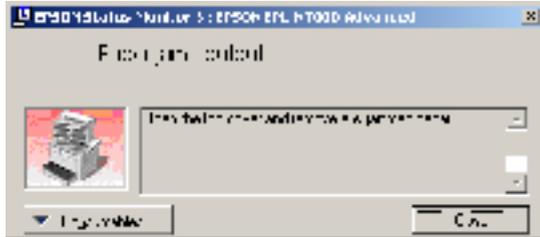


This window will also appear according to the selected notification in the Monitoring Preferences dialog box.

If you wish to see information about printer consumables, click the Consumables... button. Once this button is clicked, the Status Alert window will not disappear even after a problem is cleared. Click Close to close the window.

## Using the Job Management function

You can obtain information on print jobs under the Job Information menu in the EPSON Status Monitor 3 dialog box.

To display the Job Information menu, select the Show job information check box in the Monitoring Preferences dialog box. (See “Setting Monitoring Preferences” on page 79 for details.) Then click the Job Information tab in the EPSON Status Monitor 3 dialog box.

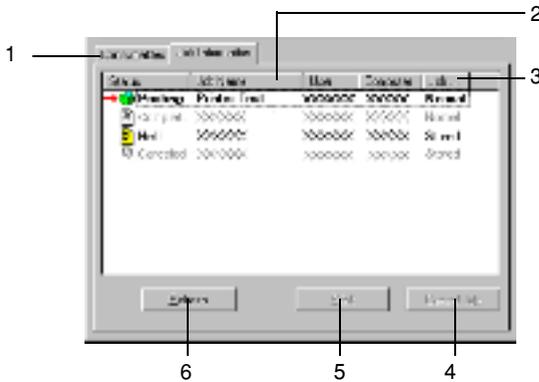

1. Status:
  - Waiting: A print job waiting to be printed.
  - Printing: A print job which is currently printing.
  - Completed: Displays only those jobs that have finished printing.
  - Canceled: Displays only those jobs that have been canceled.
  - Held: A job that is on hold.
2. Job Name: Displays the file names of the user's print jobs. Other user's print jobs are displayed as -----.

3. **Job Type:** Displays the job type. When the Reserve job function is used, the jobs are displayed as Stored, Verify, Re-Print, or Confidential. About the Reserve Job function, see “Using the Reserve Job Function” on page 65.
4. **Cancel Job button:** Selecting a print job and clicking this button cancels the selected print job.
5. **Print button:** Display the dialog box to print the spooled and held status job.
6. **Refresh button:** Clicking this button refreshes the information on this menu.

### ***Re-printing your print job***

Clicking the Print button on the EPSON Status Monitor 3 screen lets you print a spooled job.  
Follow these steps to re-print your job.

***Note:***


*You cannot re-print your jobs in the following cases.*

- The status of the job is anything other than Held.*
- The job is sent by someone other than you.*
- When multiple jobs are selected.*

Follow these steps to reprint a job:

1. Access EPSON Status Monitor 3. See “Accessing EPSON Status Monitor 3” on page 76 for details.
2. Click the Job Information tab.
3. Select a job to be reprinted from the list.

4. Click the Print button. The following screen appears.

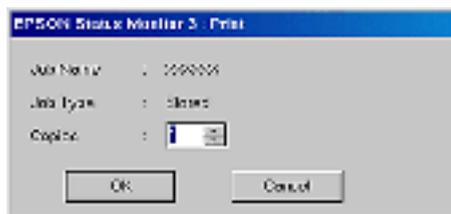

5. In the screen, confirm the job name and select a copy number from 1 to 999.
6. Click OK to reprint your job.

### ***Supporting connection to use the Job Management function***

The Job Management function is available when the following connections are used:

- When using the EPSON Net Direct Print TCP/IP connection (in Windows Me, 98, 95 and XP, 2000 or NT 4.0)
- When using LPR connections (in Windows XP, 2000 and NT 4.0)
- When using standard TCP/IP connections (in Windows XP and 2000)
- Shared Windows 2000 and NT 4.0 LPR connections and shared Windows 2000 Standard TCP/IP connections with Windows XP, Me, 98, 95, 2000 and NT 4.0 clients

**Note:**

*You can not use this function in the following situations:*

- ❑ *When using an optional Ethernet interface card that doesn't support the Job Management function.*
- ❑ *When the NetWare connections do not support the Job Management function.*
- ❑ *When the printing jobs from NetWare and NetBEUI are displayed as "Unknown" on the Job Management menu.*
- ❑ *Note that if the user account used to log on to a client is different from the user account used to connect to the server, the Job Management function is not available.*

### **Setting to notify when printing is completed**

If the Notify when printing completed check box is selected, the Notify when printing completed function can be used.

To use this function, click the specified print job from the print job list on the Job Information menu in the EPSON Status Monitor 3 dialog box. When the job is completed, the Notify when printing completed dialog box appears.

**Note:**

*If you cancel the job, the Notify when printing completed dialog box does not appear.*

### **Stopping monitoring**

You can stop monitoring the printing status by clearing the Monitor the Printing Status check box in the printer driver's Utility menu if you do not need to monitor the printer at all.

**Note:**

- ❑ *The Monitor the Printing Status check box is displayed in the Utility menu of Document Defaults in Windows NT 4.0, or in the Utility menu of Printing Preference in Windows XP or 2000.*

- ❑ You can find out the current printer status by clicking the EPSON Status Monitor 3 icon in the printer driver's Utility menu.

## Setting monitored printers

You can use the Monitored Printers utility to change the types of printers that EPSON Status Monitor 3 will monitor. When you install EPSON Status Monitor 3, this utility is also installed. Usually, it is not necessary to change the setup.

Follow these steps to select the printers to monitor using EPSON Status Monitor 3:

1. Click Start, point to Programs, point to EPSON Printers, and then click Monitored printers.
2. Clear the check box for the printers that you do not want to monitor.



3. Click OK to accept the setting.

---

## Setting Up the USB Connection

The USB interface that comes with your printer complies with Microsoft Plug and Play (PnP) USB specifications.

Follow these steps to set up the printer to use the USB interface as its connection to your computer:

**Note:**

*Only PC systems equipped with a USB connector and running Windows Me, 98, XP, and 2000 support the USB interface.*

1. Click **Start**, point to **Settings**, and then click **Printers**. In Windows XP, click **Start**, and then click **Printers and Faxes**.
2. Right-click the **EPSON EPL-N7000 Advanced** icon, and then click **Properties** on the menu that appears.
3. Click the **Details** tab. In Windows XP or 2000, click the **Ports** tab.

4. Select the appropriate USB port from the Print to the following port drop-down list. In Windows Me or 98, select EPUSB1: (EPSON EPL-N7000). In Windows XP or 2000, select USB001 in the list on the Ports menu.



**Note:**  
*This screen is a Windows 98 screen.*


5. Click OK to save this setting.

---

## Canceling Printing

If the printouts are not what you expected and display incorrect or garbled characters or images, you may need to cancel printing. When the printer icon is displayed on the taskbar, you can cancel printing from your computer, as the transfer of data is not yet complete. Follow the instructions below to cancel printing.

Double-click the printer icon on the task bar. Select the task in the list, and then click **Cancel** from the Document menu.

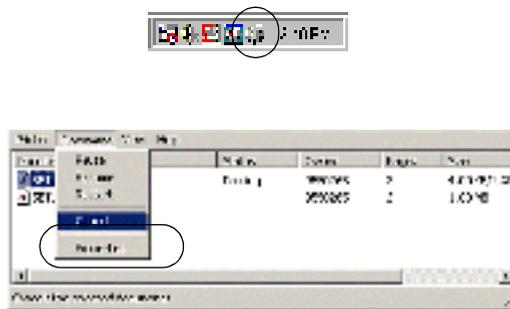

If a part of the print data is already sent to the printer, the Ready (green) light on the printer turns on after the last page of the data is output.

The current job is canceled.

If the transfer of a print data is not yet started, you can cancel the whole print job.

### Note:

- ❑ You can also cancel the current print job that is sent from your computer by pressing the  Cancel Job button on the printer's control panel. When canceling your print job, be careful not to cancel print jobs sent by other users.

- ❑ To cancel all print data in the printer's memory, press down the  Cancel Job button on the printer's control panel for about two seconds.

---

## ***Uninstalling the Printer Software***

If you wish to reinstall or upgrade the printer driver, uninstall the printer driver that has been installed already.


### ***Uninstalling the printer driver***

Follow these steps to uninstall the printer driver:

1. Quit all applications.
2. Click Start, point to Settings, and then click Control Panel.
3. Double-click the Add/Remove Programs icon.




4. Select EPSON Printer Software, and then click Add/Remove.

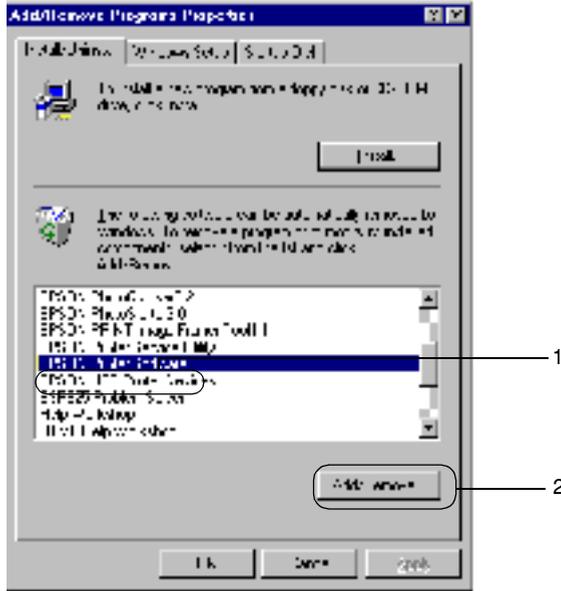


**Note:**

When using Windows XP or Windows 2000, click **Change or Remove Programs**, select the **EPSON Printer Software**, and then click **Change/Remove**.

5. Click the Printer Model tab, select the EPSON EPL-N7000 Advanced icon, and then click OK.

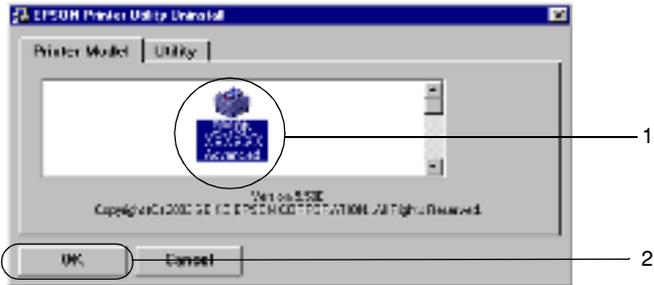


6. Click the Utility tab and confirm that the check box for the printer software you want to uninstall is selected.

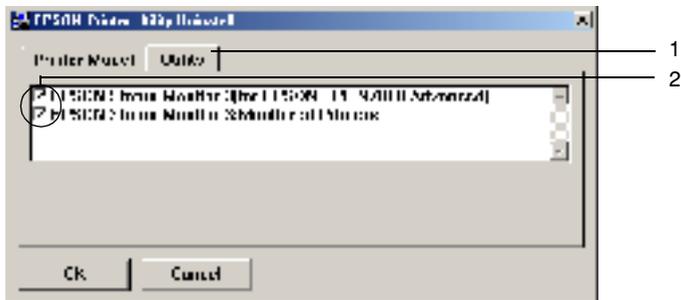

**Note:**

*If you want to uninstall only EPSON Status Monitor 3, select only the EPSON Status Monitor 3 check box.*

- To uninstall the Monitored Printers utility, select the EPSON Status Monitor 3: Monitored Printers check box, and then click OK.

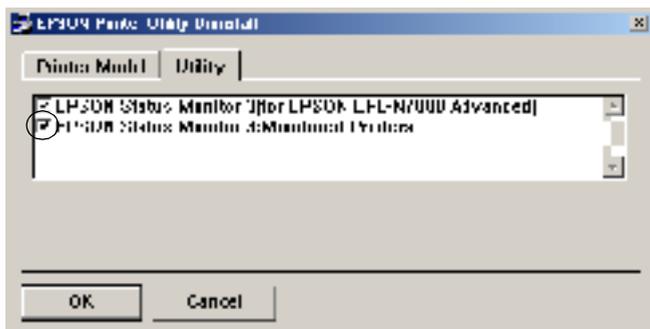

**Note:**

You can uninstall only the Monitored Printers utility of EPSON Status Monitor 3. If the utility is uninstalled, you cannot change the setting of Monitored Printers from EPSON Status Monitor 3 of other printers.

- Follow the on-screen instructions.

## ***Uninstalling the USB device driver***


When you connect the printer to your computer with a USB interface cable, the USB device driver is also installed. If you uninstall the printer driver, you also need to uninstall the USB device driver.

Follow these steps to uninstall the USB device driver:

**Note:**

- Uninstall the printer driver before uninstalling the USB device driver.

- ❑ Once you uninstall the USB device driver, you cannot access any other EPSON printers connected with a USB interface cable.
1. Follow steps 1 through 3 of “Uninstalling the printer driver” on page 90.
  2. Select EPSON USB Printer Devices, and then click Add/Remove.

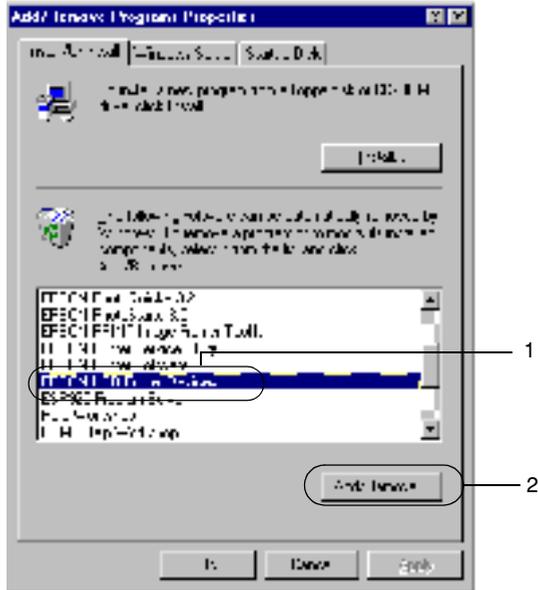

**Note:**

- ❑ EPSON USB Printer Devices appears only when the printer is connected to a computer running Windows Me or 98 with a USB interface cable.

- *If the USB device driver is not installed correctly, **EPSON USB Printer Devices** may not appear. Follow these steps to run the “Epusbun.exe” file in the printer software CD-ROM:*
    1. Insert the CD-ROM into your computer’s CD-ROM drive.
    2. Open the CD-ROM.
    3. Double-click the English folder.
    4. Double-click the Win9x folder.
    5. Double-click the Epusbun.exe icon.
3. Follow the on-screen instructions.



## Chapter 4

---

# **Using the PostScript Printer Driver (Windows)**

About the PostScript Printer Driver .....	98
Hardware requirements.....	98
System requirements .....	98
Using the PostScript Printer Driver with Windows .....	99
Windows Me, Windows 98, Windows 95 users .....	99
Windows NT 4.0 users .....	113
Windows XP, Windows 2000 users .....	123
Using online help .....	135
Reserve Job function.....	135
Using AppleTalk under Windows 2000 or Windows NT 4.0	137

---

## About the PostScript Printer Driver

The PostScript 3 printer driver provides you with the ability to print documents formatted for PostScript printers. Seventeen scalable fonts are included. IES (Intelligent Emulation Switch) and SPL (Shared Printer Language) support allow the printer to switch between the PostScript mode and other emulations as print data is received at the printer.

### Hardware requirements

Your printer must meet the following hardware requirements to be able to use the PostScript 3 printer driver.

- ❑ Memory requirements for using the PostScript 3 printer driver are shown below. Install optional memory modules into your printer if the amount of memory currently installed does not meet your printing needs.

Minimum memory	Recommended memory
32 MB* (for a simple print job at 600 dpi)	48 MB or more

\* Printing may not be possible with this amount of memory, depending on the specifics of the job being printed.

### System requirements

Your computer must meet the following system requirements to be able to use the Adobe PostScript 3 printer driver.

**Note:**

*Your computer must have a hard disk with at least 8 MB of free space.*

To use the Adobe PostScript 3 printer driver, your computer must be running one of the following operating systems:

Microsoft Windows 98/95  
Microsoft Windows Millennium Edition  
Microsoft Windows NT 4.0  
Microsoft Windows 2000  
Microsoft Windows XP

---

## ***Using the PostScript Printer Driver with Windows***

4

### ***Windows Me, Windows 98, Windows 95 users***

To print in the PostScript mode with Windows Me, Windows 98, and Windows 95, you will have to install the PostScript printer driver. See the appropriate sections below for installation instructions according to the interface that you are using to print.

***Note:***

*The USB interface is not available for printing under Windows 95.*

### ***Installing the PostScript printer driver for the parallel interface***

Follow these steps to install the PostScript printer driver for the parallel interface:

1. Insert the printer software CD-ROM into your CD-ROM drive.
2. Click Start, then Settings, and finally Printers.
3. Double-click the Add Printer icon.

4. The Add Printer Wizard will be displayed. Follow the on-screen instructions until the screen asking you to select the printer model is displayed.
5. Click **Have Disk** and specify the path to the appropriate INF file necessary for installation. If your CD-ROM drive is D:, the path will be D:\ADOBEPS\ENGLISH\WIN9X\PS\_SETUP (change the drive letter as needed for your system).
6. Select the INF file for the version of the Windows operating system that you are running and continue with the installation according to the on-screen instructions until the screen asking you to select the port the printer is connected to is displayed.
7. Select LPT1 as the port the printer is connected to, and then click **Next**. Follow the on-screen instructions for the rest of the installation.
8. When installation is done, click **Finish**.

### ***Installing the PostScript printer driver for the USB interface***

Follow these steps to install the PostScript printer driver for the USB interface:

**Note:**

- The USB interface is not available for printing under Windows 95.*
- If the Windows driver and the Adobe PS driver for an Epson printer with a USB connection have already been installed on your computer, follow the installation procedure explained in the previous section, "Driver installation for the parallel interface connection," but make sure to select USB as the port in step 7. If you have not installed an Epson USB printer driver on your computer, follow the installation procedure below.*
- You must have at least 6 MB of free space on your hard disk drive to install the PostScript printer driver.*

1. Without connecting the printer to your computer, turn on both the computer and the printer.
2. Once Windows has started, connect your computer to the printer with a USB cable.
3. The Add New Hardware Wizard will launch automatically. Click **Next** to start the installation of the USB printer driver.
4. Select **Search for best driver for your device (Recommended)**, and then click **Next**.
5. Insert the printer software CD-ROM into your CD-ROM drive.
6. Select only the **Specify a location** check box, and then specify the following path on the CD-ROM. You can click **Browse** to select the path. If your CD-ROM drive is D:, the path will be D:\ADOBEPS\ENGLISH\WIN9X\PS\_SETUP (change the drive letter as needed for your system).
7. Click **Next** to continue with the installation.
8. If the USB printer driver file is correctly recognized, the message “EPSON USB Printer” will appear. Click **Next** to continue with the installation.
9. When installation of the USB printer driver is done, click **Finish**.
10. After the USB printer driver installation is done, the Add Printer Wizard will launch automatically. Follow the on-screen instructions to continue with the installation until the screen asking you to select the printer model is displayed.
11. Click **Have Disk** and specify the path to the appropriate INF file necessary for installation. If your CD-ROM drive is D:, the path will be D:\ADOBEPS\ENGLISH\WIN9X\PS\_SETUP (change the drive letter as needed for your system).

12. Select the INF file for the version of the Windows operating system that you are running and continue with the rest of the installation according to the on-screen instructions.
13. When installation is done, click Finish.

### ***Installing the printer driver for the network interface***

Follow these steps to install the PostScript printer driver for the network interface:

**Note:**

- To connect using a network interface, you must install the optional interface card into the printer.*
- You must have at least 6 MB of free space on your hard disk drive to install the printer driver.*

1. Insert the printer software CD-ROM into your CD-ROM drive.
2. Click Start, then Settings, and finally Printers.
3. Double-click the Add Printer icon.
4. The Add Printer Wizard will be displayed. Click Next.
5. Select Network Printer when the screen asking How is this printer attached to your computer? appears.
6. Enter the printer's network path in the Network path or queue name field. You can also select the network printer by clicking Browse.

7. When the screen asking you to select the printer model is displayed, click **Have Disk** and specify the path to the appropriate INF file necessary for installation. If your CD-ROM drive is D:, the path will be D:\ADOBEPS\ENGLISH\WIN9X\PS\_SETUP (change the drive letter as needed for your system).
8. Select the INF file for the version of the Windows operating system that you are running and continue with the rest of the installation according to the on-screen instructions.
9. When installation is done, click **Finish**.

### ***Notice for Windows Me/98/95 Users***

The printer may not print normally if the computer is connected to the printer via the parallel interface and the ECP mode is set. If this is the case, disable bi-directional support in the printer driver. To do so, display the printer's Properties dialog box, click the **Details** tab, then click the **Spool Settings** button. In the Spool Settings dialog box that appears, Select **Disable bi-directional support** for this printer, then click the **OK** button.

### ***Printer driver settings***

The printer driver enables you to change the settings for your print job. The settings are grouped into various categories that you can access by clicking the appropriate tab in the printer's Properties dialog box.

Online help is also available to help you with the settings. There are two online help options. Click the **Help** button for procedural help on the settings. If you want help on a particular item, click the "?" icon on the top-right corner of the dialog box's title bar and then click the name of the setting that you want more information on. An explanation of the setting and its options will be displayed.

## *Paper tab settings*

### **Paper size**

Select the desired paper size. This setting must match the size of the paper loaded in the printer. The paper sizes that are available will differ according to the printer. The default setting is either A4 or Letter, depending on your country of purchase.

### **Orientation**

Specify how the document is to be positioned on the page. The options are Portrait (vertical) and Landscape (horizontal).

### **Collate**

Select this check box to print multiple copies of the document in page order. If this check box is not selected, each page is printed out the specified number of times before the following page is printed.

#### *Note:*

*If you select the **Collate** option in the printer driver, do not set the Collate option in the application itself.*

### **Duplex**

Select the desired duplex print style. Flip on long edge produces two-sided printouts that turn like a book, while Flip on short edge produces two-sided printouts that turn like a calendar. Select None to turn off the Duplex printing function.

#### *Note:*

*You need to install the optional Duplex Unit in order to use this feature.*

### **Paper source**

Select the paper source for your print job. The options are AutoSelect Tray, MP Tray, Cassette 1, Cassette 2, Cassette 3, Cassette 4, Manual Feed 1st Page, and Manual Feed EachPage. However, the actual paper sources that are available vary depending on the options installed.

## Output bin

You can select the output tray for your print job if the optional 4-Bin Mailbox is installed. The options are **Standard Face Down**, **Mailbox 1**, **Mailbox 2**, **Mailbox 3**, and **Mailbox 4**.

## Paper type

Select the desired paper type to print on. The options are **Normal**, **Thick**, **Thick N**, **Rough**, and **Transparency**. Make sure to select the correct paper type to avoid smearing or wasting ink.

## Margins

Click this button to set the margins for your printout. You can select to specify in **Inches** or **Millimeters**.

## Restore Defaults

Click this button to reset the settings on this sheet to their default values.

### *Graphics tab settings*

#### **Print Quality**

Select the resolution that you want to print in. The options are **Fast** and **Quality**. The **Quality** setting prints at a higher resolution, but the printing time will be longer.

#### **Print as a negative image**

Select this check box if you want to print the document as a negative image. This feature prints by reversing the RGB or black-and-white values of the image, and is useful for printing black-and-white or coarse RGB images.

#### **Print as a mirror image**

Select this check box if you want to print the document as a mirror image. This feature prints by reversing the horizontal coordinates of the image.

## **Layout**

Specify how many pages of your document to print on one sheet of paper. The options are 1-up, 2-up, 4-up, 6-up, 9-up, and 16-up.

## **Print page border**

Select this check box if you want the borders of the pages to be printed when printing more than one page of the document on one sheet of paper.

## **Scaling**

This setting enables you to shrink or enlarge the image to print. You can enter any percentage from 25% to 400%. To shrink the image, specify a percentage that is lower than 100%. To enlarge the image, specify a percentage that is higher than 100%.

However, if you can shrink or enlarge the image to print in the application that you are printing from, do so in the application and not through the printer driver.

## **Convert Gray Text to PostScript Gray**

Specify whether to convert true gray (RGB value) in text to the gray provided by the PostScript driver.

## **Convert Gray Graphics to PostScript Gray**

Specify whether to convert true gray (RGB value) in graphics to the gray provided by the PostScript driver.

## **Restore Defaults**

Click this button to reset the settings on this sheet to their default values.

### *Fonts tab settings*

#### **Substitute printer fonts for TrueType fonts when applicable**

Select this radio button to have the computer download TrueType fonts to the printer when applicable. This setting can speed up printing.

### **Do not use printer fonts**

Select this radio button to have the computer always download all the fonts used in the document to be printed to the printer. This will slow down printing, but the fonts in the printout will be identical to that shown on the screen.

### **Add Euro Currency Symbol to PostScript Fonts**

Select this check box to add the symbol for the Euro currency to the set of PostScript fonts residing on the printer.

### **Update Soft Fonts**

Click this button to update the list of installed PostScript Type 1 fonts so that they are printed correctly.

### **Send Fonts As**

Click this button to specify advanced settings for the downloading of fonts to the printer. See online help for details on each of the available settings.

### **Restore Defaults**

Click this button to reset the settings on this sheet to their default values.

## *Device Options tab settings*

### **Available printer memory (in KB)**

Specify the amount of available printer memory. If the entered value does not match the actual amount of memory on the printer and printing problems occur, change the setting.

### **Available font cache (in KB)**

Displays the amount of font cache memory available to Type 32 fonts. The printer driver automatically adjusts the font cache size according the memory setting specified under Installable options.

## **Printer features**

The settings available under Printer features enable you to make use of features that your printer is equipped with. Use the **Change setting** for drop-down list to change the settings for each feature.

### *Density*

Sets the print density. The options are **Lightest**, **Light**, **Medium**, **Dark**, and **Darkest**.

### *RI Tech*

Select whether to use RI Tech when printing. RI Tech improves the appearance of printed lines, text, and graphics. The options are **On** and **Off**.

### *Toner Save Mode*

Select whether to use the Toner Save Mode when printing. When the Toner Save Mode is turned on, the printer uses about 50% less toner than normal. The options are **On** and **Off**.

### *Image Protect*

This setting enables you to specify whether to use lossy compression when memory runs low during printing. The options are **On** and **Off**. When Image Protect is set to **On**, lossy compression is not used. If it is set to **Off**, lossy compression is used when memory resources are too low.

### *Start Page*

Specify whether to start printing from the first page or second (back) page. The options are **Front** and **Back**. If **Back** is selected, the first page is left blank. This setting is enabled only when the duplex printing function is turned on.

### *Separations*

This setting enables you to select the color for separation printing. The options are **None**, **Cyan**, **Magenta**, **Yellow**, and **Black**.

## Installable options

The settings available under Installable options enable you to specify whether certain options are installed into the printer, and if so, what they are. Use the **Change** setting for drop-down list to specify the details of the options installed.

## Restore Defaults

Click this button to reset the settings on this sheet to their default values.

### *PostScript tab settings*

#### **PostScript output format**

Specify the format for PostScript files. The options are PostScript (optimize for speed), PostScript (optimize for portability-ADSC), Encapsulated PostScript (EPS), and Archive format. See online help for details on each of these formats.

#### **PostScript header**

This setting enables you to specify how header information is sent to the printer. The options are **Download header with each print job** and **Assume header is downloaded and retained**.

#### **Send Header Now**

Click this button to send the PostScript header information to the printer immediately. This button is available only when the **Download header with each print job** radio button is selected. If you click the **Send Header Now** button and then click **OK**, the **Assume header is downloaded and retained** radio button is automatically selected.

#### **Print PostScript error information**

Select this check box to have the printer automatically print out a page with PostScript error messages when an error occurs in the print job. Turn this option on if you are having printing problems.

## **PostScript timeout values**

### *Job timeout*

Specify the maximum number of seconds that can elapse for a print job to get from the computer to the printer before the printer stops trying to print the document. If you enter “0” (zero), the printer will continue trying to print indefinitely.

### *Wait timeout*

Specify the maximum number of seconds that the printer will wait to get more PostScript information from the computer before the print job is automatically canceled. After the specified time elapses, the printer will stop trying to print the document and prints an error message instead. If you enter “0” (zero), the printer will wait indefinitely. You may want to increase this value when printing complicated documents.

This setting enables you to prevent the printer from stalling if and when the computer that sends the print job stalls.

## **Advanced**

Click this button to specify the following advanced PostScript options:

### *PostScript language level*

Specify the PostScript language level to use. Select the highest PostScript language level that your printer supports to optimize its features. Use a lower PostScript language level only if you are experiencing printing problems or if you intend to print the file using another printer.

### *Data format*

Select the data format to use. The options are ASCII data and Tagged binary communications protocol. You cannot use Binary communications protocol nor Pure binary data, although they may appear as options.

If ASCII data is selected, print data is sent in the ASCII (7-bit) format, which may take longer to print, but which can be sent through any I/O channel, including serial, parallel, and Ethernet.

If you select Tagged binary communications protocol, all data except for special control characters is sent in binary (8-bit) format. The binary format can be sent over parallel or serial communications ports and are faster than sending data in the ASCII format. The Pure binary data setting sends all data in pure binary format, which is the fastest format to print in, but that can be sent only over AppleTalk.

#### *Send CTRL+D before job*

Select this check box to specify for the CTRL+D character to be sent at the beginning of every PostScript document. CTRL+D at the beginning-of-file (BOF) will reset your printer to its default settings to ensure that prior print jobs will not affect the current print job. However, activating this setting may cause the print job to fail if it is connected through a network instead of the parallel or serial interface.

This setting is not available if Pure binary data is selected as the data format.

#### *Send CTRL+D after job*

Select this check box to specify for the CTRL+D character to be sent at the end of every PostScript document. CTRL+D at the end-of-file (EOF) will reset your printer to its default settings to ensure that the current print job will not affect future print jobs. However, activating this setting may cause the print job to fail if it is connected through a network instead of the parallel or serial interface.

#### *Display alert for applications incompatible with driver features*

Select this check box if you want the printer driver to display messages to alert you to incompatibilities between the printer's features and those of the application that you are using to print.

## **Restore Defaults**

Click this button to reset the settings on this sheet to their default values.

### *Watermarks tab settings*

#### **Select a watermark**

Specify whether to use a watermark when printing. The options are None, CONFIDENTIAL, COPY, and DRAFT.

#### **Edit**

Click this button to edit the selected watermark. This button is not available when None is selected under **Select a watermark**.

#### **New**

Click this button to create a new watermark.

#### **Delete**

Click this button to delete the selected watermark. This button is not available when None is selected under **Select a watermark**.

#### **Print watermark**

Specify how the selected watermark should be printed. The options are On first page only, In background, and As outline only.

## ***Windows NT 4.0 users***

To print in the PostScript mode with Windows NT 4.0, you will have to install the printer driver. See the appropriate sections below for installation instructions according to the interface that you are using to print.

#### ***Note:***

*The USB interface is not available for printing under Windows NT 4.0.*

## ***Installing the printer driver for the parallel interface***

Follow these steps to install the printer driver for the parallel interface:

1. Insert the printer software CD-ROM into your CD-ROM drive.
2. Click **Start**, then **Settings**, and finally **Printers**.
3. Double-click the **Add Printer** icon.
4. The **Add Printer Wizard** will be displayed. Follow the on-screen instructions until the screen asking you to select the printer model is displayed.
5. Click **Have Disk** and specify the path to the appropriate INF file necessary for installation. If your CD-ROM drive is D:, the path will be `D:\ADOBEPS\ENGLISH\WINNT4\PS_SETUP` (change the drive letter as needed for your system).
6. Select the INF file for the version of the Windows operating system that you are running and continue with the installation according to the on-screen instructions.
7. When installation is done, click **Finish**.

## ***Installing the printer driver for the network interface***

Follow these steps to install the printer driver for the network interface:

1. Insert the printer software CD-ROM into your CD-ROM drive.
2. Click **Start**, then **Settings**, and finally **Printers**.
3. Double-click the **Add Printer** icon.

4. The Add Printer Wizard will be displayed. Select **Network printer server**, and then click **Next**.
5. Enter the name of the printer or select the printer from the list of available printers on the network, and then click **OK**.
6. Click **OK** once the following message appears.

“The server on which the XXX printer resides does not have the correct printer driver installed.”

7. Click **Have Disk** and specify the path to the appropriate INF file necessary for installation. If your CD-ROM drive is D:, the path will be D:\ADOBEPS\ENGLISH\WINNT4\PS\_SETUP (change the drive letter as needed for your system).
8. Select the INF file for the version of the Windows operating system that you are running and continue with the installation according to the on-screen instructions.
9. When installation is done, click **Finish**.

### ***Notice for Windows NT 4.0 Users***

Unavailable paper sizes may appear in the paper size list for the selected paper source. See “Paper Sources” on page 16 to confirm the available paper sizes.

### ***Print dialog box settings***

The Print dialog box, which is accessed by selecting **Print** on the **File** menu of the application that you are using, enables you to specify print settings for the current document. The available settings are grouped under the **Page Setup** and **Advanced** tabs. See below for a brief description of each available setting.

## Page Setup tab settings

### Paper Size

Select the desired paper size. This setting must match the size of the paper loaded in the printer. The paper sizes that are available will differ according to the printer. The default setting is either A4 or Letter, depending on your country of purchase.

### Paper Source

Select the paper source for your print job. The options are Auto Tray Select, MP Tray, Cassette 1, Cassette 2, Cassette 3, Cassette 4, Manual Feed 1st Page, and Manual Feed EachPage. However, the actual paper sources that are available will differ according to the options installed.

### Copy Count

Specify the number of copies to print.

### Collate Copies

This check box appears only if more than one copy is specified for Copy Count. Select this check box to print multiple copies of the document in page order. If this check box is not selected, each page is printed out the specified number of times before the following page is printed.

#### *Note:*

*If you select the **Collate** option in the printer driver, do not set the Collate option in the application itself.*

### Orientation

Specify how the document is to be positioned on the page. The options are Portrait (vertical), Landscape (horizontal), and Rotated (rotated 90 counterclockwise).

### Color Appearance

Specify whether to print the document in grayscale or color. The options are Monochrome and Color.

## *Advanced tab settings*

### **EPSON EPL-N7000 PS3 Document Settings**

#### *Undo Changed Option/s*

Click this button to undo all the changes that have been made to the settings. The settings return to their default values. This button is enabled only if one or more of the default values have been changed.

#### *About Adobe PostScript Printer Driver*

Click this button to view information on the currently installed PostScript printer driver.

### **Paper/Output**

#### *Paper Size*

If you specified the Paper Size setting on the Page Setup sheet, that setting is reflected here. To change this setting, select the desired paper size from the options displayed at the bottom of the dialog box. For more information on this setting, see “Paper Size” on page 115.

#### *Orientation*

If you specified the Orientation setting on the Page Setup sheet, that setting is reflected here. To change this setting, select the desired orientation from the options displayed at the bottom of the dialog box. For more information on this setting, see “Orientation” on page 116.

#### *Paper Source*

If you specified the Paper Source setting on the Page Setup sheet, that setting is reflected here. To change this setting, select the desired paper source from the options displayed at the bottom of the dialog box. For more information on this setting, see “Paper Source” on page 115.

#### *Media*

Select the desired paper type to print on. The options are Normal, Thick, Thick N, Rough, and Transparency. Make sure to select the correct paper type to avoid smearing or wasting ink.

### *Copy Count*

If you specified the Copy Count setting on the Page Setup sheet, that setting is reflected here. To change this setting, enter the desired number of pages to print into the text box at the bottom of the dialog box. For more information on this setting, see “Copy Count” on page 115.

### **Graphic**

#### *Resolution*

Select the resolution that you want to print in. The options are Fast and Quality. The Quality setting prints at a higher resolution, but the printing time will be longer.

#### *Color Appearance*

If you specified the Color Appearance setting on the Page Setup sheet, that setting is reflected here. To change this setting, select the desired setting from the options displayed at the bottom of the dialog box. For more information on this setting, see “Color Appearance” on page 116.

#### *Scaling*

This setting enables you to shrink or enlarge the image to print. You can enter any percentage from 1% to 1000%. To shrink the image, specify a percentage that is lower than 100%. To enlarge the image, specify a percentage that is higher than 100%. When you enlarge a document, only the portion of the document that fits on the selected paper will be printed. If you can shrink or enlarge the image to print in the application that you are printing from, do so in the application.

#### *TrueType Font*

Specify how TrueType fonts in the document are printed. Select Substitute with Device Font to use equivalent PostScript fonts for printing documents that contain TrueType fonts. Select Download as Softfont to download TrueType fonts to the printer instead of using PostScript fonts.

If your document has overlapping text and graphics, select **Substitute with Device Font**. Using downloaded TrueType fonts to print when text and graphics overlap may cause output errors.

## **Document Options**

### *Page Layout (N-up) Option*

Specify how many pages of your document to print on one sheet of paper. The options are **Normal (one-up)**, **Two-up (1x2)**, **Four-up (2x2)**, **Six-up (2x3)**, **Nine-up (3x3)**, and **Sixteen-up (4x4)**.

## **PostScript Options**

### *PostScript Output Option*

Specify the format for PostScript files. The options are **Optimize for Speed**, **Optimize for Portability**, **Encapsulated PostScript (EPS)**, and **Archive Format**. See online help for details on each of these formats.

### *TrueType Font Download Option*

Specify how TrueType fonts are downloaded to the printer. The options are **Automatic**, **Outline (scalable outline font)**, **Bitmap (bitmap font)**, and **Native TrueType (outline font)**.

### *PostScript Language Level*

Specify the PostScript language level to use. The options are **2** and **3**.

### *Send PostScript Error Handler*

Specify whether the printer automatically prints out a page with PostScript error messages when an error occurs in the print job. The options are **Yes** and **No**.

### *Mirrored Output*

Specify whether the document is printed as a mirror image by reversing the horizontal coordinates of the image. The options are **Yes** and **No**.

## Printer Features

### *Density*

Sets the print density. The options are Lightest, Light, Medium, Dark, and Darkest.

### *Output Bin*

You can select the output tray for your print job if the optional 4-Bin Mailbox is installed. The options are Standard Face Down, Mailbox 1, Mailbox 2, Mailbox 3, and Mailbox 4.

### *RI Tech*

Select whether to use RI Tech when printing. RI Tech improves the appearance of printed lines, text, and graphics. The options are On and Off.

### *Toner Save Mode*

Select whether to use the Toner Save Mode when printing. When the Toner Save Mode is turned on, the printer uses about 50% less toner than normal. The options are On and Off.

### *Image Protect*

This setting enables you to specify whether to use lossy compression when memory runs low during printing. The options are On and Off. When Image Protect is set to On, lossy compression is not used. If it is set to Off, lossy compression is used when memory resources are too low.

### *Start Page*

Specify whether to start printing from the first page or second (back) page. The options are Front and Back. If Back is selected, the first page is left blank. This setting is enabled only when the duplex printing function is turned on.

### *Separations*

This setting enables you to select the color for separation printing. The options are None, Cyan, Magenta, Yellow, and Black.

## ***Printer driver settings***

Printer settings specific to your printer are available on the Device Settings sheet of the printer's Properties dialog box.

Online help is available to help you with the settings. If you want help on a particular item, click the "?" icon on the top-right corner of the dialog box's title bar and then click the name of the setting that you want more information on. An explanation of the setting and its options will be displayed.

### ***EPSON EPL-N7000 PS 3 Device Settings***

#### **Undo Changed Options**

Click this button to undo all the changes that have been made to the settings. The settings return to their default values. This button is enabled only if one or more of the default values have been changed.

#### **About Adobe PostScript Printer Driver**

Click this button to view information on the currently installed PostScript printer driver.

#### **Form To Tray Assignment**

Assign the desired paper size to the various available paper sources. Once this setting is specified, the printer will automatically feed paper from the paper source that holds the selected paper size.

The paper source options are MP Tray, Cassette 1, Cassette 2, Cassette 3, Cassette 4, Manual Feed 1st Page, and Manual Feed EachPage. However, the actual paper sources that are available will differ according to the printer and the options installed.

The paper sizes that are available will differ according to the printer. The default setting is either A4 or Letter, depending on your country of purchase.

## Font Substitution Table

Double-click to display the Font Substitution Table and the options for the TrueType-to-PostScript font mapping.

## Available PostScript Memory

Specify the amount of available PostScript memory. The available PostScript memory is a subset of the printer's total physical memory. It is recommended that you use the default setting.

## Output Protocol

Specify the protocol that the printer will use for print jobs. The options are ASCII, TBCP, and Binary. Note that Binary can only be used with AppleTalk connection.

If ASCII is selected, print data is sent in the ASCII (7-bit) format, which may take longer to print, but which can be sent through any I/O channel, including serial, parallel, and Ethernet.

If you select TBCP (Tagged Binary Communications Protocol), all data except for special control characters is sent in binary (8-bit) format. The binary formats can be sent over parallel or serial communications ports and are faster than sending data in the ASCII format.

## Send CTRL-D Before Each Job

Specify whether a CTRL+D character should be sent at the beginning of every PostScript document. CTRL+D at the beginning-of-file (BOF) will reset your printer to its default settings to ensure that prior print jobs will not affect the current print job. However, activating this setting may cause the print job to fail if it is connected through a network instead of the parallel or serial interface.

## **Send CTRL-D After Each Job**

Specify whether a CTRL+D character should be sent at the end of every PostScript document. CTRL+D at the end-of-file (EOF) will reset your printer to its default settings to ensure that the current print job will not affect future print jobs. However, activating this setting may cause the print job to fail if it is connected through a network instead of the parallel or serial interface.

## **Job Timeout**

Specify the maximum number of seconds that can elapse for a print job to get from the computer to the printer before the printer stops trying to print the document. If you enter "0" (zero), the printer will continue trying to print indefinitely.

## **Wait Timeout**

Specify the maximum number of seconds that the printer will wait to get more PostScript information from the computer before the print job is automatically canceled. After the specified time elapses, the printer will stop trying to print the document and prints an error message instead. If you enter "0" (zero), the printer will wait indefinitely. You may want to increase this value when printing complicated documents.

## **Minimum Font Size to Download as Outline**

Specify the minimum font size (in pixels) for which the printer driver will download TrueType fonts as outline (Type 1) fonts. A font smaller than the minimum setting will be downloaded as a bitmap (Type 3/Type 32) font.

## **Maximum Font Size to Download as Bitmap**

Specify the maximum font size (in pixels) for which the printer driver will download TrueType fonts as bitmap (Type 3/Type 32) fonts. A font larger than the maximum setting will be downloaded as an outline (Type 1) font.

## *Installable Options*

The settings available under Installable Options enable you to specify whether certain options are installed into the printer, and if so, what they are. The available settings are Installed Memory, Lower Cassette Units, Duplex Unit, and Mailbox Unit.

## **Windows XP, Windows 2000 users**

To print in the PostScript mode with Windows XP and Windows 2000, you will have to install the printer driver. See the appropriate sections below for installation instructions according to the interface that you are using to print.

4

### ***Installing the printer driver for the parallel interface***

Follow these steps to install the printer driver for the parallel interface:

1. Insert the printer software CD-ROM into your CD-ROM drive.
2. Click **Start**, then **Settings**, and finally **Printers**.

**Note:**

*If your computer is running Windows XP, click **Start** and then click **Printers and Faxes**.*

3. Double-click the **Add Printer** icon.

**Note:**

*If your computer is running Windows XP, click **Add a printer under Printer Tasks**.*

4. The **Add Printer Wizard** will be displayed. Follow the on-screen instructions until the screen asking you to select the printer model is displayed.

5. Click **Have Disk** and specify the path to the appropriate INF file necessary for installation. If your CD-ROM drive is D:, the path will be D:\ADOBE\PS\ENGLISH\WIN2K-XP\PS\_SETUP (change the drive letter as needed for your system).
6. Select the INF file for the version of the Windows operating system that you are running and continue with the installation according to the on-screen instructions.
7. When installation is done, click **Finish**.

### ***Installing the printer driver for the USB interface***

Follow these steps to install the printer driver for the USB interface:

1. Without connecting the printer to the computer, turn on both the computer and the printer.
2. Once Windows has started, connect the computer to the printer with a USB cable.
3. The **Add New Hardware Wizard** will launch automatically. Click **Next** to start the installation of the USB printer driver.
4. After the USB printer driver installation is done, the **Add Printer Wizard** will launch automatically. Follow the on-screen instructions to continue with the installation until the screen asking you to select the printer model is displayed.
5. Click **Have Disk** and specify the path to the appropriate INF file necessary for installation. If your CD-ROM drive is D:, the path will be D:\ADOBE\PS\ENGLISH\WIN2K-XP\PS\_SETUP (change the drive letter as needed for your system).
6. Select the INF file for the version of the Windows operating system that you are running and continue with the rest of the installation according to the on-screen instructions.

7. When installation is done, click Finish.

### ***Installing the printer driver for the network interface***

Follow these steps to install the printer driver for the network interface:

1. Insert the printer software CD-ROM into your CD-ROM drive.
2. Click **Start**, then **Settings**, and finally **Printers**.

**Note:**

*If your computer is running Windows XP, click **Start** and then click **Printers and Faxes**.*

3. Double-click the **Add Printer** icon.

**Note:**

*If your computer is running Windows XP, click **Add a printer under Printer Tasks**.*

4. The **Add Printer Wizard** will be displayed. Click **Next**.
5. Select **Network printer** in the screen that appears.

**Note:**

*If your computer is running Windows XP, click **A network printer, or a printer attached to another computer**.*

6. Click **Next** to browse for and select the printer on the network.
7. Click **OK** when the following message appears:

*“The server on which the XXX printer resides does not have the correct printer driver installed.”*

8. When the screen asking you to select the printer model is displayed, click **Have Disk** and specify the path to the appropriate INF file necessary for installation. If your CD-ROM drive is D:, the path will be D:\ADOBEPS\ENGLISH\WIN2K-XP\PS\_SETUP (change the drive letter as needed for your system).
9. Select the INF file for the version of the Windows operating system that you are running and continue with the rest of the installation according to the on-screen instructions.
10. When installation is done, click **Finish**.

### ***Notice for Windows XP/2000 users***

Unavailable paper sizes may appear in the Paper Size list in the printer driver. See “Paper Sources” on page 16 to confirm the available paper sizes.

### ***Printer driver settings***

Printer settings specific to your printer are available through the **Device Settings** tab of the printer’s Properties dialog box. In addition to the settings there, click the **Printing Preferences** button on the **General** sheet or the **Printing Defaults** button on the **Advanced** sheet for more print settings. The basic print settings are grouped under the **Layout** and **Paper/Quality** tabs, while more advanced settings are available by clicking the **Advanced** button on either sheet.

Online help is also available to help you with the settings. There are two online help options. Click the **Help** button for procedural help on the settings. If you want help on a particular item, click the “?” icon on the top-right corner of the dialog box’s title bar and then click the name of the setting that you want more information on. An explanation of the setting and its options will be displayed.

## *Device Settings tab settings*

### **Form To Tray Assignment**

Assign the desired paper size to the various available paper sources. Once this setting is specified, the printer will automatically feed paper from the paper source that holds the selected paper size.

The paper source options are MP Tray, Cassette 1, Cassette 2, Cassette 3, Cassette 4, Manual Feed 1st Page, and Manual Feed EachPage. However, the actual paper sources that are available will differ according to the options installed.

The paper sizes that are available will differ according to the printer. The default setting is either A4 or Letter, depending on your country of purchase.

### **Font Substitution Table**

Double-click to display the Font Substitution Table and the options for the TrueType-to-PostScript font mapping.

### **Available PostScript Memory**

Specify the amount of available PostScript memory. The available PostScript memory is a subset of the printer's total physical memory. It is recommended that you use the default setting.

### **Output Protocol**

Specify the protocol that the printer will use for print jobs. The options are ASCII, TBCP, and Binary. Note that Binary can only be used with AppleTalk connection.

If ASCII is selected, print data is sent in the ASCII (7-bit) format, which may take longer to print, but which can be sent through any I/O channel, including serial, parallel, and Ethernet.

If you select TBCP (Tagged Binary Communications Protocol), all data except for special control characters is sent in binary (8-bit) format. The binary formats can be sent over parallel or serial communications ports and are faster than sending data in the ASCII format.

### **Send CTRL-D Before Each Job**

Specify whether a CTRL+D character should be sent at the beginning of every PostScript document. CTRL+D at the beginning-of-file (BOF) will reset your printer to its default settings to ensure that prior print jobs will not affect the current print job.

However, activating this setting may cause the print job to fail if it is connected through a network instead of the parallel or serial interface. Conversely, if your document fails to print when sent to a printer connected through a parallel or serial port, change the setting to Yes.

### **Send CTRL-D After Each Job**

Specify whether a CTRL+D character should be sent at the end of every PostScript document. CTRL+D at the end-of-file (EOF) will reset your printer to its default settings to ensure that the current print job will not affect future print jobs.

However, activating this setting may cause the print job to fail if it is connected through a network instead of the parallel or serial interface. If your document fails to print when sent to a network printer, change the setting to No.

### **Convert Gray Text to PostScript Gray**

Specify whether to convert true gray (RGB value) in text to the gray provided by the PostScript driver.

### **Convert Gray Graphics to PostScript Gray**

Specify whether to convert true gray (RGB value) in graphics to the gray provided by the PostScript driver.

## **Add Euro Currency Symbol to PostScript Fonts**

Specify whether to add the symbol for the Euro currency to the set of PostScript fonts residing on the printer.

## **Job Timeout**

Specify the maximum number of seconds that can elapse for a print job to get from the computer to the printer before the printer stops trying to print the document. If you enter "0" (zero), the printer will continue trying to print indefinitely.

## **Wait Timeout**

Specify the maximum number of seconds that the printer will wait to get more PostScript information from the computer before the print job is automatically canceled. After the specified time elapses, the printer will stop trying to print the document and prints an error message instead. If you enter "0" (zero), the printer will wait indefinitely. You may want to increase this value when printing complicated documents.

## **Minimum Font Size to Download as Outline**

Specify the minimum font size (in pixels) for which the printer driver will download TrueType fonts as outline (Type 1) fonts. A font smaller than the minimum setting will be downloaded as a bitmap (Type 3) font.

This setting enables you to fine-tune the Automatic setting for the TrueType Font Download Option setting on the Advanced Options dialog box of the Printing Preferences dialog box.

## **Maximum Font Size to Download as Bitmap**

Specify the maximum font size (in pixels) for which the printer driver will download TrueType fonts as bitmap (Type 3) fonts. A font larger than the maximum setting will be downloaded as an outline (Type 1) font.

This setting enables you to fine-tune the Automatic setting or override the Bitmap setting for the TrueType Font Download Option setting on the Advanced Options dialog box of the Printing Preferences dialog box.

### **Installable Options**

The settings available under Installable Options enable you to specify whether certain options are installed into the printer, and if so, what they are. The available settings are Installed Memory, Lower Cassette Units, Duplex Unit, Mailbox Unit, and HardDisk.

### *Layout tab settings*

#### **Orientation**

Specify how the document is to be positioned on the page. The options are Portrait (vertical), Landscape (horizontal), and Rotated Landscape (rotated 90 counterclockwise).

#### **Print on Both Sides (Duplex)**

Select the desired duplex print style. Flip on long edge produces two-sided printouts that turn like a book, while Flip on short edge produces two-sided printouts that turn like a calendar. Select None to turn off the Duplex printing function. This setting is enabled only when the optional Duplex Unit is installed on the printer.

#### **Page Order**

Specify the order in which the pages of the document will be printed. The options are Front to Back and Back to Front.

#### **Pages Per Sheet**

Specify how many pages of your document to print on one sheet of paper. The options are 1, 2, 4, 6, 9, and 16.

## *Paper/Quality tab settings*

### **Paper Source**

Select the paper source for your print job. The options are Automatically Select, MP Tray, Cassette 1, Cassette 2, Cassette 3, Cassette 4, Manual Feed 1st Page, and Manual Feed EachPage. However, the actual paper sources that are available will differ according to the options installed.

### **Media**

Select the desired paper type to print on. The options are Normal, Thick, Thick N, Rough, and Transparency. Make sure to select the correct paper type to avoid smearing or wasting ink.

### **Color**

Specify how color images should be printed. The options are Black & White and Color.

## *Advanced settings*

### **Paper Size**

Select the desired paper size. This setting must match the size of the paper loaded in the printer. The paper sizes that are available will differ according to the printer. The default setting is either A4 or Letter, depending on your country of purchase.

### **Copy Count**

Specify the number of copies to print.

### **Collated**

This check box appears only if more than one copy is specified for Copy Count. Select this check box to print multiple copies of the document in page order. If this check box is not selected, each page is printed out the specified number of times before the following page is printed.

**Note:**

If you select the **Collated** option in the printer driver, do not set the **Collate** option in the application itself.

**Print Quality**

Select the resolution that you want to print in. The options are **Fast and Quality**. The **Quality** setting prints at a higher resolution, but the printing time will be longer.

**ICM Method**

Specify whether to enable Image Color Management, and if so, how it should be handled. The options are **ICM Disabled**, **ICM Handled by Host System**, **ICM handled by Printer**, and **ICM Handled by Printer using printer calibration**. See online help for details on each of these settings

**ICM Intent**

Specify how color images are to be treated to produce the best possible printout. The options are **Graphics** (charts, bright colors), **Pictures** (photos), **Proof** (print in a specific ink color), and **Match** (preview color settings from another printer).

**Scaling**

This setting enables you to shrink or enlarge the image to print. You can enter any percentage from 1% to 1000%. To shrink the image, specify a percentage that is lower than 100%. To enlarge the image, specify a percentage that is higher than 100%. If you can shrink or enlarge the image to print in the application that you are printing from, do so in the application and not through the printer driver.

**TrueType Font**

Specify how TrueType fonts in the document are printed. Select **Substitute with Device Font** to use equivalent PostScript fonts for printing documents that contain TrueType fonts. Select **Download as Soffont** to download TrueType fonts to the printer instead of using PostScript fonts.

## **Advanced Printing Features**

Specify whether to enable the advanced printing features. The options are Enabled and Disabled.

## **PostScript Output Option**

Specify the format for PostScript files. The options are Optimize for Speed, Optimize for Portability, Encapsulated PostScript (EPS), and Archive format. See online help for details on each of these formats.

## **TrueType Font Download Option**

Specify how TrueType fonts are downloaded to the printer. The options are Automatic, Outline (scalable outline font), Bitmap (bitmap font), and Native TrueType (outline font).

## **PostScript Language Level**

Specify the PostScript language level to use. The options are 1, 2, and 3.

## **Send PostScript Error Handler**

Specify whether the printer automatically prints out a page with PostScript error messages when an error occurs in the print job. The options are Yes and No.

## **Mirrored Output**

Specify whether the document is printed as a mirror image by reversing the horizontal coordinates of the image. The options are Yes and No.

## **Output Bin**

You can select the output tray for your print job if the optional 4-Bin Mailbox is installed. The options are Standard Face Down, Mailbox 1, Mailbox 2, Mailbox 3, and Mailbox 4.

## **Density**

Sets the print density. The options are Lightest, Light, Medium, Dark, and Darkest.

## **RITech**

Select whether to use RITech when printing. RITech improves the appearance of printed lines, text, and graphics. The options are On and Off.

## **Toner Save Mode**

Select whether to use the Toner Save Mode when printing. When the Toner Save Mode is turned on, the printer uses about 50% less toner than normal. The options are On and Off.

## **Image Protect**

This setting enables you to specify whether to use lossy compression when memory runs low during printing. The options are On and Off. When Image Protect is set to On, lossy compression is not used. If it is set to Off, lossy compression is used when memory resources are too low.

## **Start Page**

Specify whether to start printing from the first page or second (back) page. The options are Front and Back. If Back is selected, the first page is left blank. This setting is enabled only when Print on Both Sides(Duplex) is set to Flip on Short Edge or Flip on Long Edge.

## **Separations**

This setting enables you to select the color for separation printing. The options are None, Cyan, Magenta, Yellow, and Black.

## Using online help

Online help is available to help you with the printer driver settings. There are two online help options. Click the **Help** button for procedural help on the settings. If you want help on a particular item, click the “?” icon on the top-right corner of the dialog box’s title bar and then click the name of the setting that you want more information on. An explanation of the setting and its options will be displayed.

## Reserve Job function

A printer installed with the optional Hard Disk Drive can use the Reserve Job function. The Reserve Job function makes it possible to send printing data from a computer to the printer’s hard disk and save it there for printing at a later time. The print data can then be printed directly from the printer’s control panel.

The Reserve Job function has the following four features:

Reserve Job Option	Description
Re-Print Job	Print the job immediately, as well as store it for later reprinting.
Verify Job	Print one copy immediately for content verification before printing multiple copies.
Stored Job	Save the print job without printing it.
Confidential Job	Specify a password for the print job and save it for later printing.

**Note:**

- ❑ See “Using the Reserve Job Function” on page 65 for more details on the use of the Reserve Job function.
- ❑ The Reserve Job function cannot be used when the optional Hard Disk Drive is not installed in the printer.

- ❑ *When multiple copies are selected for printout, turn the Collate function on in the printer driver setting. When you print out by using the printer's control panel, first specify the necessary number of copies on the control panel, and then start the print job.*
- ❑ *The Reserve Job function cannot be used when you are printing by using the AppleTalk protocol in Windows NT4.0/2000. When you are using the AppleTalk protocol, do not use the Reserve Job function. Use any protocol other than the AppleTalk protocol when using the Reserve Job function.*
- ❑ *Make sure to clear the Job Management On check box on the Job Settings sheet when outputting data as a PS file. The Job Management check box is selected by default so that the job information is attached to the print data when it is sent to the printer.*

## **Using the Reserve Job function**

Settings for the Reserve Job function are carried out in the PostScript printer driver. Follow the instructions below to specify Reserve Job function settings:

### **Note:**

*The Reserve Job function can be used only when the printer is equipped with the optional Hard Disk Drive. The Hard Disk Option setting must be set to **Installed** in the PostScript printer driver in order to use the Reserve Job function in Windows NT4.0/2000/XP. Before using the Reserve Job function, make sure that the Hard Disk setting is set to **Installed** in the Device Options sheet in the printer driver or under the Installable Option setting in the Device Settings sheet. This setting does not appear in Windows 95/98/Me.*

Follow these steps to use the Reserve Job function when printing from any application:

1. Click Print under the application's File menu.
2. Click the Properties button, and then click the Job Settings tab.

3. Specify the desired Reserve Job settings in the dialog box that appears.
4. When printing multiple copies, select the Collated check box in the Advanced settings of the printer driver.
5. When you are done with the settings, click the Print button to print.

**Note:**

See “Using the Reserve Job Function” on page 65 for details on the individual settings in the Job Settings sheet.

## **Using AppleTalk under Windows 2000 or Windows NT 4.0**

Use the following settings if your machine is running Windows NT 4.0 or Windows 2000, and the printer is connected through a network interface using the AppleTalk protocol:

- Use SelecType to set the Emulation Mode-Network item to PS3. Using the default Auto setting will cause an extra, unneeded page to be printed.
- On the Device Settings sheet of the printer’s Properties dialog box, make sure that SEND CTRL-D Before Each Job and SEND CTRL-D After Each Job are set to No.
- TBCP (Tagged binary communications protocol) cannot be used as the Output Protocol setting.



## Chapter 5

---

# **Using the PostScript Printer Driver (Macintosh)**

About the PostScript Printer Driver .....	140
Hardware requirements.....	140
System requirements .....	140
Using the PostScript Printer Driver with Macintosh.....	142
Mac OS 8.6, Mac OS 9.x users .....	142
Mac OS X users .....	164

---

## About the PostScript Printer Driver

The PostScript 3 printer driver provides you with the ability to print documents formatted for PostScript printers. Seventeen scalable fonts are included. IES (Intelligent Emulation Switch) and SPL (Shared Printer Language) support allow the printer to switch between the PostScript mode and other emulations as print data is received at the printer.

### Hardware requirements

Your printer must meet the following hardware requirements to be able to use the PostScript 3 printer driver.

- ❑ Memory requirements for using the PostScript 3 printer driver are shown below. Install optional memory modules into your printer if the amount of memory currently installed does not meet your printing needs.

Minimum memory	Recommended memory
32 MB* (for a simple print job at 600 dpi)	48 MB or more

\* Printing may not be possible with this amount of memory, depending on the specifics of the job being printed.

### System requirements

Your computer must meet the following system requirements to be able to use the Adobe PostScript 3 printer driver.

**Note:**

*Your computer must have a hard disk with at least 8 MB of free space.*

Any Macintosh computer to which the printer is connected must be running Mac OS 8.6, 9.x, or Mac OS X ver. 10.2.4 or later.



**Caution:**

- ❑ *Do not install the Adobe PostScript 3 printer driver on a computer running System 8.5 or earlier. Installing the driver on earlier systems can corrupt them.*
  
- ❑ *The Adobe PostScript 3 printer driver cannot be used on Macintosh 68K computers.*

**Note:**

- ❑ *When printing via the USB port from a Power Macintosh running Mac OS 8.6 or 9.x, the printer must be set to handle ASCII data. To specify this setting, select **Print** from the File menu of the application that you are using, and then select the name of the application from the options available in the Print dialog box. On the setup option page that appears, select ASCII for the data format setting. The actual setting name varies by application, but is often called *Encoding or Data*.*
  
- ❑ *For best results, you should connect the printer directly to the computer's USB port. If multiple USB hubs must be used, we recommend that you connect the printer to the first-tier hub.*

---

# ***Using the PostScript Printer Driver with Macintosh***

## ***Mac OS 8.6, Mac OS 9.x users***

### ***Installing the printer driver***

The Installer program that is included in the printer software CD-ROM installs the PostScript printer driver. Before installing the printer driver, make sure that your hard disk has at least 3.1 MB of free space.

The installer program has two installation methods: Easy Install and Custom Install.

Easy Install installs all the files necessary to use the PostScript printer driver. Normally, you should use the Easy Install method since this ensures that all necessary files are copied and that your computer is set up to give you the full benefit of the PostScript printer driver.

Custom Install installs only the files that you specify. You might want to use the Custom Install method if you are low on hard disk space and want to install only those files that are absolutely required. However, if you have enough free disk space, it is recommended that you choose the Easy Install method.

### ***Easy Install***

If your Macintosh starts up any applications automatically (such as a virus checker) when the computer is turned on, quit the applications before running the Installer.

Follow these steps to install the PostScript printer driver:

1. Turn on your Macintosh if it is not already on.

2. Insert the printer software CD-ROM into your CD-ROM drive.
3. Double-click the CD-ROM icon, and then double-click Adobe PS, Mac OS 9, and English in this order.
4. Double-click AdobePS 8.7, and then double-click AdobePS Installer.
5. Follow the on-screen instructions until the install screen is displayed.
6. Select Easy Install, and then click Install.



7. When installation is done, click Restart to restart your computer.

This completes the installation of the printer driver. You now need to select the printer driver as described in the next section.

If you are connecting two or more EPSON printers of the same model using AppleTalk, and you want to rename the printer, see the *Network Guide*.

## Custom Install

If your Macintosh starts up any applications automatically (such as a virus checker) when the computer is turned on, quit the applications before running the Installer.

To perform a Custom Install, in which you specify which files to install, follow steps 1 to 5 of the Easy Install method (see previous section), and then do the following:

1. Select Custom Install.
2. Select the item(s) that you want to install.



### Note:

If you want information on a particular item, click the  icon to the right of that item.

3. Click Install.
4. When installation is done, click Quit.
5. Restart your computer.

This completes the installation of the printer software. You now need to select the printer driver as described in the next section.

If you are not able to print after a Custom Install, perform the Easy Install installation to copy all necessary files to your computer.

If you are connecting two or more printers of the same model using AppleTalk, and you want to rename the printer, see the *Network Guide*.

## **Selecting the printer when it is connected via a USB connection**

If the printer is connected to your computer via a USB port, you will not be able to select the printer from the Chooser. You will have to launch the Apple Desktop Printer Utility and register the printer as a Desktop Printer. The Desktop Printer Utility is automatically installed when you install the Adobe PostScript printer driver. The Desktop Printer is created through the following procedure:

### **Note:**

- ❑ *When printing via the USB port from a Power Macintosh running Mac OS 8.6 or 9.x, the printer must be set to handle ASCII data. To specify this setting, select **Print** from the File menu of the application that you are using, and then select the name of the application from the options available in the Print dialog box. On the setup option page that appears, select ASCII for the data format setting. The actual setting name varies by application, but is often called Encoding or Data.*
- ❑ *For best results, you should connect the printer directly to the computer's USB port. If you must use multiple USB hubs, we recommend that you connect the printer to the first-tier hub.*
- ❑ *Manual duplex printing cannot be performed if the printer is connected to the Macintosh via a USB port. In this case, do not select **Print on Both Sides** on the **Layout** setup option page in the Print dialog box.*


Follow these steps to select the printer:

1. Launch the Desktop Printer Utility.  
The Desktop Printer Utility is located in the AdobePS Components folder on your Macintosh HD after an Easy Install of the printer driver.




Desktop Printer Utility


2. A dialog box like the one shown below will be displayed. Select AdobePS from the With pop-up menu, click Printer (USB) in the Create Desktop list, and then click OK.

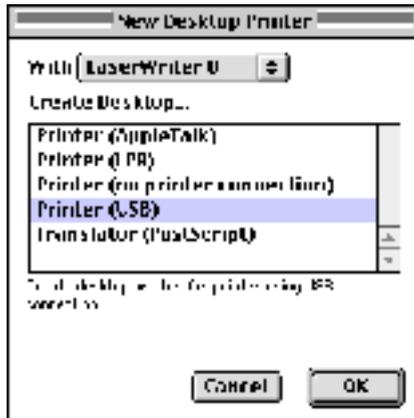

3. Click Change under USB Printer Selection in the dialog box that appears to select the printer. The dialog box shown below will be displayed, showing a list of connected USB printers. Select your printer from the list, and then click OK.

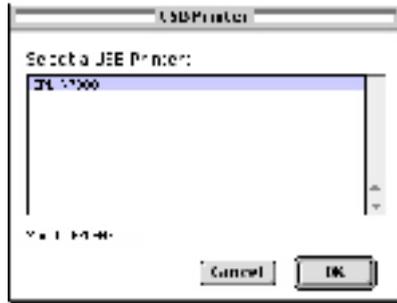

4. Click Auto Setup to select the PostScript Printer Description (PPD) file. When a PPD file is selected, the selected printer name will be displayed under the printer icon. If the printer name is incorrect, click Change, and then select the correct PPD file. The PPD files are located in System Folder\Extensions\Printer Descriptions.

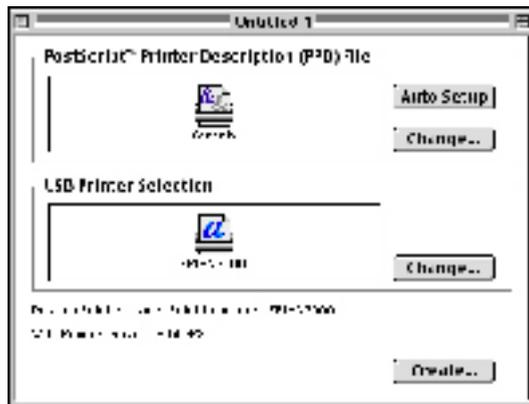

5. After the USB printer and PPD file have been selected, click **Create** at the bottom of the dialog box. The USB printer icon will be displayed on the desktop.



You can now print using the printer connected to your computer via the USB port. Use the Chooser if you want to print to a printer using AppleTalk.

### ***Selecting the printer in a networked environment***


If the printer is connected through the Ethernet interface or an optional network card, select it from the Chooser as described below.

***Note:***

*If the printer is connected to your computer via a USB port, see the previous section entitled "Selecting the printer when it is connected via a USB connection" on page 145 for information on how to select the printer.*

Follow these steps to select the printer:

1. In the Apple menu, select Chooser. The Chooser dialog box appears.

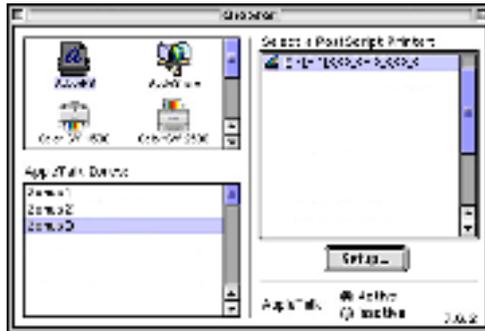

2. Make sure that AppleTalk is active.
3. Click the AdobePS icon to select it. The name of your printer appears in the Select a PostScript Printer box.

**Note:**

*By default, the six-digit MAC address is displayed after the printer name if the printer is connected through an optional network card. Refer to your network card manual for details.*

4. Click on the name of your printer to select it. The Create button appears.

**Note:**

*If your computer is connected to more than one AppleTalk zone, click the AppleTalk zone your printer is connected to in the AppleTalk Zones list.*

5. Click Create.

A message will appear marking the completion of the setup. The Chooser dialog box will be displayed again. (The Create button changes into the Setup button.)

To confirm that the setup completed successfully, click **Setup** in the Chooser dialog box, and then click **Printer Info** and **Configure** to check the settings.



If the setup did not complete successfully, follow these steps:

1. Return to the dialog box shown above.
2. Click **Select PPD**. The PPD selection dialog box will be displayed.
3. Select your printer model, and then click **Select**.

If you need to cancel the installation of the PPD you selected, click **Cancel**. To try to setup the printer again, repeat step 5 above.

**Note:**

*If QuickDrawGX is installed, you must turn it off in the Extensions Manager before you can use the Adobe PostScript 3 printer driver.*

## **Changing the printer setup settings**

You can easily change or update the printer setup settings. They include the amount of installed memory and whether options such as the Duplex Unit and lower paper cassette units are installed on the printer or not.

Follow these steps to change the settings:

1. Select the printer on the desktop.
2. Click the Printing menu, and then select **Change Setup**.
3. Change the settings using the pop-up menus.

### ***Balloon Help using the printer driver***

Balloon Help is available to help you with the printer driver settings.

Follow these steps to use Balloon Help when the Print or Page Setup dialog box is displayed:

1. Click the Help menu, and then select **Show Balloons**.
2. Place your cursor over the item that you need help with. Information on that item is displayed inside a floating balloon.

To end Balloon Help, click the Help menu, and then select **Hide Balloons**.

### ***Printer driver settings***

The printer driver enables you to change the settings for your print job. The printer driver settings can be accessed through the Page Setup and Print dialog boxes of the application that you are printing from. The various settings are grouped under the Page Setup and Print dialog boxes in the following manner:

- ❑ **Page Setup dialog box:** Settings that affect the attributes of the page to be printed, such as the paper size, orientation, and margins are available here.

- ❑ **Print dialog box:** All other print settings, such as the paper source, resolution, and other PostScript settings are available here.

The actual settings that are available might vary, depending on your application.

### *Page Setup dialog box*

When you select **Page Setup** in the File menu of your application, the dialog box shown below appears. The dialog box you see might be slightly different, depending on your application. There are four setup option pages in this dialog box: **Page Attributes**, **Watermark**, **PostScript Options**, and **Custom Page Default**.



The settings and the buttons that appear in the Page Setup dialog box are explained below.

#### *Cancel*

Click this button to exit the dialog box without saving any changes you made.

## Page Attributes

### *Paper*

Select the desired paper size from the Paper pop-up menu. This setting must match the size of the paper loaded in the printer. The paper sizes that are available will differ according to the printer. The default setting is either A4 or Letter, depending on your country of purchase.

### *Orientation*

Specify whether the page is to be printed in the portrait (vertical) or landscape (horizontal) orientation.

### *Scale*

This setting enables you to shrink or enlarge the image to print. You can enter any percentage from 25% to 400%. The default is 100%. To shrink the image, specify a percentage that is lower than 100%. To enlarge the image, specify a percentage that is higher than 100%. However, if you can shrink or enlarge the image to print in the application that you are printing from, do so in the application and not through the printer driver.

### *Booklet*

Select this check box to print out two document pages on a single sheet of paper. When the sheet is folded in half, it will form a booklet. You can set the page orientation for either left-right or top-bottom folds.

## Watermark

### *None*

This radio button is selected by default, and indicates that your print job will be printed without any watermark.

### *First*

Select this radio button if you want the selected watermark to be printed only on the first page of your document.

### *All*

Select this radio button if you want the selected watermark to be printed on all the pages of your document.

### *PICT*

Select this radio button to show all available watermarks in the PICT format under the **Watermark** pop-up menu.

### *EPS*

Select this radio button to show all available watermarks in the EPS format under the **Watermark** pop-up menu.

### *TEXT*

Select this radio button to show all available watermarks in the TEXT format under the **Watermark** pop-up menu.

### *Foreground*

Select this check box if you want the selected watermark to be printed in the foreground, i.e., over the document's text and/or graphics.

### *Save With Document*

Select this check box if you want to save the watermark with the document for future printing.

### *Edit*

Click this button to modify the contents of the selected watermark. Only watermarks in the TEXT format can be modified. This button is available only when the TEXT radio button is selected.

## **PostScript Options**

### Visual Effects

#### *Flip Horizontal*

Select this check box to flip the printed image horizontally on the page.

### *Flip Vertical*

Select this check box to flip the printed image vertically on the page.

### *Invert Image*

Select this check box to invert the image or text on the page so that black areas of the page become white and white areas become black.

### Image and Text

#### *Substitute Fonts*

Select this check box to allow the printer to use substitute fonts during printing.

#### *Smooth Text*

Select this check box to improve the appearance of bitmap fonts.

#### *Smooth Graphics*

Select this check box to improve the appearance of printed graphics by smoothing jagged edges.

#### *Precision Bitmap Alignment*

Select this check box to reduce the printed document to correct for distortions that sometimes occur in printed bitmap graphics.

#### *Unlimited Downloadable Fonts*

Select this check box when using a large number of downloadable fonts in a document. This setting may slow down printing.

### **Custom Page Default**

#### *Units*

Select the desired unit that you want to work in when customizing the page. The options are cm, inches, and pts.

### *Paper size pop-up menu*

This pop-up menu automatically shows the paper size that is selected on the **Page Attributes** setup page. You can change the paper size by clicking on the menu and selecting the desired paper size to customize.

### *Paper Size*

Enter the desired **Width**, **Height**, and **Offset** values for the custom page.

### *PPD Limits*

Click the pop-up menu and select the various attributes to view the minimum and maximum values permitted by the selected PPD (PostScript Printer Description) file.

### *Margins*

Specify the desired **Top**, **Bottom**, **Left**, and **Right** margin values.

### *Custom Page Name*

Enter a name for the custom page that you are creating.

### *Remove*

Click to delete the custom page selected in the paper size pop-up menu. This button is grayed out when a non-custom paper size is selected.

### *Add*

Click to add the custom page that you are creating onto the list of selectable paper sizes. This button is grayed out if nothing is entered into the **Custom Page Name** text box.

## Print dialog box

When you select Print in the File menu of your application, the dialog box shown below appears. The dialog box you see might be slightly different, depending on your application. There are several setup option pages in this dialog box, such as General, Background Printing, Cover Page, Layout, Error Handling, PostScript Settings, and Printer Setting.



The settings and the buttons that appear in the Print dialog box are explained below.

### *Cancel*

Click this button to exit the dialog box without saving any changes you made.

### *Save Settings*

Click this button to save changes to the settings. Until you make additional changes and click this button again, the changes saved will be used as the default settings for this printer.

## **General**

### *Copies*

Specify how many copies of the document to print. Enter any number from 1 (default) to 32,000.

### *Collate*

Select this check box when printing multiple copies of a multi-page document, so that each document copy will be printed out with the page in order.

### *Reverse Order*

Select this check box to print the document with the pages in reverse order (i.e., starting with the last page).

## Pages

### *All*

Select this radio button to print out all the pages of the document.

### *From, To*

Specify the range of pages to print. The available numbers are 1 to 32,000.

## Paper Source

### *All pages from*

Select the paper source for your print job. The options are Auto Tray Select, MP Tray, Cassette 1, Cassette 2, Cassette 3, Cassette 4, Manual Feed 1st Page, and Manual Feed EachPage. However, the actual paper sources that are available will vary depending on the options installed.

### *First page from*

Select the paper source for printing the first page of the document.

### *Remaining from*

Select the paper source for printing the rest of the document after the first page.

### *Note:*

- Cassette 2, Cassette 3, and Cassette 4 can be selected only if the corresponding optional cassette unit is installed on your printer.*

- ❑ *If you are printing on a custom paper size created under the Custom Page Default setup option page on the Page Setup dialog box, the paper must be fed from the MP Tray. Only the Auto Tray Select and the MP Tray options can be selected.*

## **Background Printing**

Print in

### *Foreground (no spool file)*

Select this radio button to print the document in the foreground. When this is selected, you cannot use your computer for other operations while printing.

### *Background*

Select this radio button to print the document in the background. When this radio button is selected, you can use your computer for other operations while printing.

Print Time

### *Urgent*

Select this radio button to give the document first priority among the print jobs in the print queue.

### *Normal*

Select this radio button to place the document in the print queue in the order received.

### *Print at*

Select this radio button to specify a date and time to print the document.

### *Put Document on Hold*

Select this radio button to keep the document in the print queue without printing it.

## **Cover Page**

Print Cover Page

### *None*

Select this radio button if you do not want to print a cover page.

### *Before Document*

Select this radio button to print the cover page as the first page of the document.

### *After Document*

Select this radio button to print the cover page as the last page of the document.

## Cover Page Paper Source

Select the paper source for the printing of the cover page. The options are Same as document, MP Tray, Cassette 1, Cassette 2, Cassette 3, Cassette 4, Manual Feed 1st Page, and Manual Feed EachPage. However, the actual paper sources that are available vary depending on the options installed.

### *Note:*

*Cassette 2, Cassette 3, and Cassette 4 can be selected only if the corresponding optional cassette unit is installed on your printer.*

## Layout

### *Pages per sheet*

Specify how many pages of your document to print on one sheet of paper.

### *Layout direction*

Specify whether the document should be laid out from left to right or right to left.

### *Border*

Specify whether the document prints with a border around the edges of the page. The options are none, Single hairline, Single thin line, Double hairline, and Double thin line.

### *Print on Both Sides*

Select this check box to print on both sides of the paper.

**Note:**

You can select this check box only when necessary setting is made for the Duplex Unit. See "Changing the printer setup settings" on page 150 for information.

**Binding**

Allows you to select which edge of the document will be bound.

**Note:**

This setting is available only when the **Print on Both Sides** option is checked.

**Transverse**

Allows you to specify rotation for custom paper.

**Note:**

This setting is available only when the custom paper is selected.

**Error Handling**

If there is a PostScript error:

***No special reporting***

When this radio button is selected, PostScript errors will not be reported.

***Summarize on screen***

When this radio button is selected, a summary of the PostScript errors will be displayed on the screen.

***Print detailed report***

When this radio button is selected, a detailed report of the PostScript errors will be printed.

**PostScript Settings*****Format***

Select the file format that you want the new file to have. The options are PostScript Job, EPS Mac Standard Preview, EPS Mac Enhanced Preview, and EPS No Preview.

### *PostScript Level*

Select the PostScript compatibility level for the PostScript file that contains a description of your document. The options are Level 1, 2 and 3 Compatible, Level 2 Only, and Level 3 Only.

### Data Format

#### *ASCII*

Select this radio button if you plan to later edit the document. The file will be saved as an ASCII or text file.


#### *Binary*

Select this radio button to save the file as a binary file. Binary files are typically smaller in size than ASCII files.

#### *Font inclusion*

Specify the type of fonts to include in the file. The options are None, All, All But Standard 13, and All But Fonts in PPD file.

### Print Setting

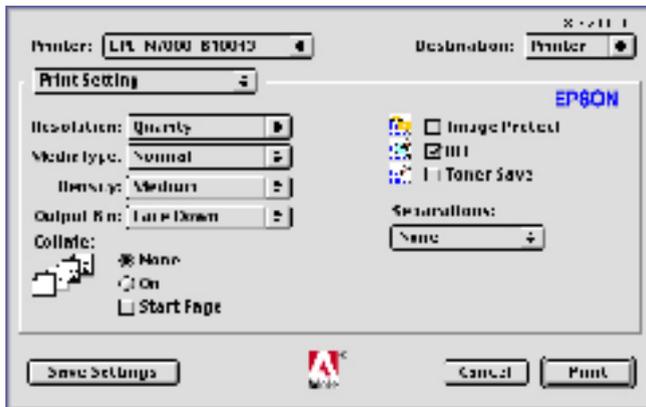

#### *Resolution*

Select the resolution that you want to print in. The options are Fast and Quality. The Quality setting prints at a higher resolution, but the printing time will be longer.

### *MediaType*

Select the desired paper type to print on. The options are Normal, Thick, Thick N, Rough, and Transparency. Make sure to select the correct paper type to avoid smearing or wasting ink.

### *Density*

Sets the print density. The options are Lightest, Light, Medium, Dark, and Darkest.

### *Output Bin*

You can select the output tray for your print job if the optional 4-Bin Mailbox is installed. The options are Face Down, Mailbox 1, Mailbox 2, Mailbox 3, and Mailbox 4.

### *Collate*

Select the On radio button to print multiple copies of the document in page order. If None is selected, each page is printed out the specified number of times before the following page is printed.

### *Note:*

*If you enable the Collate option here (On is selected), do not set the Collate option in the application itself.*

### *Start Page*

Select this check box to start printing from the second (back) page, leaving the first page blank. This setting is enabled only when the Print on Both Sides check box on the Layout setup option page is selected.

### *Image Protect*

This setting enables you to specify whether to use lossy compression when memory runs low during printing. The options are On and Off. When Image Protect is set to On, lossy compression is not used. If it is set to Off, lossy compression is used when memory resources are too low.

### ***RIT***

Select this check box to use RITech when printing. RITech improves the appearance of printed lines, text, and graphics.

### ***Toner Save***

Select this check box to use the Toner Save feature when printing. When the Toner Save feature is turned on, the printer uses about 50% less toner than normal.

### ***Separations***

This setting enables you to select the color for separation printing. The options are None, Cyan, Magenta, Yellow, and Black.

## ***Mac OS X users***

### ***Installing the printer driver***

The PS Installer program that is included in the printer software CD-ROM installs the PostScript printer driver. Make sure that no applications are running on your Macintosh before installing the printer driver. If applications such as the Print Center is running, the printer driver cannot be installed properly.


Follow these steps to install the printer driver:

1. Turn on your Macintosh if it is not already on.
2. Insert the printer software CD-ROM into your CD-ROM drive.
3. Double-click the CD-ROM icon, and then double-click Adobe PS.
4. Double-click Mac OS X, and then double-click PS Installer. The Authenticate window appears. Make sure to enter the user name and password for an administrator.


**Note:**

You need to login to Mac OS X as an administrator in order to perform software installations.

5. In the welcome screen that appears, click Continue, and follow the on-screen instructions.

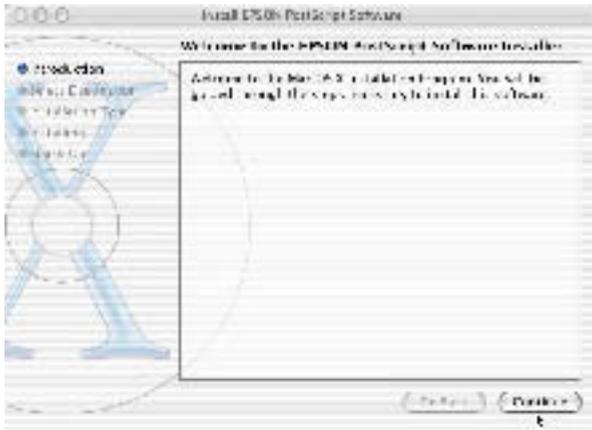

6. When the following screen appears, click Install.

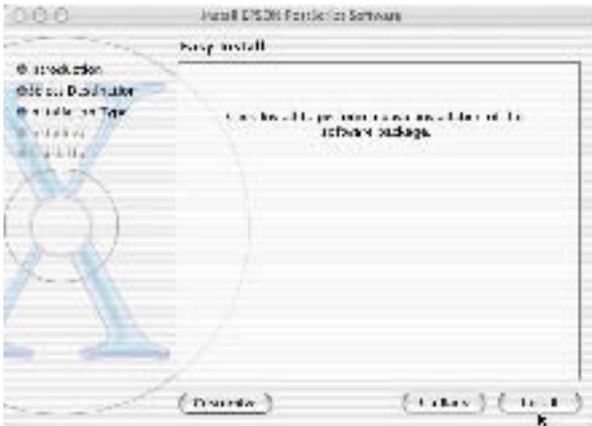

7. When installation is done, click Close.

This completes the installation of the PostScript 3 printer driver. You now need to select the printer as described in the next section.

## Selecting the Printer

The procedure for selecting the printer varies depending on the protocol or interface used to connect the printer to your computer.


### Note:

- ❑ *You cannot use FireWire for printer connection in the PostScript 3 mode. Although EPSON FireWire appears in the interface pop-up list, it cannot be used with the PostScript 3 printer driver.*
- ❑ *You need to make the settings for your installed options manually when the printer is connected using USB, IP printing, or Rendezvous. When the printer is connected using AppleTalk, the printer software automatically makes the settings.*

## AppleTalk


Follow these steps to select the printer when it is connected using AppleTalk:

1. Go to the Utilities folder located inside the Applications folder, and then double-click Print Center. The Printer List window appears.

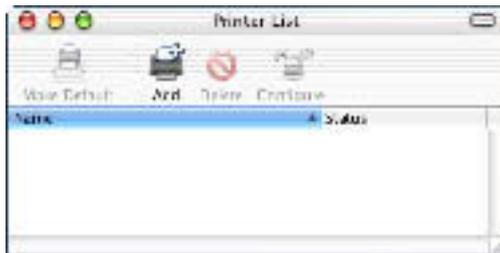


**Note:**

If you are launching the Print Center for the first time, or there is no printer added to the Print Center yet, the following screen appears:

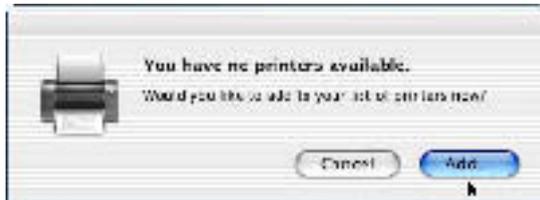

Click **Add**, and proceed to step 3.

2. Click **Add** in the Printer List window. Alternatively, you can select **Add Printer** from the Printers menu.
3. In the window that appears, choose **AppleTalk** from the pop-up list.

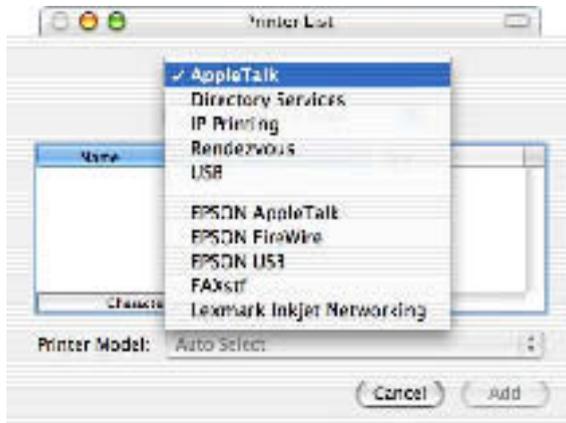

**Note:**

Make sure to choose **AppleTalk**. Do not choose **EPSON AppleTalk**, because it cannot be used with the PostScript 3 printer driver.

4. Select your printer name from the Name list, and then select Auto Select in the Printer Model pop-up list.

**Note:**

By default, the six-digit MAC address is displayed after the printer name.

5. Click **Add**. The installation program starts communicating with the printer.  
When communication is established and configuration is completed, your printer is automatically added to the Printer List.
6. Quit Print Center.


### *IP Printing*

Follow these steps to select the printer when it is connected using IP Printing:

**Note:**


Make sure to specify **ASCII** as the data format in the application. Binary data cannot be printed properly when using IP Printing.

1. Go to the Utilities folder located inside the Applications folder, and then double-click Print Center. The Printer List window appears.

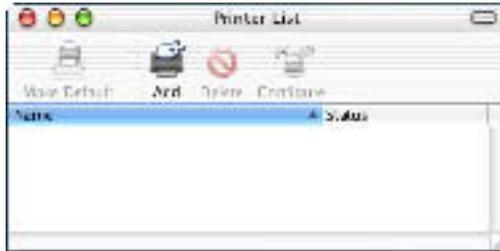

**Note:**


*If you are launching the Print Center for the first time, or there is no printer added to the Print Center yet, the following screen appears:*

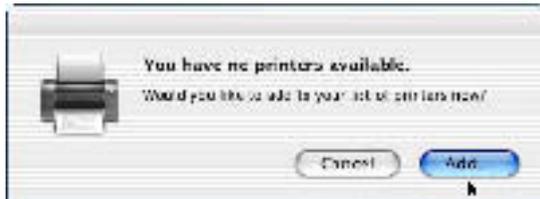

*Click **Add**, and proceed to step 3.*

2. Click **Add** in the Printer List window. Alternatively, you can select **Add Printer** from the Printers menu.

3. In the window that appears, choose IP Printing from the pop-up list.

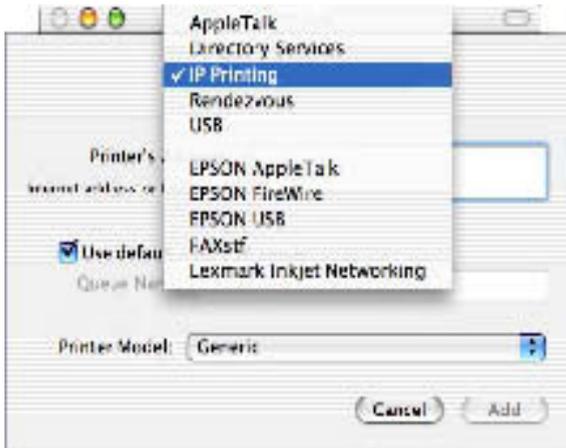

**Note:**

Make sure to choose **IP Printing**. Do not choose **EPSON TCP/IP**, because it cannot be used with the PostScript 3 printer driver.

4. Enter the IP address for the printer.

**Note:**

See the *Network Guide* or consult your network administrator for information about the IP address for the printer.

5. Make sure that the **Use default queue on server** check box is selected.
6. Select **Epson** from the **Printer Model** pop-up list. The **Model Name** list box is displayed.
7. Select your printer model from the **Model Name** list.
8. Click **Add**. Your printer's IP address is automatically added as a printer name to the **Printer List**.

9. Select your printer's IP address from the list, and then select **Show Info** from the Printers menu. The Printer Info dialog box appears.
10. Select **Installable Options** from the pop-up list, and make the necessary settings.
11. Click **Apply Changes**, and then close the Printer Info dialog box.
12. Quit Print Center.


## USB

Follow these steps to select the printer when it is connected using the USB interface:

### **Note:**


- Make sure to specify PS3 as the printer mode on the printer's control panel for proper printing results.*
  - Make sure to select the printer by using the procedure described below. The Plug and Play function automatically selects the printer when the printer is connected via the USB interface. However, this automated selection may not work properly.*
1. Make sure that the printer is properly connected to your computer with an USB cable, and that the printer is turned on.

2. Go to the Utilities folder located inside the Applications folder, and then double-click Print Center. The Printer List window appears.

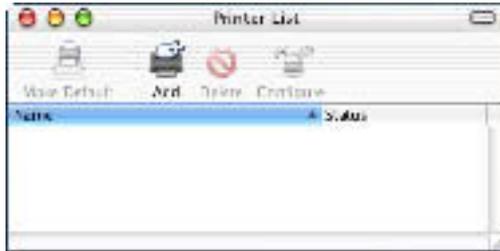

**Note:**

*If you are launching the Print Center for the first time, or there is no printer added to the Print Center yet, the following screen appears.*

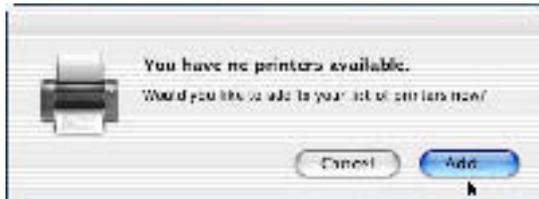

*Click Add, and proceed to step 3.*

3. Click Add in the Printer List window. Alternatively, you can select Add Printer from the Printers menu.

4. In the window that appears, choose **USB** from the pop-up list. Your printer name automatically appears in the Name list.



**Note:**

Make sure to choose **USB**. Do not choose **EPSON USB**, because it cannot be used with the PostScript 3 printer driver.

5. Make sure that your printer model is selected in the Printer Model list.

**Note:**

If your printer model is not automatically selected in the Printer Model list, you need to reinstall the PostScript printer driver. See “Installing the printer driver” on page 164 for instructions.

6. Click **Add**. Your printer is automatically added to the Printer List.
7. Click on your printer name on the list, and then select **Show Info** from the Printers menu. The Printer Info dialog box appears.

8. Select **Installable Options** from the pop-up list, and make the necessary settings.
9. Click **Apply Changes**, and then close the **Printer Info** dialog box.
10. Quit **Print Center**.

## *Rendezvous*

There are two ways to select the printer when it is connected using **Rendezvous**.


### *Note:*

*Make sure to specify ASCII as the data format in the application. Binary data cannot be printed properly when using a **Rendezvous** connection.*

## **Selecting in the Print Center**


Follow these steps to select the printer from the **Print Center**:

1. Go to the **Utilities** folder located inside the **Applications** folder, and then double-click **Print Center**.  
The **Printer List** window appears.

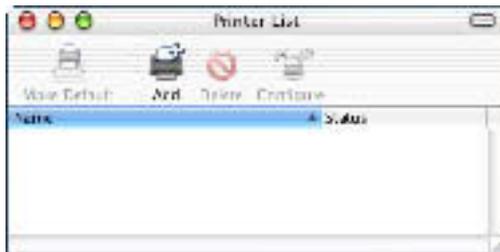

**Note:**

If you are launching the Print Center for the first time, or there is no printer added to the Print Center yet, the following screen appears.

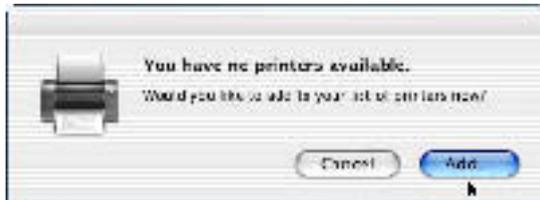

Click **Add**, and proceed to step 3.

2. Click **Add** in the Printer List window. Alternatively, you can select **Add Printer** from the Printers menu.
3. In the window that appears, select **Rendezvous** from the pop-up list.



4. Select your printer from the Name list. The printer name should have **(PostScript)** attached to the end.

5. Make sure that your printer model is selected in the Printer Model list.

**Note:**

*If your printer model is not automatically selected in the Printer Model list, you need to reinstall the PostScript printer driver. See "Installing the printer driver" on page 164 for instructions.*

6. Click **Add**. Your printer is automatically added to the Printer List.
7. Click on your printer name on the list, and then select **Show Info** from the Printers menu. The Printer Info dialog box appears.
8. Select **Installable Options** from the pop-up list, and make the necessary settings.
9. Click **Apply Changes**, and then close the Printer Info dialog box.
10. Quit Print Center.

### **Selecting from an application**

Follow these steps to select the printer from within an application:

1. Start an application, and then select **Print** from the File menu.
2. In the window that appears, select **Rendezvous Printer** from the Printer pop-up list.
3. From the list of printers that appears, select your printer model.

## ***Changing the Printer Setup Settings***

You can easily change or update the printer setup settings. They include the amount of installed memory and whether options such as the Duplex Unit and lower cassette units are installed on the printer or not.

Follow these steps to change the printer setup settings:

1. Go to the Utilities folder located inside the Applications folder, and then double-click Print Center. The Printer List window appears.
2. Select the printer from the list.
3. Select Show Info from the Printers menu. The Printer Info dialog box appears.
4. Make necessary changes to the settings, and then close the dialog box.
5. Quit Print Center.

## ***Printer Driver Settings***

The printer driver enables you to change the settings for your print job. The printer driver settings can be accessed through the Page Setup and Print dialog boxes of the application that you are printing from. The various settings are grouped under the Page Setup and Print dialog boxes in the following manner:

- Page Setup dialog box: Settings that affect the attributes of the page to be printed, such as the paper size, orientation, and margins are available here.
- Print dialog box: All other print settings, such as the paper source, resolution, and other PostScript settings are available here.

The actual settings that are available might vary, depending on your application.

### *Page Setup dialog box*

When you select **Page Setup** in the File menu of your application, the Page Setup dialog box appears. There are three setup option pages in this dialog box: Page Attributes, Custom Page Default, and Summary.

The settings and the buttons that appear in the Page Setup dialog box are explained below.

#### **Cancel**

Click this button to exit the dialog box without saving any changes you made.

#### **Page Attributes**

##### *Paper Size*

Select the desired paper size from the **Paper** pop-up menu. This setting must match the size of the paper loaded in the printer. The paper sizes that are available will differ according to the printer. The default setting is either **A4** or **Letter**, depending on your country of purchase.

##### *Orientation*

Specify whether the page is to be printed in the portrait (vertical) or landscape (horizontal) orientation. The options are **Portrait** (vertical), **Landscape** (horizontal), and **Rotated Landscape** (rotated 90 counterclockwise).

### *Scale*

This setting enables you to shrink or enlarge the image to print. You can enter any percentage from 25% to 400%. The default is 100%. To shrink the image, specify a percentage that is lower than 100%. To enlarge the image, specify a percentage that is higher than 100%. However, if you can shrink or enlarge the image to print in the application that you are printing from, do so in the application and not through the printer driver.

### **Custom Paper Size**

#### *New*

Click this button and enter a name to create a new custom page.

#### *Duplicate*

Click this button to make a copy of custom page that is previously created.

#### *Delete*

Click this button to delete a custom page.

#### *Save*

Click this button to save the value entered for a custom page.

#### *Paper Size*

Enter the desired **Width** and **Height** values for the custom page.

#### *Note:*

- When you use custom paper size, make sure Width and Height that you specify do not exceed the custom paper size supported by your printer.*
- Image data may not be printed properly when you use custom paper size.*

#### *Margins*

Specify the desired **Top**, **Bottom**, **Left**, and **Right** margin values.

### **Summary**

Displays all setting values in the Page Setup dialog box.

## *Print dialog box*

When you select Print in the File menu of your application, the Print dialog box appears. The dialog box you see might be slightly different, depending on your application. There are several setup option pages in this dialog box, such as Copies & Pages, Layout, Duplex, Output Options, Error Handling, Paper Feed, Printer Features, and Summary.

The settings and the buttons that appear in the Print dialog box are explained below.

### *Cancel*

Click this button to exit the dialog box without saving any changes you made.

### *Print*

Click this button to start printing.

### *Preview*

Click this button to preview the printed image.

### *Save AS PDF...*

Click this button to save the specified pages as a PDF file.

## **Copies & Pages**

### *Copies*

Specify how many copies of the document to print. Enter any number from 1 (default) to 32,000.

Select the Collate option when printing multiple copies of a multi-page document, so that each document copy will be printed out with the page in order.

### *Collated*

Select this radio button to print multiple copies of the document in page order. If it is not selected, each page is printed out the specified number of times before the following page is printed.

**Note:**

If you enable the Collated option here, do not set the Collate option in the application itself.

**Pages**

**All**

Select this radio button to print out all the pages of the document.

**From, To**

Specify the range of pages to print.

**Layout**

**Pages per sheet**

Specify how many pages of your document to print on one sheet of paper.

**Layout direction**

Specify whether the document should be laid out from left to right or right to left.

**Border**

Specify whether the document prints with a border around the edges of the page. The options are none, Single hairline, Single thin line, Double hairline, and Double thin line.

**Duplex**

**Print on Both Sides**

Select this check box to print on both sides of the paper.

**Note:**

You can select this check box only when necessary setting is made for the Duplex Unit. See "Changing the Printer Setup Settings" on page 177 for information.

**Binding**

Allows you to select which edge of the document will be bound.

**Note:**

*This setting is available only when the Print on Both Sides option is checked.*

## **Output Options**

***Save as File***

Select this check box to create a PDF or PostScript file.

***Format***

Select the format of the file that you are creating. Options are: PDF and PostScript.

## **Error Handling**

***PostScript Errors***

Specify whether PostScript errors should be reported or not. The options are No special reporting and Print detailed report.

## **Paper Feed**

***All pages from***

Select the paper source for your print job. The options are Auto Select, MP Tray, Cassette 1, Cassette 2, Cassette 3, Cassette 4, Manual Feed 1st Page, and Manual Feed EachPage. However, the actual paper sources that are available vary depending on the options installed.

***First page from***

Select the paper source for printing the first page of the document.

***Remaining from***

Select the paper source for printing the rest of the document after the first page.

**Note:**

- Cassette 2, Cassette 3, and Cassette 4 can be selected only if the corresponding optional paper cassette unit is installed on your printer.**

- ❑ *If you are printing on a custom paper size created under the Custom Page Default setup option page on the Page Setup dialog box, the paper must be fed from the MP Tray. Only the Auto Select and the MP Tray options can be selected.*

## **Printer Features**

### ***Resolution***

Select the resolution that you want to print in. The options are Fast and Quality. The Quality setting prints at a higher resolution, but the printing time will be longer.

### ***Density***

Sets the print density. The options are Lightest, Light, Medium, Dark, and Darkest.

### ***RITech***

Select this check box to use RITech when printing. RITech improves the appearance of printed lines, text, and graphics.

### ***Toner Save Mode***

Select this check box to use the Toner Save feature when printing. When the Toner Save feature is turned on, the printer uses about 50% less toner than normal.

### ***Image Protect***

Select this check box to give priority to the quality of the printed image. When this is selected, lossy compression is not used even when memory runs low during printing. If this check box is left unselected, lossy compression is used when memory resources are too low.

### ***Start Page***

Select this check box to start printing from the second (back) page, leaving the first page blank. This setting is enabled only when the Print on Both Sides check box on the Duplex setup option page is selected.

### *Separations*

This setting enables you to select the color for separation printing. The options are **None**, **Cyan**, **Magenta**, **Yellow**, and **Black**.

### *MediaType*

Select the desired paper type to print on. The options are **Normal**, **Thick**, **Thick N**, **Rough**, and **Transparency**. Make sure to select the correct paper type to avoid smearing or wasting ink.

### *Output Bin*

You can select the output tray for your print job if the optional 4-Bin Mailbox is installed. The options are **Standard Face Down**, **Mailbox 1**, **Mailbox 2**, **Mailbox 3**, and **Mailbox 4**.

### **Summary**

Displays all setting values in the Print dialog box.

## Chapter 6

---

# **Setting Up Your Printer on a Network**

Sharing the printer . . . . .	186
Setting up your printer as a shared printer . . . . .	187
Using an additional driver . . . . .	189
Setting for the clients . . . . .	194
Using AppleTalk Under Windows 2000 or Windows NT 4.0 . . .	202
Installing the printer driver from the CD-ROM. . . . .	203

---

## Sharing the printer

This section describes how to share the printer on a standard Windows network.

The computers on a network can share a printer that is directly connected to one of them. The computer that is directly connected to the printer is the printer server, and the other computers are the clients, which need permission to share the printer with the printer server. The clients share the printer via the printer server.

Perform the appropriate settings for the printer server and clients according to the version of the Windows operating system that you are using and your access rights to the network.

### Setting the printer server

- ❑ For Windows Me, 98, or 95, see “Setting up your printer as a shared printer” on page 187.
- ❑ For Windows XP, 2000, or NT 4.0, see “Using an additional driver” on page 189.

### Setting the clients

- ❑ For Windows Me, 98, or 95, see “With Windows Me, 98, or 95” on page 195.
- ❑ For Windows XP or 2000, see “With Windows XP or 2000” on page 197.
- ❑ For Windows NT 4.0, see “With Windows NT 4.0” on page 200.

### Note:

- ❑ *When sharing the printer, be sure to set EPSON Status Monitor 3 so that the shared printer can be monitored on the printer server. See “Setting Monitoring Preferences” on page 79.*

- ❑ *If your computer is running the Windows operating system in a Windows Me, 98, or 95 environment, double-click the **Network** icon in the Control panel of the printer server and make sure that the “File and printer sharing for Microsoft Networks” component is installed. Then, on both the printer server and the clients, make sure that the “IPX/SPX-compatible Protocol” or the “TCP/IP Protocol” is installed.*
- ❑ *The printer server and clients should be on the same network system, and they should be under the same network management.*
- ❑ *The screen shots on the following pages may differ from those that appear on your screen, depending on the version of the Windows operating system that you are using.*

---

## **Setting up your printer as a shared printer**

# 6

If the printer server’s operating system is Windows Me, 98, or 95, follow these steps to set up the printer server:

1. Click Start, point to Settings, and then click Control Panel.
2. Double-click the Network icon.
3. Click File and Print Sharing on the Configuration menu.
4. Select the I want to be able to allow others to print to my printer(s) check box, and then click OK.
5. Click OK to accept the settings.

**Note:**


- ❑ *When “Insert the Disk” appears, insert the Windows Me, 98, or 95 CD-ROM into the computer. Click OK and then follow the on-screen instructions.*

- ❑ *When the prompt to restart the computer appears, restart the computer and continue with the settings. See “For users restarting the computer” on page 188.*

### **For users restarting the computer**

Follow these steps if you had to restart the computer after performing the procedure above:

1. Double-click the Printers icon in the control panel.
2. Right-click then EPSON EPL-N7000 Advanced icon, and then click Sharing in the menu that appears.
3. Select the Shared As button, type the name in the Share Name box, and then click OK. Type a Comment and Password, if needed.

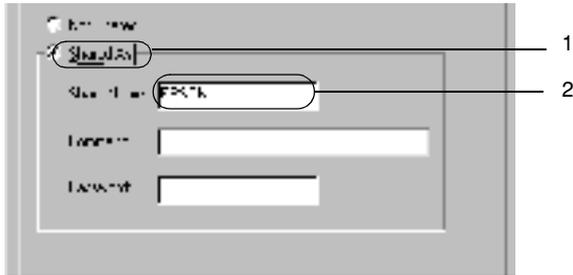

**Note:**

- ❑ *Do not use spaces or hyphens for the share name, or an error may occur.*
- ❑ *When sharing the printer, be sure to set EPSON Status Monitor 3 so that the shared printer can be monitored on the printer server. See “Setting Monitoring Preferences” on page 79.*

You need to set the client computers so that they can use the printer on a network. See the following pages for details.

- ❑ “With Windows Me, 98, or 95” on page 195
- ❑ “With Windows XP or 2000” on page 197
- ❑ “With Windows NT 4.0” on page 200

## ***Using an additional driver***

If the printer server’s operating system is Windows 2000, XP, or Windows NT 4.0, you can install additional printer drivers in the server. The additional drivers are for client computers that have different operating systems from that of the server.


Follow these steps to set a Windows XP, 2000, or Windows NT 4.0 as a printer server, and install the additional drivers:

### ***Note:***


- ❑ *You must access Windows XP, 2000, or Windows NT 4.0 as the Administrator of the client machine.*
  - ❑ *If the printer server’s operating system is Windows NT 4.0, the additional driver can be used only if Service Pack 4 or later is installed.*
1. For a Windows 2000 or NT 4.0 printer server, click **Start**, point to **Settings**, and then click **Printers**.  
For a Windows XP printer server, click **Start**, point to **Printers and Faxes**. For Windows XP Home edition users, point to **Control panel** first, and then click **Printers and Faxes**.
  2. Right-click the **EPSON EPL-N7000 Advanced** icon, and then click **Sharing** in the menu that appears.

For Windows XP, if the following menu appears, click either Network Setup Wizard or If you understand the security risks but want to share printers without running the wizard, click here.


In either case, follow the on-screen instructions.

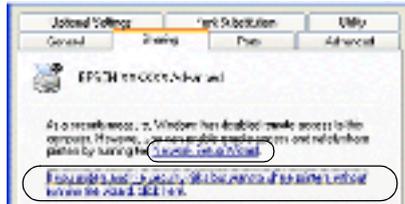

3. For a Windows 2000 or NT 4.0 printer server, select the Shared as button, and then type the name in the Share Name box.

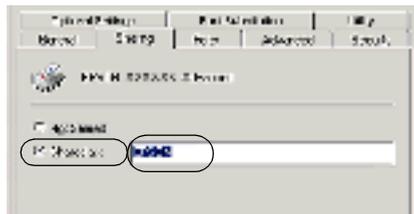

For a Windows XP printer server, select the Share this printer button, and then type the name in the Share name box.

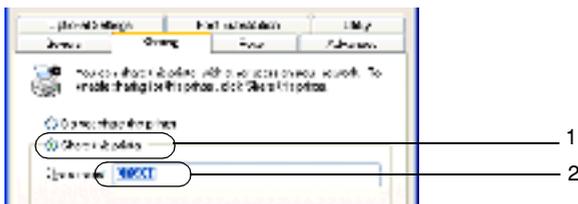

**Note:**

Do not use spaces or hyphens for the Share name, or an error may occur.

4. Select the additional drivers that you want to install.

**Note:**

If the printer server and the clients use the same operating system, you do not have to install additional drivers. Just click OK after step 3.

On a Windows NT 4.0 printer server


Select the Windows operating system that the clients are running on. For example, select Windows 95 to install the additional driver for the Windows Me, 98, or 95 clients. Then click OK.

**Note:**

- You do not have to select Windows NT 4.0x86, because that driver is preinstalled.
- Do not select additional drivers other than Windows 95. The other additional drivers are not available.


On a Windows XP or 2000 printer server

Click Additional Drivers.

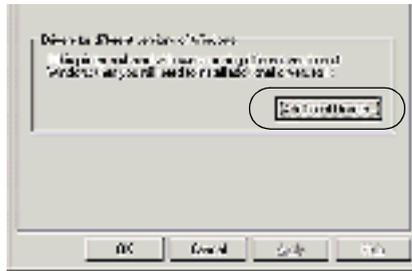

Select the Windows operating system that the clients are running on, and then click OK.

For Windows Me, 98, or 95 clients	Select Intel Windows 95 or 98 (and Me)
For Windows NT 4.0 clients	Select Intel Windows NT 4.0 or 2000
For Windows XP or 2000 clients	Intel Windows XP (or 2000) may already be selected.

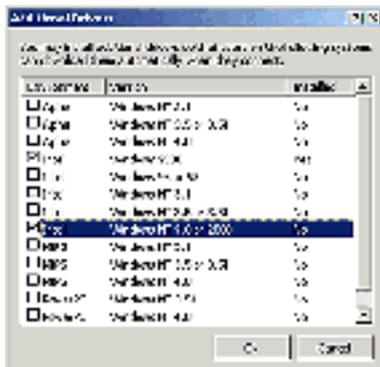

**Note:**

- ❑ You do not have to install the additional driver for Intel Windows 2000 (or XP) only, because that driver is preinstalled.
  - ❑ Do not select additional drivers other than Intel Windows 95 or 98 (and Me) and Intel Windows NT 4.0 or 2000. The other additional drivers are not available.
5. When a prompt appears, insert the printer software CD-ROM into your CD-ROM drive, and then click OK.
  6. According to the message, type the appropriate drive and folder names in which the printer driver for the clients is located, and then click OK.  
Depending on the client's operating system, the displayed message may vary.



The folder name varies depending on the operating system being used.

Client's OS	Folder Name
Windows Me, 98, or 95	\<Language>\WIN9X
Windows NT 4.0	\<Language>\WINNT40

If you are installing drivers in Windows XP or 2000, "Digital Signature is not found." may appear. Click Yes (Windows 2000) or Continue Anyway (Windows XP), and then continue with the installation.

7. If you are installing in Windows XP or 2000, click **Close**. If you are installing in Windows NT 4.0, the property window closes automatically.

**Note:**

*Confirm the following items when sharing the printer:*

- Be sure to set EPSON Status Monitor 3 so that the shared printer can be monitored on the printer server. See “Setting Monitoring Preferences” on page 79.*
- Set the security for the shared printer (access rights for clients). Clients cannot use the shared printer without access rights. For details, see Windows’ help.*

You need to set the client computers so that they can use the printer on a network. See the following pages for details:

- “With Windows Me, 98, or 95” on page 195
- “With Windows XP or 2000” on page 197
- “With Windows NT 4.0” on page 200

## **Setting for the clients**

This section describes how to install the printer driver by accessing the shared printer on a network.

**Note:**

- To share the printer on a Windows network, you need to set the printer server. For details, see “Setting up your printer as a shared printer” on page 187 (Windows Me, 98, or 95) or “Using an additional driver” on page 189 (Windows XP, 2000, or NT 4.0).*

- ❑ *This section describes how to access the shared printer on a standard network system using the server (Microsoft workgroup). If you cannot access the shared printer due to the network system, ask the network administrator for assistance.*
- ❑ *This section describes how to install the printer driver by accessing the shared printer from the **Printers** folder. You can also access the shared printer from Network Neighborhood or My Network on the Windows desktop.*
- ❑ *You cannot use the additional driver on the server's operating system.*
- ❑ *If you want to use EPSON Status Monitor 3 on the clients, you have to install both the printer driver and EPSON Status Monitor 3 in each client from the CD-ROM.*

### **With Windows Me, 98, or 95**

Follow these steps to set Windows Me, 98, or 95 clients:

1. Click **Start**, point to **Settings**, and then click **Printers**.
2. Double-click the **Add Printer** icon, and then click **Next**.
3. Select **Network printer**, and then click **Next**.
4. Click **Browse** to display the **Browse for Printer** dialog box.

**Note:**

*You can also type "\\(the name of the computer that is locally connected to the shared printer)\(the shared printer's name)" in the network path or queue name box.*

5. Click the computer or server that is connected to the shared printer and the name of the shared printer. Then click OK.



**Note:**

The name of the shared printer may be changed by the computer or server that is connected to the shared printer. To confirm the name of the shared printer, ask the network administrator.

6. Click Next.

**Note:**

- If the printer driver is installed in the client beforehand, you need to select the new printer driver or the current printer driver. When the prompt to select the printer driver appears, select the printer driver according to the message.
- If the printer server's operating system is Windows Me, 98, or 95, or the additional driver for Windows Me, 98, or 95 is installed in a Windows XP, 2000, or NT 4.0 printer server, go to the next step.
- If the additional driver for Windows Me, 98, or 95 is not installed in a Windows XP, 2000, or NT 4.0 printer server, go to "Installing the printer driver from the CD-ROM" on page 203.

7. Make sure the name of the shared printer is correct, and select whether to use the printer as the default printer or not. Click **Next**, and then follow the on-screen instructions.

**Note:**

*You can change the shared printer's name. However, this name change appears only on the client computer.*

### **With Windows XP or 2000**


You can install the printer driver for the shared printer if your access rights to the computer is Power Users or higher, even if you are not the Administrator.

If the printer server's operating system is Windows NT 4.0, confirm the following items:


- ❑ In a Windows NT 4.0 printer server, the additional driver for Windows XP or 2000 clients is the "Windows NT 4.0 x86" driver, which is installed beforehand as the printer driver for Windows NT 4.0. When installing the printer driver in a Windows XP or 2000 client from a Windows NT 4.0 printer server, the driver for Windows NT 4.0 is installed.
  - ❑ You cannot install the printer driver for Windows XP or 2000 as the additional driver in a Windows NT 4.0 printer server. To install the printer driver for Windows XP or 2000 in Windows XP or 2000 clients, the Administrator has to install the printer driver in the clients directly from the printer software CD-ROM, and then perform the following procedure.
1. For Windows 2000 clients, click **Start**, point to **Settings**, and then click **Printers**.  
For Windows XP clients, click **Start**, point to **Printers and Faxes**. For Windows XP Home edition users, point to **Control panel** first, and then click **Printers and Faxes**.

- For Windows 2000, double-click the Add Printer icon, and then click Next.

For Windows XP, click Add a printer in the Printer Tasks menu.

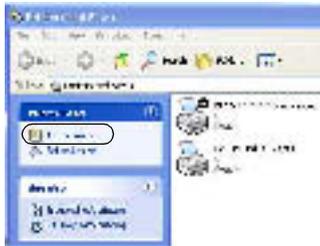

- Select Network printer (Windows 2000) or A network printer, or a printer attached to another computer (Windows XP), and then click Next.
- For Windows 2000, type the name of the shared printer, and then click Next.

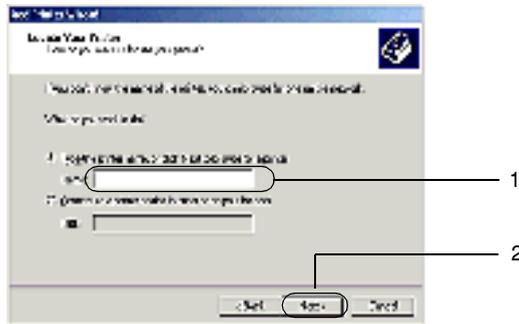

**Note:**

- You can also type "\\(the name of the computer that is locally connected to the shared printer)\(the shared printer's name)" in network path or queue name box.


- ❑ You do not necessarily need to type the name of the shared printer.

For Windows XP, select the **Browse for a printer** radio button.



5. Click the icon of the computer or server that is connected to the shared printer, and the name of the shared printer. Then click Next.

6

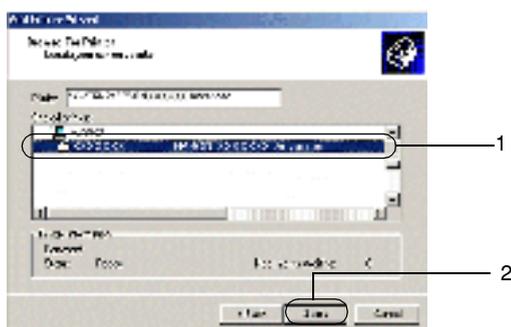

**Note:**

- ❑ The name of the shared printer may be changed by the computer or server that is connected to the shared printer. To confirm the name of the shared printer, ask the network administrator.

- ❑ *If the printer driver is installed in the client beforehand, you need to select either the new printer driver or the current printer driver. When the prompt to select the printer driver appears, select the printer driver according to the message. If the local printer driver for Windows XP or 2000 is preinstalled, you can select the printer driver for Windows XP or 2000 as the current printer driver instead of the alternative driver in a Windows NT 4.0 server.*
  - ❑ *If the additional driver for Windows XP or 2000 (NT 4.0) is preinstalled in a Windows XP, 2000, or NT 4.0 printer server, go to the next step.*
  - ❑ *If the additional driver is not installed in a Windows NT 4.0 printer server, or the printer server's operating system is Windows Me, 98, or 95, go to "Installing the printer driver from the CD-ROM" on page 203.*
6. For Windows 2000, select whether to use the printer as the default printer or not, and then click Next.
  7. Make sure that the settings are correct, and then click Finish.




### **With Windows NT 4.0**

You can install the printer driver for the shared printer if your access rights to the computer is Power Users or higher, even if you are not the Administrator.

Follow these steps to set Windows NT 4.0 clients:

1. Click Start, point to Settings, and then click Printers.
2. Double-click the Add Printer icon.
3. Select Network printer server, and then click Next.
4. Click the icon of the computer or server that is connected to the shared printer and the name of the shared printer. Then click OK.

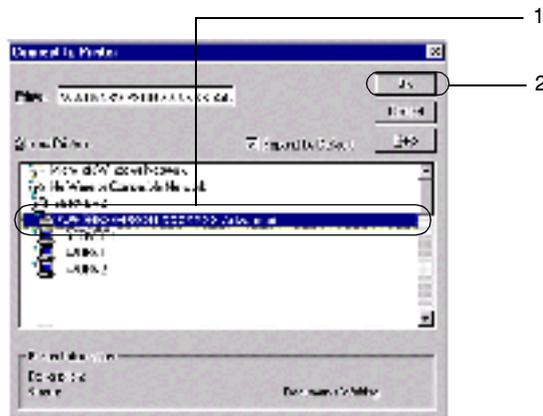

**Note:**

- ❑ You can also type "\\(the name of the computer that is locally connected to the shared printer)\(the shared printer's name)" in network path or queue name box.
- ❑ The name of the shared printer may be changed by the computer or server that is connected to the shared printer. To make sure that the name of the shared printer is correct, ask the network administrator.

- ❑ *If the printer driver is preinstalled in the client, you need to select the new printer driver or the current printer driver. When the prompt to select the printer driver appears, select the printer driver according to the message.*
  - ❑ *If the additional driver for Windows NT 4.0 is preinstalled in a Windows XP or 2000 printer server, go to the next step.*
  - ❑ *If the additional driver for Windows NT 4.0 is not installed in a Windows XP or 2000 printer server, or the printer server's operating system is Windows Me, 98, or 95, go to "Installing the printer driver from the CD-ROM" on page 203.*
5. Select whether to use the printer as the default printer or not, and then click Next.
  6. Click Finish.

---

## ***Using AppleTalk Under Windows 2000 or Windows NT 4.0***

Use the following settings if your machine is running Windows NT 4.0 or Windows 2000, and the printer is connected through an optional network card using the AppleTalk protocol:

- ❑ Use SelectType to set the Emulation Mode-AUX item to PS3. Using the default Auto setting will cause an extra, unneeded page to be printed.
- ❑ On the Device Settings sheet of the printer's Properties dialog box, make sure that SEND CTRL-D Before Each Job and SEND CTRL-D After Each Job are set to No.
- ❑ TBCP (Tagged binary communications protocol) cannot be used as the Output Protocol setting.

---

## ***Installing the printer driver from the CD-ROM***

This section describes how to install the printer driver in the clients when the network environment is as follows:

- ❑ Additional drivers are not installed in a Windows XP, 2000, or NT 4.0 printer server.
- ❑ The printer server's operating system is Windows Me, 98, or 95, and the client's operating system is Windows XP, 2000, or NT 4.0.

The screen shots on the following pages may differ from those that appear on your screen, depending on the version of the Windows operating system that you are using.


**Note:**

- ❑ *If you are installing the printer driver in a Windows XP, 2000, or NT 4.0 client, you must access Windows XP, 2000, or NT 4.0 as the Administrator.*
- ❑ *If additional drivers are installed, or if the printer server and the clients use the same operating system, you do not have to install the printer driver from the CD-ROM.*

Follow these steps to install the printer driver directly from the CD-ROM:

1. Access the shared printer and a prompt may appear. Click OK, and then follow the on-screen instructions to install the printer driver from the CD-ROM.

2. Insert the CD-ROM, and type the appropriate drive and folder names in which the printer driver for clients is located. Then click OK.

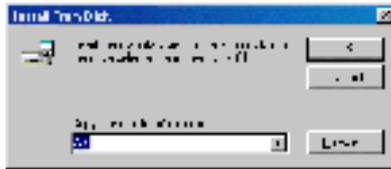

If you are installing drivers in Windows XP or 2000, “Digital Signature is not found.” may appear. Click Yes (Windows 2000) or Continue Anyway (Windows XP) and continue installing.

The folder name differs depending on the operating system being used.

Client's OS	Folder Name
Windows Me, 98, or 95	\<Language>\WIN9X
Windows 2000 or XP	\<Language>\WIN2000
Windows NT 4.0	\<Language>\WINNT40

3. Select the name of the printer, and click OK. Then follow the on-screen instructions.

## Chapter 7

---

# **Installing Options**

500-Sheet Universal Paper Cassette Unit A3 .....	206
4-Bin Mailbox .....	212
Duplex Unit.....	228
Hard Disk Drive.....	232
Formatting the Hard Disk Drive.....	242
Memory Module.....	243
Interface Cards .....	252

---

## **500-Sheet Universal Paper Cassette Unit A3**

The following table summarizes the paper types and sizes that you can use with the optional 500-Sheet Universal Paper Cassette Unit A3.

<b>Paper Type</b>	<b>Paper Size</b>	<b>Capacity</b>
Plain paper	A3, A4, B4, B5 B (Ledger) Letter (LT), Legal (LGL), Government Letter (GLT)	Up to 550 sheets (64 g/m Up to 500 sheets (75 g/m


**Note:**

*Load paper with the printable surface facing up.*

### **Handling precautions**

Always pay attention to the following handling precautions before installing the paper cassette unit.

- ❑ The printer weighs approximately 28.0 kg (61.7 lb). One person should never attempt to lift or carry it alone. Two people should carry the printer, lifting it from the positions shown below.

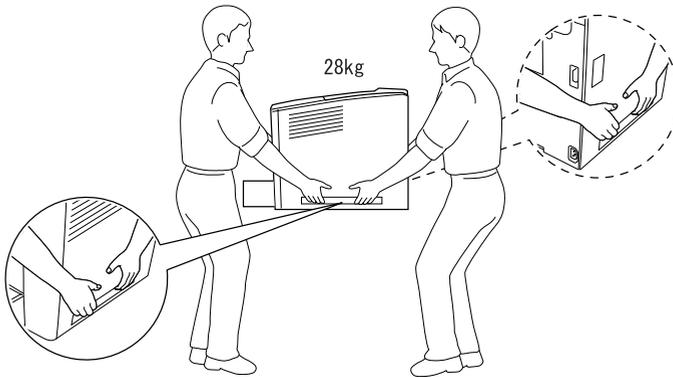

**Warning:**


*If you lift the printer incorrectly, you could drop it and cause injury.*

### ***Installing the 500-Sheet Universal Paper Cassette Unit A3***

You can install up to three optional paper cassette units onto the printer.

Follow these steps to install the optional paper cassette unit:

1. Turn the printer off and unplug the power cord and interface cables.

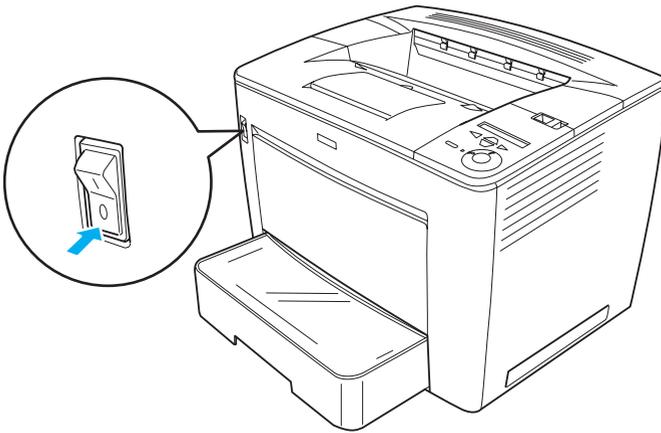

**Caution:**


*Make sure to unplug the power cord from the printer to prevent getting an electrical shock.*

2. Carefully remove the 500-Sheet Universal Paper Cassette Unit A3 from its carton.


**Note:**

- Make sure you have the four screws packed with the optional cassette unit.*
- Remove the protective materials from the unit.*
- Keep all protective materials in case you want to ship the unit in the future.*

3. Place the 500-Sheet Universal Paper Cassette Unit A3 at the intended location of the printer, and then place the printer gently onto the unit so that the pins on top of the unit fit into the holes on the bottom of the printer.

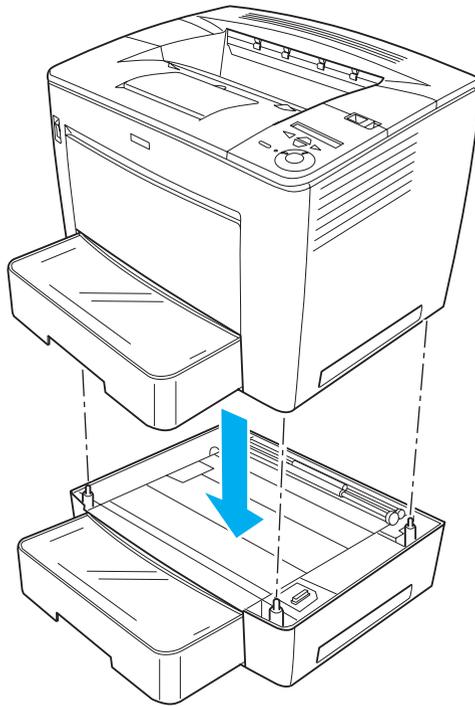


4. Fasten the back of the 500-Sheet Universal Paper Cassette Unit A3 to the printer with two of the provided screws and the two metal parts, as shown below.

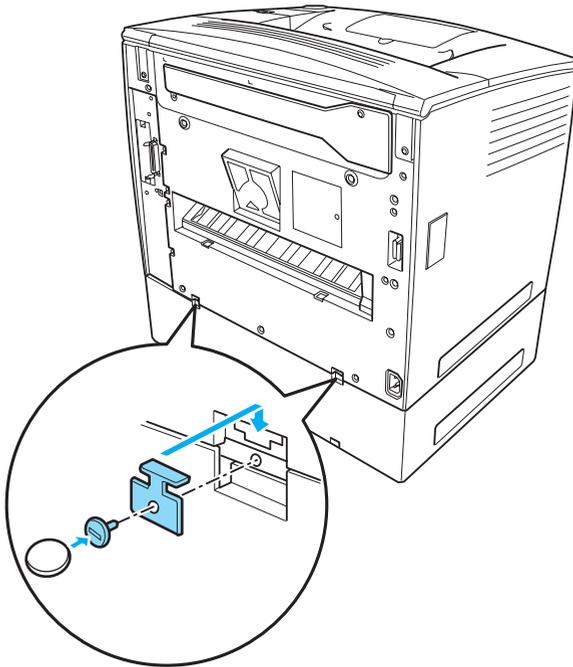

**Note:**  
*Use a coin to tighten the screws.*

5. Remove the paper cassette from the printer, and secure the front of the unit to the printer with the remaining two screws, as shown below.

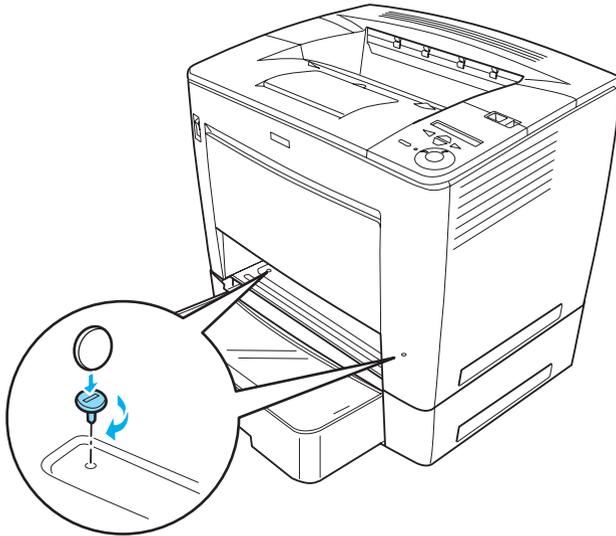

**Note:**

*If you are installing multiple units, joint all units and the printer securely in the same manner.*

6. Reinsert the paper cassette into the printer.
7. Reconnect all interface cables and the power cord.
8. Plug the printer's power cord into an electrical outlet.
9. Turn on the printer.

To confirm that the option is installed correctly, print a Status Sheet. See "Printing a Status Sheet" on page 304.

**Note:**

*If you are using Windows, and EPSON Status Monitor 3 is not installed, you have to make settings manually in the printer driver. Click the **Update the Printer Option Info Manually** button on the **Optional Settings** menu, and click **Settings**. Then select **Lower Cassette 2** from the **Optional Paper Sources** list on the **Optional Settings** dialog box and click **OK**.*

## **Removing the 500-Sheet Universal Paper Cassette Unit A3**

To remove the optional 500-Sheet Universal Paper Cassette Unit A3, perform the installation procedure in reverse.

---

## **4-Bin Mailbox**


### **Installing the 4-Bin Mailbox**

Follow these steps to install the optional 4-Bin Mailbox:


**Note:**

- If you are installing the optional Duplex Unit at the same time, install the 4-Bin Mailbox before installing the Duplex Unit.*
- If your printer already has the optional Duplex Unit installed, remove the Duplex Unit first, install the 4-Bin Mailbox, and then reinstall the Duplex Unit.*


1. Turn the printer off and unplug the power cord. Then remove all interface cables from the interface connectors.

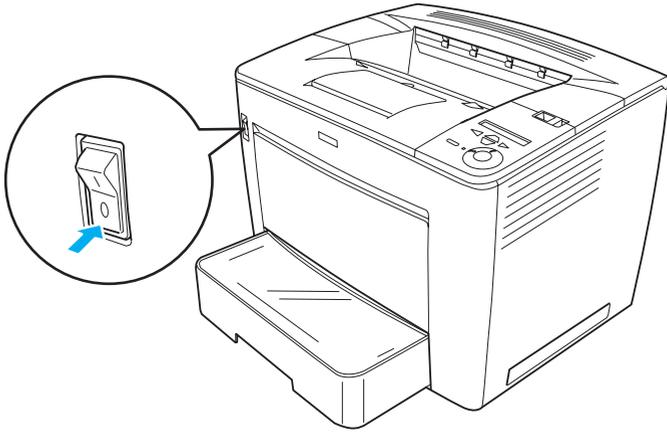

2. Slide the lock lever to the right, and then open the front cover.

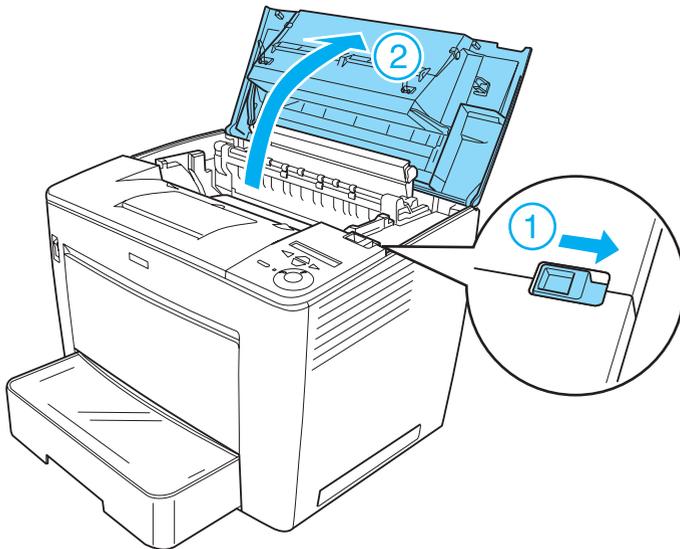


3. Remove the rear part of the front cover by pulling the four stopper outward and lifting up the rear part, as shown below.

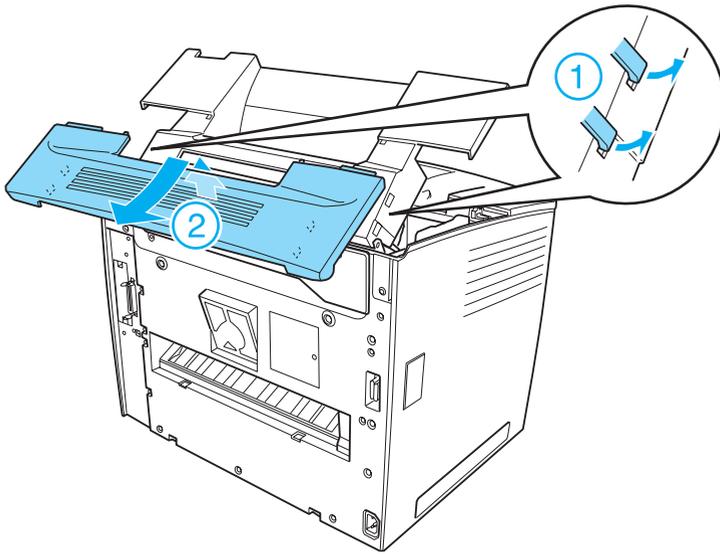

**Note:**

- ❑ *Make sure to pull the stoppers carefully. They may be damaged if you apply too much force.*
- ❑ *After removing the rear part of the front cover, keep it in a safe place.*


4. Remove the two securing parts located at the back of the front cover.

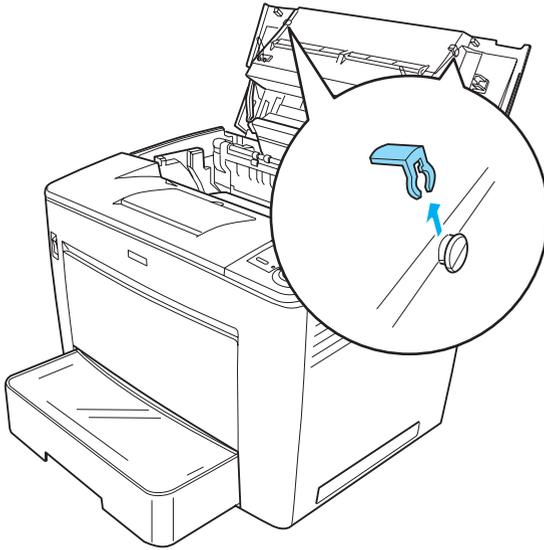


**Note:**

*After removing the two securing parts, keep them in a safe place.*


5. Close the front cover by pressing it firmly until it clicks into place.

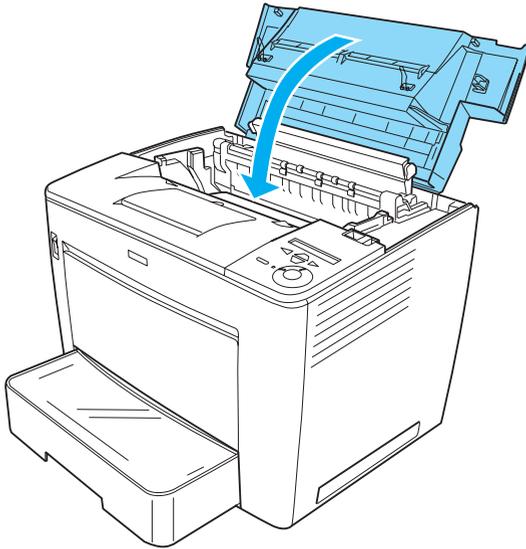

6. Install the base unit of the 4-Bin Mailbox.  
Make sure to align the metal pins located at both sides of the unit to the matching holes on the printer. Then pull the unit to the front so that it securely sits on top of the printer.

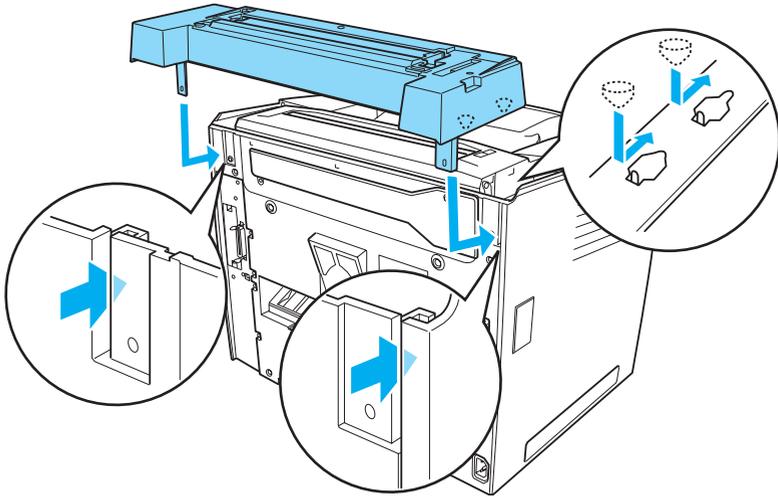


7. Secure the base unit with two screws at the back of the printer by using the wrench that comes with the unit, as shown below.

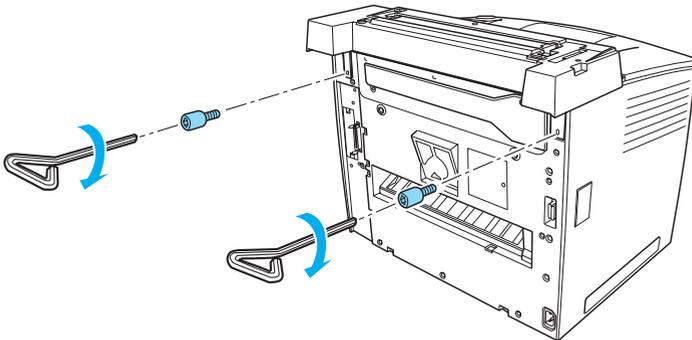


**Note:**

*Keep the wrench in a safe place after use.*

8. Install the main unit of the 4-Bin Mailbox onto the base unit. Make sure that the two pins at the bottom of the main unit go into the holes on the base unit and the unit clicks into place.

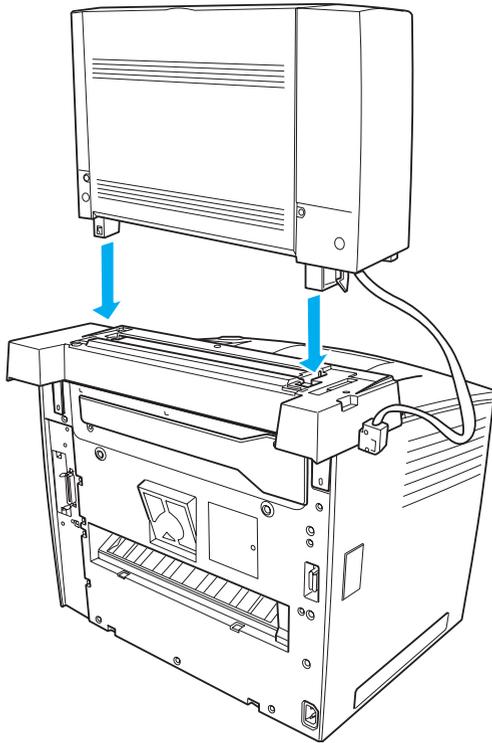


9. Remove the connector cover located on the left side of the printer, as shown below.

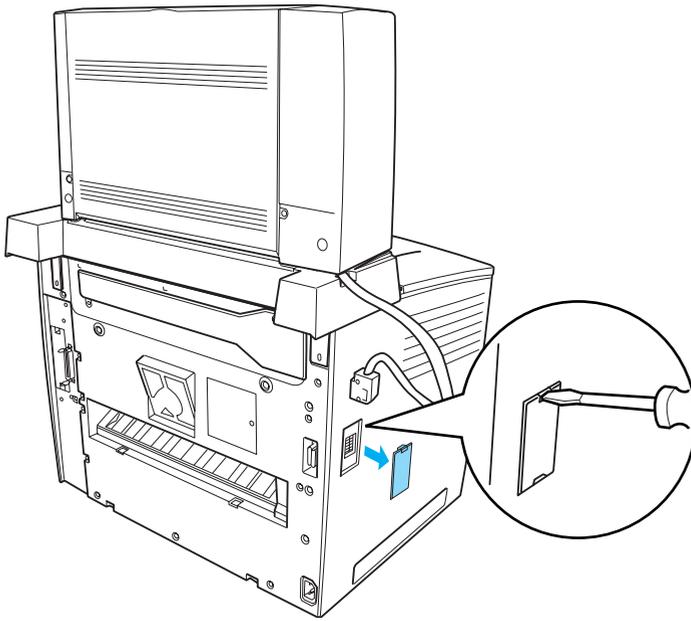


**Note:**

*After removing the connector cover, keep it in a safe place.*

10. Plug in the main unit cable into the connector located on the left side of the printer.  
Make sure to push in the plug until you hear a clicking sound.

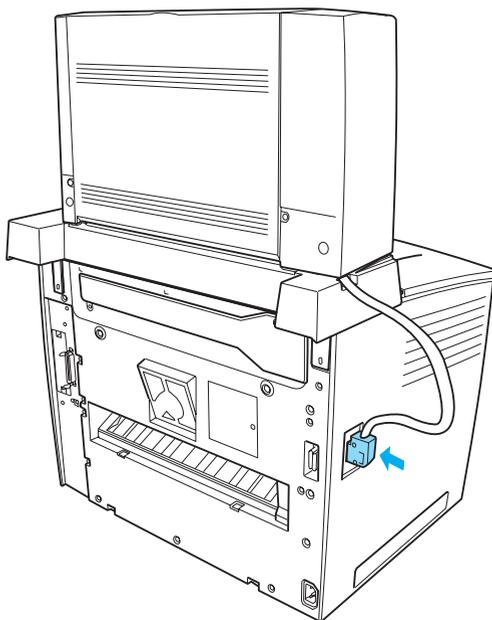

11. Attach four output trays to the main unit by inserting the pins on both sides of the trays into the grooves on the main unit.

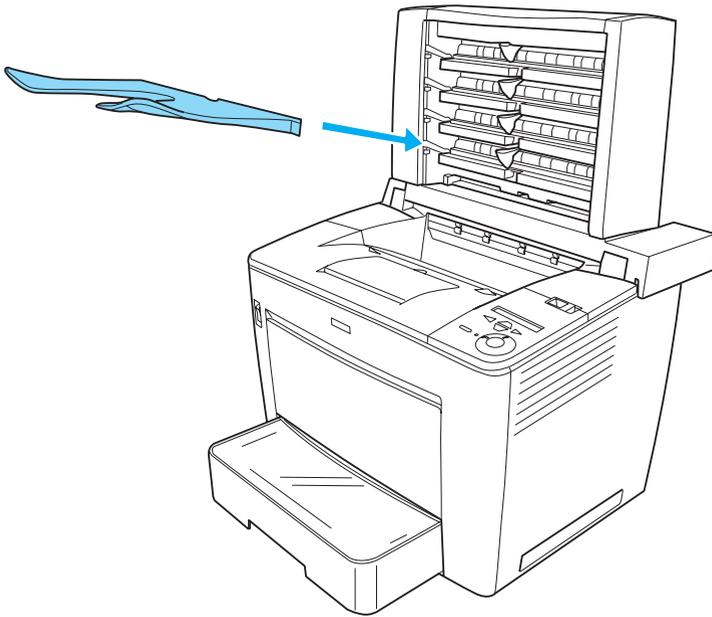

**Note:**

*Attach the bottom tray first. Then proceed to attach the one above it, until you reach the top tray.*

12. Reconnect all interface cables and the power cord.
13. Plug the printer's power cord into an electrical outlet.
14. Turn on the printer.

To confirm that the 4-Bin Mailbox is installed correctly, use the printer's control panel menus to print a status sheet. See "Printing a Status Sheet" on page 304 for instructions. If the 4-Bin Mailbox is not listed on the status sheet, try reinstalling the device. Make sure that the connector on the 4-Bin Mailbox is securely connected to the connector on the printer.

**Note:**


*If you are using Windows, and EPSON Status Monitor 3 is not installed, you have to make settings manually in the printer driver. Click the **Update the Printer Option Info Manually** button on the **Optional Settings** menu, and then click **Settings**. Then select **4-Bin Mailbox** in the **Optional Output Trays** list in the **Optional Settings** dialog box and click **OK**.*

After completing the installation procedure, you need to make the setting for the output tray in the printer driver in order to use the 4-Bin Mailbox. See "Using the 4-Bin Mailbox" on page 63 for instructions.




**Caution:**


- ❑ *Make sure to move the main unit of the 4-Bin Mailbox toward the rear of the printer before opening the front cover. And make sure to pull the unit back to the original position after closing the front cover, so that the unit sits on the rear half of the printer.*

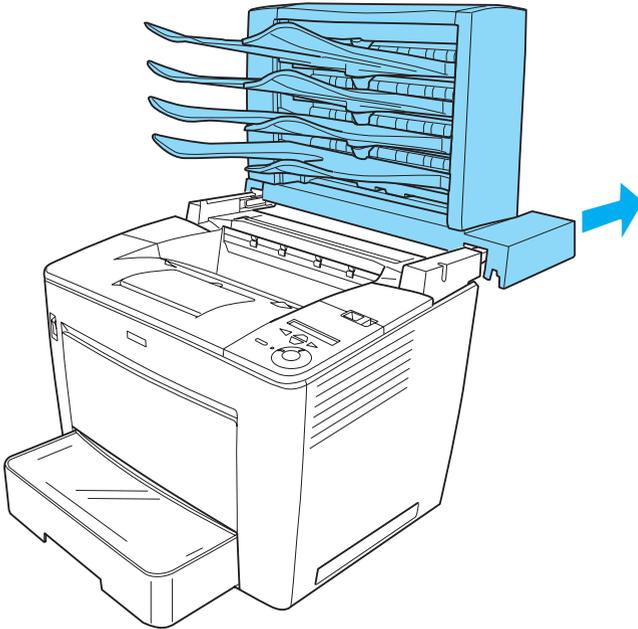

- ❑ *Make sure to pull out the stopper after opening the front cover to secure it, as shown below.*

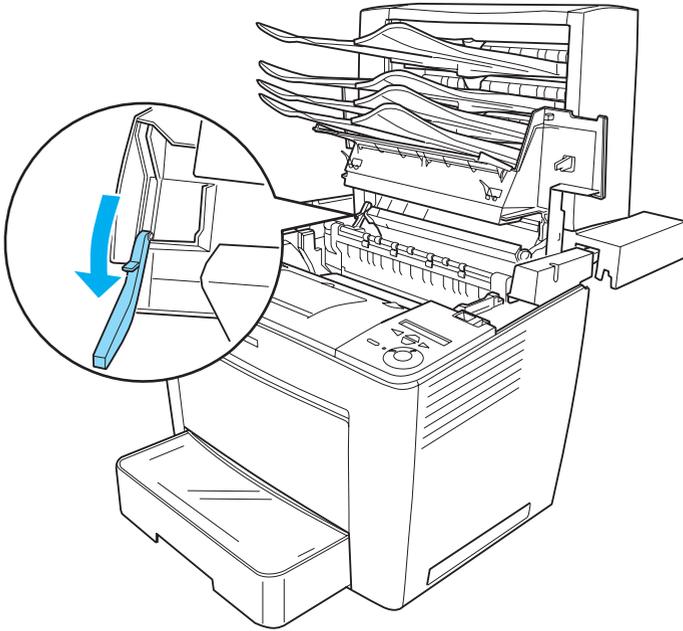

- ❑ *Make sure to push the stopper back to the original position before closing the front cover.*

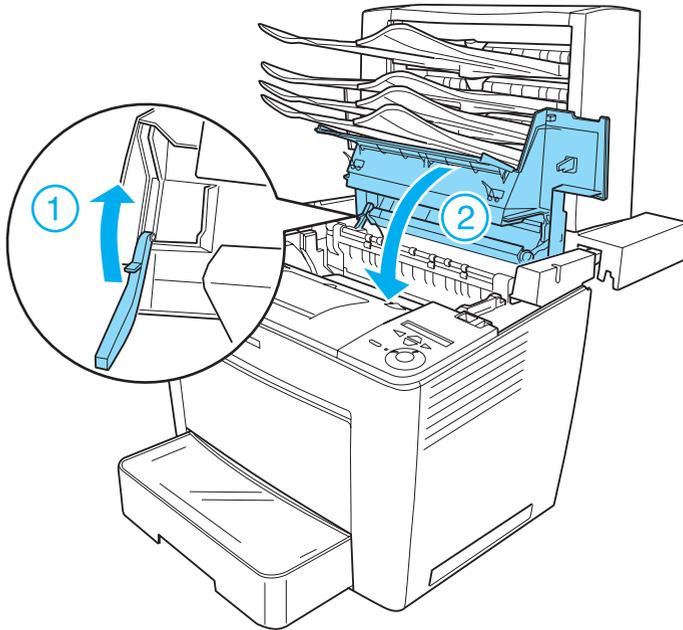


- ❑ *Make sure to unplug the connecting cable and remove the main unit of the 4-Bin Mailbox from the printer when you move the printer, regardless of the distance to the new location.*

### **Removing the 4-Bin Mailbox**


Follow these steps to remove the 4-Bin Mailbox from the printer:

1. Turn the printer off and unplug the power cord. Then remove all interface cables from the interface connectors.
2. Remove all output trays from the main unit.

3. Unplug the connecting cable from the printer.

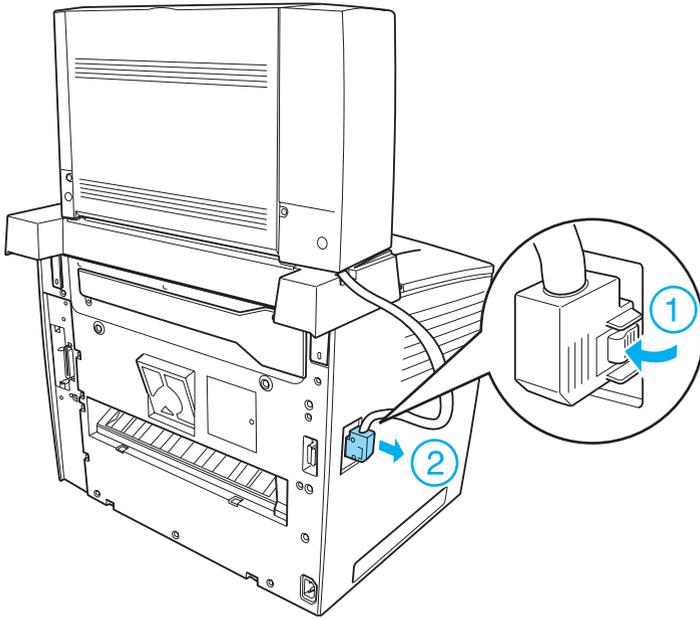

4. Push the buttons located at the bottom of both sides of the main unit, as shown below. Then lift the unit up to remove it from the printer.

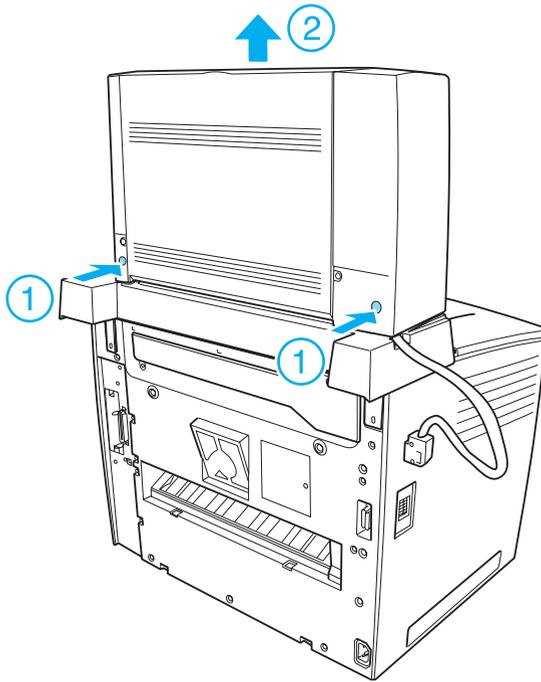

5. Remove the two screws that secure the base unit, and remove the unit from the printer.
6. Push the stopper of the front cover back to its original position.
7. Reattach the two securing parts, the rear part of the front cover, and the connector cover.
8. Reconnect all interface cables and the power cord.
9. Plug the printer's power cord into an electrical outlet.

---

## Duplex Unit

The following table summarizes the paper types and sizes that you can use with the optional Duplex Unit.

Paper Type	Paper Size
Plain paper (60 to 90 g/m )	A3, A4, A5, B4, B5, F4, B (Ledger) Letter (LT), Half-Letter (HLT), Legal (LGL), Executive (EXE), Government Letter (GLT), Government Legal (GLG)


### Installing the Duplex Unit

Follow these steps to install the Duplex Unit:


**Note:**

*If you are installing the optional 4-Bin Mailbox at the same time, install the 4-Bin Mailbox before installing the Duplex Unit.*


1. Turn the printer off and unplug the power cord. Then remove all interface cables from the interface connectors.

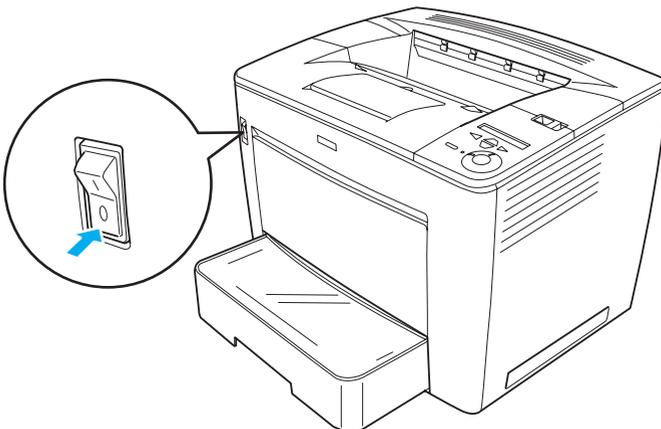

2. Remove the air filter attached on the rear side of the printer, as shown below.

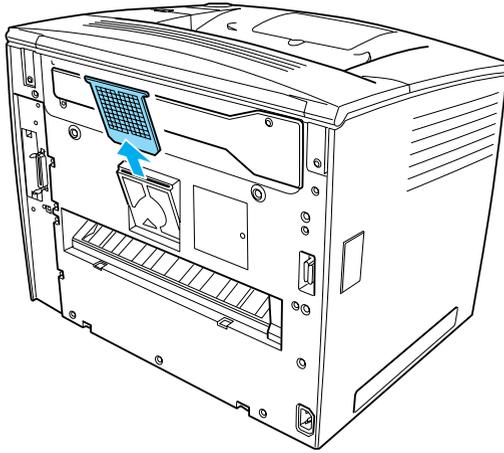

3. Remove the gear cover of the Duplex Unit, as shown below. Use the wrench that comes with the unit to remove the screw.

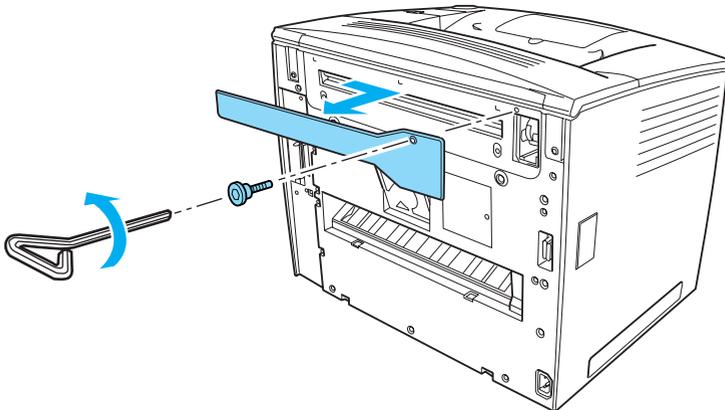


7

**Note:**

*After removing the gear cover, keep the cover and the screw in a safe place.*


4. Install the Duplex Unit onto the printer.  
Make sure that the two pins at the bottom of the unit are hooked at the lower edge of the opening at the back of the printer, as shown below.

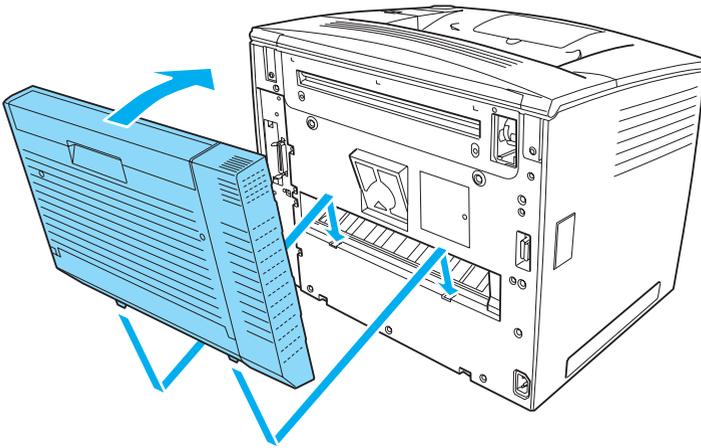

**Caution:**

*Hold the upper part of the Duplex Unit with one hand until it is fastened to the printer in the next step. Otherwise, the unit may fall off and be damaged.*

5. Fasten the Duplex Unit to the printer securely with the two screws.  
Use the wrench that comes with the unit.

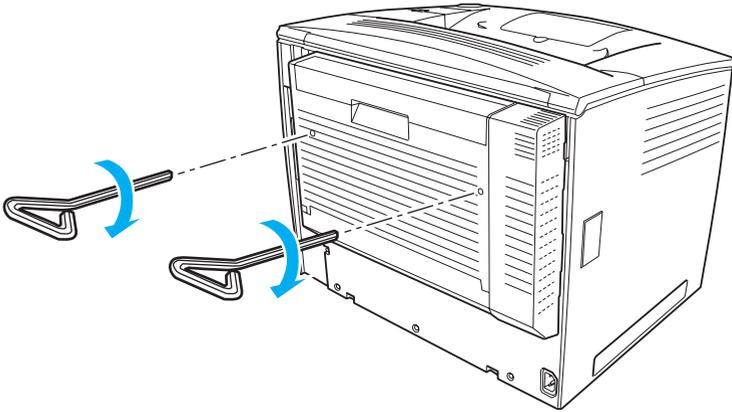

**Note:**

*Keep the wrench in a safe place after use.*

6. Reconnect all interface cables and the power cord.
7. Plug the printer's power cord into an electrical outlet.
8. Turn on the printer.

To confirm that the Duplex Unit is installed correctly, use the printer's control panel menus to print a status sheet. See "Printing a Status Sheet" on page 304 for instructions. If the Duplex Unit is not listed on the status sheet, try reinstalling it. Make sure that the connector on the Duplex Unit is securely connected to the socket on the circuit board.

**Note:**

*If you are using Windows, and EPSON Status Monitor 3 is not installed, you have to make settings manually in the printer driver. Click the **Update the Printer Option Info Manually** button on the **Optional Settings** menu, and then click **Settings**. Then select the **Duplex Unit** check box on the **Optional Settings** dialog box and click **OK**.*

## **Removing the Duplex Unit**

To remove the Duplex Unit, perform the installation procedure in reverse.

---

## **Hard Disk Drive**

The optional Hard Disk Drive (C12C824061) allows you to expand the printer's input buffer when the Ethernet interface is used, and gives you additional memory for graphics, form data, and faster multi-page, multi-output printing.

## **Installing the Hard Disk Drive**

Follow these steps to install the Hard Disk Drive:



**Caution:**

*Before you install the Hard Disk Drive, be sure to discharge any static electricity by touching a grounded piece of metal. Otherwise, you may damage static-sensitive components.*




**Warning:**

*Be careful when working inside the printer as some components are sharp and may cause injury.*


**Note:**

- If you are installing the optional 4-Bin Mailbox at the same time, install the Hard Disk Drive before installing the 4-Bin Mailbox.*


- ❑ *If your printer already has the optional 4-Bin Mailbox installed, remove the 4-Bin Mailbox first, install the Hard Disk Unit, and then reinstall the 4-Bin Mailbox.*
1. Turn the printer off and unplug the power cord.
  2. Remove all interface cables from the interface connectors.
  3. Slide the lock lever to the right, and then open the front cover.

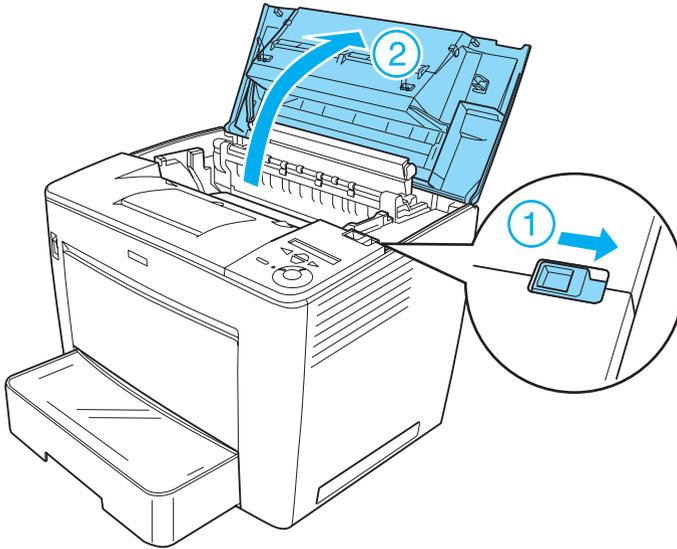


4. Loosen the two screws located on the top-right edge of the printer.

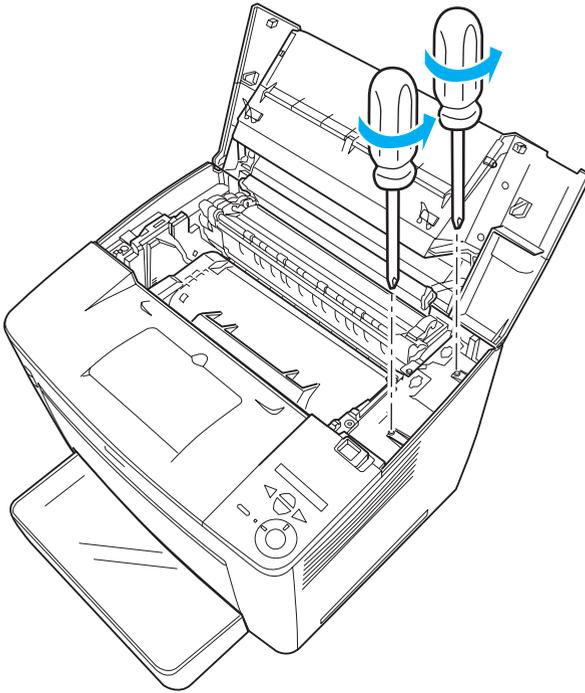

5. Remove the two screws located near the bottom-right edge of the printer.

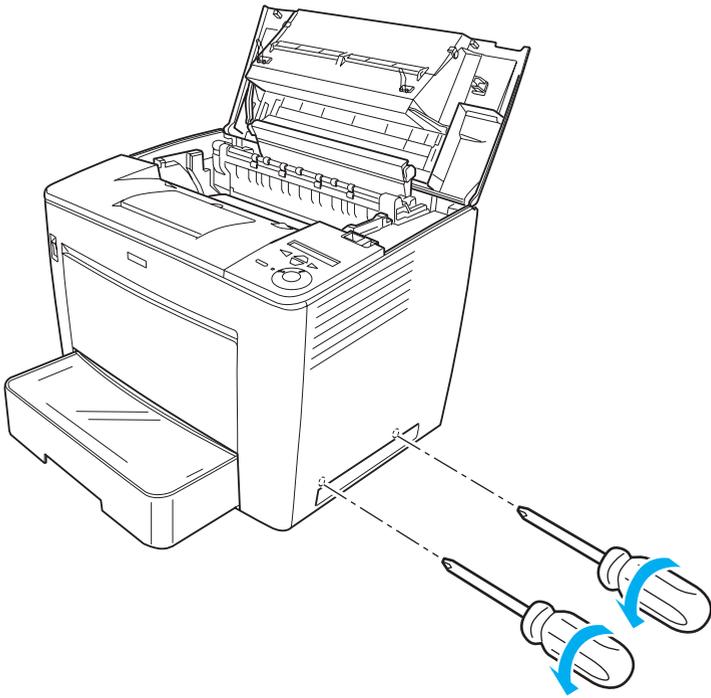


6. Remove the right cover.

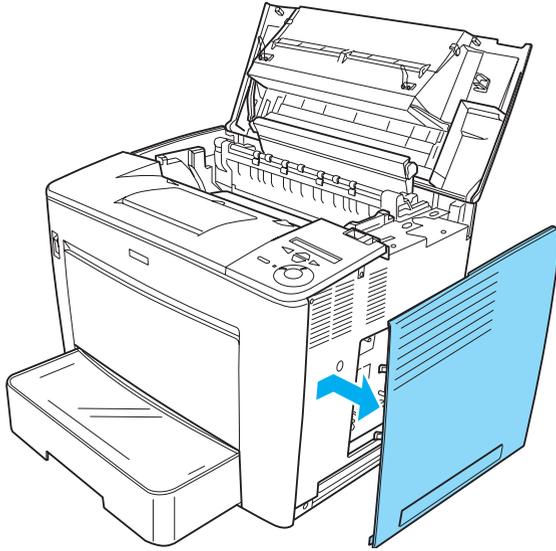


**Warning:**

*Removing other screws and covers will expose high voltage areas.*

7. Identify the Hard Disk Drive connector on the circuit board. Its position is shown below.

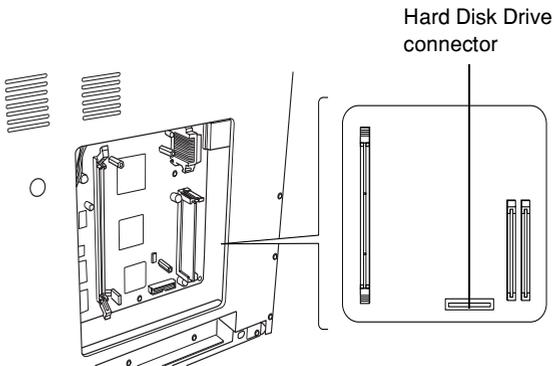


8. Connect one end of the cable that comes with the Hard Disk Drive to the connector on the Hard Disk Drive.

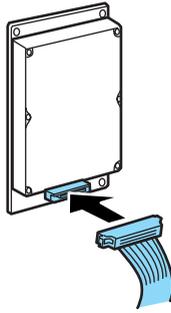


**Note:**

*There are two cables included with the Hard Disk Drive. Use the shorter cable.*

9. Connect the other end of the cable to the Hard Disk Drive connector on the circuit board.

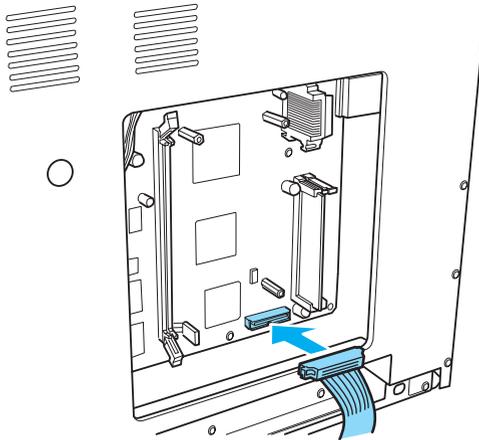


10. Secure the drive with the screws that come with it.

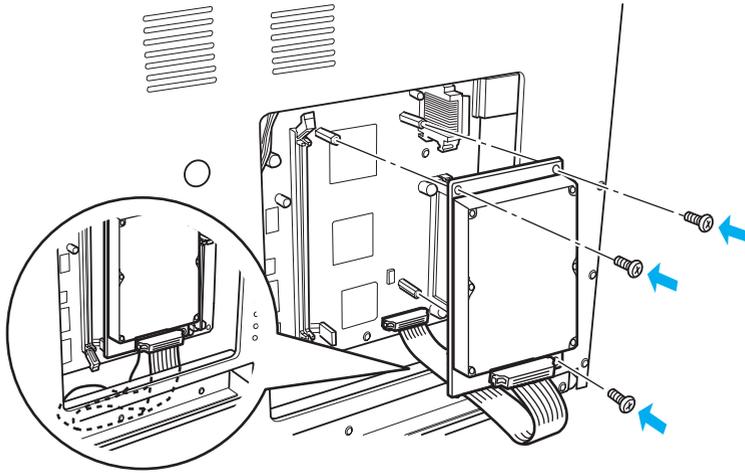

**Caution:**


- ❑ Be careful not to damage the cable when tightening the screws.
  
- ❑ Do not remove any modules from the circuit board. Otherwise, the printer will not work.

11. Replace the right cover, as shown below.  
Insert the two pins located at the bottom edge of the cover into the holes on the right side of the printer, and then insert the three protruding parts on the left edge of the cover into the matching holes on the printer. Make sure that the upper edge of the cover fits the upper part of the printer.

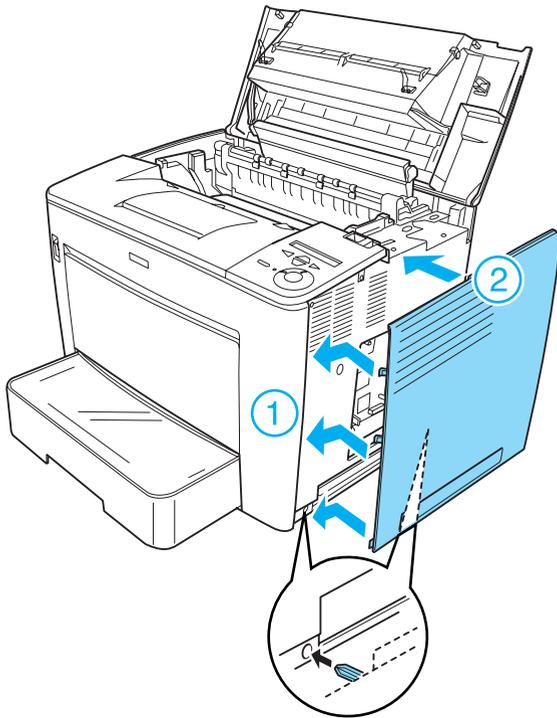


12. Fasten the right cover with the screws.


At the bottom of the right cover

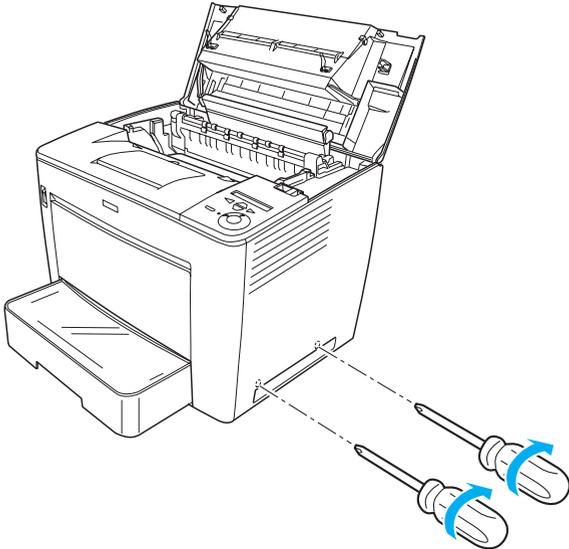

At the top of the right cover

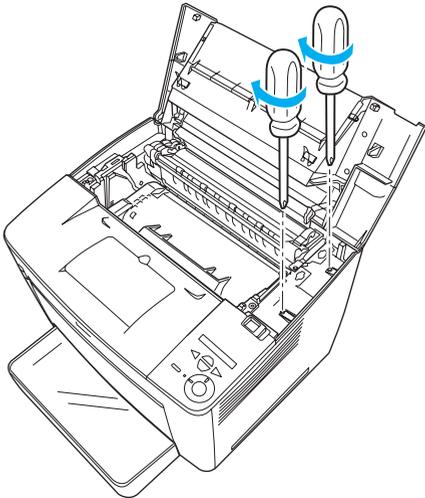

13. Close the front cover by pressing it firmly until it clicks into place.

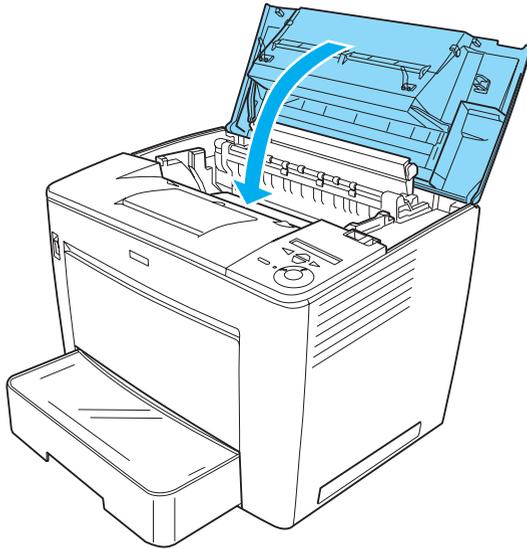

14. Reconnect all interface cables and the power cord.
15. Plug the printer's power cord into an electrical outlet.
16. Turn on the printer.

To confirm that the Hard Disk Drive is installed correctly, use the printer's control panel menus to print a status sheet. See "Printing a Status Sheet" on page 304 for instructions. If the drive is not listed on the status sheet, try reinstalling the drive. Make sure that the connector on the Hard Disk Drive is securely connected to the socket on the circuit board.

**Note:**

*If you are using Windows, and EPSON Status Monitor 3 is not installed, you have to make settings manually in the printer driver. Click the **Update the Printer Option Info Manually** button on the **Optional Settings** menu, and then click **Settings**. Then select the **Optional HDD Unit** check box on the **Optional Settings** dialog box and click **OK**.*

## **Removing the Hard Disk Drive**

To remove the Hard Disk Drive, perform the installation procedure in reverse.

## **Formatting the Hard Disk Drive**

Follow these steps to format the Hard Disk Drive:

1. Make sure the printer is turned off and all interface cables are disconnected.
2. Turn on the printer while pressing the  Down button on the control panel.
3. When the message `Support Mode` appears on the LCD panel, press the  Down or  Up button until `HDD Format` appears. Then press the  Enter button. The printer starts formatting the Hard Disk Drive.

**Note:**

- After formatting the Hard Disk Drive, the printer will automatically reboot.*
- All fonts stored in the Hard Disk Drive, including those installed in the PostScript 3 mode, will be erased.*
- To erase only the fonts installed in the PostScript 3 mode, follow steps 1 and 2 above, and select `PSS HDD Init` instead of `HDD Format` in step 3.*

- ❑ *After installing a Hard Disk Drive removed from other products, format it using this function.*

---

## Memory Module

By installing a Dual In-line Memory Module (DIMM), you can increase printer memory up to 544 MB. You may want to add additional memory if you are having difficulty printing complex graphics.

**Note:**

*The maximum expandable memory is 544 MB.*

### Installing a memory module

Follow these steps to install an optional memory module:



**Warning:**

*Be careful when working inside the printer as some components are sharp and may cause injury.*




**Caution:**

*Before you install a memory module, be sure to discharge any static electricity by touching a grounded piece of metal. Otherwise, you may damage static-sensitive components.*


**Note:**

- ❑ *If you are installing the optional 4-Bin Mailbox at the same time, install the memory module before installing the 4-Bin Mailbox.*
  - ❑ *If your printer already has the optional 4-Bin Mailbox installed, remove the 4-Bin Mailbox first, install the memory module, and then reinstall the 4-Bin Mailbox.*
1. Turn the printer off and unplug the power cord and interface cables.


- Slide the lock lever to the right, and then open the front cover.

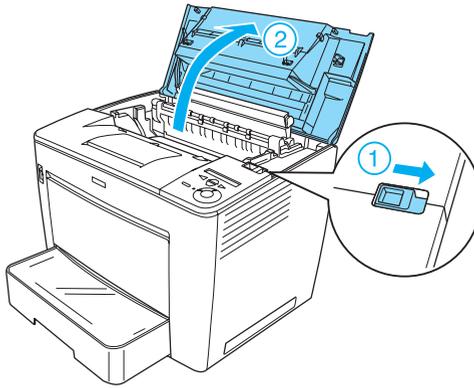


- Loosen the two screws located on the top-right edge of the printer.

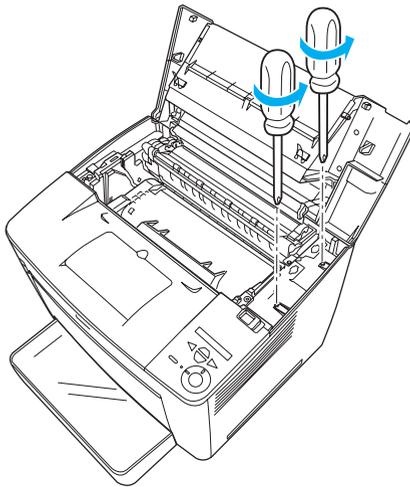

4. Remove the two screws located near the bottom-right edge of the printer.

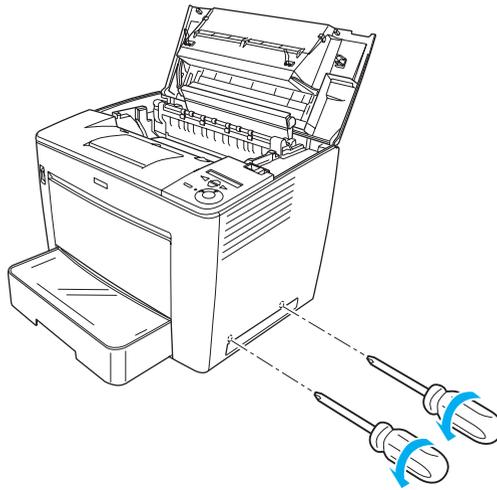


5. Remove the right cover.

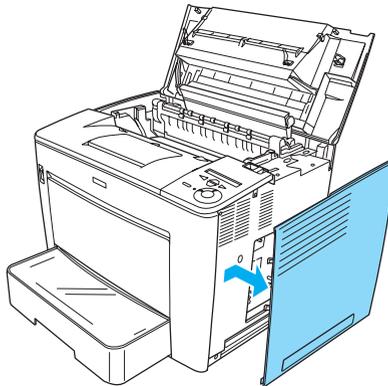


**Warning:**

Removing other screws and covers will expose high voltage areas.


6. Identify the memory slot. Its position is shown below.

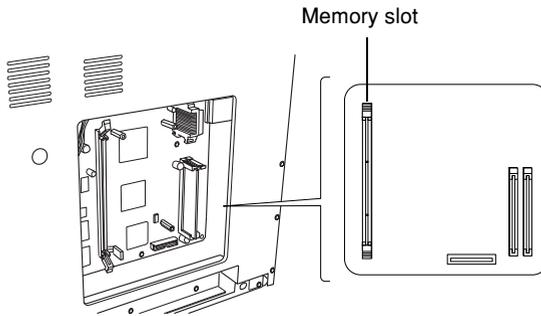


7. Pull the clips on each side of the memory slot outward.

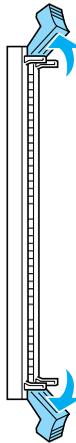


- Align the indentations on the memory module with the protrusions on the memory slot, as shown below.

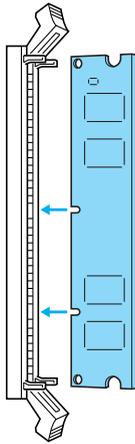

- Insert one corner of the memory module into the memory slot and push in until the clip comes up.

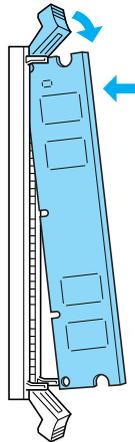


10. Insert the other corner of the memory module into the slot, and pull up the clip to secure the memory module.

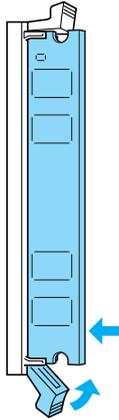

**Caution:**


- ❑ Do not force the DIMM into the slot.
- ❑ Do not remove any modules from the circuit board. Otherwise, the printer will not work.

11. Replace the right cover, as shown below.  
Insert the two pins located at the bottom edge of the cover into the holes on the right side of the printer, and then insert the three protruding parts on the left edge of the cover into the matching holes on the printer. Make sure that the upper edge of the cover fits the upper part of the printer.

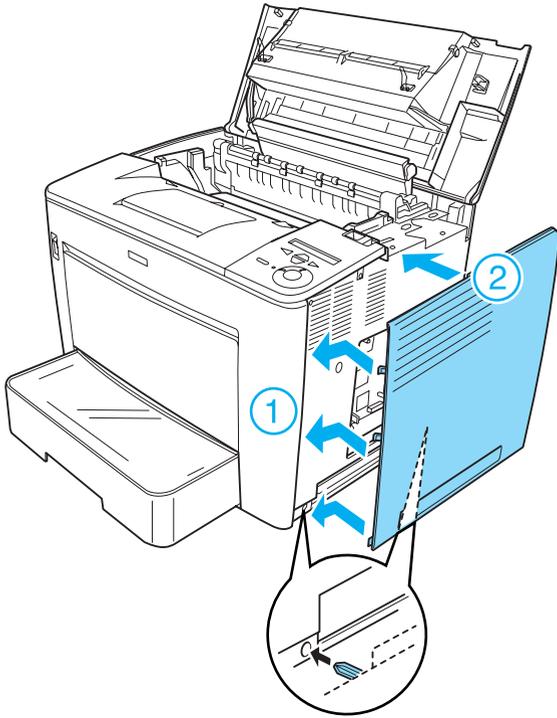


12. Fasten the right cover with the screws.


At the bottom of the right cover

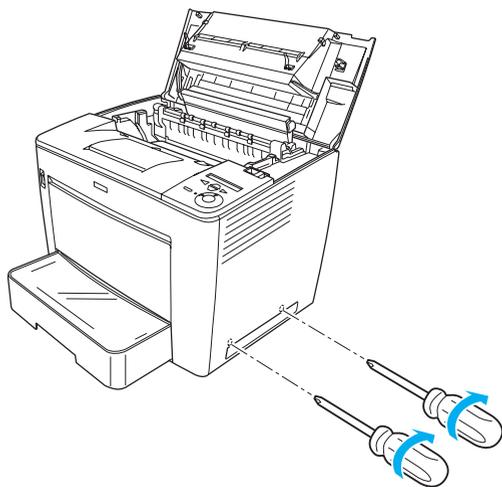

At the top of the right cover

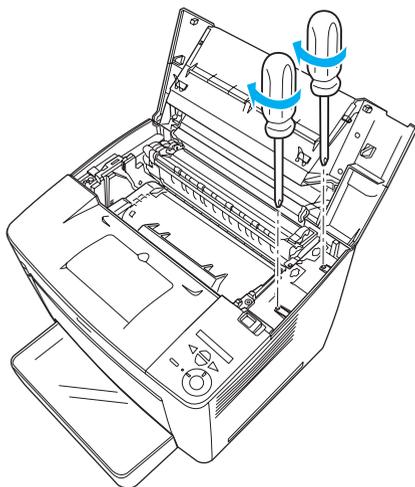

13. Close the front cover by pressing it firmly until it clicks into place.

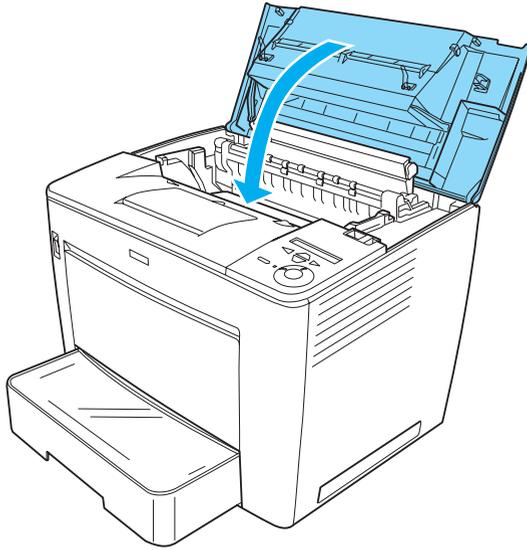

14. Reconnect all the interface cables and the power cord.
15. Plug the printer's power cord into an electrical outlet.
16. Turn on the printer.

To confirm that the memory module is installed correctly, print a status sheet. See "Printing a Status Sheet" on page 304 for instructions. If the total amount of memory listed does not include the size of the optional memory module, try reinstalling the module. Make sure that the module is securely seated into the memory slot on the circuit board.

### ***Removing a memory module***

To remove a memory module, perform the installation procedure in reverse.

---

## Interface Cards

Your printer comes with a Type B interface slot. Various optional interface cards are available to expand your printer's interface options.

### Installing an interface card

Follow these steps to install an interface card:




**Caution:**


*Before you install the interface card, be sure to discharge any static electricity by touching a grounded piece of metal.*

*Otherwise, you may damage static-sensitive components.*


1. Make sure the printer is turned off and the power cord and interface cables are unplugged.

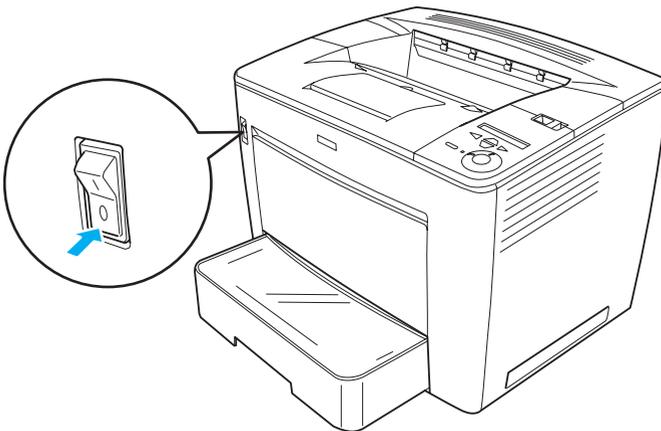


2. Remove the screws and the interface slot cover.

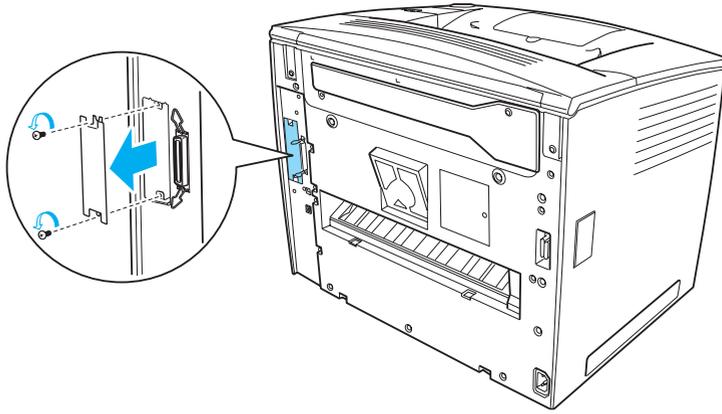

3. Insert the interface card firmly.

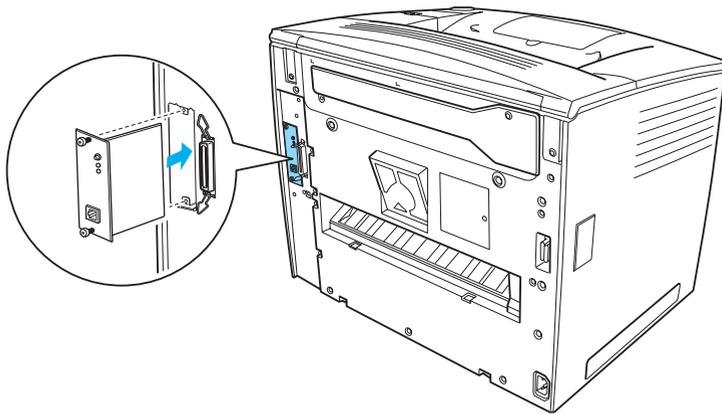

4. Secure the interface card with its screws.

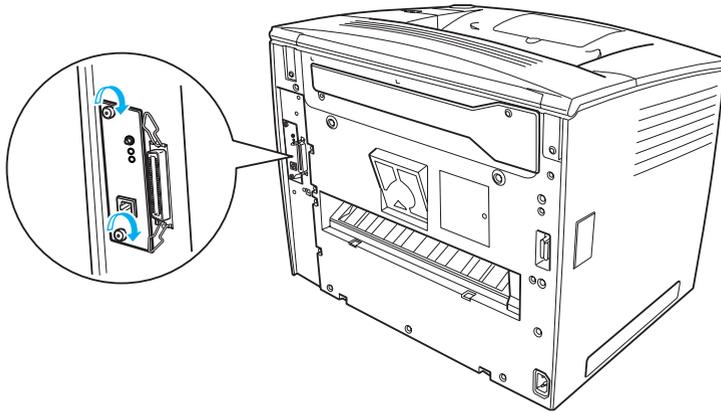

To confirm that the option is installed correctly, print a status sheet. See “Printing a Status Sheet” on page 304 for instructions.

### ***Removing an interface card***

To remove an interface card, perform the installation procedure in reverse.

## Chapter 8

---

# **Replacing the Consumable Product**

Precautions During Replacement .....	256
Replacement Messages .....	256
Replacing the Imaging Cartridge.....	257
Cleaning the Printer.....	269
Transporting the Printer .....	269

---

## Precautions During Replacement

When replacing a consumable product, please be sure to:

- ❑ Provide enough space for the replacement procedure. You will have to open some parts (such as the printer cover) of the printer when you are replacing consumables.
- ❑ Do not install a used consumable product into the printer.



### **Warning:**

- ❑ *Be careful not to touch the fuser, which is marked **CAUTION Hot Surface Avoid Contact**, or the surrounding areas. If the printer has been in use, the fuser and surrounding areas may be very hot.*
- ❑ *Do not dispose of a used consumable product in fire, as it may explode and cause injury. Dispose of it according to local regulations.*

---

## Replacement Messages

When you see the following message on the LCD panel or an EPSON Status Monitor 3 window, prepare a new imaging cartridge. You can continue to print for a short time after the message appears, but EPSON recommends early replacement to maintain print quality and extend the life of your printer.

LCD Panel Message	Description
Toner Low	The amount of toner remaining in the imaging cartridge is low.

**Note:**

- ❑ *Printing is still possible for a while after the Toner Low message appears. However, replace the imaging cartridge at once if the print quality deteriorates.*
- ❑ *To clear the warning, select Clear Warning from the control panel's Reset Menu.*

If the printer runs out of toner, the printer displays the following message on the LCD panel or an EPSON Status Monitor 3 window. Although printing is still possible, it is recommended that you replace the imaging cartridge at once.

LCD Panel Message	Description
Replace Toner	The imaging cartridge is empty.

---

## ***Replacing the Imaging Cartridge***

### ***Handling precautions***

Always observe the following handling precautions when replacing the imaging cartridge:

- ❑ When handling the imaging cartridge, always place it on a clean smooth surface.
- ❑ Do not install a used imaging cartridge into the printer.
- ❑ If you move an imaging cartridge from a cool to a warm environment, wait for at least one hour before installing it to prevent damage from condensation.




**Warning:**

- ❑ *Do not touch the toner. Keep the toner away from your eyes. If toner gets on your skin or clothes, wash it off with soap and water immediately.*
  
- ❑ *Keep the imaging cartridge out of the reach of children.*
  
- ❑ *Do not dispose of a used imaging cartridge in fire, as it may explode and cause injury. Dispose of it according to local regulations.*
  
- ❑ *If toner is spilled, use a broom and dustpan or a damp cloth with soap and water to clean it up. Because the fine particles can cause a fire or explosion if they come into contact with a spark, do not use a vacuum cleaner.*


## **Replacing the imaging cartridge**

Follow these steps to replace the imaging cartridge:

1. Slide the lock lever to the right, and then open the front cover.

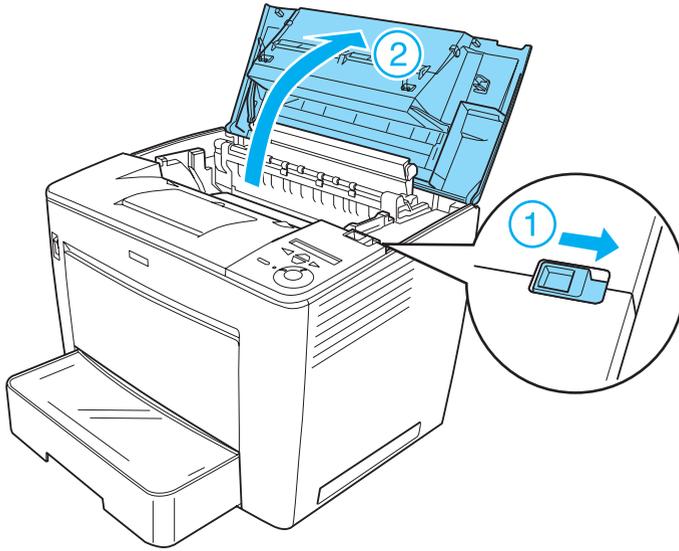


2. Hold the handle of the imaging cartridge, and lift it out of the printer.

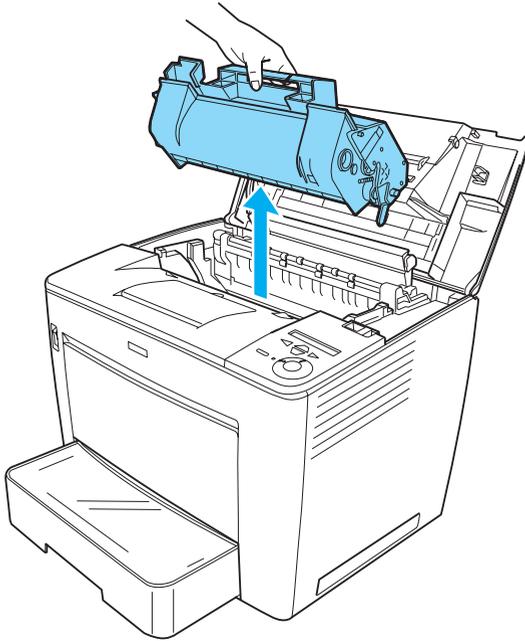

**Note:**


- ❑ Be careful not to spill toner remaining in the cartridge.
- ❑ Put the used cartridge on a flat surface with the toner spout facing up to avoid spilling the toner.
- ❑ Dispose of the used imaging cartridge by putting it into its disposal bag.

3. Take the new imaging cartridge out of its package, and remove the protective tape. Then gently shake it from side to side and front to back to distribute the toner evenly.

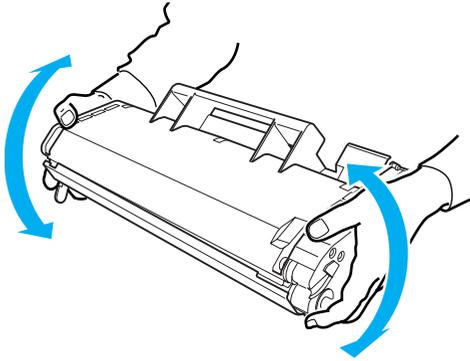


**Caution:**

- ❑ Never open the protective cover of the imaging cartridge and touch the photosensitive print drum (green color) inside the cover. Otherwise, print quality may decline.
- ❑ Do not hold the imaging cartridge by the protective cover while handling the cartridge.

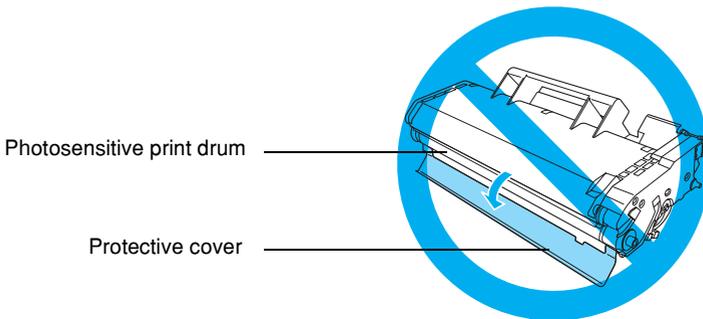


- Carefully insert the imaging cartridge into the printer, making sure that the pins on both sides of the cartridge are aligned with the grooves inside the printer. Make sure to push the cartridge into the printer until it is firmly seated in its proper position.

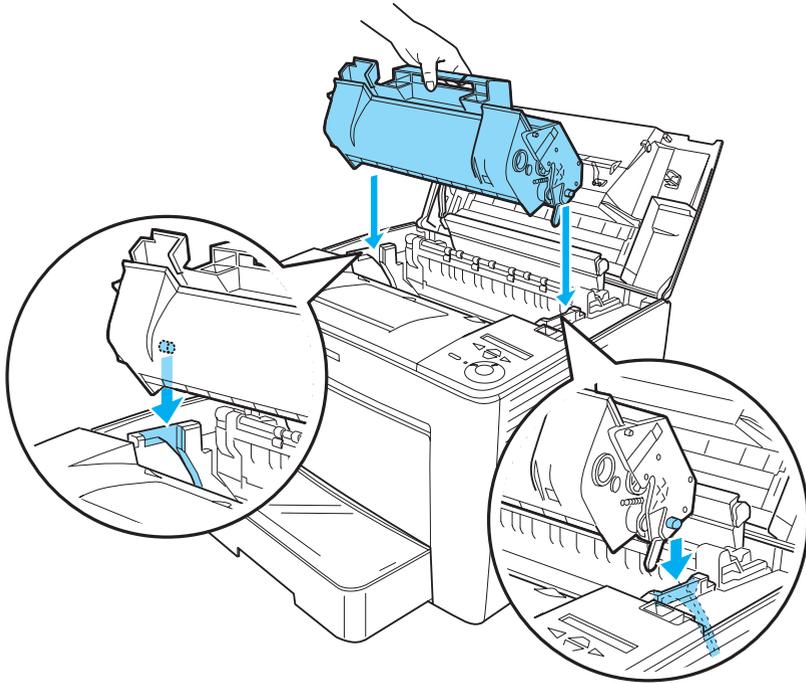

**Caution:**

*Do not touch the roller or other parts inside the printer. Doing so may cause the printer to malfunction.*


5. Close the front cover by pressing it firmly until it clicks into place.

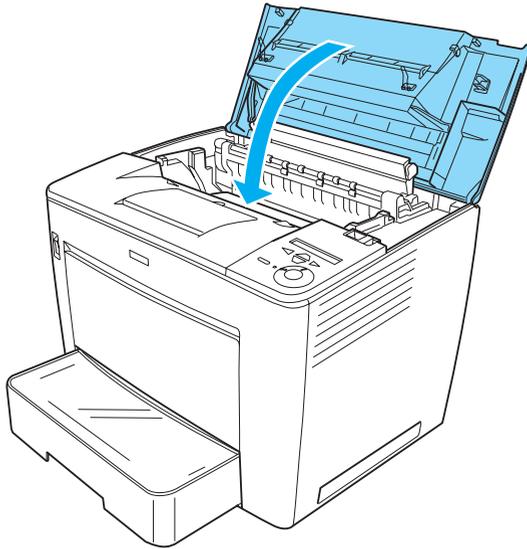


### ***Replacing the imaging cartridge when the optional 4-Bin Mailbox is installed***

Follow these steps to replace the imaging cartridge when the optional 4-Bin Mailbox is installed:


1. Move the main unit of the 4-Bin Mailbox toward the rear of the printer until it stops.

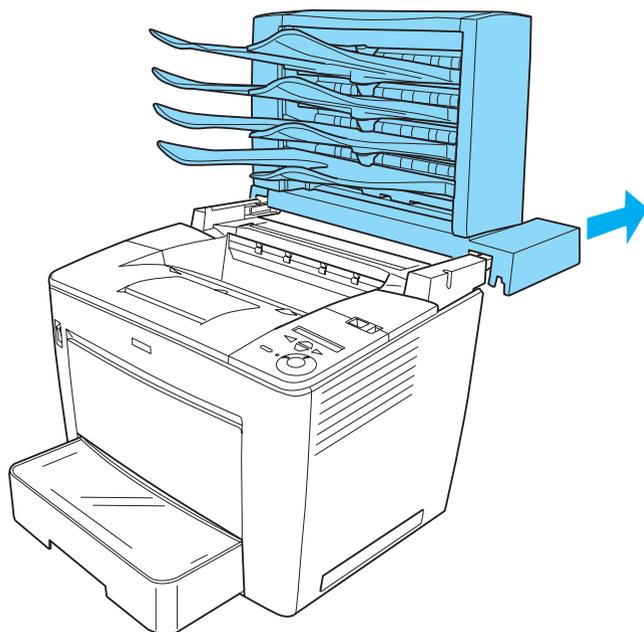

- Slide the lock lever to the right, and then open the front cover.

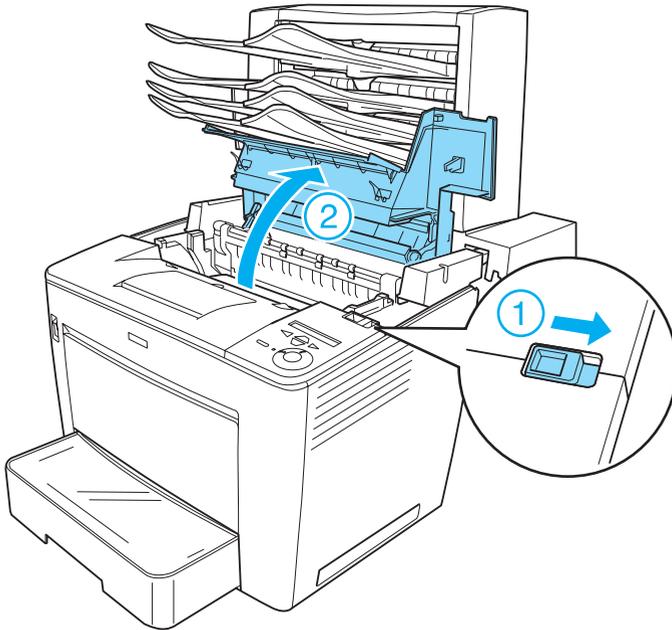


3. Pull out the stopper of the front cover to secure the cover.

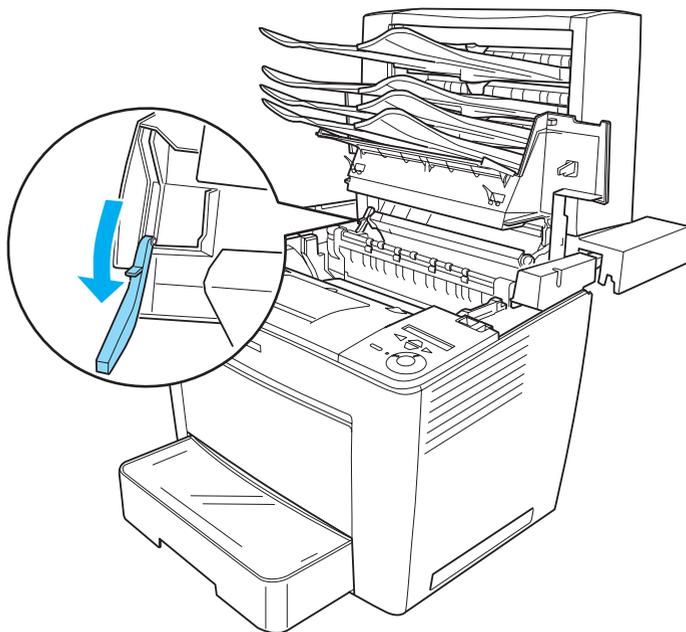


4. Remove the used imaging cartridge, and install a new cartridge by following the instructions described in “Replacing the Imaging Cartridge” on page 257.

5. Push the stopper back to its original position, and then close the front cover by pressing it firmly until it clicks into place.

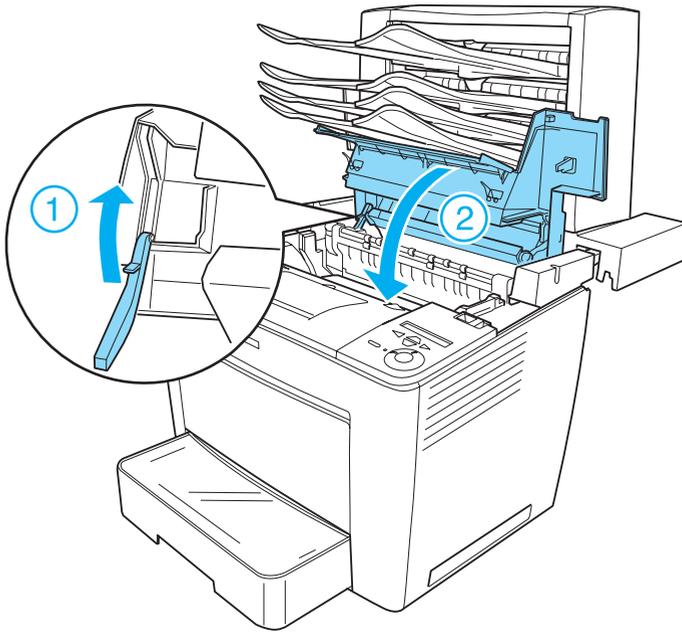


6. Pull the main unit of the 4-Bin Mailbox back to its original position, so that it sits on the rear part of the printer.

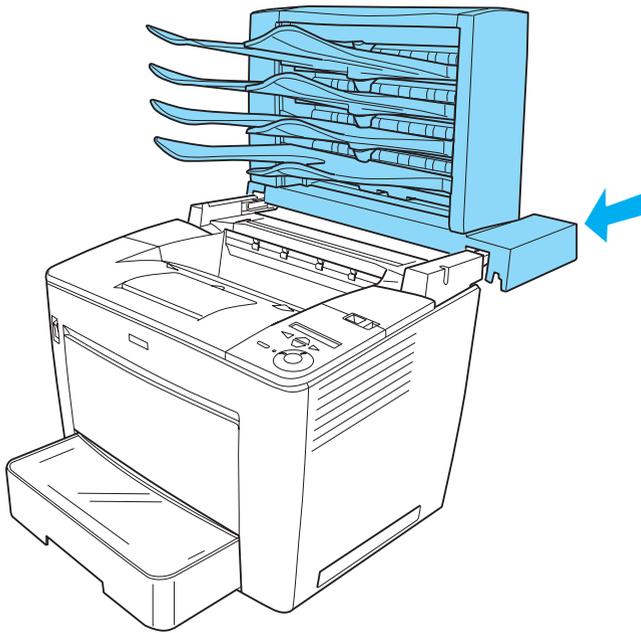

---

### **Cleaning the Printer**

The printer needs only minimal cleaning. If the printer's outer case is dirty or dusty, turn off the printer and clean it with a soft, clean cloth moistened with a mild detergent.

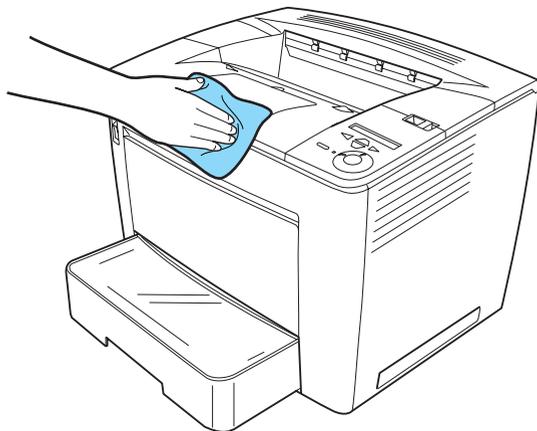

**Caution:**

*Never use alcohol or paint thinner to clean the printer cover; these chemicals can damage the components and the case. Be careful not to get water onto the printer mechanism or any electrical components.*

---

## ***Transporting the Printer***

### ***For long distances***

If you need to transport your printer for long distances, carefully repack it using the original box and packing materials.

Follow these steps to repack your printer:

1. Turn off the printer.
2. Unplug the power cord from the electrical outlet.
3. Remove the imaging cartridge. For information on removing the imaging cartridge, see “Replacing the Imaging Cartridge” on page 257. Then pack them in their original boxes with the protective materials they came in.
4. Remove all installed options. For information on removing options, see the section under “Installing Options”.
5. Attach the protective materials onto the printer, then repack the printer in its original box.

### ***For short distances***

Always pay attention to the following handling precautions when you need to move the printer for a short distance:

- ❑ If you are moving the printer on its own, two people should lift and carry the printer.


### ***Moving the printer***

Follow these steps to move the printer for a short distance:

1. Turn off the printer and remove the following items:

- ❑ Power cord
- ❑ Interface cable
- ❑ Paper


2. Lift the printer by the correct positions, as shown below.

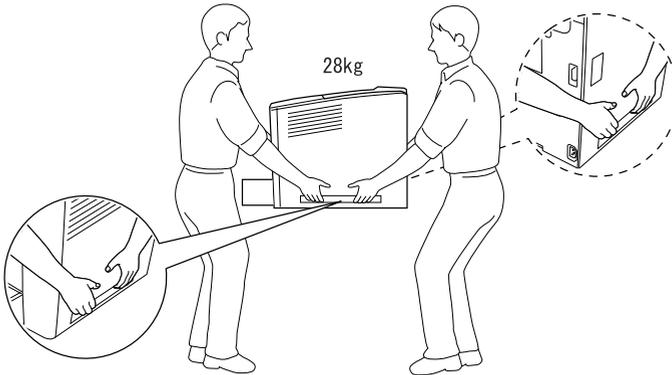


3. Move the printer. Make sure to keep it horizontal.

## ***Finding a place for the printer***

When relocating the printer, always choose a location that has adequate space for easy operation and maintenance. Use the following illustration as a guide for the amount of space required around the printer to ensure smooth operation. Dimensions shown in the illustrations below are in centimeters.

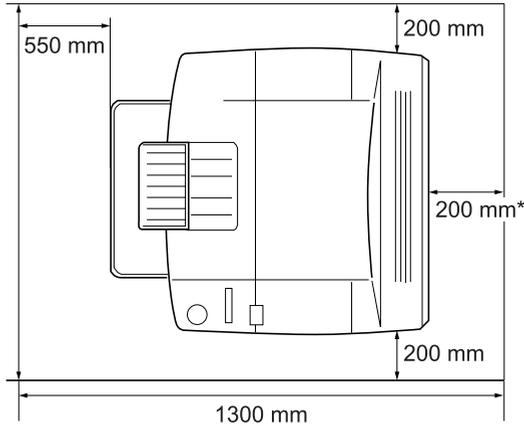

\* 300 mm when the optional Duplex Unit is installed, and 450 mm when the optional 4-Bin Mailbox is installed.

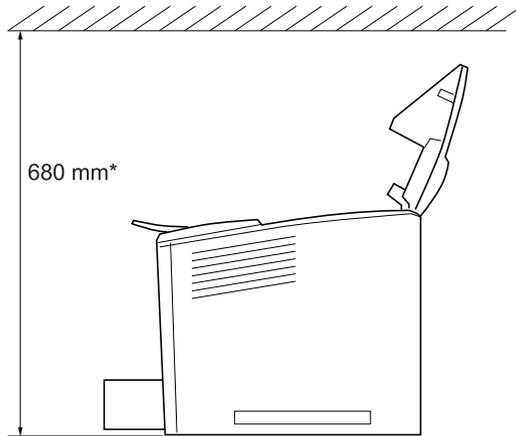

\* 800 mm when the optional 4-Bin Mailbox is installed.

Installing one optional 500-Sheet Universal Paper Cassette Unit A3 adds 133 mm (5.2 in.) to the bottom of the printer. You can install up to three units.

In addition to space consideration, always heed the following precautions when finding a place to locate the printer:

- Place the printer where you can easily unplug the power cord.
- Keep the entire computer and printer system away from potential sources of interference, such as loudspeakers or the base units of cordless telephones.
- Avoid using an electrical outlet that is controlled by wall switches or automatic timers. Accidental disruption of power can erase valuable information in your computer's and printer's memory.



**Caution:**

- ❑ *Leave adequate room around the printer to allow for sufficient ventilation.*
- ❑ *Avoid locations that are subject to direct sunlight, excessive heat, moisture, or dust.*
- ❑ *Avoid using outlets that other appliances are plugged into.*
- ❑ *Use a grounded outlet that matches the printer's power plug. Do not use an adapter plug.*
- ❑ *Only use an outlet that meets the power requirements for this printer.*

## Chapter 9

# Troubleshooting

---

Clearing Jammed Paper .....	277
Precautions for clearing jammed paper .....	277
Paper jam-paper cassette .....	278
Paper jam-MP tray .....	282
Paper jam-inside the printer .....	284
Paper jam-4-Bin Mailbox .....	295
Paper jam-Duplex Unit .....	302
Printing a Status Sheet .....	304
Operational Problems .....	306
The Ready light does not turn on .....	306
The printer does not print (Ready light off) .....	307
The Ready light is on but nothing prints .....	307
The optional product is not available .....	308
Printout Problems .....	308
The font cannot be printed .....	308
Printout is garbled .....	309
The printout's orientation on the page is not correct .....	309
Graphics do not print correctly .....	310
Print Quality Problems .....	311
The background is dark or dirty .....	311
White dots appear in the printout .....	311
Print quality or tone is uneven .....	312
Half-tone images print unevenly .....	312
Toner smudges .....	313
Areas are missing in the printed image .....	313
Completely blank pages are output .....	314
The printed image is light or faint .....	314
The non-printed side of the page is dirty .....	316
Memory Problems .....	316
Print quality decreased .....	316
Insufficient memory for current task .....	317

Insufficient memory to print all copies . . . . .	317
Paper Handling Problems . . . . .	317
Paper does not feed properly . . . . .	317
Problems Printing in the PostScript 3 Mode . . . . .	318
Windows users . . . . .	318
Macintosh users . . . . .	326
Problems Using Options . . . . .	331
The message Invalid AUX/IF Card appears on the LCD panel 332	
Paper does not feed from the optional paper cassette . . . . .	332
Feed jam when using the optional paper cassette . . . . .	333
An installed option cannot be used . . . . .	333
Correcting USB Problems . . . . .	333
USB connections . . . . .	333
Windows operating system . . . . .	334
Printer software installation . . . . .	334
Status and Error Messages . . . . .	341
Canceling Printing . . . . .	352
Using the Cancel Job button . . . . .	352
Using the Reset menu . . . . .	353
Contacting Customer Support . . . . .	354
For users in Latin America . . . . .	355
For users in Australia . . . . .	355
For users in Singapore . . . . .	357
For users in Thailand . . . . .	357
For users in Indonesia . . . . .	358
For users in Hong Kong . . . . .	359
For users in Malaysia . . . . .	360
For users in India . . . . .	361
For users in the Philippines . . . . .	363

---

## ***Clearing Jammed Paper***

If paper becomes jammed in the printer, the printer's LCD panel and EPSON Status Monitor 3 provide alert messages.

### ***Precautions for clearing jammed paper***

Be sure to observe the following points when you clear jammed paper.

- Do not remove jammed paper by force. Torn paper can be difficult to remove and might cause other paper jams. Pull it gently in order to avoid tearing.
- Always try to remove jammed paper with both hands to avoid tearing it.
- If jammed paper is torn and remains in the printer, or if paper is jammed in a place not mentioned in this manual, contact your dealer.
- Make sure that the paper type that is loaded is the same as the Paper Type setting in the printer driver.




#### ***Warning:***

- Be careful not to touch the fuser or the surrounding areas. If the printer has been in use, the fuser and the surrounding areas may be very hot.*
- Do not insert your hand deep into the fuser unit as some components are sharp and may cause injury.*


## ***Paper jam-paper cassette***

When a paper jam occurs at a location where paper feeds into the printer, or in the paper cassettes, follow these steps to clear the jammed paper:

1. Pull out the paper cassette until it stops.

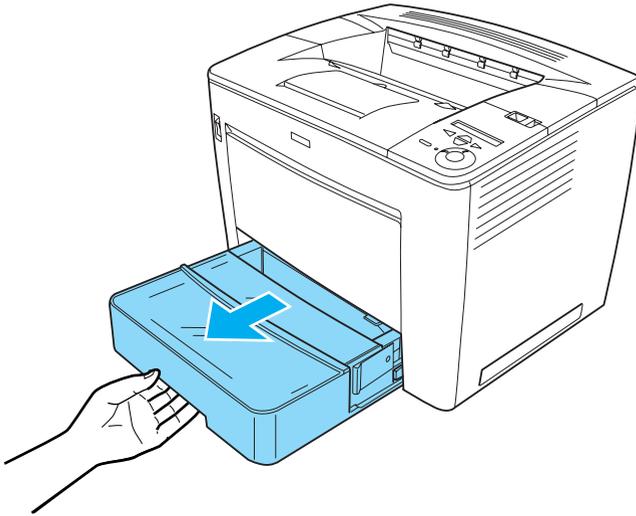


2. While pressing in the gray stopper located at both sides of the paper cassette, pull out the cassette from the printer.

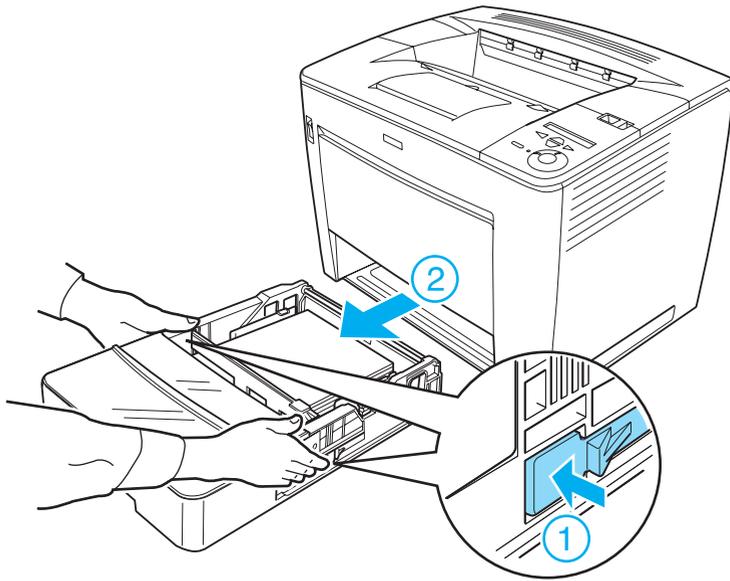

**Note:**


*If one or more optional 500-Sheet Universal Paper Cassette Units are installed, repeat steps 1 and 2 to pull out all paper cassettes.*

3. Remove the jammed paper from inside the printer, as shown below.

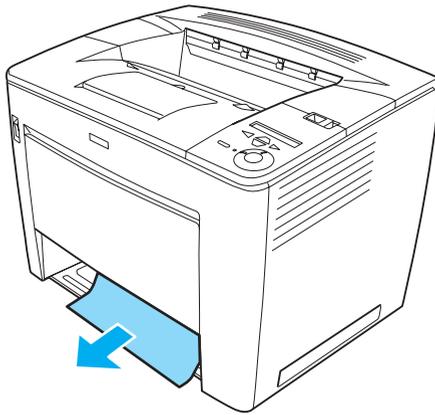


**Note:**

- ❑ Do not try to pull out jammed paper with force when you cannot remove the paper easily. Release the paper feed roller by pulling the green lever located inside the printer, as shown below, and then remove the jammed paper. Make sure to push the green lever back to its original position.

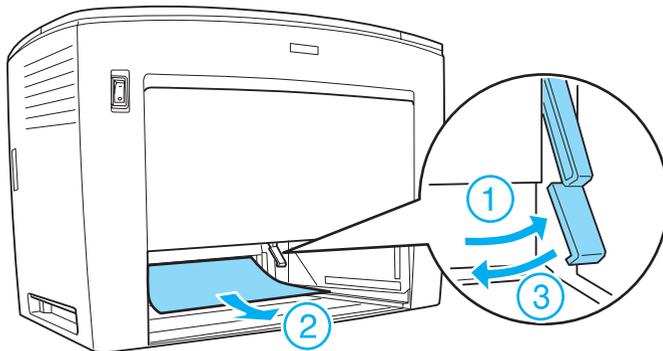

- ❑ *If there is a paper jam inside the 500-Sheet Universal Paper Cassette Unit, it may occur deep inside the unit because the paper path is located in the rear part of the unit. Check the inside of the unit carefully from the opening on the front side.*
4. Reinsert the paper cassette. Make sure to push in the cassette as far as it will go inside the printer.  
If you have optional cassette units installed, reinsert all the cassettes into the units.

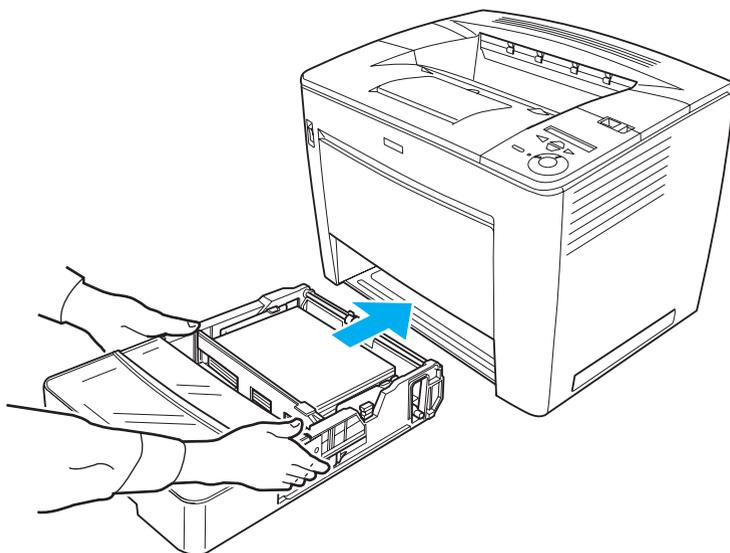

**Note:**


*Make sure that paper is loaded properly in the paper cassettes before reinserting them.*

A paper jam error is cleared when the paper cassettes are reinserted properly. Check the current status of the printer on the LCD panel of the printer's control panel, or from the EPSON Status Monitor 3 utility. If the paper jam error is not yet cleared, check inside the printer. See "Paper jam-inside the printer" on page 284 for instructions.


## ***Paper jam-MP tray***

When a paper jam occurs in the MP tray, follow these steps to clear the jammed paper:


1. Remove paper loaded in the MP tray.

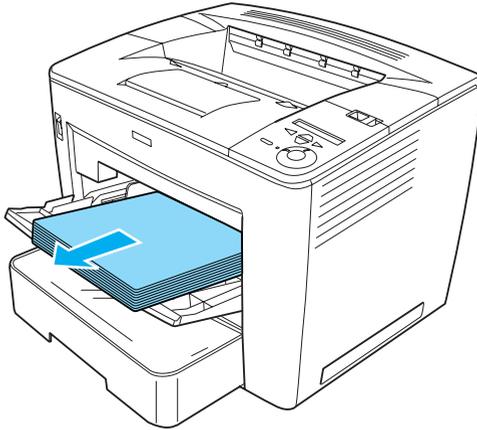

2. Pull out the paper jammed inside the tray.

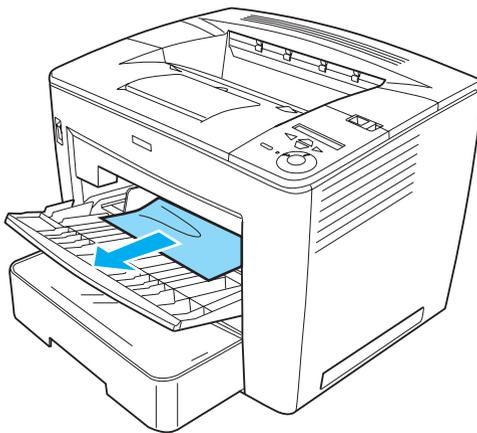


3. Load paper into the tray.

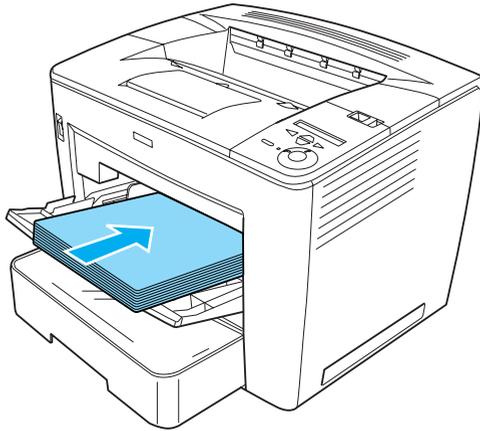

**Note:**

*Make sure that paper is loaded properly into the MP tray.*

- Slide the lock lever to the right, and then open and close the front cover, as shown below.

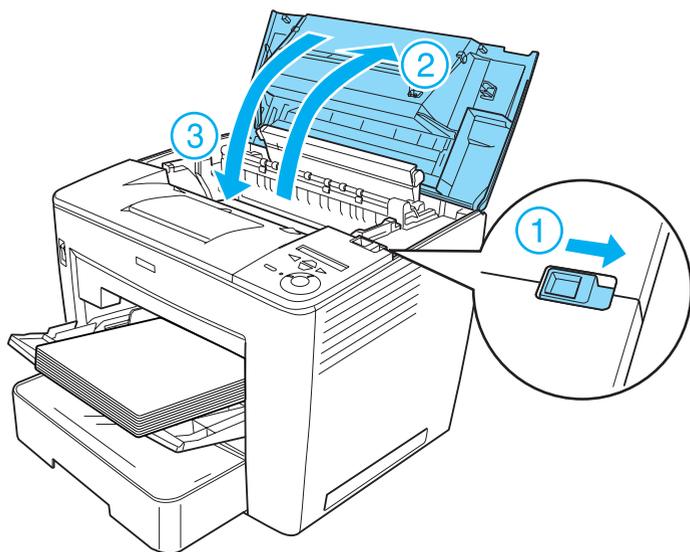


Check the current status of the printer on the LCD panel of the printer's control panel, or from the EPSON Status Monitor 3 utility. If the paper jam error is not yet cleared, check inside the printer. See "Paper jam-inside the printer" on page 284 for instructions.

## ***Paper jam-inside the printer***


When a paper jam occurs inside the printer, the location is either at the fuser unit or paper feeding roller.

Follow these steps to clear the jammed paper:

1. Slide the lock lever to the right, and then open the front cover.

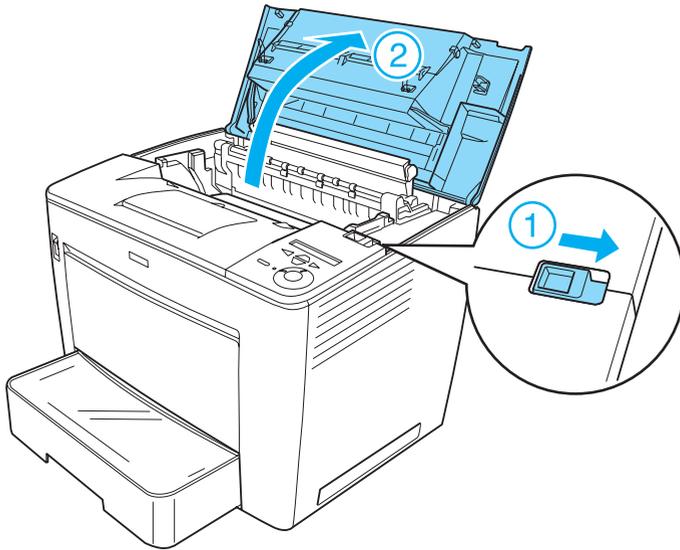


2. Pull out the stopper of the front cover to secure the cover.

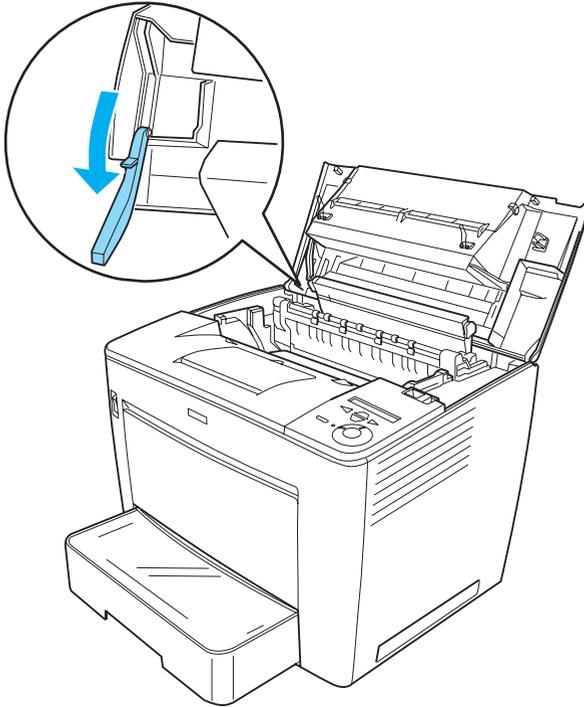




**Caution:**

- ❑ *Be careful not to touch the fuser unit, which is marked **CAUTION HIGH TEMPERATURE**, or the surrounding areas. If the printer has been in use, the fuser unit and the surrounding areas may be very hot.*
  
- ❑ *You should avoid touching the transfer roller. Otherwise, the print quality may decline.*

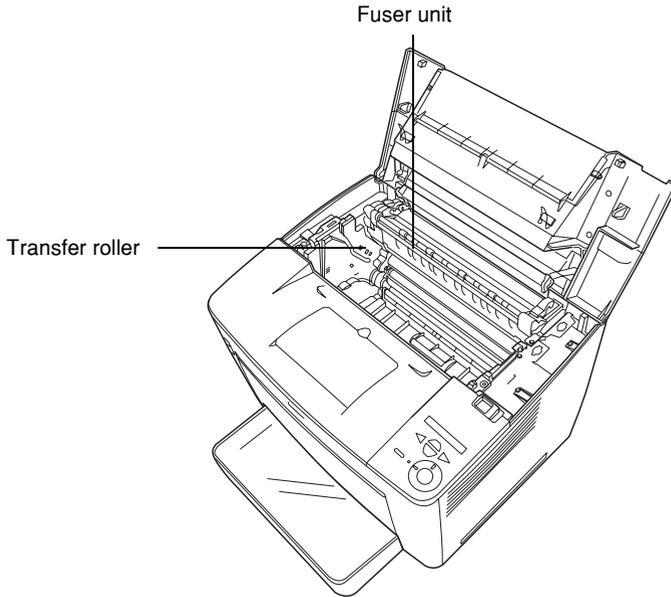


3. Hold the handle of the imaging cartridge, and lift it out of the printer.

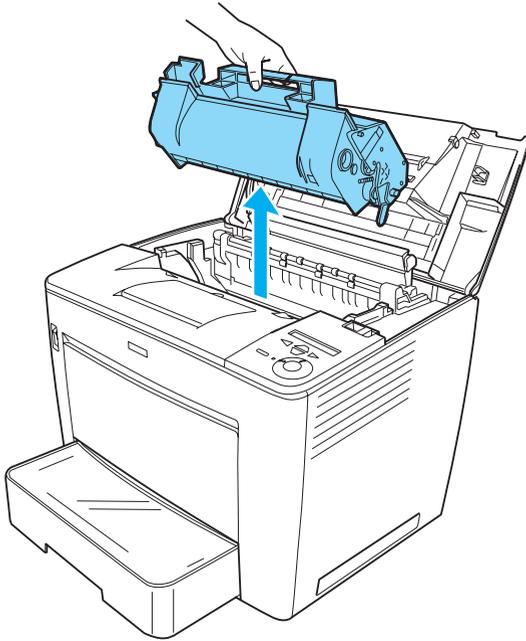

**Note:**

*Place the imaging cartridge on a clean, flat surface.*


4. If paper is jammed at the fuser unit, pull up the green lever at both ends of the fuser unit. Then pull the paper out slowly from beneath the fuser unit.

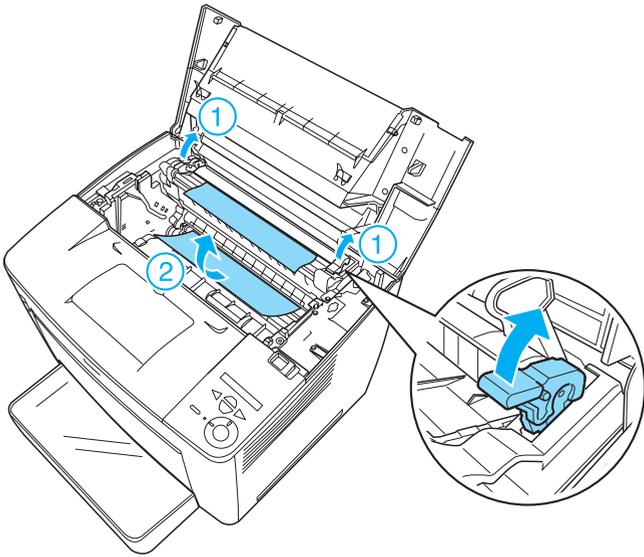

**Caution:**

*Do not pull out the jammed paper from the top of the fuser unit. Doing so may cause dirty printouts.*


5. Push the green levers back down to their original position, as shown below.

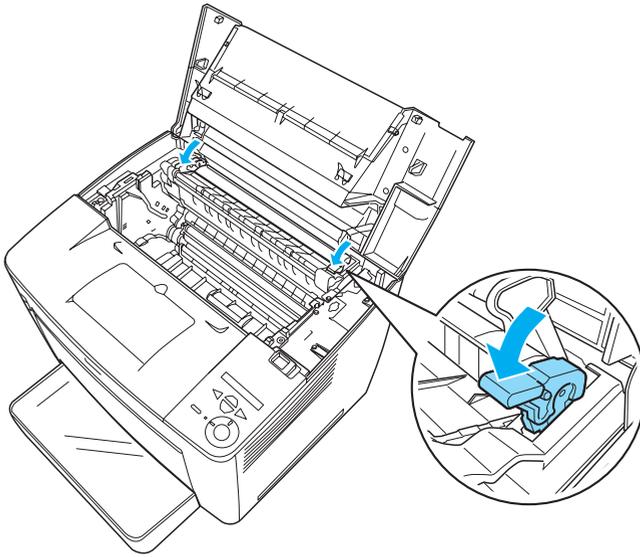


If you cannot find jammed paper at the fuser unit, proceed to the next step.

If paper is jammed at the fuser unit, check to see if paper jams have occurred at two locations at the same time, in the following steps.


6. Open the black cover located inside the printer, as shown below.

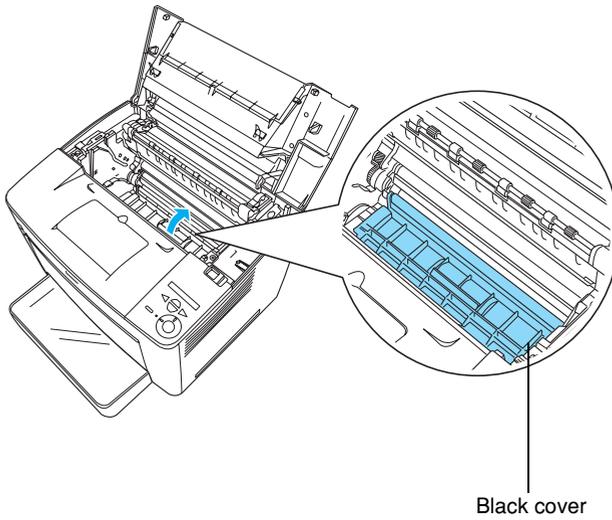


7. Pull out any jammed paper.

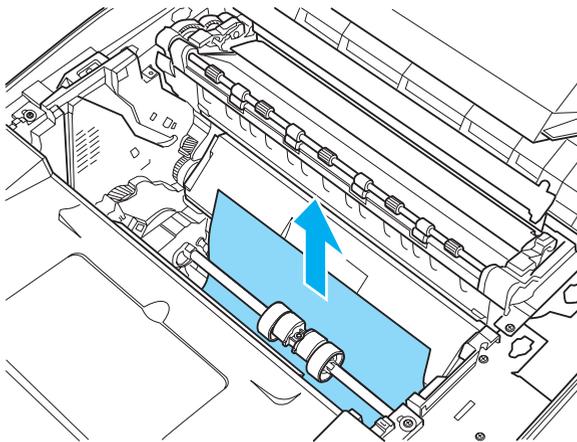

8. Replace the black cover.

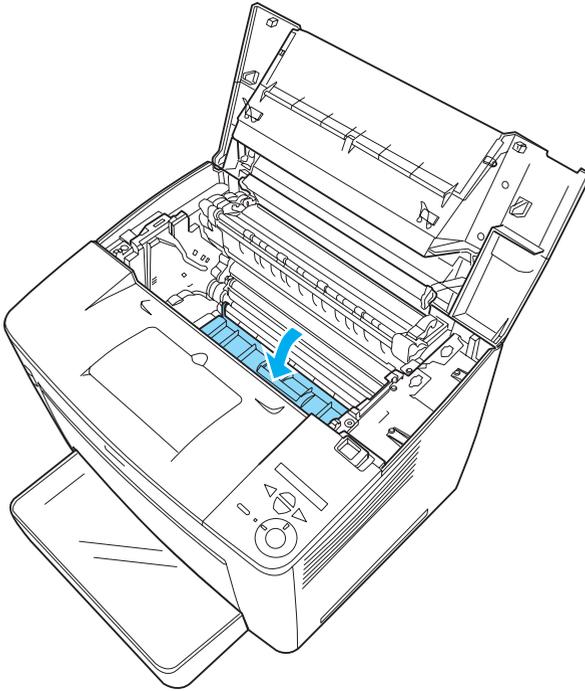


- Carefully insert the imaging cartridge into the printer, making sure that the pins on both sides of the cartridge are aligned with the grooves inside the printer. Make sure to push the cartridge into the printer until it is firmly seated in its proper position.

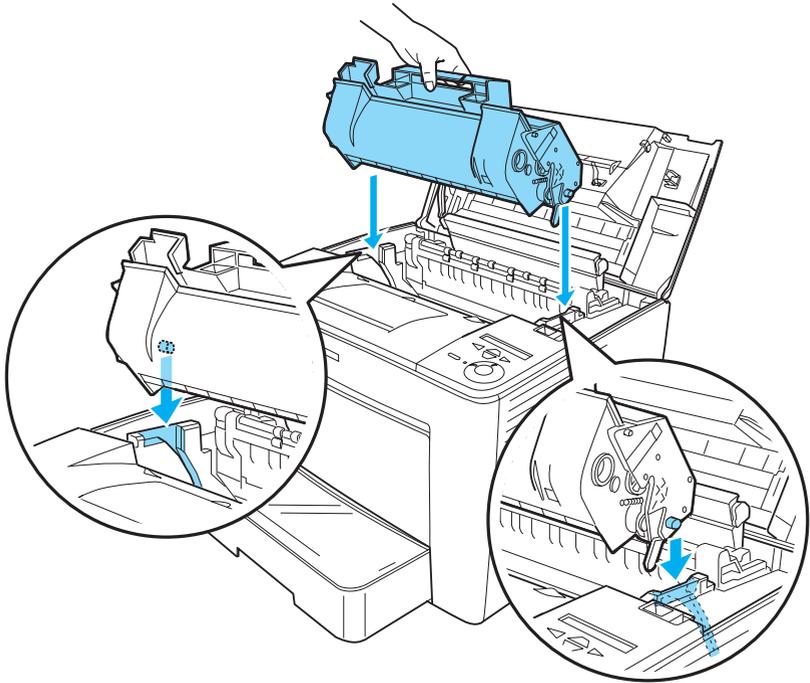


**Caution:**

*Do not touch the roller or other parts inside the printer. Doing so may cause the printer to malfunction.*

10. Push the stopper of the front cover back to its original position.

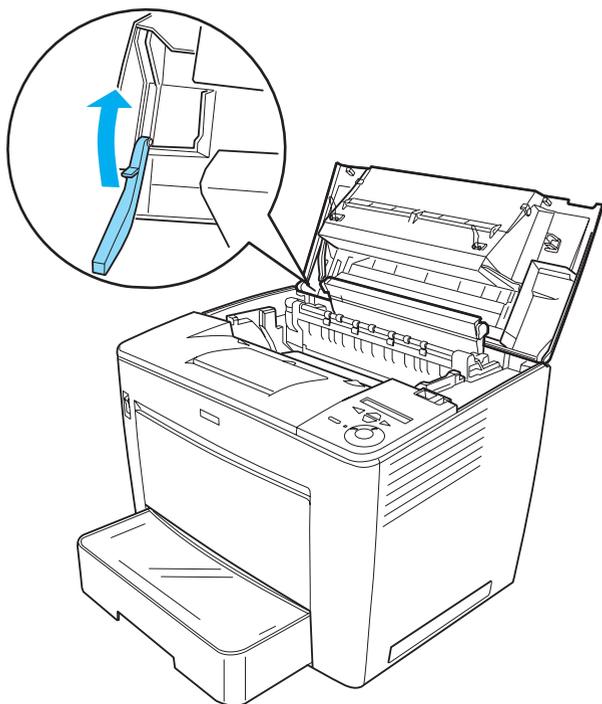

11. Close the front cover by pressing it firmly until it clicks into place.

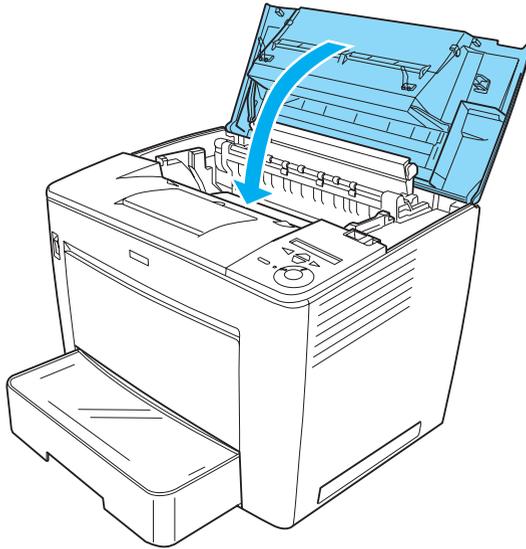

Check the current status of the printer on the LCD panel of the printer's control panel, or from the EPSON Status Monitor 3 utility.


## ***Paper jam-4-Bin Mailbox***

9


### ***Paper jam inside the printer***

If a paper jam occurs inside the printer when the optional 4-Bin Mailbox is installed, follow these steps to clear the jammed paper:


1. Move the main unit of the 4-Bin Mailbox toward the rear of the printer until it stops.

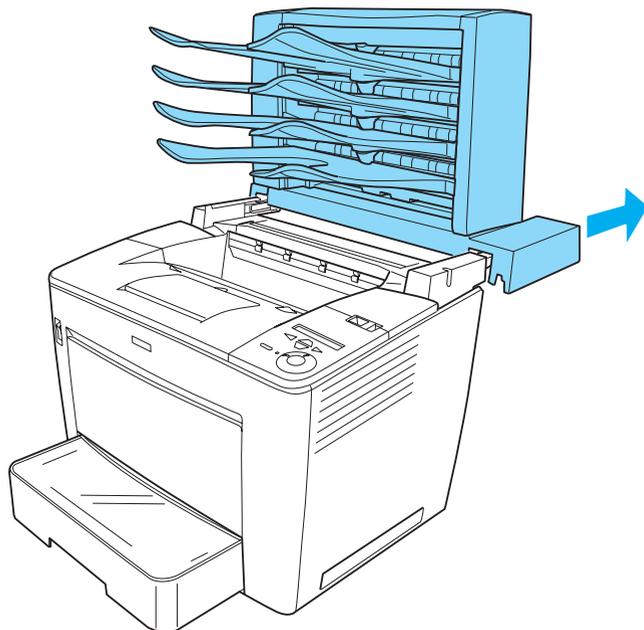

- Slide the lock lever to the right, and then open the front cover.

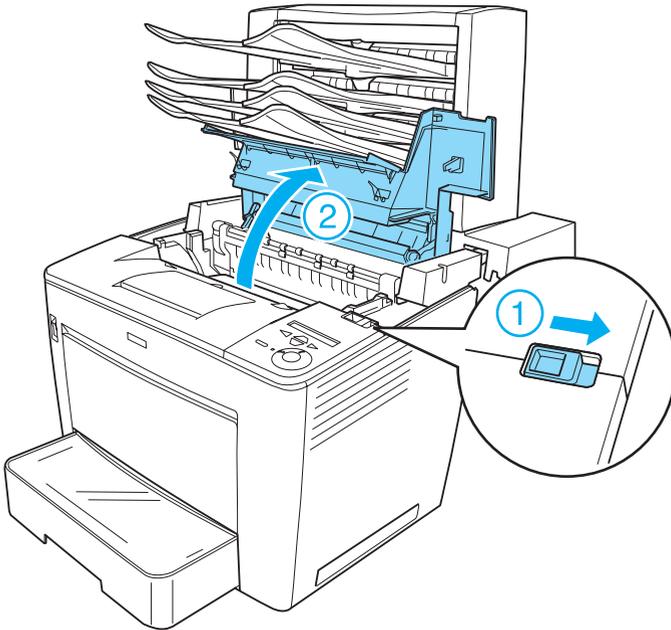


3. Pull out the stopper of the front cover to secure the cover.

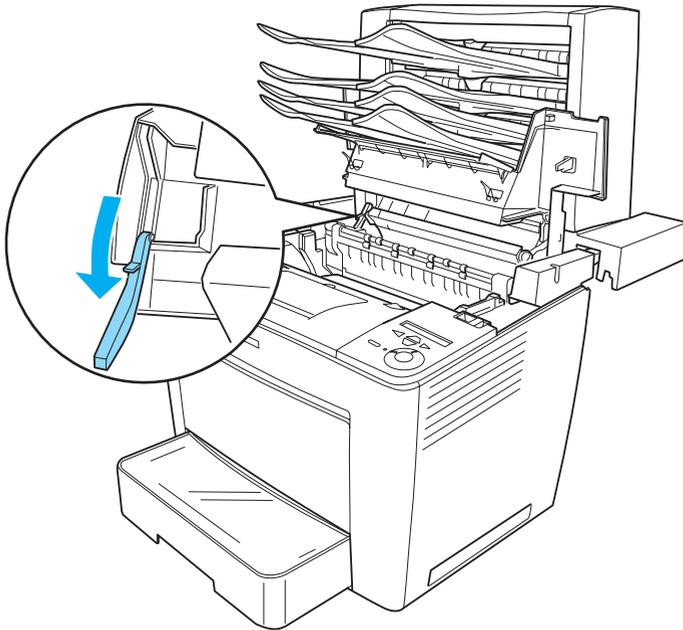


4. Remove the jammed paper by following the procedure described in “Paper jam-inside the printer” on page 284.

5. Push the stopper of the front cover back to its original position, and then close the front cover by pressing it firmly until it clicks into place.

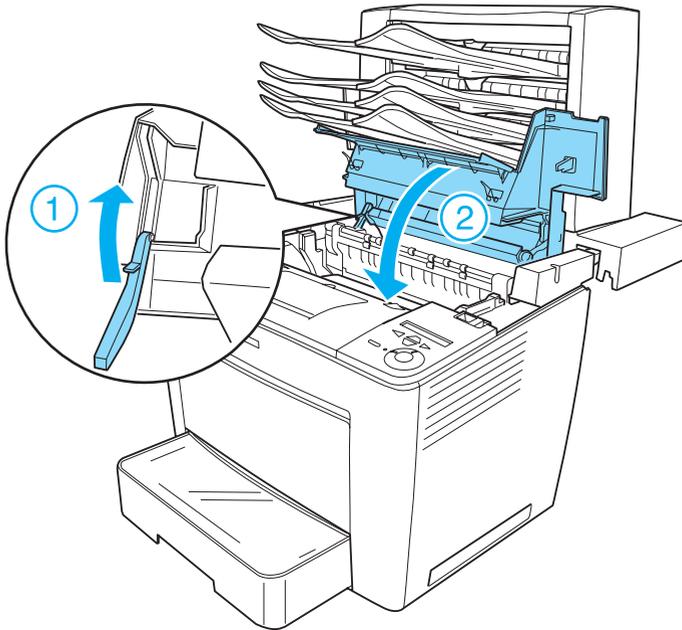

6. Pull the main unit of the 4-Bin Mailbox back to its original position, so that it sits on the rear part of the printer.

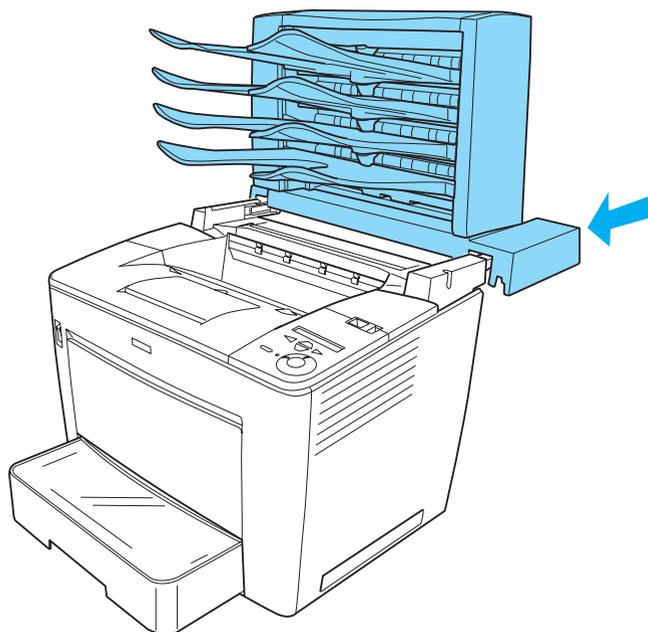


Check the current status of the printer on the LCD panel of the printer's control panel, or from the EPSON Status Monitor 3 utility.


### ***Paper jam inside the output unit***

Follow these steps to clear jammed paper inside the output unit of the optional 4-Bin Mailbox:

1. Open the rear cover of the 4-Bin Mailbox by pulling at the top of the cover, and then remove the jammed paper.

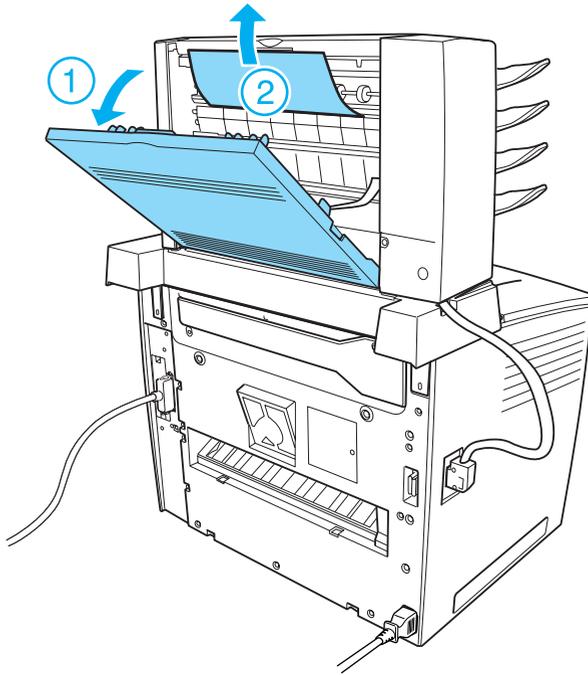

2. Replace the rear cover.

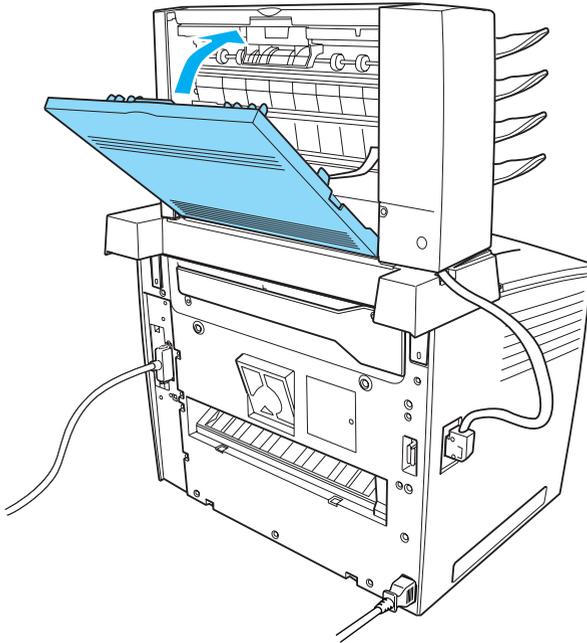


Check the current status of the printer on the LCD panel of the printer's control panel, or from the EPSON Status Monitor 3 utility.

### ***Paper jam-Duplex Unit***

If a paper jam occurs in the optional Duplex Unit, follow these steps to clear the jammed paper:


1. Open the upper cover of the Duplex Unit and remove any jammed paper. Then replace the cover.

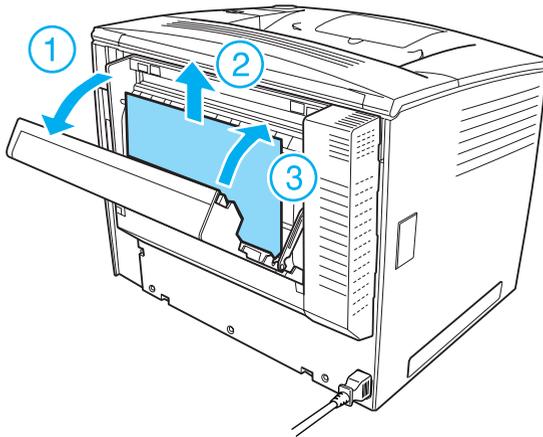

**Note:**

*Make sure to close the upper cover properly.*

2. Open the lower cover, and remove any jammed paper. Then replace the lower cover.

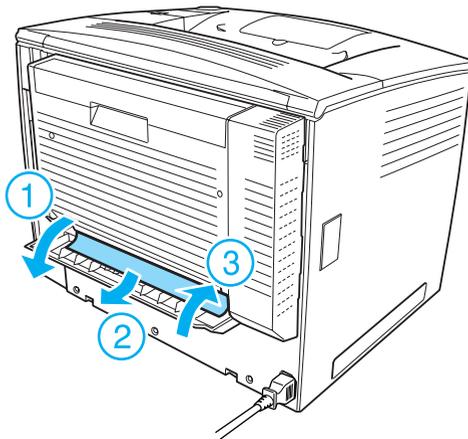


**Note:**

*Make sure to close the lower cover properly.*

Check the current status of the printer on the LCD panel of the printer's control panel, or from the EPSON Status Monitor 3 utility.

**Note:**

*If the paper jam error is not cleared after removing jammed paper as described in the previous steps, remove the Duplex Unit from the printer. Then check if paper is jammed at the opening on the rear side of the printer.*

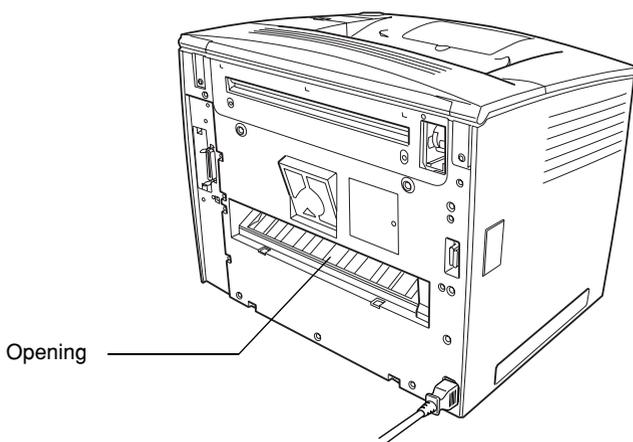

*If you find any jammed paper, remove it. Then reinstall the Duplex Unit. See "Duplex Unit" on page 228 for instructions.*


---

## **Printing a Status Sheet**

To confirm the current status of the printer, and that the options are installed correctly, print a status sheet using the printer's control panel.

Follow these steps to print a status sheet:

1. Turn on the printer. The LCD panel shows **Ready**.
2. Press the  Enter button three times. The printer prints a status sheet.

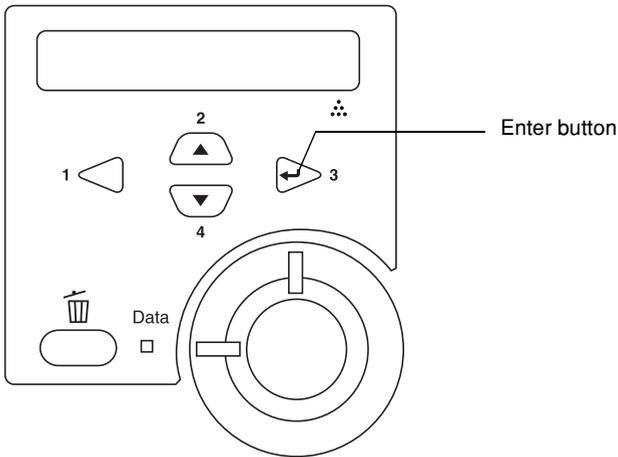

3. Confirm that the information about the installed options is correct. If the options are installed correctly, they appear under **Hardware Configurations**. If the options are not listed, try reinstalling them.

**Note:**

- ❑ *If the status sheet does not list your installed options correctly, make sure that they are securely connected to the printer.*
- ❑ *If you are unable to get the printer to print a correct status sheet, contact your dealer.*

- ❑ If you are using a Windows printer driver, you can update the installed option information manually. Click the **Update the Printer Option Info Manually** button, and then click **Settings** from the *Optional Settings* menu. The *Optional Settings* dialog box appears. Make the necessary settings for each installed option, and then click **OK**.

---

## **Operational Problems**

### **The Ready light does not turn on**

---

<b>Cause</b>	<b>What to do</b>
The power cord may not be properly plugged into the electrical outlet.	Turn off the printer and check the power cord connections between the printer and the electrical outlet. Then turn the printer back on.
The electrical outlet may be controlled by an outside switch or an automatic timer.	Make sure that the switch is turned on or plug another electrical device into the outlet to check whether the outlet is operating properly.

## ***The printer does not print (Ready light off)***

Cause	What to do
The printer is offline.	Press the  Start/Stop button once to switch the printer to ready status.

## ***The Ready light is on but nothing prints***

Cause	What to do
Your computer may not be properly connected to the printer.	Perform the procedure described in “Connecting the Printer” in the <i>Setup Guide</i> .
The interface cable may not be plugged in securely.	Check both ends of the interface cable between the printer and the computer. If you are using the parallel interface, be sure to secure the connector using the wire retaining clips.
You may not be using the correct interface cable.	If you are using the parallel interface, make sure that the cable is a double-shielded, twisted-pair interface cable no more than six feet in length.  If you are using the USB interface, use a Revision 2.0 cable.
Some error may have occurred.	Check the LCD panel to see if an error message appears.
Your application software is not properly set up for your printer.	Make sure that the printer is selected in your application software.

---

Your computer system's memory is too small to handle the volume of data in your document.

Try reducing the image resolution of your document in the application software, or install more memory in your computer if you can.

## ***The optional product is not available***

---

Cause	What to do
-------	------------

If you are using Windows, and EPSON Status Monitor 3 is not installed, you have to make settings manually in the printer driver.
--

Click the <b>Optional Settings</b> tab, select <b>Update the Printer Option Info Manually</b> , then click <b>Settings</b> .
--

---

## ***Printout Problems***

### ***The font cannot be printed***

---

Cause	What to do
-------	------------

You may use the printer fonts substituted for specified TrueType fonts.
---

In the printer driver, choose the <b>Print TrueType fonts as bitmap</b> button in the <b>Extended Settings</b> dialog box.
--

The selected font is not supported by your printer.
---

Make sure that you have installed the correct font. See "Available Fonts" on page 430 for more information.
---

## ***Printout is garbled***

<b>Cause</b>	<b>What to do</b>
The interface cable may not be plugged in securely.	Make sure that both ends of the interface cable are plugged in securely.
You may not be using the correct interface cable.	If you are using the parallel interface, make sure that the cable is a double-shielded, twisted-pair interface cable no more than six feet in length.  If you are using the USB interface, use a Revision 2.0 cable.
The emulation setting for the port may not be correct.	Specify the emulation mode by using the printer's control panel menus. See "Emulation Menu" on page 401.

**Note:**

*If a status sheet does not print correctly, your printer may be damaged. Contact your dealer or a qualified service representative.*

## ***The printout's orientation on the page is not correct***

<b>Cause</b>	<b>What to do</b>
The page length and margins may be set incorrectly in your application.	Make sure that you are using the correct page length and margin settings in your application.
The Paper Size setting may be incorrect.	Make sure the correct paper size is set in the Tray menu on the control panel.

---

MP Tray Size setting may be incorrect.	When loading paper for which the size is not specified with Auto setting, specify the correct paper size on the MP Tray Size setting in the Tray menu on the control panel.
--	---

## ***Graphics do not print correctly***

---

<b>Cause</b>	<b>What to do</b>
The printer emulation setting in your application may be incorrect.	Make sure that your application is set for the printer emulation you are using. For example, if you are using the LJ4 emulation mode, make sure that your application is set to use a LaserJet 4 printer.
You may need more memory.	Graphics require large amounts of memory. Install an appropriate memory module. See “Memory Module” on page 243.

---

---

## ***Print Quality Problems***

### ***The background is dark or dirty***

---

<b>Cause</b>	<b>What to do</b>
You may not be using the correct type of paper for your printer.	If the surface of your paper is too rough, printed characters may appear distorted or broken. EPSON special paper, or smooth, high-quality copier paper is recommended for best results. See “Available paper types” on page 366 for information on choosing paper.
The paper path inside the printer may be dusty.	Turn off the printer. Clean internal printer components by printing three pages with only one character per page.

---

### ***White dots appear in the printout***

---

<b>Cause</b>	<b>What to do</b>
The paper path inside the printer may be dusty.	Turn off the printer. Clean internal printer components by printing three pages with only one character per page.

---

## ***Print quality or tone is uneven***

---

<b>Cause</b>	<b>What to do</b>
Your paper may be moist or damp.	Do not store paper in a humid or damp environment.
There may be no toner left in the imaging cartridge.	If the message on the LCD panel or in EPSON Status Monitor 3 indicates that the amount of toner left is low, see "Replacing the imaging cartridge" on page 258.

---

## ***Half-tone images print unevenly***

---

<b>Cause</b>	<b>What to do</b>
Your paper may be moist or damp.	Do not store paper in a humid or damp environment. Be sure to use paper that is newly unwrapped.
There may be no toner left in the imaging cartridge.	If the message on the LCD panel or in EPSON Status Monitor 3 indicates that the amount of toner is low, see "Replacing the imaging cartridge" on page 258.
The gradation setting is too small when printing graphics.	On the Basic Setting menu in the printer driver, click <b>More Settings</b> , select the <b>Enh.MG</b> button, then select <b>Smooth</b> .

---

## ***Toner smudges***

<b>Cause</b>	<b>What to do</b>
Your paper may be moist or damp.	Do not store your paper in a humid or damp environment.
You may not be using the correct type of paper for your printer.	EPSON special paper or smooth, high-quality copier paper is recommended for best results. See “Available paper types” on page 366 for information on choosing paper.
The paper path inside the printer may be dusty.	Turn off the printer. Clean internal printer components by printing three pages with only one character per page.

## ***Areas are missing in the printed image***

<b>Cause</b>	<b>What to do</b>
Your paper may be moist or damp.	This printer is sensitive to moisture absorbed by the paper. The higher the moisture content in the paper, the lighter the printout. Do not store paper in a humid or damp environment.
You may not be using the correct type of paper for your printer.	If the surface of your paper is too rough, printed characters may appear distorted or broken. EPSON special paper or smooth, high-quality copier paper is recommended for best results. See “Available paper types” on page 366 for information on choosing paper.

## ***Completely blank pages are output***

<b>Cause</b>	<b>What to do</b>
The printer may have loaded more than one sheet at a time.	Remove the paper stack and fan it. Tap it on a flat surface to even the edges. Then reload the paper.
There may be no toner left in the imaging cartridge.	If the message on the LCD panel or in the EPSON Status Monitor 3 indicates that the amount of toner is low, see "Replacing the imaging cartridge" on page 258.
The problem may be with your application or interface cable.	Print out a status sheet. See "Printing a Status Sheet" on page 304. If a blank page is ejected, the problem may be with the printer. Turn off the printer and contact your dealer.
The Paper Size setting may be incorrect.	Make sure the correct paper size is set in the Tray menu on the control panel.

## ***The printed image is light or faint***

<b>Cause</b>	<b>What to do</b>
Your paper may be moist or damp.	Do not store your paper in a humid or damp environment.
The Toner Save mode may be on.	Turn off the Toner Save mode using the printer driver or the printer's control panel menus.

---

There may be no toner left in the imaging cartridge.	If the message on the LCD panel or in EPSON Status Monitor 3 indicates that the amount of toner left is low, replace the imaging cartridge. See “Replacing the imaging cartridge” on page 258 for instructions.
--	---

---

The Density setting may be too low.	Increase the Density setting in the Printing menu on the control panel.
-------------------------------------	---

## ***The non-printed side of the page is dirty***

---

<b>Cause</b>	<b>What to do</b>
Toner may have spilled onto the paper feed path.	Clean internal printer components by printing three pages with only one character per page.

---

## ***Memory Problems***

### ***Print quality decreased***

---

<b>Cause</b>	<b>What to do</b>
The printer cannot print in the required quality level because of insufficient memory, and the printer lowers the quality automatically so that the printer can continue printing.	Check to see if the printout is acceptable. If not, add more memory for a permanent solution or lower print quality temporarily in the printer driver.

---

## ***Insufficient memory for current task***

---

<b>Cause</b>	<b>What to do</b>
The printer has insufficient memory for current task.	Add more memory for a permanent solution or lower print quality temporarily in the printer driver.

---

## ***Insufficient memory to print all copies***

---

<b>Cause</b>	<b>What to do</b>
The printer does not have sufficient memory to collate print jobs.	Only one set of copies will be printed. Reduce the contents of print jobs, or add more memory. For information on installing more memory, see “Memory Module” on page 243.

---

## ***Paper Handling Problems***

### ***Paper does not feed properly***

---

<b>Cause</b>	<b>What to do</b>
The paper guides are not set correctly.	Make sure that the paper guides in all the paper cassettes are set in the correct paper size positions.
The paper source setting may not be correct.	Make sure that you have selected the correct paper source in your application.

---

---

There may be no paper in the cassettes.	Load paper.
The size of loaded paper differs from the control panel setting.	Make sure that the correct paper size is set in the control panel's Paper Source and MP Tray Size settings.
Too many sheets may be loaded in the MP tray or paper cassettes.	Make sure that you have not tried to load too many sheets of paper. For the maximum paper capacity for each paper source, see "Paper" on page 366.
If paper does not feed from the optional paper cassette unit, the unit may not be installed properly.	For instructions on installing the unit, see "500-Sheet Universal Paper Cassette Unit A3" on page 206.

---



---

## ***Problems Printing in the PostScript 3 Mode***

The problems listed in this section are those that you may encounter when printing with the PostScript driver. All procedural instructions refer to the PostScript printer driver that shipped with your printer.

### ***Windows users***

See the appropriate sections below for resolutions to the various problems that you may experience when printing in the PostScript 3 mode from a computer running one of the supported Windows operating systems.

## Problems printing PostScript documents

### The printer does not print correctly in the PostScript mode.

Cause	What to do
The printer's emulation mode setting is incorrect.	<p>The printer is set to the Auto mode by default, so that it can automatically determine the encoding used in the received print job data and select the appropriate emulation mode. However, there are situations where the printer cannot select the correct emulation mode. In this case, it must be set manually to P53.</p> <p>Set the emulation mode through the SelectType Emulation menu on the printer. See "Emulation Menu" on page 401 for details.</p>
The printer's emulation mode setting for the interface that you are using is incorrect.	<p>The emulation mode can be set individually for each interface which receives print job data. Set the emulation mode for the interface you are using to P53.</p> <p>Set the emulation mode through the SelectType Emulation menu on the printer. See "Emulation Menu" on page 401 for details.</p>

## General printing problems

### The printer does not print.

Cause	What to do
The Print to file check box is selected in the Print dialog box.	Clear the Print to file check box in the Print dialog box.
An incorrect printer driver is selected.	<p>Make sure that the PostScript printer driver that you are using to print is set as the default printer. Follow the steps below:</p> <ol style="list-style-type: none"><li>(1) Click Start, select Settings, then click Printers.</li></ol> <p>If your computer is running Windows XP, click Start, then click Control Panel. In the window that appears, click Printers and Other Hardware, then click View installed printers or fax printers. If Printers and Faxes is displayed at the bottom of the window, click on it instead.</p> <ol style="list-style-type: none"><li>(2) Right-click the icon of the PostScript printer driver that you are using to print.</li><li>(3) Make sure that there is a check mark next to Set as Default Printer. If not, click on Set as Default Printer to select it.</li></ol>
The Emulation menu in the printer's Control Panel is set to a mode other than Auto or PS3 for the interface that you are using.	Change the mode setting to either Auto or PS3.

## The printer does not print normally. (Windows 98/95 only)

Cause	What to do
<p>The computer is connected to the printer via the parallel interface and the parallel port setting is set to the ECP mode.</p>	<p>The printer may not print normally if the computer is connected to the printer via the parallel interface and the ECP mode is set. When this is the case, follow the steps below to make sure that the mode setting is correct:</p> <ol style="list-style-type: none"><li data-bbox="515 446 1006 510">(1) Click Start, select Settings, then click Printers.</li><li data-bbox="515 526 1006 590">(2) Right-click the icon for the printer, then click Properties.</li><li data-bbox="515 606 1006 670">(3) Click the Details tab, then click the Spool Settings button.</li><li data-bbox="515 686 1006 750">(4) Select Disable bi-directional support for this printer, then click the OK button.</li></ol>

## Font and image problems

### The font on the printout is different from that on the screen.

Cause	What to do
The PostScript screen fonts are not installed.	The PostScript screen fonts must be installed on the computer that you are using. Otherwise, the font that you select is substituted by some other font for display on the screen.
The Substitute printer fonts for TrueType fonts when applicable setting on the Fonts sheet of the printer's Properties dialog box is turned on, but the TrueType fonts are not replaced by the printer fonts.	If the Substitute printer fonts for TrueType fonts when applicable setting on the Fonts sheet of the printer's Properties dialog box is turned on, TrueType fonts are replaced by the printer fonts before they are printed. Specify the appropriate substitution fonts using the Font Substitution Table.

### The printer fonts cannot be installed.

Cause	What to do
The Emulation menu in the printer's Control Panel is not set to P <sub>S</sub> 3 for the interface that you are using.	Change the Emulation menu setting to P <sub>S</sub> 3 for the interface that you are using, then try reinstalling the printer fonts again.

## The edges of texts and/or images are not smooth.

Cause	What to do
The Print Quality is set to Fast.	Change the Print Quality setting in the Graphics sheet to Quality.
The printer does not have sufficient memory.	Increase the printer memory.

## *Problems printing via the parallel interface*

### The printer does not print normally via the parallel interface. (Windows 98/95 only)

Cause	What to do
The computer is connected to the printer via the parallel interface and the parallel port setting is set to the ECP mode.	<p>The printer may not print normally if the computer is connected to the printer via the parallel interface and the ECP mode is set. When this is the case, follow the steps below to make sure that the mode setting is correct:</p> <ol style="list-style-type: none"><li>(1) Click Start, select Settings, then click Printers.</li><li>(2) Right-click the icon for the printer, then click Properties.</li><li>(3) Click the Details tab, then click the Spool Settings button.</li><li>(4) Select Disable bi-directional support for this printer, then click the OK button.</li></ol>

## **Problems printing via the USB interface**

### **The printer does not print normally via the USB interface.**

<b>Cause</b>	<b>What to do</b>
The Data Format setting in the printer's Properties dialog box is not set to ASCII data.	<p>The printer cannot print binary data when it is connected to the computer via the USB interface. Make sure that the Data Format setting, which is accessed by clicking <b>Advanced</b> on the PostScript sheet of the printer's Properties dialog box, is set to ASCII data.</p> <p>If your computer is running Windows XP, click the <b>Device Settings</b> tab in the printer's Properties dialog box, then click the <b>Output Protocol</b> setting and select <b>ASCII</b>.</p>

## **Problems printing via the network**

### **The printer does not print normally via the network interface.**

<b>Cause</b>	<b>What to do</b>
The Data Format setting, which is accessed by clicking <b>Advanced</b> on the PostScript sheet of the printer's Properties dialog box, is different from the data format setting specified in the application.	If the file is created in an application that allows you to change the data format or encoding, such as Photoshop, make sure that the setting in the application matches that in the printer driver.

---

The computer is connected to the network using AppleTalk in a Windows NT 4.0/2000 environment, and the Send CTRL+D Before Each Job or Send CTRL+D After Each Job setting on the Device Settings sheet of the printer's Properties dialog box is set to Yes.

---

Make sure that both the Send CTRL+D Before Each Job and Send CTRL+D After Each Job settings are set to No.

---

The network connection is something other than AppleTalk, and the Data Format setting is not set to ASCII data.

---

If the network connection is something other than AppleTalk, make sure that the Data Format setting is set to ASCII data or Tagged binary communications protocol.

---

The print data is too large.

---

Click **Advanced** on the PostScript sheet of the printer's Properties dialog box, and then change the Data Format setting from ASCII data (default) to Tagged binary communications protocol.

---

Printing cannot be performed using the network interface.

---

Click **Advanced** on the PostScript sheet of the printer's Properties dialog box, and then change the Data Format setting from ASCII data (default) to Tagged binary communications protocol.

---

# Macintosh users

## Problems printing PostScript documents

### The printer does not print correctly in the PostScript mode.

Cause	What to do
The printer's emulation mode setting is incorrect.	<p>The printer is set to the Auto mode by default, so that it can automatically determine the encoding used in the received print job data and select the appropriate emulation mode. However, there are situations where the printer cannot select the correct emulation mode. In this case, it must be set manually to P<sub>53</sub>.</p> <p>Set the emulation mode through the SelecType Emulation menu on the printer. See "Emulation Menu" on page 401 for details.</p>
The printer's emulation mode setting for the interface that you are using is incorrect.	<p>The emulation mode can be set individually for each interface which receives print job data. Set the emulation mode for the interface you are using to P<sub>53</sub>.</p> <p>Set the emulation mode through the SelecType Emulation menu on the printer. See "Emulation Menu" on page 401 for details.</p>

## ***Problems with the printer driver***

**The printer driver or printer that you need to use does not appear in the Chooser (Mac OS 8.6 or 9.x) or Print Center (Mac OS X).**

<b>Cause</b>	<b>What to do</b>
QuickDraw GX is in use (Mac OS 8.6 or 9.x).	This printer's driver does not support QuickDraw GX. Disable QuickDraw GX.
The printer name has been changed.	Ask the network administrator for details, and then select the appropriate printer name.
The AppleTalk zone setting is incorrect.	Open the Chooser (Mac OS 8.6 or 9.x) or Print Center (OS X), and then select the AppleTalk zone that the printer is connected to.

## General printing problems

### The printer does not print.

Cause	What to do
The Print to file check box is selected in the Print dialog box (Mac OS 8.6 or 9.x).	Clear the Print to file check box in the Print dialog box.
The Save as File check box is selected on the Output Option sheet in the Print dialog box (Mac OS X).	Clear the Save as File check box on the Output Option sheet in the Print dialog box.
An incorrect printer driver is selected.	Make sure that either AdobePS or the PostScript printer that you are using to print is selected in the Chooser (Mac OS 8.6 or 9.x) or Print Center (Mac OS X).
The Unlimited Downloadable Fonts check box on the PostScript Options setup option page in the Page Setup dialog box is selected (Mac OS 8.6 or 9.x).	Follow the steps below to clear the Unlimited Downloadable Fonts check box: <ol style="list-style-type: none"><li>(1) Click the File menu of the application that you are using, then select Page Setup.</li><li>(2) Clear the Unlimited Downloadable Fonts check box. If this check box is selected, you may not be able to print.</li></ol>
The Emulation menu in the printer's Control Panel is set to a mode other than Auto or PS3 for the interface that you are using.	Change the mode setting to either Auto or PS3.

## Font and image problems

### The font on the printout is different from that on the screen.

Cause	What to do
The PostScript screen fonts are not installed.	The PostScript screen fonts must be installed on the computer that you are using. Otherwise, the font that you select is substituted by some other font for display on the screen.

### The printer fonts cannot be installed.

Cause	What to do
The Emulation menu in the printer's Control Panel is not set to P <sub>S</sub> 3 for the interface that you are using.	Change the Emulation menu setting to P <sub>S</sub> 3 for the interface that you are using, then try reinstalling the printer fonts again.

### The edges of texts and/or images are not smooth.

Cause	What to do
The resolution is set to Fast.	Change the Resolution setting to Quality on the Print Setting sheet (Mac OS 8.6 or 9.x) or Printer Features sheet (Mac OS X) in the Print dialog box.
The printer does not have sufficient memory.	Increase the printer memory.

## ***Problems printing via the network***

### **The printer does not print normally via the network interface.**

<b>Cause</b>	<b>What to do</b>
The Data Format setting on the PostScript Settings setup option page of the Print dialog box is different from the data format setting specified in the application (Mac OS 8.6 or 9.x).	If the file is created in an application that allows you to change the data format or encoding, such as Photoshop, make sure that the setting in the application matches that in the printer driver.
The network connection is something other than AppleTalk, and the Data Format setting is not set to ASCII.	If the network connection is something other than AppleTalk, make sure that the Data Format setting is set to ASCII.

## Undefined errors

### An undefined error occurs.

Cause	What to do
The version of the Mac OS that you are using is unsupported.	This printer's driver can only be used on Macintosh computers running Mac OS 8.6 or 9.x, and Mac OS X version 10.2.4 or later.
There is insufficient memory for printing.	<p>The Macintosh printer driver uses available memory in the system to process print data. Try one of the following to free up memory for printing:</p> <ol style="list-style-type: none"><li>(1) Reduce the RAM cache setting in the Memory control panel (Mac OS 8.6 or 9.x).</li><li>(2) Close applications that are not in use.</li><li>(3) Increase the memory allocation for the application that you are printing from (Mac OS 8.6 or 9.x).</li><li>(4) Turn off background printing.</li></ol>

---

## Problems Using Options

To confirm that your options are installed correctly, print a status sheet. See "Printing a Status Sheet" on page 304 for details.

## ***The message Invalid AUX/IF Card appears on the LCD panel***

---

<b>Cause</b>	<b>What to do</b>
The printer cannot read the installed optional interface card.	Turn off the computer, then remove the card. Make sure the interface card is of a supported model.

## ***Paper does not feed from the optional paper cassette***

---

<b>Cause</b>	<b>What to do</b>
The optional paper cassette unit may not be installed properly.	See “500-Sheet Universal Paper Cassette Unit A3” on page 206 for instructions on installing the optional paper cassette unit.
The paper source setting may not be correct.	Make sure you have selected the proper paper source in your application.
There may be no paper in the paper cassette.	Load paper.
Too many sheets may be loaded in the paper cassette.	Make sure that you have not tried to load in with too many sheets of paper. The cassette can hold a maximum of 500 sheets of 75 g/m paper.
The paper size is not set correctly.	Make sure that the correct paper size is selected in the Tray menu on the control panel.

## ***Feed jam when using the optional paper cassette***

---

Cause	What to do
Paper is jammed at the optional paper cassette.	See “Clearing Jammed Paper” on page 277 to clear jammed paper.

---

## ***An installed option cannot be used***

---

Cause	What to do
The installed option is not defined in the printer driver.	See “Making the Optional Settings” on page 63.

---

## ***Correcting USB Problems***

If you are having difficulties using the printer with an USB connection, see if your problem is listed below, and take any recommended actions.

### ***USB connections***

USB cables or connections can sometimes be the source of USB problems. Try one or both of these solutions:

- ❑ For best results, you should connect the printer directly to the computer’s USB port. If you must use multiple USB hubs, we recommended that you connect the printer to the first-tier hub.

## ***Windows operating system***

Your computer must be a model preinstalled with Windows Me, 98, XP, or 2000, a model that was preinstalled with Windows 98 and upgraded to Windows Me, or a model that was preinstalled with Windows Me, 98, or 2000 and upgraded to Windows XP. You may not be able to install or run the USB printer driver on a computer that does not meet these specifications or that is not equipped with a built-in USB port.

For details about your computer, contact your dealer.

## ***Printer software installation***

Incorrect or incomplete software installation can lead to USB problems. Take note of the following and perform the recommended checks to ensure proper installation.

### ***Checking printer software installation for Windows 2000 and XP***

When using Windows XP or 2000, you must follow the steps in the *Setup Guide* that shipped with the printer to install the printer software. Otherwise, Microsoft's Universal driver may be installed instead.

Follow these steps to check if the Universal driver has been installed:

1. Open the Printers folder and right-click the icon of your printer.
2. Click Printing Preferences on the shortcut menu that appears, and then right-click anywhere in the driver.

If **About** is displayed in the shortcut menu that appears, click it. If a message box with the words “Unidrv Printer Driver” appears, you must reinstall the printer software as described in the *Setup Guide*. If **About** is not displayed, the printer software has been installed correctly.

**Note:**

*If the Digital Signature Not Found dialog box (Windows 2000) or Software Installation dialog box (Windows XP) appears during the installation process, click **Yes** (Windows 2000) or **Continue Anyway** (Windows XP). If you click **No** (Windows 2000) or **STOP Installation** (Windows XP), you will have to install the printer software again.*

## **Checking printer software in Windows Me and 98**

If you canceled the plug-and-play driver installation in Windows Me or 98 before the procedure was complete, the USB printer device driver or the printer software may be incorrectly installed.

Follow these steps to ensure that the driver and printer software are installed correctly:

**Note:**

*The screen shots shown in this section are taken from Windows 98. Windows Me screens may differ slightly.*

1. Click **Start**, point to **Settings**, and then click **Printers**. Make sure that the icon for your printer appears in the **Printers** window.

Select the icon for your printer, and then click Properties on the File menu.



2. Click the Details tab.








If USB Printer or EPSON EPL-N7000 appears under Other devices, the printer software is not installed correctly. Proceed to step 5.

If neither USB Printer nor EPSON EPL-N7000 appears under Other devices, click Refresh or unplug the USB cable from the printer, and then plug it into the printer again. Once you've confirmed that these items appear, proceed to step 5.

5. Under Other devices, select USB Printer or EPSON EPL-N7000 and click Remove. Then click OK.

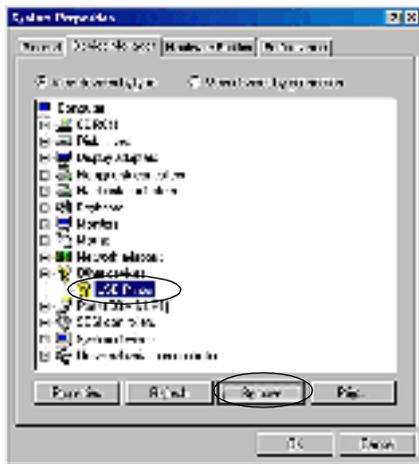

When the following dialog box appears, click OK, and then click OK to close the System Properties dialog box.



6. Uninstall the printer software as explained in “Uninstalling the Printer Software” on page 90. Then turn the printer off, restart your computer, and reinstall the printer software as described in the *Setup Guide*.

---

## **Status and Error Messages**

This section contains a list of messages shown on the LCD panel, giving a brief description of each message and suggestions for correcting the problem.

Note that not every message shown on the LCD panel indicates a problem. The  mark displayed to the left of the warning message indicates that multiple warnings have occurred. To check all the warning messages, press the  Down button to display the Status menu, and then press the  Enter button.

### ***Cancel All Print Job***

The printer is canceling all print jobs in the printer memory, including jobs the printer is currently receiving or printing. This message appears when the  Cancel Job button is pressed down for more than 2 seconds.

### ***Cancel Print Job***

The printer is canceling the current print job. This message appears when the  Cancel Job button is pressed and released within 2 seconds.

### ***Can't Print***

The print data is deleted because it is incorrect.

Make sure that the appropriate paper size is set and a printer driver for EPSON EPL-N7000 is used.

### *Can't Print Duplex*

The printer has encountered problems during duplex printing. Make sure you are using an appropriate type and size of paper for the Duplex Unit. The problem could also be a result of incorrect settings for the paper source that you are using. Pressing the  Start/Stop button will print the rest of the print job on only one side of the paper. Press the  Cancel Job button to cancel the print job.

### *Cart Near Empty*

The printer is running out of toner. It is recommended that you replace the imaging cartridge. See “Replacing the Imaging Cartridge” on page 257 for instructions.

### *Check Paper Size*

The paper size setting is different from the size of paper loaded in the printer. Check to see if the correct size paper is loaded in the specified paper source.

To clear this error, select  Clear Warning from the control panel's Reset menu. See “Reset Menu” on page 410 for instructions.

### *Check Paper Type*

The media loaded in the printer does not match the paper type setting in the printer driver. Media that matches only the paper size setting will be used for printing.

To clear this error, select  Clear Warning from the control panel's Reset menu. See “Reset Menu” on page 410 for instructions.

### *Collate Disabled*

Printing by specifying the number of copies is no longer possible due to a lack of memory (RAM) or free disk space on the optional Hard Disk Drive. If this error occurs, print only one copy at a time.

To clear this error, select **Clear Warning** from the control panel's **Reset** menu. See "Reset Menu" on page 410 for instructions.

### *Duplex Mem Overflow*

There is not enough memory for duplex printing. The printer prints only on the front side and ejects the paper. To clear this error, follow the instructions below.

If **Off** is selected as the **Auto Cont** setting on the control panel's **Setup** menu, press the **Start/Stop** button to print on the back of the next sheet, or press the **Cancel Job** button to cancel the print job.

If **On** is selected as the **Auto Cont** setting on the control panel's **Setup** menu, printing continues automatically after a certain period of time.

### *Duplex Unit Open*

The upper or lower cover of the optional Duplex Unit is open. Close the covers.

### *Feed Jam*

A paper jam has occurred at the paper feeder. Remove the jammed paper.

### *Format Error ROM A*

An unformatted ROM module has been inserted.

To clear this error, either press the **Start/Stop** button or turn off the printer and remove the ROM module, then reinstall the ROM module. If that fails to clear the error, contact your dealer.

### *Formatting HDD*

The HDD is being formatted.

### *Form Data Canceled*

Unable to store form overlay data on the printer's optional Hard Disk Drive. Either the drive is full, or the maximum number of form overlay files has been reached. Delete any form overlay files that you no longer need, and then try storing the new overlay data again.

To clear this error, select `Clear Warnings` from the control panel's Reset menu. See "Reset Menu" on page 410 for instructions.

### *Form Feed*

The printer is ejecting paper due to a user request. This message appears when pressing the `Start/Stop` button once to put the printer offline, and then holding down the `Start/Stop` button for more than 2 seconds so as not to receive any form feed commands.

### *Hard Disk Full*

The optional Hard Disk Drive is full and you cannot save any data. Delete any unnecessary data from the Hard Disk Drive. To clear this error, select `Clear Warnings` from the control panel's Reset menu. See "Reset Menu" on page 410 for instructions.

### *HDD Check*

The printer is checking the Hard Disk Drive.

### *Image Cart ID Error*

The installed imaging cartridge cannot be used. Replace the imaging cartridge.

### *Image Card R/W Error*

An error occurred while reading or writing data on the imaging cartridge. Replace the imaging cartridge.

## *Image Optimum*

There is insufficient memory to print the page at the specified print quality. The printer automatically lowers the print quality so that it can continue printing. If the quality of the printout is not acceptable, try simplifying the page by limiting the number of graphics or reducing the number and size of fonts.

To clear this error, select `Clear Warnings` from the control panel's Reset menu. See "Reset Menu" on page 410 for instructions.

Turn the `Image Optimum` setting off on the control panel's Printing menu if you do not want the printer to automatically lower the print quality to continue printing.

You may need to increase the amount of printer memory to be able to print at the desired print quality for your document. For more information on adding memory, see "Memory modules" on page 381.

## *Install Imaging Cart*

The imaging cartridge is not installed in the printer.

Install the imaging cartridge. See "Replacing the imaging cartridge" on page 258.

## *Invalid AUX I/F Card*

This message means that the printer cannot communicate with the installed optional interface card. Turn off the printer, remove the card, and then reinstall it.

## *Invalid HDD*

Either the optional Hard Disk Drive is damaged or it cannot be used with this printer. Turn off the printer and remove the Hard Disk Drive.

### *Invalid PS3*

A PostScript 3 ROM module that cannot be used on this printer is installed. Turn off the printer and remove the module.

### *Invalid ROM A*

The printer cannot read the installed optional ROM module. Turn off the printer and remove the ROM module.

### *Mailbox x Full (x=1, 2, 3, 4)*

The indicated output tray of the optional 4-Bin Mailbox is full, and the printer cannot output paper to the tray anymore. Remove the printouts on the tray.

### *Mailbox Missing*

The optional 4-Bin Mailbox is not properly installed or mounted. Mount it properly on the printer, or reinstall it.

### *Manual Feed xxx*

The manual feed mode is specified for the current print job. Make sure the paper size indicated by xxx is loaded, and then press the  Start/Stop button.

For details on the manual feed mode, see “Manually feeding paper” on page 19.

### *Mem Overflow*

The printer has insufficient memory to execute the current task. Press the  Start/Stop button on the control panel to resume printing. Or press the  Cancel Job button to cancel the print job.

### *Menus Locked*

This message appears if you try to change the printer's settings through the control panel when the buttons are locked. You can unlock them by using the EPSON WinAssist or WebAssist utility. Refer to the *Network Guide* for information.

### *Need Memory*

The printer has insufficient memory to complete the current print job.

To clear this error message, select **Clear Warnings** from the control panel's **Reset** menu. See "Reset Menu" on page 410 for instructions.

To prevent this problem from happening again, add more memory to your printer as described in "Memory Module" on page 243 or reduce the resolution of the image to be printed.

### *Offline*

The printer is not ready to print. Press the **Start/Stop** button. The level of remaining toner is also indicated on the right side of this message.

### *Optional RAM Error*

The optional memory module may be corrupted or incorrect. Replace it with a new one.

### *Outbin Select Error*

The specified paper size or paper type cannot be output to the optional 4-Bin Mailbox. Change the paper size or paper type, or select the face-down tray as the output tray.

### *Paper Cassette Jam*

A paper jam has occurred in the optional 500-Sheet Universal Paper Cassette Unit A3. Remove the jammed paper from the unit. See “Clearing Jammed Paper” on page 277 for instructions.

### *Paper Jam*

A paper jam has occurred in the printer. See “Clearing Jammed Paper” on page 277 for instructions.

### *Paper Jam in Duplex*

A paper jam has occurred in the optional Duplex Unit. Remove the jammed paper from the unit. See “Clearing Jammed Paper” on page 277 for instructions.

### *Paper Jam in Mailbox*

A paper jam has occurred in the optional 4-Bin Mailbox. Remove the jammed paper. See “Clearing Jammed Paper” on page 277 for instructions.

### *Paper Out XXX YYY*

There is no paper in the specified paper source (XXX). Load paper of the indicated size (YYY) into the paper source.

### *Paper Set XXX YYY*

The paper loaded in the specified paper source (XXX) does not match the required paper size (YYY). Replace the loaded paper with the correct size paper and press the  Start/Stop button to resume printing. Or press the  Cancel Job button to cancel the print job.

If you press the  Start/Stop button without replacing the paper, the printer will print on the loaded paper even though it does not match the required size.

### *Printer Open*

The front cover is open. To clear this error, close the cover.

### *Print Overrun*

The required time to process the print data exceeded the print engine speed because the current page is too complex. Press the **O** Start/Stop button to resume printing. Or press the **⏏** Cancel Job button to cancel the print job. If this message appears again, select **On** as the Page Protect setting in the control panel's Setup menu.

If you continue to receive this message when printing a particular page, try simplifying the page by limiting the number of graphics or reducing the number and size of fonts.

You can also add more memory to the printer as described in "Memory modules" on page 381.

### *PS3 Hard Disk full*

The memory allocated for writing PostScript 3 commands on the optional Hard Disk Drive is full.

To clear this error, select **Clear Warning** from the control panel's Reset menu. See "Reset Menu" on page 410 for instructions.

### *RAM Check*

The printer is checking the RAM.

### *Ready*

The printer is ready to receive data and print. The level of remaining toner is also indicated on the right side of this message.

### *Replace Toner*

The imaging cartridge is out of toner and need to be replaced.

See “Replacing the imaging cartridge” on page 258 for instructions.

### *Reserve JobCanceled*

The printer cannot store the data of your print job using the Reserve Job function. The maximum number of print jobs stored in the printer’s Hard Disk Drive has been reached, or the drive has no more memory available to store a new job. To store a new print job, delete a previously stored job. Also, if you have any Confidential Jobs stored, printing those jobs will make more memory available.

To clear this error, select `Clear Warning` from the control panel’s Reset menu. See “Reset Menu” on page 410 for instructions.

### *Reset*

The printer’s current interface has been reset and the buffer has been cleared. However, other interfaces are still active and retain their settings and data.

### *Reset All*

All printer settings have been reset to the default configuration, or to the last settings that were saved.

### *Reset to Save*

A control panel menu setting was changed while the printer was printing. Press the `○ Start/Stop` button to clear this message. The setting will become effective after printing has finished.

Alternatively you can clear this message by performing `Reset` or `Reset All` from the control panel. However, the print data will be deleted.

### *ROM Check*

The printer is checking the ROM.

## *Self Test*

The printer is currently performing a self test and initialization.

## *Service Req xyyyy*

A controller error or a print engine error has been detected. Turn off the printer. Wait at least 5 seconds and then turn it back on. If the error message still appears, write down the error number listed on the LCD panel (xyyyy), turn off the printer, unplug the power cord, and then contact a qualified service representative.

## *Sleep*

The printer is currently in the power-save mode. This mode is canceled when the printer receives print data or the Reset button is pressed.

## *Toner Low*

The imaging cartridge has less than 10% of toner remaining.

You can continue to print until the **Replace Toner** error message appears. It is recommended that you wait until this message appears before replacing the imaging cartridge as remaining toner may spill during replacement procedure. When printouts become faint, see “Replacing the imaging cartridge” on page 258 for instructions on replacing the imaging cartridge.

### *Note:*

*Replacement of the imaging cartridge is not yet necessary when the Toner Low message appears. Toner may remain in the imaging cartridge and spill out if you remove the imaging cartridge at this level. Replace the imaging cartridge when the **Replace Toner** message appears.*

## *Unable Clear Error*

The printer cannot clear an error message because the error status still remains. Try solving the problem again.

### *Warming Up*

The printer is warming up the machine to be ready to print.

### *Write Error ROM A*

The printer is unable to write data into the ROM module correctly. Check if the ROM module is connected to its slot securely, or turn off the printer and uninstall the ROM module.

### *Writing ROM A*

The printer is writing data into the ROM module in the ROM slot A.

---

## ***Canceling Printing***

You can cancel printing from your computer by using the printer driver.

To cancel a print job before it is sent from your computer, see “Canceling Printing” on page 89.

## ***Using the Cancel Job button***

The  Cancel Job button on your printer is the quickest and easiest way to cancel printing. Pressing this button cancels the current print job. Pressing the  Cancel Job button for more than two seconds deletes all jobs from the printer memory, including jobs the printer is currently receiving or printing.

## Using the Reset menu

Selecting `Reset` from the control panel's Reset menu stops printing, clears the print job being received from the active interface, and clears any errors that may have occurred for this interface.

Follow these steps to reset the printer:

1. Press the  Enter button to access the control panel menus.
2. Press the  Down button several times until `Reset Menu` appears on the LCD panel, and then press the  Enter button.
3. Press the  Down button once to display `Reset`.
4. Press the  Enter button. Printing is canceled, and the printer is ready to receive a new print job.

## Chapter 10

---

### **Contacting Customer Support**

If your EPSON product is not operating properly and you cannot solve the problem using the troubleshooting information in your product documentation, contact customer support services for assistance. If customer support for your area is not listed below, contact the dealer where you purchased your product.

Customer support will be able to help you much more quickly if you give them the following information:

- Product serial number  
(The serial number label is usually on the back of the product.)
- Product model
- Product software version  
(Click **About**, **Version Info**, or similar button in the product software.)
- Brand and model of your computer
- Your computer operating system name and version
- Names and versions of the software applications you normally use with your product

## ***For users in Latin America***

Electronic support services are available 24 hours a day at the following web sites:

<b>Service</b>	<b>Access</b>
World Wide Web	From the Internet, you can reach EPSON's Latin American web site at <a href="http://www.latin.epson.com">http://www.latin.epson.com</a>  In Brazil, you can reach Epson at <a href="http://www.epson.com.br">http://www.epson.com.br</a>

To speak with a customer support representative, call one of the numbers below:

<b>Country</b>	<b>Telephone number</b>
Argentina	(54 11) 4346-0300
Brazil	(55 11) 4196-6350
Chile	(562) 230-9500
Colombia	(571) 523-5000, (1-800) 377-6627
Costa Rica	(506) 210-9555
México México, D.F. Resto del país	(5255) 5328-4008, 01-800-50-607-00
Perú	(511) 224-2336
Venezuela	(52-212) 240-1111

## ***For users in Australia***

EPSON Australia wishes to provide you with a high level of customer service. In addition to your product documentation, we provide the following sources for obtaining information:

## *Your Dealer*

Don't forget that your dealer can often help identify and resolve problems. The dealer should always be the first call for advise on problems; they can often solve problems quickly and easily as well as give advise on the next step to take.

## *Internet URL <http://www.epson.com.au>*

Access the EPSON Australia World Wide Web pages. Worth taking your modem here for the occasional surf! The site provides a download area for drivers, EPSON contact points, new product information and technical support (e-mail).

## *EPSON Faxback Service*

EPSON Faxback service will fax you the latest specifications for most EPSON products offered in Australia. Phone (02) 9903 9075 and the system will guide you through a number of choices before faxing the information to your fax machine.

## *EPSON Helpdesk*

EPSON Helpdesk is provided as a final backup to make sure our clients have access to advise. Operators on the Helpdesk can aid you in installing, configuring and operating your EPSON product. Our Pre-sales Helpdesk staff can provide literature on new EPSON products and advise where the nearest dealer or service agent is located. Many types of queries are answered here.

The Helpdesk numbers are:

Phone:	1300 361 054
Fax:	(02) 9903 9189

We encourage you to have all the relevant information on hand when you ring. The more information you prepare, the faster we can help solve the problem. This information includes your EPSON product documentation, type of computer, operating system, application programs, and any information you feel is required.

## ***For users in Singapore***

Sources of information, support, and services available from Epson Singapore are:

### *World Wide Web (<http://www.epson.com.sg>)*

Information on product specifications, drivers for download, Frequently Asked Questions (FAQ), Sales Enquiries, and Technical Support via e-mail are available.

### *Epson HelpDesk (Phone: (65) 6586 3111)*

Our HelpDesk team can help you with the following over the phone:

- Sales enquiries and product information
- Product usage questions or problem
- Enquiries on repair service and warranty

## ***For users in Thailand***

Contact for information, support, and services are:

### *World Wide Web (<http://www.epson.co.th>)*

Information on product specifications, drivers for download, Frequently Asked Questions (FAQ), and e-mail are available.

### *Epson Hotline (Phone: (66)2-670-0333)*

Our Hotline team can help you with the following over the phone:

- Sales enquiries and product information
- Product usage questions or problem
- Enquiries on repair service and warranty

### ***For users in Indonesia***

Contacts for information, support, and services are:

#### *World Wide Web (<http://www.epson.co.id>)*

- Information on product specifications, drivers for download
- Frequently Asked Questions (FAQ), Sales Enquiries, questions through e-mail

#### *Epson Hotline*

- Sales enquiries and product information
- Technical support

Phone                   (62) 21-572 4350

Fax                      (62) 21-572 4357

## *EPSON Service Center*

Jakarta	Mangga Dua Mall 3rd floor No 3A/B Jl. Arteri Mangga Dua, Jakarta Phone/Fax: (62) 21-62301104
Bandung	Lippo Center 8th floor Jl. Gatot Subroto No.2 Bandung Phone/Fax: (62) 22-7303766
Surabaya	Gd. Bumi Mandiri 7th floor Jl. Jend. Basuki Rachmat No. 129-137 Surabaya Phone/Fax: (62) 31-5479541
Yogyakarta	Hotel Natour Garuda Jl. Malioboro No. 60 Yogyakarta Phone: (62) 274-566353/22-143
Medan	Wisma HSBC 4th floor Jl. Diponegoro No. 11 Medan Phone/Fax: (62) 61-4516173

## ***For users in Hong Kong***

To obtain technical support as well as other after-sales services, users are welcome to contact EPSON Hong Kong Limited.

### *Internet Home Page*

EPSON Hong Kong has established a local home page in both Chinese and English on the Internet to provide users with the following information:

- ❑ Product information
- ❑ Answers to Frequently Asked Questions (FAQs)
- ❑ Latest versions of EPSON product drivers

Users can access our World Wide Web home page at:

<http://www.epson.com.hk>

### ***Electronic Bulletin Board System***

An electronic bulletin board system (BBS) is also available to obtain product information and the latest versions of product drivers. You can log on to the following number for the BBS service:

BBS: (852) 2827-4244

### ***Technical Support Hotline***

You can also contact our technical staff at the following telephone and fax numbers:

Phone: (852) 2585-4399

Fax: (852) 2827-4383

## ***For users in Malaysia***

Contacts for information, support, and services are:

***World Wide Web*** (<http://www.epson.com.my>)

- ❑ Information on product specifications, drivers for download
- ❑ Frequently Asked Questions (FAQ), Sales Enquiries, questions through e-mail

## *Epson Trading (M) SDN. BHD*

Head Office.

Phone: 603-56288288

Fax: 603-56212088

## *Epson Helpdesk*

- Sales enquiries and product information (Infoline)

Phone: 603-56288222

- Enquiries on repair services & warranty, product usage and technical support (Techline)

Phone: 603-56288333

## ***For users in India***

Contacts for information, support, and services are:

*World Wide Web (<http://www.epson.co.in>)*

Information on product specifications, drivers for download, Frequently Asked Questions (FAQ), Products Enquiry, and Technical Query are available.

*Epson India Head Office - Bangalore:*

Phone: 5321 266-70

Fax: 5581439/5321095

*Epson India Regional Offices:*

Mumbai	Phone: 8261516-17 Fax: 8257287
Delhi	Phone: 6447201-06 Fax: 6447205
Chennai	Phone: 8203940/41 Fax: 8272463
Kolkata	Phone: 2871355/56 Fax: 2871357
Hyderabad	Phone: 6329335/36
Cochin	Phone: 361638/362677 Fax: 352940
Pune	Phone: 4335460-ext 214 Fax: 4330881
Ahmedabad	Phone: 6407176/77

*Toll Free Telephone Support*

To learn more about Epson products or to avail service support, please call 1600 440011. This is a toll-free number and can be accessed (9 A.M to 9 P.M) anywhere in the country.

## ***For users in the Philippines***

To obtain technical support as well as other after sales services, users are welcome to contact the EPSON Philippines Corporation at the telephone and fax numbers and e-mail address below:

Phone: (63) 2-813-6567

Fax: (63) 2-813-6545

E-mail: [customersupport@epc.epson.com.ph](mailto:customersupport@epc.epson.com.ph)

**World Wide Web** (<http://www.epson.com.ph>)

Information on product specifications, drivers for download, Frequently Asked Questions (FAQ), and E-mail Enquiries are available.

**Epson Helpdesk** (Phone: (63) 2-813-6567)

Our Hotline team can help you with the following over the phone:

- Sales enquiries and product information
- Product usage questions or problems
- Enquiries on repair service and warranty



# Appendix A

---

## **Technical Specifications**

Paper .....	366
Available paper types .....	366
Paper that should not be used .....	367
Specifications .....	368
Printable area .....	370
Printer .....	371
General .....	371
Environmental .....	373
Mechanical .....	373
Electrical .....	373
Safety and approvals .....	374
PostScript .....	376
Interfaces .....	376
Parallel interface .....	376
USB interface .....	376
Ethernet interface .....	377
Options and Consumable .....	378
500-Sheet Universal Paper Cassette Unit A3 .....	378
4-Bin Mailbox .....	379
Duplex Unit .....	380
Hard Disk Drive .....	380
Memory modules .....	381
Imaging cartridge .....	381
Safety Information .....	382
Safety Precautions .....	382
Important Safety Instructions .....	384
Power On/Off Cautions .....	385
Warnings, Cautions, and Notes .....	385



---

## **Paper**

Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, EPSON cannot guarantee the quality of any type of paper. Always test samples of paper stock before purchasing large quantities or printing large jobs.

### **Available paper types**

<b>Paper type</b>	<b>Description</b>
Plain paper	General copier paper (Recycled paper is acceptable*)
Envelopes	No paste and no tape  No plastic window (unless specifically designed for laser printers)  Weight: 70 to 105 g/m
Labels	The backing sheet should be covered completely, with no gaps between each label
Thick paper	Weight: 90 to 163 g/m
Transparencies	Transparencies for monochrome laser printers or copiers can be used.
Colored paper	Non-coated
Paper with letterhead	Paper and ink of letterheads must be compatible with laser printers

\* Use recycled paper only under normal temperature and humidity conditions. Poor quality paper may reduce print quality, cause paper jams and other problems.

### **Paper that should not be used**

You cannot use the following paper in this printer. It may cause printer damage, paper jams, and poor print quality.

- ❑ Media meant for other black-and-white laser printers, color laser printers, color copiers, black-and-white copiers, or ink jet printers
- ❑ Previously printed paper by any other black-and-white laser printers, color laser printers, color copiers, black-and-white copiers, ink jet printers, or thermal transfer printers
- ❑ Carbon paper, carbonless paper, thermal-sensitive paper, pressure-sensitive paper, acid paper, or paper that uses high-temperature-sensitive ink (around 210 C)
- ❑ Labels that peel easily or labels that do not cover the backing sheet completely
- ❑ Coated paper or special surface-colored paper
- ❑ Paper that has binder holes or is perforated
- ❑ Paper that has glue, staples, paper clips, or tape on it
- ❑ Paper that attracts static electricity
- ❑ Moist or damp paper
- ❑ Paper of uneven thickness
- ❑ Overly thick or thin paper
- ❑ Paper that is too smooth or too rough
- ❑ Paper that is different on the front and back
- ❑ Paper that is folded, curled, wavy, or torn
- ❑ Paper of irregular shape, or paper that does not have right angle corners

# Specifications

## Plain paper

Weight:	60 to 90 g/m , 16 to 24 lb
Size:	A3 (297 × 420 mm) A4 (210 × 297 mm) A5 (148 × 210 mm) B4 (257 × 364 mm) B5 (182 × 257 mm) ISO-B5 (250 × 176 mm) Letter (216 × 279 mm, 8.5 × 11 in.) Legal (216 × 356 mm, 8.5 × 14 in.) Half-Letter (140 mm × 216 mm, 5.5 × 8.5 in.) Government Letter (203 × 267 mm, 8.0 × 10.5 in.) Government Legal (216 × 330 mm, 8.5 × 13 in.) Executive (184 × 267 mm, 7.25 × 10.5 in.) F4 (210 × 330 mm) B (Ledger) (279 × 432 mm) Custom (86 × 139.7 mm to 297 × 432 mm)

Paper Sources:	MP tray for all sizes standard cassette for A3, A4, B4, B5, Letter, Legal, Government Letter, B(Ledger) optional Universal Cassette Unit for A3, A4, B4, B5, Letter, Legal, Government Letter, B(Ledger)
----------------	---

## ***Envelopes***

Weight:	70 to 105 g/m , 18.6 to 27.9 lb
Size:	Monarch (3 7/8 × 7 1/2 in.) Commercial 10 (4 1/8 × 9 1/2 in.) DL (110 × 220 mm) C5 (162 × 1229 mm) C6 (114 × 163 mm) International B5 (176 × 250 mm, 7 × 9.8 in.) Custom (86 × 139.7 mm to 297 × 432 mm)
Paper Source:	MP tray only

## ***Labels***

Size:	A4 (210 × 297 mm) Letter (216 × 279 mm, 8.5 × 11 in.)
Paper Source:	MP tray only

## ***Thick paper***

Weight:	90 to 163 g/m , 23.9 to 43.4 lb
---------	---------------------------------

Size:	A3 (297 × 420 mm) A4 (210 × 297 mm) A5 (148 × 210 mm) B4 (257 × 364 mm) B5 (182 × 257 mm) Letter (216 × 279 mm, 8.5 × 11 in.) Legal (216 × 356 mm, 8.5 × 14 in.) Half-Letter (140 mm × 216 mm, 5.5 × 8.5 in.) Government Letter (203 × 267 mm, 8.0 × 10.5 in.) Government Legal (216 × 330 mm, 8.5 × 13 in.) Executive (184 × 267 mm, 7.25 × 10.5 in.) F4 (210 × 330 mm) B (Ledger) (279 × 432 mm) Custom (86 × 139.7 mm to 297 × 432 mm)
Paper Source:	MP tray only

## ***EPSON Laser Transparencies***

Size:	A4 (210 × 297 mm) Letter (216 mm × 279 mm, 8.5 × 11 in.)
Paper Source:	MP tray only

## ***Printable area***

4-mm minimum margin on all sides

***Note:***

- The printable area varies, depending on the emulation mode in use.*
- When using ESC/Page language, there is 5-mm minimum margin on all sides.*

---

# Printer

## General

Printing method:	Laser beam scanning and dry electrophotographic process
Resolution:	600 dpi, 300dpi
Continuous printing speed:	
A4:	35 pages per minute or less
Letter:	34.5 pages per minute or less
First print (with A4/Letter):	Less than 10 seconds from the MP tray Less than 10 seconds from the standard cassette
Warm-up time:	About 70 seconds or less at normal temperature
Paper feed:	Automatic or manual feed
Paper feed alignment:	Center alignment for all sizes
Input paper supply:	
MP tray:	Up to 200 sheets of plain paper (20 lb) Up to 20 sheets of envelopes, labels, thick paper, and transparencies
Standard cassette:	Up to 500 sheets of plain paper (20 lb)
Paper output capacity:	Up to 500 sheets (larger than B5/EXE)
Internal emulation:	HP listed LaserJet 4 emulation (LJ4 mode) HP-GL/2 emulation (GL2 mode)

ESC/P2 24-pin printer emulation  
(ESCP2 mode)

ESC/P 9-pin printer emulation (FX  
mode)

IBM Proprinter emulation (I239X mode)

Resident fonts: 84 scalable fonts, and 7 bitmap fonts

RAM: 32 MB, expandable up to 544 MB

## ***Environmental***

Temperature:	In use:	10 to 35 C (50 to 95 F)
	Not in use:	0 to 35 C (32 to 95 F)
Humidity:	In use:	15 to 85% RH
	Not in use:	10 to 85% RH
Altitude:	2,500 meters (7,263 feet) or less	

## ***Mechanical***

Dimensions and weight:	Height:	42.2 cm (16.6 in.)
	Width:	53.9 cm (21.2 in.)
	Depth:	56.6 cm (22.3 in.)
	Weight:	Approx. 28 kg (61.7 lb) without consumable installed
Durability:	Printing Volume:	
	Maximum	100,000 sheets/month
	Average	15,000 sheets/month

## ***Electrical***

	<b>110 V to 120 V Model (Model L390A)</b>	<b>220 to 240 V Model (Model L390A)</b>
Voltage	110 V-120 V 10%	220 V-240 V 10%
Rated frequency	50 Hz / 60 Hz 3 Hz	50 Hz / 60 Hz 3 Hz
Rated current	9.5 A	5.5 A

**A**

			110 V to 120 V Model (Model L390A)	220 to 240 V Model (Model L390A)
Power consumption	During printing*	Maximum	1100 W	1100 W
		Average	700 Wh	715 Wh
	During standby mode		165 Wh	175 Wh
	Average			
Sleep mode		21 Wh	20 Wh	

\* Includes optional paper cassette unit.

## ***Safety and approvals***

U.S. model:

Safety

UL 60950  
CSA No.60950

EMC

FCC Part 15 Subpart B Class B  
CSA C108.8 Class B

European model:

Low Voltage Directive 73/23/EEC EN 60950  
EMC Directive 89/336/EEC EN 55022 Class B  
EN 55024  
EN 61000-3-2  
EN 61000-3-3

Australian model:

EMC

AS/NZS 3548 Class B

## ***Laser safety***

This printer is certified as a Class 1 laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the printer does not produce hazardous laser radiation.

Since radiation emitted by the laser is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation.

## ***CDRH regulations***

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration implemented regulations for laser products on August 2, 1976. Compliance is mandatory for products marketed in the United States. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

This laser product conforms to the applicable  
requirement of 21 CFR  
Chapter I, subchapter J.

SEIKO EPSON CORP.  
Hirooka Office  
80 Hirooka, Shiojiri-shi, Nagano-ken,  
Japan

**A**

# **PostScript**

Language

Adobe PostScript 3

Emulation name

in PJL: POSTSCRIPT

in EJL: PS

AppleTalk protocol

Entity Type: LaserWriter

Emulation Type: POSTSCRIPT-00

---

## **Interfaces**

### **Parallel interface**

Use the IEEE 1284-I compliant parallel interface connector.

ECP mode/Nibble mode

### **USB interface**

USB 1.1

**Note:**

*Only computers equipped with a USB connector and running Windows Me, 98, XP, or 2000 support the USB interface.*

## ***Ethernet interface***

You can use an IEEE 802.3 100BASE-TX/10 BASE-T straight-through shielded, twisted-pair interface cable with an RJ45 connector.

---

## **Options and Consumable**

### **500-Sheet Universal Paper Cassette Unit A3**

Product number:	C12C813672*
Paper size:	A3, A4, B4, B5, Letter, Legal, Government Letter, B(Ledger)
Paper weight:	60 to 90 g/m (16 to 24 lb)
Paper feed:	One paper cassette mounted Automatic feed delivery system Cassette capacity up to: 500 sheets (75 g/m ) 550 sheets (64 g/m ) (Maximum height: 57 mm)
Paper types:	Plain paper
Power supply:	DC 5V and 24V supplied by the printer
Dimensions and weight:	
Height:	133 mm (5.2 in.)
Width:	512 mm (20.2 in.)
Depth:	551 mm (21.7 in.)
Weight:	9.2 kg (20.3 lb)

\* This product conforms to CE marking requirements in accordance with EC Directive 89/336/EEC.

## 4-Bin Mailbox

Product number:	C12C813692*
Number of sheets output:	50 sheets for each bin
Paper size:	Regular paper sizes or user-defined paper sizes (182 × 257 mm to 297 × 432 mm)
Paper types:	Plain paper
Dimensions and weight:	
Height:	335 mm (13.2 in.)
Width:	513 mm (20.2 in.)
Depth:	159 mm (6.3 in.)
Weight:	5.5 kg (12.1 lb)

\* This product conforms to CE marking requirements in accordance with EC Directive 89/336/EEC.

## **Duplex Unit**

Product number:	C12C813682*
Paper size:	A3, A4, A5, B4, B5, Letter, Legal, Half Letter, Government Letter, Government Legal, Executive, F4, B(Ledger)
Paper types:	Plain paper
Dimensions and weight:	
Height:	280 mm (11.0 in.)
Width:	100 mm (3.9 in.)
Depth:	415 mm (16.3 in.)
Weight:	2.0 kg (4.4 lb)

\* This product conforms to CE marking requirements in accordance with EC Directive 89/336/EEC.

## **Hard Disk Drive**

Product number:	C12C824061*
Capacity:	20 GB

\* This product conforms to CE marking requirements in accordance with EC Directive 89/336/EEC.

## **Memory modules**

DRAM type:	Synchronous Dynamic RAM Double In-line memory module (SDRAM DIMM)
Memory size:	32 MB, 64 MB, 128 MB, 256 MB, or 512 MB
CAS Latency	CL = 2
Type:	168-pin type, 64 bit, 3.3 V, with SPD* PC 100 compliant
Dimensions:	Within 134 × 36 mm with a thickness of 10 mm A height of less than 40 mm

- \* SPD stands for Serial Presence Detect, a chip residing on the memory module that contains information about the size, speed, and other specifications of the memory as well as manufacturer information that can be retrieved by the motherboard.

## **Imaging cartridge**

Product number:	S051100*
Storage temperature:	0 to 35 C (32 to 95 F)
Storage humidity:	35 to 85% RH
Life:	Average of 15,000 pages (under the conditions of A4 size paper, continuous printing, and 5% print ratio)

- \* This product conforms to CE marking requirements in accordance with EC Directive 89/336/EEC.

The actual number of pages you can print with an imaging cartridge varies depending on the type of printing.




---

## Safety Information


### Safety Precautions

Be sure to follow these precautions carefully to ensure safe, efficient operation:

- ❑ Because the printer weighs approximately 28.0 kg (61.7 lb) without the imaging cartridge installed, one person should not lift or carry it. Two people should carry the printer, lifting it by the correct positions as shown below.

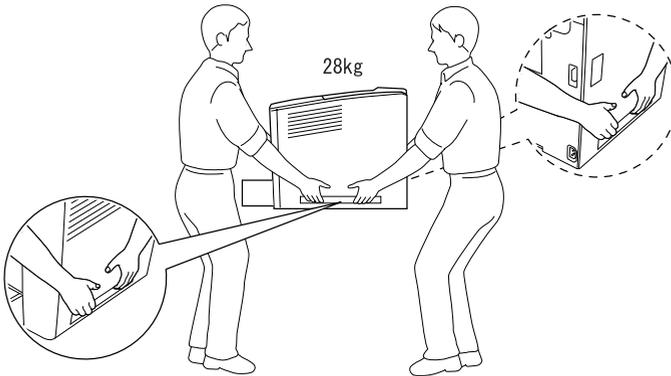

Be careful not to touch the fuser unit which is marked **CAUTION HOT SURFACE**, or the surrounding areas. If the printer has been in use, the fuser unit and the surrounding areas may be very hot.

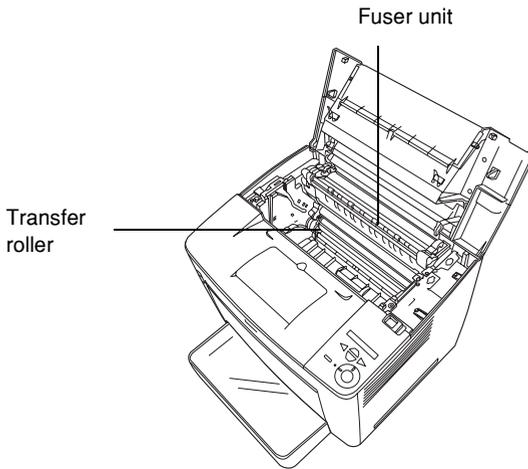

- ❑ Do not insert your hand deep into the fuser unit, as some components are sharp and may cause injury.
- ❑ Avoid touching the components inside the printer unless instructed to do so in this guide.
- ❑ Never force the printer's components into place. Although the printer is designed to be sturdy, rough handling can damage it.
- ❑ When handling an imaging cartridge, always place it on a clean, smooth surface.
- ❑ Do not attempt to modify an imaging cartridge or take it apart. It cannot be refilled.
- ❑ Do not touch the toner. Keep the toner away from your eyes.

**B**

- ❑ Do not dispose of used imaging cartridge in fire, as it can explode and cause injury. Dispose of it according to local regulations.
- ❑ If toner is spilled, use a broom and dustpan or a damp cloth with soap and water to clean it up. Because the fine particles can cause a fire or explosion if they come into contact with a spark, do not use a vacuum cleaner.
- ❑ Wait at least one hour before using an imaging cartridge after moving it from a cool to a warm environment to prevent damage from condensation.
- ❑ Be sure to keep consumables out of the reach of children.
- ❑ Do not leave jammed paper inside the printer. This can cause the printer to overheat.
- ❑ Avoid sharing outlets with other appliances.
- ❑ Use only an outlet that meets the power requirements of this printer.

## ***Important Safety Instructions***

- ❑ Connect your printer to an electrical outlet that meets the power requirements of this printer. Your printer's power requirements are indicated on a label attached to the printer. If you are not sure of the power supply specifications in your area, contact your local power company or consult your dealer.
- ❑ If you are unable to insert the AC plug into the electrical outlet, contact an electrician.

- ❑ Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage that requires repair by a qualified service representative.

## **ENERGY STAR<sup>®</sup> Compliance**



As an International ENERGY STAR<sup>®</sup> Partner, EPSON has determined that this product meets the International ENERGY STAR<sup>®</sup> Program guidelines for energy efficiency.

The International ENERGY STAR<sup>®</sup> Office Equipment Program is a voluntary partnership with the computer and office equipment industry to promote the introduction of energy-efficient personal computers, monitors, printers, fax machines, copiers, and scanners, in an effort to reduce air pollution caused by power generation.

## **Power On/Off Cautions**

Do not turn off the printer:

- ❑ After turning on the printer, wait for about 70 seconds until **Ready** appears on the LCD panel.
- ❑ While the Ready light is flashing
- ❑ While the Data light is on or flashing
- ❑ While printing

## **Warnings, Cautions, and Notes**



### **Warnings**

*must be followed carefully to avoid bodily injury.*

***Cautions***

*must be observed to avoid damage to your equipment.*

***Notes***

*contain important information and useful tips on the operation of your printer.*

## Appendix B

---

### **Functions of the Control Panel**

Using the Control Panel Menus . . . . .	388
When to make control panel settings . . . . .	388
How to access the control panel menus . . . . .	388
Printing and Deleting Reserve Job Data . . . . .	392
Using the Quick Print Job Menu . . . . .	392
Using the Confidential Job Menu . . . . .	393
Control Panel Menus . . . . .	394
Control panel menu summary . . . . .	394
Information Menu . . . . .	397
Tray Menu . . . . .	399
Emulation Menu . . . . .	401
Printing Menu . . . . .	401
Setup Menu . . . . .	404
Quick Print Job Menu . . . . .	409
Confidential Job Menu . . . . .	410
Reset Menu . . . . .	410
Parallel Menu . . . . .	411
USB Menu . . . . .	412
Network Menu . . . . .	413
AUX Menu . . . . .	413
LJ4 Menu . . . . .	414
GL2 Menu . . . . .	417
PS3 Menu . . . . .	419
ESCP2 Menu . . . . .	420
FX Menu . . . . .	423
I239X Menu . . . . .	425

---

## ***Using the Control Panel Menus***

You can use the printer's control panel to access a variety of menus that allow you to check the status of consumable products, print status sheets, and make printer settings. This section describes how to use the control panel menus, and when it is appropriate to make printer settings using the control panel.

### ***When to make control panel settings***

In general, printer settings can be made from the printer driver, and do not need to be made using the control panel. In fact, printer driver settings override settings made using the control panel, so use the control panel menus only to make settings you cannot make in your software or printer driver, including the following:


- ❑ Changing the emulation modes and selecting the IES (Intelligent Emulation Switching) mode
- ❑ Specifying a channel and configuring the interface
- ❑ Choosing the size of the memory buffer used to receive data

### ***How to access the control panel menus***

For a complete description of the items and settings available in the control panel menus, see "Control Panel Menus" on page 394.


## Accessing the control panel menus

When the Ready light is on, you can access the control panel menus by pressing the Back, Up, Down, or Enter button shown below.

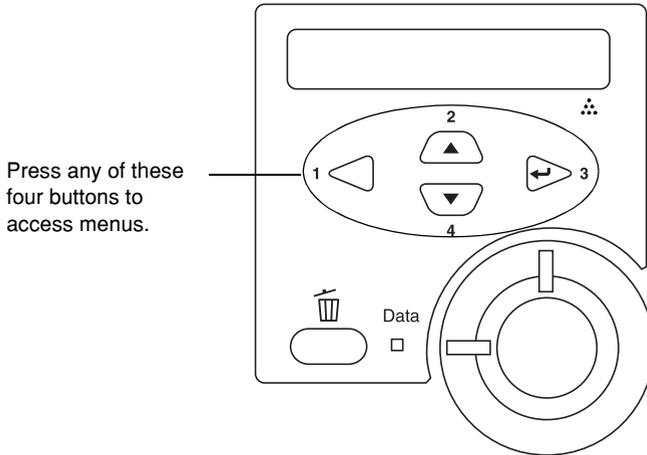

## Using the control panel buttons

Once you have accessed the menus, the control panel buttons function as shown below.

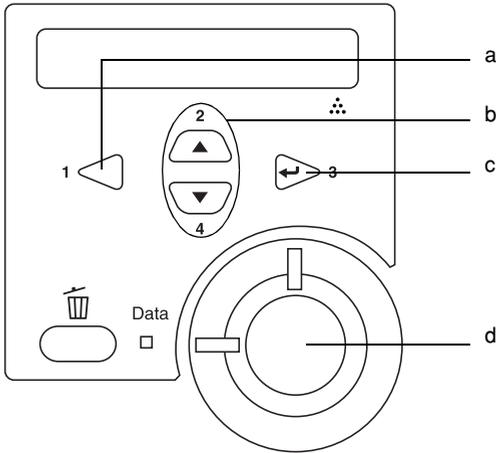

- a. Back button: Return to the previous level.
- b. Up/Down buttons: Scroll through menus, items, and settings on the current level.
- c. Enter button: Advance to the next level, carry out indicated operations, and activate settings.
- d. Start/Stop button: Exit the control panel menus from any level.

### How to use the menus

Follow these steps to use the control panel's menus:

1. Make sure the Ready light is on, then press any of the buttons indicated above to access the menus.
2. Use the  Up and  Down buttons to scroll through the menus.
3. Press the  Enter button to view the items in a menu. Depending on the menu, the LCD panel displays an item and the current setting separated by an asterisk (YYYY\*ZZZZ), or only an item (YYYY).
4. Use the  Up and  Down buttons to scroll through the items, or press the  Back button to return to the previous level.
5. Press the  Enter button to carry out the operation indicated by an item, such as printing a status sheet or resetting the printer; or to view the settings available for an item, such as paper sizes or emulation modes.

Use the  Up and  Down buttons to scroll through available settings, and press the  Enter button to select a setting and return to the previous level. Press the  Back button to return to the previous level without changing the setting.

**Note:**

*You need to turn the printer off and then on to activate some settings. For details, see "Control Panel Menus" on page 394.*

6. Press the  Start/Stop button to exit the control panel menus.

---

## **Printing and Deleting Reserve Job Data**

Print jobs stored on the printer's optional Hard Disk Drive using the Re-Print Job, Verify Job, and Stored Job options of the Reserve Job function can be printed and deleted using the control panel's Quick Print Job Menu. Jobs saved using the Confidential Job option can be printed from the Confidential Job Menu.

### **Using the Quick Print Job Menu**

Follow these steps to print or delete Re-Print Job, Verify Job, and Stored Job data:

1. Make sure the LCD panel displays *Ready* or *Standby*, then press the  Enter button to access the control panel menus.
2. Press the  Down button repeatedly until *Quick Print Job Menu* appears on the LCD panel, then press the  Enter button.
3. Use the  Down or  Up button to scroll to the appropriate user name, then press the  Enter button.
4. Use the  Down or  Up button to scroll to the appropriate job name, then press the  Enter button.
5. To specify the number of copies you want to print, press the  Enter button, then use the  Down and  Up buttons to select the number of copies.


To delete the print job without printing any copies, press the  Down button to display *Delete* on the LCD panel.

6. Press the  Enter button to start printing or to delete the data.

## Using the Confidential Job Menu

Follow these steps to print or delete Confidential Job data:

1. Make sure the LCD panel displays *Ready* or *Standby*, then press the  Enter button to access the control panel menus.
2. Press the  Down button repeatedly until *ConfidentialJobMenu* appears on the LCD panel, then press the  Enter button.
3. Use the  Down or  Up button to scroll to the appropriate user name, then press the  Enter button.
4. Enter your 4-digit password by using the corresponding buttons, as shown below.

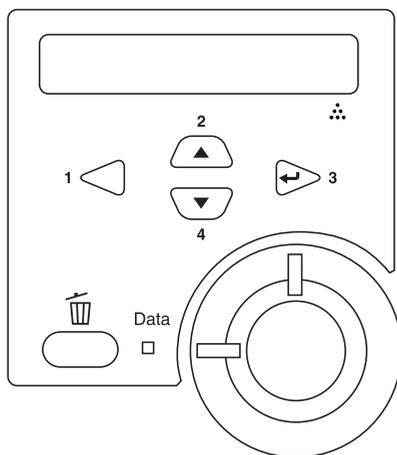

**Note:**

- Passwords are always 4 digits.
- Passwords consist of numbers from 1 through 4.

- ❑ *If no print jobs have been saved with the password you entered, Password Error appears briefly on the LCD panel, and then the printer exits the control panel menus. Confirm the password and try again.*
- 5. Use the  Down or  Up button to scroll to the appropriate job name, then press the  Enter button.
- 6. To specify the number of copies you want to print, press the  Enter button, then use the  Down and  Up buttons to select the number of copies.

To delete the print job without printing any copies, press the  Down button to display Delete on the LCD panel.

- 7. Press the  Enter button to start printing or to delete the data.

---

## ***Control Panel Menus***

For a summary of the control panel menus, see the table below. For details on the items and settings on the menus, see the descriptions for each menu later in this section.

### ***Control panel menu summary***

The following table shows the order in which control panel menus and menu items appear on the LCD panel.

Press the  Up and  Down buttons to scroll through the menus. The menus and menu items appear in the order shown below.

Menu	Items
Information Menu	Status Sheet, Reserve Job List* <sup>1</sup> , Form Overlay List* <sup>2</sup> , NetworkStatus Sheet* <sup>3</sup> , AUX Status Sheet* <sup>4</sup> , PS3 Status Sheet, PS3 Font List, LJ4 Font Sample, ESCP2 Font Sample, FX Font Sample, I239X Font Sample, Toner, Total Pages
Tray Menu	MP Tray Size, LC1 Size, LC2 Size* <sup>4</sup> , LC3 Size* <sup>4</sup> , LC4 Size* <sup>4</sup> , MP Type, LC1 Type, LC2 Type* <sup>4</sup> , LC3 Type* <sup>4</sup> , LC4 Type* <sup>4</sup>
Emulation Menu	Parallel, USB, Network, AUX* <sup>4</sup>
Printing Menu	Page Size, Wide A4, Orientation, Resolution, RITech, Toner Save, Density, Image Optimum, Top Offset, LeftOffset, T Offset B, L Offset B
Setup Menu	Lang, Time Out, Paper Source, Out Bin, MP Mode* <sup>4</sup> , Manual Feed, Copies, Duplex, Binding, Start Page, Paper Type, Page Side, Skip Blank Page, Auto Eject Page, Size Ignore, Auto Cont, Page Protect, Toner Out, LCD Contrast
Quick Print Job Menu* <sup>5</sup>	-
ConfidentialJobMenu* <sup>6</sup>	-
Reset Menu	Clear Warning, Clear All Warnings, Reset, Reset All, SelecType Init
Parallel Menu* <sup>9</sup>	Parallel I/F, Speed, Bi-D, Buffer Size
USB Menu* <sup>9</sup>	USB I/F, Buffer Size
Network Menu* <sup>9</sup>	Network I/F, Network Config, Get IPAddress* <sup>7</sup> , IP Byte1* <sup>7</sup> * <sup>8</sup> , IP Byte2* <sup>7</sup> * <sup>8</sup> , IP Byte3* <sup>7</sup> * <sup>8</sup> , IP Byte4* <sup>7</sup> * <sup>8</sup> , SM Byte1* <sup>7</sup> , SM Byte2* <sup>7</sup> , SM Byte3* <sup>7</sup> , SM Byte4* <sup>7</sup> , GW Byte1* <sup>7</sup> , GW Byte2* <sup>7</sup> , GW Byte3* <sup>7</sup> , GW Byte4* <sup>7</sup> , NetWare, AppleTalk, NetBEUI, Rendezvous, Link Speed, Buffer Size



Menu	Items
AUX Menu <sup>*4 *9</sup>	AUX I/F, AUX Config, Get IPAddress, IP Byte1, IP Byte2, IP Byte3, IP Byte4, SM Byte1, SM Byte2, SM Byte3, SM Byte4, GW Byte1, GW Byte2, GW Byte3, GW Byte4, NetWare, AppleTalk, NetBEUI, Rendezvous, AUX Init, Buffer Size
LJ4 Menu	FontSource, Font Number, Pitch <sup>*10</sup> , Height <sup>*10</sup> , Symset, Form, Source Symset, Dest Symset, CR Function, LF Function, Tray Assign
GL2 Menu	GLMode, Scale, Origin, Pen, End, Join, Pen0 to Pen6
PS3 Menu	Error Sheet, Image Protect
ESCP2 Menu	Font, Pitch, Condensed, T.Margin, Text, CGTable, Country, Auto CR, Auto LF, Bit Image, ZeroChar
FX Menu	Font, Pitch, Condensed, T.Margin, Text, CGTable, Country, Auto CR, Auto LF, Bit Image, ZeroChar
I239X Menu	Font, Pitch, Code Page, T.Margin, Text, Auto CR, Auto LF, Alt. Graphics, Bit Image, ZeroChar, CharacterSet

\*1 This item appears only when the jobs are stored by using the Quick Print Job feature.

\*2 This item appears only when Form Overlay data exists.

\*3 This item appears only when the Network I/F setting in the Emulation Menu is on.

\*4 This item appears only when the corresponding option is installed.

\*5 This Item appears only when there is print job data stored in the printer's Hard Disk Drive to be printed by using the Quick Print Job Menu.

\*6 This Item appears only when there is print job data stored in the printer's Hard Disk Drive to be printed by using the Confidential Job Menu.

\*7 Available only when Network Config is set to Yes.

\*8 When Get IPAddress is set to Auto, all items between and including IP Byte1 and GW Byte4 are not available. Their default values will be used.

\*9 The settings are activated after turning the printer off and then on.

\*10The item appears when the appropriate font setting is selected.

## Information Menu

From this menu you can check the toner level and the remaining service life of consumable products. You can also print status and sample sheets showing the printer's current settings, available fonts, and a brief summary of available features.

Press the  Down or  Up button to select an item. Press the  Enter button to print a sheet or font sample.

Item	Settings (default in bold)
Status Sheet	-
Reserve Job List* <sup>1</sup>	-
Form Overlay List* <sup>2</sup>	-
Network Status Sheet* <sup>3</sup>	-
AUX Status Sheet* <sup>4</sup>	-
PS3 Status Sheet	-
PS3 Font List	-
ESC/Page Font Sample	-
LJ4 Font Sample	-
ESCP2 Font Sample	-
FX Font Sample	-
I239X Font Sample	-
Toner	E*****F
Total Pages	0 to 99999999

\*1 This item appears only when the jobs are stored by using the Quick Print Job feature.

\*2 This item appears only when Form Overlay data exists.

\*3 This item appears only when the Network I/F setting in the Emulation Menu is on.

\*4 Available only when an optional interface card is installed.

### *Status Sheet, AUX Status Sheet, PS3 Status Sheet*

Prints a sheet showing the current printer settings and installed options. These sheets can be useful to confirm whether options have been installed correctly.

### *Reserve Job List*

Prints a list of reserved print jobs stored in the optional Hard Disk Drive.

### *Form Overlay List*

Prints a list of the form overlays stored in the optional Hard Disk Drive.

### *Network Status Sheet*

Prints a sheet showing the working status of the network.

### *PS3 Font List, LJ4 Font Sample, ESCP2 Font Sample, FX Font Sample, I239X Font Sample*

Prints a list or sample of the fonts available for your selected printer emulation.

### *Toner*

Displays the amount of toner left in the imaging cartridge as shown below:

E*****F	(100 to 84%)
E*****F	(83 to 67%)
E****F	(66 to 51%)
E***F	(50 to 34%)
E**F	(33 to 17%)

E\*F (16 to 1%)

EF (0%)

### *Total Pages*

Displays the total number of pages printed by the printer (0 to 99999999).

### ***Tray Menu***

This menu allows you to specify the size and type of paper loaded in the MP tray. Accessing this menu also lets you check the size of the paper currently loaded in the lower cassettes.

The paper type settings in this menu can also be made from your printer driver. Settings you make in your printer driver override these settings, so use your printer driver whenever you can.

Item	Settings (default in bold)
MP Tray Size	<b>A4*</b> , A3, A5, B4, B5, <b>LT*</b> , HLT, LGL, GLT, GLG, EXE, F4, MON, C10, DL, C5, C6, IB5
LC1 Size	A4, LT, A5, B5, LGL, GLG, EXE
LC2 Size**	A4, LT, A5, B5, LGL, GLG, EXE
LC3 Size**	A4, LT, A5, B5, LGL, GLG, EXE
LC4 Size**	A4, LT, A5, B5, LGL, GLG, EXE
MP Type	<b>Plain</b> , Letterhead, Recycled, Color, Trnsprncy, Labels
LC1 Type	<b>Plain</b> , Letterhead, Recycled, Color
LC2 Type**	<b>Plain</b> , Letterhead, Recycled, Color
LC3 Type**	<b>Plain</b> , Letterhead, Recycled, Color
LC4 Type**	<b>Plain</b> , Letterhead, Recycled, Color

\* Default setting varies according to the country of purchase.

\*\* Available only when the optional Universal Cassette Unit is installed.

### *MP Tray Size*

Select your paper size from this menu.

### *LC1 Size/LC2 Size/LC3 Size/LC4 Size*

Displays the paper size loaded in the standard and optional lower cassettes.

### *MP Type*

Lets you set the paper type loaded in the MP tray.

## LC1 Type/LC2 Type/LC3 Type/LC4 Type

Lets you select the paper type loaded in the standard and optional lower cassettes.

## Emulation Menu

Use this menu to select the printer emulation mode. You can specify different emulations for each interface; in other words, for each computer you connect the printer to. Since each emulation mode has its own specific options, make settings in the LJ4, ESC P2, FX, GL2, I239X, or PS3 menu, as necessary. The settings you can choose from are the same for every interface.

Item	Settings (default in bold)
Parallel	<b>Auto</b> , LJ4, ESCP2, FX, I239X, PS3, GL2
USB	<b>Auto</b> , LJ4, ESCP2, FX, I239X, PS3, GL2
Network	<b>Auto</b> , LJ4, ESCP2, FX, I239X, PS3, GL2
AUX*	<b>Auto</b> , LJ4, ESCP2, FX, I239X, PS3, GL2

\* Available only when an optional Type-B interface card is installed.

## Printing Menu

This menu allows you to make standard print settings, such as Page Size and Orientation, when printing from an application or operating system that does not support your printer driver. Be sure to use the printer driver to make these settings whenever you can, since settings made on your computer always override these settings.

**B**

Item	Settings (default in bold)
Page Size	<b>A4*</b> , A3, A5, B4, B5, LT*, HLT, LGL, GLT, GLG, EXE, F4, MON, C10, DL, C5, C6, IB5, CTM
Wide A4	<b>Off</b> , On
Orientation	<b>Port</b> , Land
Resolution	<b>600</b> , 300
RI Tech	<b>On</b> , Off
Toner Save	<b>Off</b> , On
Density	1, 2, <b>3</b> , 4, 5
Image Optimum	<b>Auto</b> , Off, On
Top Offset	-150.0 ... <b>0.0</b> ... 150.0 mm in 0.5 increments
Left Offset	-150.0 ... <b>0.0</b> ... 150.0 mm in 0.5 increments
T Offset B	-99.0 ... <b>0.0</b> ... 99.0 mm in 0.5 increments
L Offset B	-99.0 ... <b>0.0</b> ... 99.0 mm in 0.5 increments

\* Default setting varies according to the country of purchase.

### *Page Size*

Specifies the paper size.

### *Wide A4*

Selecting **On** decreases the left and right margins from 4 mm to 3.4 mm.

### *Orientation*

Specifies whether the page is printed in portrait or landscape orientation.

### *Resolution*

Specifies the printing resolution.

### *RI Tech*

Turning RI Tech on produces smoother and crisper lines, text, and graphics.

### *Toner Save*

When this setting is selected, the printer saves toner by substituting a gray shade for the black inside of characters. The characters are outlined in full black on the right and lower edges.

### *Density*

Specifies the printing density.

### *Image Optimum*

When this mode is on, the quality of graphics is reduced. It reduces the amount of graphics data when the data reaches the memory limit, allowing complex documents to be printed.

### *Top Offset*

Makes fine adjustments to the vertical printing position of the page.



***Caution:***

*Make sure that the printed image does not extend beyond the edge of the paper. Otherwise, you may damage the printer.*

### *Left Offset*

Makes fine adjustments to the horizontal printing position of the page. This is useful for fine adjustments.



**Caution:**

*Make sure that the printed image does not extend beyond the edge of the paper. Otherwise, you may damage the printer.*

### ***T Offset B***

Adjusts the vertical printing position on the back of the paper when printing on both sides. Use this if the printout on the back is not where you expected.

### ***L Offset B***

Adjusts the horizontal printing position on the back of the paper when printing on both sides. Use this if the printout on the back is not where you expected.

## ***Setup Menu***

This menu allows you to make various basic configuration settings related to paper sources, feeding modes, and error handling. You can also use this menu to select the LCD panel display language.

Item	Settings (default in bold)
Lang	<b>English</b> , Français, Deutsch, ITALIANO, ESPAÑOL, SVENSKA, Dansk, Nederl., SUOMI, Português
Time Out	0, 5... <b>60</b> ... 300 in 1 minute increments
Paper Source	<b>Auto</b> , MP, LC1, LC2*, LC3*, LC4*
Out Bin	<b>Face-down</b> , Mailbox 1, Mailbox 2, Mailbox 3, Mailbox 4
MP Mode	<b>Normal</b> , Last
Manual Feed	<b>Off</b> , 1stPage, EachPage
Copies	<b>1</b> to 999
Duplex	<b>Off</b> , On
Binding	<b>Long Edge</b> , Short Edge
Start Page	<b>Front</b> , Back
Paper Type	<b>Normal</b> , Thick, Thick N, Rough, Trnsprnc
Page Side	<b>Front</b> , Back
Skip Blank Page**	<b>Off</b> , On
Auto Eject Page	<b>Off</b> , On
Size Ignore	<b>Off</b> , On
Auto Cont	<b>Off</b> , On
Page Protect	<b>Off</b> , On
Toner Out	<b>Continue</b> , Stop
LCD Contrast	0 ... <b>7</b> ... 15

\* Available only when the corresponding option is installed.

\*\* Available only when in PCL5e, ESC/Page, ESC/P2, or I239X mode.

## *Lang*

Specifies the language displayed on the LCD panel and that printed on the status sheet.

## *Time Out*

Specifies the length of the time the printer waits when it is ready to print and no new data is received. When this time is up, the printer searches for new print data from other interfaces.

## *Paper Source*

Specifies whether paper feeds into the printer from the MP tray, the standard cassette, or from the optional Universal Cassette Unit, when `Normal` is selected as the Paper Type setting.

If you select `Auto`, paper feeds from the paper source containing paper that matches your Paper Size setting.

If an envelope size (`IB5`, `C10`, `C5`, `DL`, `MON`, `C6`) is selected as the Page Size setting, paper always feeds from the MP tray. If you select `Thick`, `Thick N`, `Rough`, or `Transpnc` as the Paper Type setting, paper always feeds from the MP tray.

## *Out Bin*

Specifies the output tray when the optional 4-Bin Mailbox is installed.

## *MP Mode*

This setting determines whether the MP tray has the highest or lowest priority when `Auto` is selected as the Paper Source setting in the printer driver. When `Normal` is selected as the MP Mode, the MP tray has the highest priority as the paper source. If you select `Last`, the MP tray has the lowest priority.

### *Manual Feed*

Allows you to select the manual feed mode for the MP tray. For details on the manual feed mode, see “Manually feeding paper” on page 19.

### *Copies*

Designates the number of copies to be printed, from 1 through 999.

### *Duplex*

Turns duplex printing on or off.

### *Binding*

Specifies the binding direction of the printout.

### *Start Page*

Specifies whether printing starts from the front or back of the page.

### *Paper Type*

Specifies the type of paper to be used for printing. The printer adjusts the printing speed according to this setting. The printing speed is reduced when Thick, Thick N, Rough, or Transpnc is selected.

### *Page Side*

Select Front when printing on the front of thick paper (Thick).

Select Back when printing on the back of thick paper (Thick).

**B**

### *Skip Blank Page*

Enables you to skip blank pages when printing. This setting is available when you print in the PCL5e, ESC/Page, ESCP2, FX, or I239X mode.

### *Auto Eject Page*

Specifies whether or not to eject paper when the limit specified in the Time Out setting is reached. The default is `Off`, which means paper is not ejected when the time-out limit is reached.

### *Size Ignore*

If you want to ignore a paper size error, select `On`. When you turn this item on, the printer keeps printing even if the image size exceeds the printable area for the specified paper size. This may cause smudges because of the toner that is not transferred onto the paper properly. When this item is turned off, the printer stops printing if a paper size error occurs.

### *Auto Cont*

When you turn this setting on, the printer automatically continues printing after a certain period of time when one of the following errors occurs: Paper Set, Print Overrun, or Mem Overflow. When this option is off, you must press the `○ Start/Stop` button to resume printing.

## *Page Protect*

Allocates additional printer memory for printing data, as opposed to receiving it. You may need to turn this setting on if you are printing a very complex page. If a Print Overrun error message appears on the LCD panel during printing, turn this setting on and reprint your data. This reduces the amount of memory reserved for receiving data so your computer may take longer to send the print job, but it will allow you to print complex jobs. Page Protect usually works best when *Auto* is selected. You will need to increase your printer's memory if memory errors continue to occur.

### **Note:**

*Changing the Page Protect setting reconfigures the printer's memory, which causes any downloaded fonts to be deleted.*

## *Toner Out*

Specifies whether the printer stops printing when the printer is running out of toner. If you select *Continue*, you can continue printing after clearing the warning message. However, it may cause problems such as faint print.

## *LCD Contrast*

Adjusts the contrast of the LCD panel. Use the  Up and  Down buttons to set the contrast between 0 (lowest contrast) and 15 (highest contrast.)

## **Quick Print Job Menu**

This menu allows you to print or delete print jobs that were stored in the printer's Hard Disk Drive using the Quick Print Job feature (Re-Print Job, Verify Job, Stored Job) of the printer driver's Reserve Job function. For instructions on using this menu, see "Using the Quick Print Job Menu" on page 392.

**B**

## **Confidential Job Menu**

This menu allows you to print or delete print jobs stored in the printer's Hard Disk Drive using the Confidential Job feature of the printer driver's Reserve Job function. You need to enter the correct password to access this data. For instructions on using this menu, see "Using the Confidential Job Menu" on page 393.

## **Reset Menu**

This menu allows you to cancel printing and reset the printer settings.

### *Clear Warning*

Clears the last warning message that appear on the LCD panel.

### *Clear All Warnings*

Clears all warning messages that appeared on the LCD panel and are still stored in the printer's memory.

### *Reset*

Stops printing and clears the current job received from the active interface. You may want to reset the printer when there is a problem with the print job itself and the printer cannot print successfully.

### *Reset All*

Stops printing, clears the printer memory, and restores the printer settings to their default values. The print jobs received from all interfaces are erased.

#### **Note:**

*Performing Reset All clears print jobs received from all interfaces. Be careful not to interrupt someone else's job.*

## *SelectType Init*

Restores the control panel menu settings to their default values. Yellow Regist, Magenta Regist, and Cyan Regist settings are not reset.

## **Parallel Menu**

These settings control communication between the printer and the computer when using the parallel interface.

Item	Settings (default in bold)
Parallel I/F	<b>On</b> , Off
Speed	<b>Fast</b> , Normal
Bi-D	Nibble, <b>ECP</b> , Off
Buffer Size	<b>Normal</b> , Maximum, Minimum

### *Parallel I/F*

Allows you to activate or deactivate the parallel interface.

### *Speed*

Specifies the pulse width of the ACKNLG signal when receiving data in the Compatibility mode or Nibble mode. When **Fast** is selected, the pulse width is about 1  $\mu$ s. When **Normal** is selected, the pulse width is about 10  $\mu$ s.

### *Bi-D*

Allows you to specify the bidirectional communication mode. When you select **Off**, bidirectional communication is disabled.

**B**

## Buffer Size

Determines the amount of memory to be used for receiving data and printing data. If **Maximum** is selected, more memory is allocated for receiving data. If **Minimum** is selected, more memory is allocated for printing data.

### Note:

- To activate Buffer Size settings, you must turn off the printer for more than five seconds then turn it back on. Or, you can perform a Reset All operation, as explained in “Reset Menu” on page 410.
- Resetting the printer erases all print jobs. Make sure the Ready light is not flashing when you reset the printer.

## USB Menu

These settings control communication between the printer and the computer when using the USB interface.

Item	Settings (default in bold)
USB I/F	<b>On</b> , Off
Buffer Size	<b>Normal</b> , Maximum, Minimum

### USB I/F

Allows you to activate or deactivate the USB interface.

### Buffer Size

Determines the amount of memory to be used for receiving data and printing data. If **Maximum** is selected, more memory is allocated for receiving data. If set to **Minimum** is selected, more memory is allocated for printing data.

**Note:**

- ❑ To activate Buffer Size settings, you must turn off the printer for more than five seconds then turn it back on. Or, you can perform a Reset All operation, as explained in “Reset Menu” on page 410.
- ❑ Resetting the printer erases all print jobs. Make sure the Ready light is not flashing when you reset the printer.

## **Network Menu**

See the *Network Guide* for each setting.

## **AUX Menu**

See the *Network Guide* for each setting.

## LJ4 Menu

These settings control the fonts and symbol sets when in the LJ4 mode.

Item	Settings (default in bold)
Font Source	<b>Resident</b> , Download, ROM A*
Font Number	<b>0</b> to 65535 (depending on your settings)
Pitch**	0.44 ... <b>10.00</b> ... 99.99 cpi in 0.01-cpi increments
Height**	4.00 ... <b>12.00</b> ... 999.75 pt in 0.25-pt increments
SymSet	<b>IBM-US</b> , Roman-8, Roman-9, ECM94-1, 8859-2 ISO, 8859-9 ISO, 8859-10ISO, 8859-15ISO, PcBlf775, IBM-DN, PcMultiling, PcE.Europe, PcTk437, PcEur858, Pc1004, WiAnsi, WiE.Europe, WiTurkish, WiBALT, DeskTop, PsText, VeInternati, VeUS, MsPublishin, Math-8, PsMath, VeMath, PiFont, Legal, UK, ANSI ASCII, Swedis2, Italian, Spanish, German, Norweg1, French2, Windows, McText, Pclcelandic, Pclt774, PcTurk1, PcPortugues, PcEt850, PcTurk2, PcCanFrench, PcSl437, PcNordic, 8859-3 ISO, 8859-4 ISO, WiBaltic, WiEstonian, WiLatvian, Mazowia, CodeMJK, BpBRASCII, BpAbicomp, PcGk437, PcGk851, PcGk869, 8859-7 ISO, WiGreek, Europe3, PcCy855, PcCy866, Pclt866, PcUkr866, PcLit771, 8859-5 ISO, WiCyrillic, Bulgarian, Hebrew7, 8859-8 ISO, Hebrew8, PcHe862, Arabic8, PcAr864, 8859-6 ISO, OCR A, OCR B, Pc866Cyr, Pc866Ukr, WinCyr, ISOCyr, Pc8Grk, Pc851Grk, WinGrk, ISOGrk, Greek8, Pc862Heb, Pc864Ara, HPWARA
Form	5 ... <b>60/64</b> ** ... 128 lines
Source SymSet	0 ... <b>277</b> ... 3199
Dest SymSet	0 ... <b>277</b> ... 3199
CR Function	<b>CR</b> , CR + LF
LF Function	<b>LF</b> , CR + LF
Tray Assign	4, <b>4K</b> , 5S

\* Available only when the optional font ROM module is installed.

\*\* Depending on whether Letter (60) or A4 (64) paper has been selected.

**Note:**

*If you normally use the HP LaserJet 4 printer driver when printing, you should change settings using this driver whenever you can. Printer driver settings always override the LJ4 Menu options.*

**FontSource**

Sets the default font source.

**Font Number**

Sets the default font number for the default font source. The available number depends on the settings you made.

**Pitch**

Specifies the default font pitch if the font is scalable and of fixed-pitch. You can select from 0.44 to 99.99 cpi (characters per inch), in 0.01-cpi increments. This item may not appear depending on the Font Source or Font Number settings.

**Height**

Specifies the default font height if the font is scalable and proportional. You can select from 4.00 to 999.75 points, in 0.25-point increments. This item may not appear depending on the Font Source or Font Number settings.

**SymSet**

Selects the default symbol set. If the font you selected in Font Source and Font Number is not available in the new SymSet setting, the Font Source and the Font Number settings are automatically replaced with the default value, IBM-US.

## *Form*

Selects the number of lines for the selected paper size and orientation. This also causes a line spacing (VMI) change, and the new VMI value is stored in the printer. This means that later changes in the Page Size or Orientation settings cause changes in the `Form` value, based on the stored VMI.

## *Source SymSet, Dest SymSet*

Available only in certain locations where printers are sold with a special ROM module installed to handle specific languages.

## *CR Function, LF Function*

These functions are included for users of particular operating systems, such as UNIX.

## *Tray Assign*

Changes the assignment for the paper source select command. When `4` is selected, the commands are set as compatible with the HP LaserJet 4. When `4K` is selected, the commands are set as compatible with the HP LaserJet 4000, 5000, and 8000. When `5S` is selected, the commands are set as compatible with the HP LaserJet 5Si.

## GL2 Menu

This menu lets you set the printer to emulate a plotter, allowing you to use software which requires a plotter for output. The LJ4GL2 mode is similar to the GL/2 mode supported in the HP LaserJet 4 mode. The GLlike mode emulates some of the HP-GL plotter commands and includes all the commands found in HP's GL/2 mode, as well as two additional commands.

Item	Settings (default in bold)
GL Mode	<b>LJ4GL2</b> , GLlike
Scale	<b>Off</b> , A0, A1, A2, A3
Origin	<b>Corner</b> , Center
Pen	<b>Pen0</b> , Pen1, Pen2*, Pen3*, Pen4*, Pen5*, Pen6*
End	<b>Butt</b> , Square, Triangular, Round
Join	<b>Mitered</b> , Miteredbeveled, Triangular, Round, Beveled, None
Pen 0 through 6	0.05 ... <b>0.35</b> ... 5.00 mm in 0.05-mm increments

\* Available only when **GLlike** is selected as the GL Mode.

### **Before you start printing in the GL/2 mode**

You may need to change the following print options in your application, depending on your output needs. Check these settings to make sure they match the data you are trying to print.

Print Options	Settings
Paper size	Printer's paper size setting
Driver (plotter selection)	HP-GL/2 or HP-GL
Pen configuration	Pen thickness
Plot origin	Center or Corner

**B**

Print Options	Settings
Orientation	GLlike offers landscape only LJ4GL2 offers landscape and portrait

If you need to configure the printer settings, first switch to the GL/2 emulation mode, then change the settings using the printer driver, or the control panel menus.

**Note:**

*Settings or data saved in the printer's RAM (such as downloaded fonts) may be erased when you change the emulation mode.*

**GL Mode**

Specifies whether the printer uses a direct emulation of the GL/2 plotter language, or the HP LaserJet 4 emulation of GL/2.

**Scale**

Specifies whether the output from the software is scaled. The scale factor is based on the output paper size of the application.

**Origin**

Specifies whether the logical origin of the "plotter" is the corner or the center of the paper.

**Pen**

Allows you to choose a pen which you can then set the thickness for in the Pen 0 through 6 item. The LJ4GL2 mode supports two pens (0 and 1), while the GLlike mode supports seven pens (0 through 6).

**End**

Specifies the way in which lines end.

## *Join*

Specifies the way in which lines are joined.

## *Pens 0 through 6*

Allows you to set the thickness of the pens used to make the printout. Pen 0 and Pen 1 are available in the LJ4GL2 mode, and Pen 0 through Pen 6 are available in the GLlike mode.

## **PS3 Menu**

These settings are available in the PS3 mode.

<b>Item</b>	<b>Settings (default in bold)</b>
Error Sheet	<b>Off</b> , On
Image Protect	<b>Off</b> , On

### *Error Sheet*

When you select **On**, the printer prints out an error sheet.

### *Image Protect*

Allows you to specify whether to employ lossy compression. Lossy compression refers to a data compression technique in which some amount of data is lost.

## ESCP2 Menu

This menu allows you to make settings which affect the printer when it is in the ESC/P 2 emulation mode.

Item	Settings (default in bold)
Font	<b>Courier</b> , Prestige, Roman, Sans Serif, Roman T, Orator S, Sans H, Script, OCR A, OCR B
Pitch	<b>10</b> , 12, 15 cpi, Prop.
Condensed	<b>Off</b> , On
T. Margin	0.40 ... <b>0.50</b> ... 1.50 inches in 0.05-inch increments
Text	1... <b>62/66</b> *... 117lines
CGTable	<b>PcUSA</b> , Italic, PcMultilin, PcPortugue, PcCanFrenc, PcNordic, PcTurkish2, Pclcelandic, PcE.Europe, BpBRASCI, BpAbicomp, Roman-8, PcEur858, ISO Latin1, 8859-15ISO, PcSI437, PcTurkish1, 8859-9 ISO, Mazowia, CodeMJK, PcGk437, PcGk851, PcGk869, 8859-7 ISO, PcCy855, PcCy866, PcUkr866, Pclit771, Bulgarian, Hebrew7, Hebrew8, PcHe862, PcAr864, PcAr864Ara, PcAr720, Pclit774, Estonia, ISO Latin2, PcLat866
Country	<b>USA</b> , France, Germany, UK, Denmark, Sweden, Italy, Spain1, Japan, Norway, Denmark2, Spain2, LatinAmeric, Korea, Legal
Auto CR	<b>On</b> , Off
Auto LF	<b>Off</b> , On
Bit Image	<b>Dark</b> , Light, BarCode
ZeroChar	<b>0</b> , (or the zero character with a slash)

\* Depending on whether Letter (62) or A4 (66) paper has been selected.

### Font

Selects the font.

### *Pitch*

Selects the pitch (the horizontal spacing) of the font in fixed pitch, measured in cpi (characters per inch). You can also choose proportional spacing.

### *Condensed*

Turns condensed printing on or off.

### *T. Margin*

Sets the distance from the top of the page to the baseline of the first printable line. The distance is measured in inches. The smaller the value, the closer the printable line is to the top.

### *Text*

Sets the page length in lines. For this option, a line is assumed to be 1 pica (1/6 inch). If you change the Orientation, Page Size, or T. Margin settings, the page length setting automatically returns to the default for each paper size.

### *CG Table*

Use the character generator (CG) table option to select the graphics character table or the italics table. The graphics table contains graphic characters for printing lines, corners, shaded areas, international characters, Greek characters, and mathematical symbols. If you select *Italic*, the upper half of the character table is defined as italic characters.

### *Country*

Use this option to select one of the fifteen international symbol sets. See "International character sets" on page 469 for samples of the characters in each country's symbol set.

### *Auto CR*

Specifies whether the printer performs a carriage-return/line-feed (CR-LF) operation whenever the printing position goes beyond the right margin. If you select `Off`, the printer does not print any characters beyond the right margin and does not perform any line wrapping until it receives a carriage-return character. This function is handled automatically by most applications.

### *Auto LF*

If you select `Off`, the printer does not send an automatic line-feed (LF) command with each carriage-return (CR). If `On` is selected, a line-feed command is sent with each carriage-return. Select `On` if your text lines overlap.

### *Bit Image*

The printer is able to emulate the graphics densities set with the printer commands. If you select `Dark`, the bit image density is high, and if you select `Light`, the bit image density is low.

If you select `BarCode`, the printer converts bit images to bar codes by automatically filling in any vertical gaps between dots. This produces unbroken vertical lines that can be read by a bar code reader. This mode will reduce the size of the image being printed, and may also cause some distortion when printing bit image graphics.

### *ZeroChar*

Specifies whether the printer prints a slashed or unslashed zero.

## FX Menu

This menu allows you to make settings which affect the printer when it is in the FX emulation mode.

Item	Settings (default in bold)
Font	<b>Courier</b> , Prestige, Roman, Sans Serif, Script, Orator S, OCR A, OCR B
Pitch	<b>10</b> , 12, 15 cpi, Prop.
Condensed	<b>Off</b> , On
T. Margin	0.40 ... <b>0.50</b> ... 1.50 inches in 0.05-inch increments
Text	1... <b>62/66</b> *... 117lines
CGTable	<b>PcUSA</b> , Italic, PcMultilin, PcPortugue, PcCanFrenc, PcNordic, PcTurkish2, Pclcelandic, PcE.Europe, BpBRASCIi, BpAbicomp, Roman-8, PcEur858, ISO Latin1, 8859-15ISO
Country	<b>USA</b> , France, Germany, UK, Denmark, Sweden, Italy, Spain1, Japan, Norway, Denmark2, Spain2, LatinAmeric
Auto CR	<b>On</b> , Off
Auto LF	<b>Off</b> , On
Bit Image	<b>Dark</b> , Light, BarCode
ZeroChar	<b>0</b> , (or the zero character with a slash)

\* Depending on whether Letter (62) or A4 (66) paper has been selected.

### Font

Selects the font.

### Pitch

Selects the pitch (the horizontal spacing) of the font in fixed pitch, measured in cpi (characters per inch). You can also choose proportional spacing.

## *Condensed*

Turns condensed printing on or off.

## *T. Margin*

Sets the distance from the top of the page to the baseline of the first printable line. The distance is measured in inches. The smaller the value, the closer the printable line is to the top.

## *Text*

Sets the page length in lines. For this option, a line is assumed to be 1 pica (1/6 inch). If you change the Orientation, Page Size, or T. Margin settings, the page length setting automatically returns to the default for each paper size.

## *CG Table*

Use the character generator (CG) table option to select the graphics character table or the italics table. The graphics table contains graphic characters for printing lines, corners, shaded areas, international characters, Greek characters, and mathematical symbols. If you select *Italic*, the upper half of the character table is defined as italic characters.

## *Country*

Use this option to select one of the fifteen international symbol sets. See "International character sets" on page 469 for samples of the characters in each country's symbol set.

### *Auto CR*

Specifies whether the printer performs a carriage-return/line-feed (CR-LF) operation whenever the printing position goes beyond the right margin. If you select *Off*, the printer does not print any characters beyond the right margin and does not perform any line wrapping until it receives a carriage-return character. This function is handled automatically by most applications.

### *Auto LF*

If you select *Off*, the printer does not send an automatic line-feed (LF) command with each carriage-return (CR). If *On* is selected, a line-feed command is sent with each carriage-return. Select *On* if your text lines overlap.

### *Bit Image*

The printer is able to emulate the graphics densities set with the printer commands. If you select *Dark*, the bit image density is high, and if you select *Light*, the bit image density is low.

If you select *BarCode*, the printer converts bit images to bar codes by automatically filling in any vertical gaps between dots. This produces unbroken vertical lines that can be read by a bar code reader. This mode will reduce the size of the image being printed, and may also cause some distortion when printing bit image graphics.

### *ZeroChar*

Selects whether the printer prints a slashed or unslashed zero.

### ***I239X Menu***

The I239X mode emulates IBM® 2390/2391 Plus commands.

These settings are available only when the printer is in the I239X mode.

Item	Settings (default in bold)
Font	<b>Courier</b> , Prestige, Gothic, Orator, Script, Presentor, Sans Serif
Pitch	<b>10</b> , 12, 15, 17, 20, 24 cpi, Prop.
Code Page	<b>437</b> , 850, 858, 860, 863, 865
T. Margin	0.30 ... <b>0.40</b> ... 1.50 inches in 0.05-inch increments
Text	1 ... <b>63/67*</b> ... 117lines
Auto CR	<b>Off</b> , On
Auto LF	<b>Off</b> , On
Alt. Graphics	<b>Off</b> , On
Bit Image	<b>Dark</b> , Light
ZeroChar	<b>0</b> , (or the zero character with a slash)
CharacterSet	<b>1**</b> , <b>2**</b>

\* Depends on whether Letter (63) or A4 (67) paper has been selected.

\*\* Depends on whether Letter (1) or A4 (2) paper has been selected.

### *Font*

Selects the font.

### *Pitch*

Selects the pitch (the horizontal spacing) of the font in fixed pitch, measured in cpi (characters per inch). You can also choose proportional spacing.

### *Code Page*

Selects the character tables. Character tables contain the characters and symbols used by different languages. The printer prints text based on the selected character table.

## *T. Margin*

Sets the distance from the top of the page to the baseline of the first printable line. The distance is measured in inches. The smaller the value, the closer the printable line is to the top.

## *Text*

Sets the page length in lines. For this option, a line is assumed to be 1 pica (1/6 inch). If you change the Orientation, Page Size, or T. Margin settings, the page length setting automatically returns to the default for each paper size.

## *Auto CR*

Specifies whether the printer performs a carriage-return/line-feed (CR-LF) operation whenever the printing position goes beyond the right margin. If this setting is off, the printer does not print any characters beyond the right margin and does not perform any line wrapping until it receives a carriage-return character. This function is handled automatically by most applications.

## *Auto LF*

If you select `Off`, the printer does not send an automatic line-feed (LF) command with each carriage-return (CR). If `On` is selected, a line-feed command is sent with each carriage-return. Select `On` if your text lines overlap.

## *Alt. Graphics*

Turns the Alternate Graphics option on or off.

## *Bit Image*

The printer is able to emulate the graphics densities set with the printer commands. If you select `Dark`, the bit image density is high, and if you select `Light`, the bit image density is low.

If you select `BarCode`, the printer converts bit images to bar codes by automatically filling in any vertical gaps between dots. This produces unbroken vertical lines that can be read by a bar code reader. This mode will reduce the size of the image being printed, and may also cause some distortion when printing bit image graphics.

### *ZeroChar*

Selects whether the printer prints a slashed or unslashed zero.

### *CharacterSet*

Selects character table 1 or 2.

## Appendix C

---

### **Working with Fonts**

Available Fonts . . . . .	430
LJ4/GL2 mode. . . . .	431
ESC/P 2 and FX modes . . . . .	433
I239X mode. . . . .	434
PS 3 mode. . . . .	434
Printing font samples . . . . .	435
Adding More Fonts . . . . .	435
Selecting Fonts . . . . .	436
Downloading Fonts . . . . .	436
EPSON Font Manager . . . . .	437
System requirements . . . . .	437
Installing EPSON Font Manager. . . . .	437
EPSON BarCode Fonts . . . . .	439
System requirements . . . . .	441
Installing EPSON BarCode Fonts . . . . .	441
Printing with EPSON BarCode Fonts. . . . .	443
BarCode Font specifications. . . . .	448



---

## **Available Fonts**

The following table lists the fonts that are installed in your printer. The names of all the fonts appear in your application software's font list if you are using the driver provided with the printer. If you are using a different driver, all of these fonts may not be available.

The fonts provided with the printer are shown below, according to the emulation mode.

## LJ4/GL2 mode

Font name	Family	HP equivalent
Courier	Medium, Bold, Italic, Bold Italic	Courier
ITC Zapf Dingbats	-	ITC Zapf Dingbats
CG Times	Medium, Bold, Italic, Bold Italic	CG Times
CG Omega	Medium, Bold, Italic, Bold Italic	CG Omega
Coronet	-	Coronet
Clarendon Condensed	-	Clarendon Condensed
Univers	Medium, Bold, Medium Italic, Bold Italic	Univers
Univers Condensed	Medium, Bold, Medium Italic, Bold Italic	Univers Condensed
Antique Olive	Medium, Bold, Italic	Antique Olive
Garamond	Antiqua, Halbfett, Kursiv, Kursiv Halbfett	Garamond
Marigold	-	Marigold
Albertus	Medium, Extra Bold	Albertus
Ryadh	Medium, Bold	Ryadh
Malka	Medium, Bold, Italic	Miryam
Dorit	Medium, Bold	David
Naamit	Medium, Bold	Narkis
Arial	Medium, Bold, Italic, Bold Italic	Arial
Times New	Medium, Bold, Italic, Bold Italic	Times New
Helvetica	Medium, Bold, Oblique, Bold Oblique	Helvetica
Helvetica Narrow	Medium, Bold, Oblique, Bold Oblique	Helvetica Narrow
Palatino	Roman, Bold, Italic, Bold Italic	Palatino

Font name	Family	HP equivalent
ITC Avant Garde	Book, Demi, Book Oblique, Demi Oblique	ITC Avant Garde Gothic
ITC Bookman	Light, Demi, Light Italic, Demi Italic	ITC Bookman
New Century Schoolbook	Roman, Bold, Italic, Bold Italic	New Century Schoolbook
Times	Roman, Bold, Italic, Bold Italic	Times
ITC Zapf Chancery Italic	-	ITC Zapf Chancery Medium Italic
Symbol	-	Symbol
SymbolPS	-	SymbolPS
Wingdings	-	Wingdings
Letter Gothic	Medium, Bold, Italic	Letter Gothic
Naskh	Medium, Bold	Naskh
Koufi	Medium, Bold	Koufi
CourierPS	Medium, Bold, Oblique, Bold Oblique	CourierPS
Line Printer	-	Line Printer
OCR A	-	-
OCR B	-	-
Code39	9.37cpi, 4.68cpi	-
EAN/UPC	Medium, Bold	-

When selecting fonts in your application software, choose the font name listed in the HP equivalent column.

**Note:**

*Depending on the print density, or on the quality or color of the paper, OCR A, OCR B, Code39, EAN/UPC fonts may not be readable. Print a sample and make sure the fonts can be read before printing large quantities.*

## **ESC/P 2 and FX modes**

<b>Font name</b>	<b>Family</b>
Courier	Medium, Bold
EPSON Prestige	-
EPSON Roman	-
EPSON Sans serif	-
Arial	Medium, Bold
Letter Gothic SWC	Medium, Bold
Times New Roman	Medium, Bold
EPSON Script	-
OCR A	-
OCR B	-

**Note:**

*Depending on the print density, or on the quality or color of the paper, OCR A and OCR B fonts may not be readable. Print a sample and make sure the fonts can be read before printing large quantities.*

## ***I239X mode***

<b>Font name</b>	<b>Family</b>
Courier	Medium, Bold
EPSON Prestige	-
EPSON Gothic	-
EPSON Orator	-
EPSON Script	-
EPSON Presentor	-
EPSON Sans serif	-
OCR B	-

***Note:***

*Depending on the print density, or on the quality or color of the paper, OCR B font may not be readable. Print a sample and make sure the font can be read before printing large quantities.*

## ***PS 3 mode***

Seventeen scalable fonts. The fonts include: Courier, Courier Oblique, Courier Bold, Courier Bold Oblique, Helvetica, Helvetica Oblique, Helvetica Bold, Helvetica Bold Oblique, Helvetica Narrow, Helvetica Narrow Oblique, Helvetica Narrow Bold, Helvetica Narrow Bold Oblique, Times Roman, Times Italic, Times Bold, Times Bold Italic, and Symbol.

Refer to “Postscript Font Samples” on page 473 to see what these fonts actually look like.

## ***Printing font samples***

You can print samples of the fonts available in each mode by using the control panel's Information menu.

Follow these steps to print font samples:

1. Make sure that paper is loaded.
2. Make sure the LCD panel displays *Ready* or *Standby*, then press the  Enter button.
3. Press the  Down button until the desired font sample name appears.
4. Press the  Enter button to print the selected font sample.

---

## ***Adding More Fonts***

You can install more fonts into your Windows operating system. Most font packages include an installer or font management utility for this purpose.

Take note of the following regarding fonts and the Windows operating system:

- TrueType fonts work with all versions of the Windows operating system.
- You can install a maximum of approximately 800 TrueType fonts in Windows ME, 98, or 95.

- ❑ To use PostScript Type 1 fonts in Windows Me/98/95 or Windows NT, you need to use Adobe Type Manager (ATM), ATM Deluxe, or ATM Light. You can download Adobe's freely distributable ATM Light for Windows from Adobe's Web site. If you are running Windows XP or Windows 2000, you do not need to install ATM since it is part of the operating system already.

You can also install fonts from within the Fonts window. To access this window, open the Control Panel and double-click the Fonts icon. Once installed, the fonts are available in all your Windows applications.

---

## **Selecting Fonts**

Whenever possible select fonts from the font list in your application. See your software documentation for instructions.

If you are sending unformatted text to the printer directly from DOS or if you are using a simple software package that does not include font selection, you can select fonts using the printer's control panel menus when in the LJ4, ESC/P 2, FX, or I239X emulation mode.

---

## **Downloading Fonts**

Fonts that reside on your computer's hard disk can be downloaded, or transferred, to the printer so they can be printed. Downloaded fonts, also called soft fonts, remain in printer memory until you turn off the printer or otherwise reinitialize it. If you plan on downloading many fonts, make sure your printer has sufficient memory.

Most font packages make it easy to manage fonts by providing their own installer. The installer gives you the option of having the fonts automatically downloaded whenever you start your computer or having fonts downloaded only when you need to print a particular font.

---

## ***EPSON Font Manager***

EPSON Font Manager provides you with 131 software fonts.

### ***System requirements***

To use EPSON Font Manager, your computer system should meet the following requirements:

Computer:	IBM PC series or IBM compatible with an 486 or higher CPU
Operating system:	Microsoft Windows Me, 98, 95, XP, 2000, or NT 4.0
Hard disk:	At least 9 MB of free space

### ***Installing EPSON Font Manager***

Follow these steps to install EPSON Font Manager:

1. Make sure that the printer is turned off and that Windows is running on your computer.
2. Insert the printer software CD-ROM into your CD-ROM drive on your computer.

***Note:***

- If the language selection window appears, select your country.*

- ❑ *If the EPSON Installation Program screen does not appear automatically, double-click the My Computer icon, right-click the CD-ROM icon, and click OPEN in the menu that appears. Then double-click Esetup.exe.*
3. Click Continue. When the software license agreement screen appears, read the statement and then click Agree.
  4. In the dialog box that appears, click Install Software.



5. Click Custom.

6. Select the EPSON Font Manager check box and click Install. Then follow the on-screen instructions.



7. When installation is complete, click OK.

EPSON Font Manager is now installed on your computer.

---

## ***EPSON BarCode Fonts***

EPSON BarCode Fonts let you easily create and print many types of bar codes.

Normally, bar code creation is a laborious process requiring you to specify various command codes, such as Start bar, Stop bar and OCR-B, in addition to the bar code characters themselves. However, EPSON BarCode Fonts are designed to add such codes automatically, allowing you to easily print bar codes that conform to a variety of bar code standards.

C

EPSON BarCode Fonts support the following types of bar codes.

Bar code Standard	EPSON BarCode	OCR-B	Check Digit	Comments
EAN	EPSON EAN-8	Yes	Yes	Creates EAN (abbreviated version) bar codes.
	EPSON EAN-13	Yes	Yes	Creates EAN (standard version) bar codes.
UPC-A	EPSON UPC-A	Yes	Yes	Creates UPC-A bar codes.
UPC-E	EPSON UPC-E	Yes	Yes	Creates UPC-E bar codes.
Code39	EPSON Code39	No	No	Printing of OCR-B and check digits can be specified with the font name.
	EPSON Code39 CD	No	Yes	
	EPSON Code39 CD Num	Yes	Yes	
	EPSON Code39 Num	Yes	No	
Code128	EPSON Code128	No	Yes	Creates Code128 bar codes.
Interleaved 2 of 5 (ITF)	EPSON ITF	No	No	Printing of OCR-B and check digits can be specified with the font name.
	EPSON ITF CD	No	Yes	
	EPSON ITF CD Num	Yes	Yes	
	EPSON ITF Num	Yes	No	

Bar code Standard	EPSON BarCode	OCR-B	Check Digit	Comments
Codabar	EPSON Codabar	No	No	Printing of OCR-B and check digits can be specified with the font name.
	EPSON Codabar CD	No	Yes	
	EPSON Codabar CD Num	Yes	Yes	
	EPSON Codabar Num	Yes	No	

## System requirements

To use EPSON BarCode Fonts, your computer system should meet the following requirements:

Computer: IBM PC series or IBM compatible with an i386SX or higher CPU

Operating system: Microsoft Windows Me, 98, 95, Windows XP, 2000, NT 4.0

Hard disk: 15 to 30 KB free space, depending on the font.

**Note:**

*EPSON BarCode Fonts can only be used with EPSON printer drivers.*

## Installing EPSON BarCode Fonts

The procedure described here is for installation in Windows 98; the procedure for other Windows operating systems is nearly the same.




Follow these steps to install EPSON BarCode Fonts:

1. Make sure that the printer is turned off and that Windows is running on your computer.
2. Insert the printer software CD-ROM into the CD-ROM drive on your computer.

**Note:**

- If the language selection window appears, select your country.*
  - If the EPSON Installation Program screen does not appear automatically, double-click the My Computer icon, right-click the CD-ROM icon, and click **OPEN** in the menu that appears. Then double-click **Epsetup.exe**.*
3. Click **Continue**. When the software license agreement screen appears, read the statement and then click **Agree**.
  4. In the dialog box that appears, click **Install Software**.

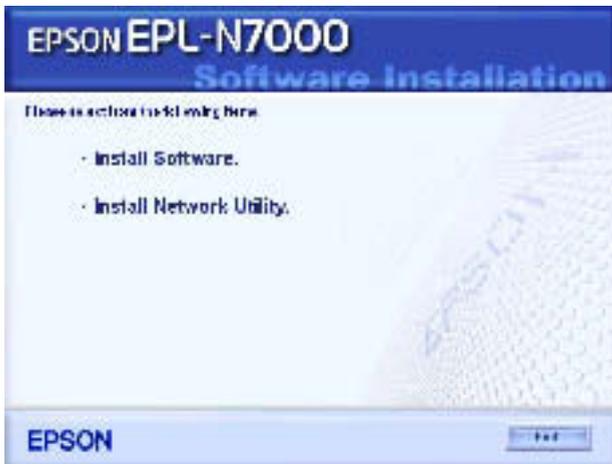

5. Click **Custom**.

6. Select the EPSON BarCode Font check box and click Install. Then follow the on-screen instructions.



7. When installation is complete, click OK.

EPSON BarCode Fonts are now installed on your computer.

## ***Printing with EPSON BarCode Fonts***

The application featured in these instructions is Microsoft WordPad. The actual procedure may differ slightly when printing from other applications.

Follow these steps to create and print bar codes using EPSON BarCode Fonts:


1. Open a document in your application and enter the characters you want to convert into a bar code.



2. Select the characters, then select Font from the Format menu.



3. Select the EPSON BarCode Font you want to use, then set the font size and click OK.

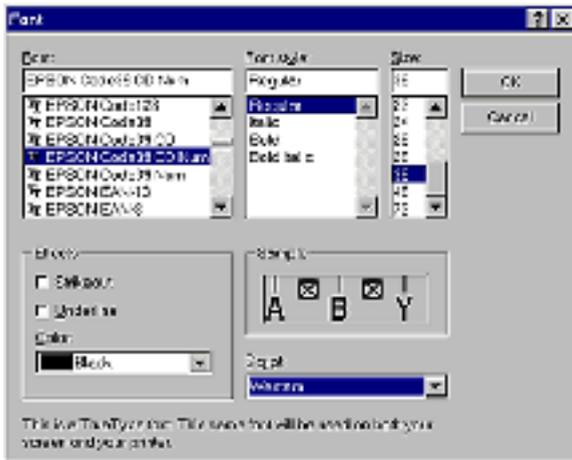

**Note:**

*In Windows XP, 2000, and NT 4.0, you cannot use font sizes larger than 96 points when printing bar codes.*

4. The characters you selected appear as bar code characters similar to those shown below.



- Select Print from the File menu, then select your EPSON printer and click Properties. Make the following printer driver settings. EPL-N7000 is a monochrome printer. See the Monochrome Printer Driver section in the table below.

	Monochrome Printer Driver	Color Printer Driver	Host Based Monochrome Printer Driver
Color	(not available)	Black	(not available)
Print Quality	600 dpi	600 dpi	600 dpi
Toner Save	Not selected	Not selected	Not selected
Zoom Options	Not selected	Not selected	Not selected
Graphic mode (in the Extended Settings dialog box accessed through the Optional Settings tab)	High Quality (Printer)	(not available)	(not available)
Printing Mode (in the More Settings dialog box accessed through the Basic Settings tab)	(not available)	High Quality (Printer)	(not available)

- Click OK to print the bar code.

**Note:**

*If there is an error in the bar code character string, such as inappropriate data, the bar code will be printed as it appears on the screen, but it cannot be read by a bar code reader.*

### **Notes on inputting and formatting bar codes**

Please note the following when inputting and formatting bar code characters:

- ❑ Do not apply shading or special character formatting, such as bold, italic, or underline.
- ❑ Print bar codes in black and white only.
- ❑ When rotating characters, only specify rotation angles of 90 , 180 , and 270 .
- ❑ Turn off all automatic character and word spacing settings in your application.
- ❑ Do not use features in your application that enlarge or reduce the size of characters in only the vertical or horizontal direction.
- ❑ Turn off your application's auto-correct features for spelling, grammar, spacing, etc.
- ❑ To more easily distinguish bar codes from other text in your document, set your application to show text symbols, such as paragraph marks, tabs, etc.
- ❑ Because special characters such as Start bar and Stop bar are added when an EPSON BarCode Font is selected, the resulting bar code may have more characters than were originally input.
- ❑ For best results, use only the font sizes recommended in "BarCode Font specifications" on page 448 for the EPSON BarCode Font you are using. Bar codes in other sizes may not be readable with all bar code readers.

**Note:**

*Depending on the print density, or on the quality or color of the paper, bar codes may not be readable with all bar code readers. Print a sample and make sure the bar code can be read before printing large quantities.*



## BarCode Font specifications

This section contains details on the character input specifications for each EPSON BarCode Font.

### EPSON EAN-8


- EAN-8 is an eight-digit abbreviated version of the EAN bar code standard.
- Because the check digit is added automatically, only 7 characters can be input.

Character type	Numbers (0 to 9)
Number of characters	7 characters
Font size	52 pt to 130 pt (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 52 pt, 65 pt (standard), 97.5 pt, and 130 pt.

The following codes are inserted automatically and need not be input by hand:

- Left/Right margin
- Left/Right guard bar
- Center bar
- Check digit
- OCR-B

## Print sample

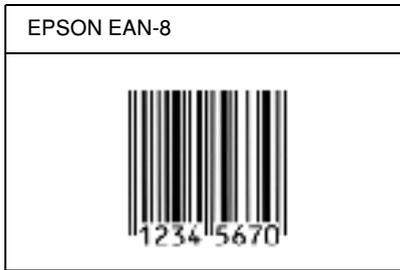

## EPSON EAN-13

- EAN-13 is the standard 13-digit EAN bar code.
- Because the check digit is added automatically, only 12 characters can be input.


Character type	Numbers (0 to 9)
Number of characters	12 characters
Font size	60 pt to 150 pt (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 60 pt, 75 pt (standard), 112.5 pt, and 150 pt.

The following codes are inserted automatically and need not be input by hand:

- Left/Right margin
- Left/Right guard bar
- Center bar
- Check digit
- OCR-B



## Print sample

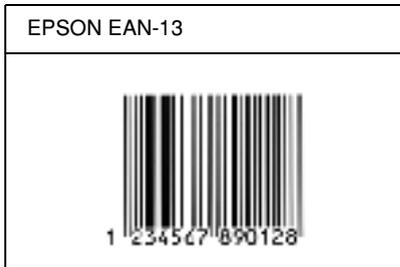

## EPSON UPC-A


- UPC-A is the standard bar code specified by the American Universal Product Code (UPC Symbol Specification Manual).
- Only regular UPC codes are supported. Supplementary codes are not supported.

Character type	Numbers (0 to 9)
Number of characters	11 characters
Font size	60 pt to 150 pt (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 60 pt, 75 pt (standard), 112.5 pt and 150 pt.

The following codes are inserted automatically and need not be input by hand:

- Left/Right margin
- Left/Right guard bar
- Center bar
- Check digit
- OCR-B

## Print sample

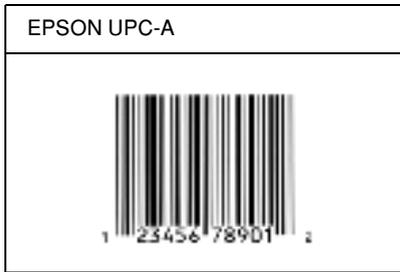

## EPSON UPC-E


- UPC-E is the UPC-A zero-suppression (deletes extra zeros) bar code specified by the American Universal Product Code (UPC Symbol Specification Manual).

Character type	Numbers (0 to 9)
Number of characters	6 characters
Font size	60 pt to 150 pt (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 60 pt, 75 pt (standard), 112.5 pt, and 150 pt.

The following codes are inserted automatically and need not be input by hand:

- Left/Right margin
- Left/Right guard bar
- Check digit
- OCR-B
- The numeral "0"

## Print sample

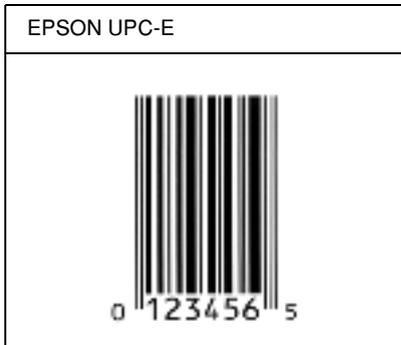

## EPSON Code39

- Four Code39 fonts are available, allowing you to enable and disable the automatic insertion of check digits and OCR-B.
- The height of the bar code is automatically adjusted to 15% or more of its total length, in conformance to the Code39 standard. For this reason, it is important to keep at least one space between the bar code and the surrounding text to prevent overlapping.
- Spaces in Code39 bar codes should be input as “\_” underbars.
- When printing two or more bar codes on one line, separate the bar codes with a tab, or select a font other than a BarCode Font and input the space. If a space is input while a Code39 font is selected, the bar code will not be correct.

Character type	Alphanumeric characters (A to Z, 0 to 9) Symbols (- . space \$ / + %)
Number of characters	No limit

Font size	<p>When OCR-B is not used: 26 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 26 pt, 52 pt, 78 pt, and 104 pt.</p> <p>When OCR-B is used: 36 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 36 pt, 72 pt, 108 pt, and 144 pt.</p>
-----------	--

The following codes are inserted automatically and need not be input by hand:

- Left/Right quiet zone
- Check digit
- Start/Stop character

### Print sample

EPSON Code39	EPSON Code39 CD
	
EPSON Code39 Num	EPSON Code39 CD Num
	

### EPSON Code128

- Code128 fonts support code sets A, B, and C. When the code set of a line of characters is changed in the middle of the line, a conversion code is automatically inserted.




- ❑ The height of the bar code is automatically adjusted to 15% or more of its total length, in conformance to the Code128 standard. For this reason, it is important to keep at least one space between the bar code and the surrounding text to prevent overlapping.
- ❑ Some applications automatically delete the spaces at the end of lines or change multiple spaces into tabs. Bar codes containing spaces may not be correctly printed from applications that automatically delete spaces from the ends of lines or change multiple spaces into tabs.
- ❑ When printing two or more bar codes on one line, separate the bar codes with a tab, or select a font other than a BarCode Font and input the space. If a space is input while Code128 is selected, the bar code will not be correct.

Character type	All ASCII characters (95 in total)
Number of characters	No limit
Font size	26 pt to 104 pt (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 26 pt, 52 pt, 78 pt, and 104 pt.

The following codes are inserted automatically and need not be input by hand:

- ❑ Left/Right quiet zone
- ❑ Start/Stop character
- ❑ Check digit
- ❑ Change code set character

## Print sample

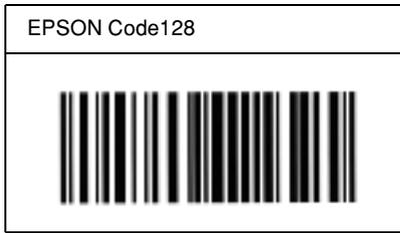

## EPSON ITF

- The EPSON ITF fonts conform to the USS Interleaved 2-of-5 standard (American).
- Four EPSON ITF fonts are available, allowing you to enable and disable the automatic insertion of check digits and OCR-B.
- The height of the bar code is automatically adjusted to 15% or more of its total length, in conformance to the Interleaved 2-of-5 standard. For this reason, it is important to keep at least one space between the bar code and the surrounding text to prevent overlapping.
- Interleaved 2 of 5 treats every two characters as one set. When there are an odd number of characters, EPSON ITF fonts automatically add a zero to the beginning of the character string.

Character type	Numbers (0 to 9)
Number of characters	No limit

Font size	<p>When OCR-B is not used: 26 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 26 pt, 52 pt, 78 pt, and 104 pt.</p> <p>When OCR-B is used: 36 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 36 pt, 72 pt, 108 pt, and 144 pt.</p>
-----------	--

The following codes are inserted automatically and need not be input by hand:

- Left/Right quiet zone
- Start/Stop character
- Check digit
- The numeral “0” (added to the beginning of character strings as needed)

## Print sample

EPSON ITF	EPSON ITF CD
	
EPSON ITF Num	EPSON ITF CD Num
 0 1 2 3 4 5 6 7	 1 2 3 4 5 6 7 0

### ***EPSON Codabar***

- Four Codabar fonts are available, allowing you to enable and disable the automatic insertion of check digits and OCR-B.
- The height of the bar code is automatically adjusted to 15% or more of its total length, in conformance to the Codabar standard. For this reason, it is important to keep at least one space between the bar code and the surrounding text to prevent overlapping.
- When either a Start or a Stop character is input, Codabar fonts automatically insert the complementary character.
- If neither a Start nor a Stop character is input, these characters are automatically input as the letter "A".

Character type	Numbers (0 to 9) Symbols (- \$ : / . +)
Number of characters	No limit
Font size	When OCR-B is not used: 26 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 26 pt, 52 pt, 78 pt, and 104 pt.  When OCR-B is used: 36 pt or more (up to 96 pt in Windows XP/2000/NT). Recommended sizes are 36 pt, 72 pt, 108 pt, and 144 pt.

The following codes are inserted automatically and need not be input by hand:

- Left/Right quiet zone
- Start/Stop character (when not input)
- Check digit

## Print sample

EPSON Codabar	EPSON Codabar CD
	
EPSON Codabar Num	EPSON Codabar CD Num
 A 1 2 3 4 5 6 7 A	 A 1 2 3 4 5 6 7 4 A



---

**Symbol Sets**

Introduction to Symbol Sets ..... 462

In the LJ4 Emulation Mode..... 463

    International character sets for ISO ..... 466

In the ESC/P 2 or FX Modes..... 467

    International character sets ..... 469

    Characters available with the ESC (^) command..... 470

In the I239X Emulation Mode..... 470

In the EPSON GL/ 2 Mode..... 471



---

## ***Introduction to Symbol Sets***

Your printer can access a variety of symbol sets. Many of these symbol sets differ only in the international characters specific to each language.

***Note:***

*Since most software handles fonts and symbols automatically, you would probably never need to adjust the printer's settings. However, if you are writing your own printer control programs, or if you are using older software that cannot control fonts, refer to the following sections for symbol set details.*

When you are considering which font to use, you should also consider which symbol set to combine with the font. Available symbol sets vary depending on which emulation mode you use and which font you choose.

## In the LJ4 Emulation Mode

The following symbol sets are available in LJ4 emulation mode.

Available typefaces	Symbol set name:	
<b>19 Typefaces</b> <b>Courier</b> <b>CG Times</b> <b>Universe</b> <b>Letter Gothic</b> <b>Line Printer</b>	IBM-US (10U)	Roman-8 (8U)
	ECM94-1 (0N)	8859-2 ISO (2N)
	8859-9 ISO (5N)	8859-10ISO (6N)
	IBM-DN (11U)	PcMultilingual (12U)
	PcE.Europe (17U)	PcTk437 (9T)
	WiAnsi (19U)	WiE.Europe (9E)
	WiTurkish (5T)	Legal (1U)
	UK (1E)	Swedis2 (0S)
	Italian (0I)	Spanish (2S)
	German (1G)	Norweg1 (0D)
	French2 (1F)	Roman-9 (4U)
	8859-15ISO (9N)	PcEur858 (13U)
<b>19 Typefaces</b> <b>Courier</b> <b>CG Times</b> <b>Universe</b> <b>Letter Gothic</b>	PcBlt775 (26U)	Pc1004 (9J)
	WiBALT (19L)	DeskTop (7J)
	PsText (10J)	Windows (9U)
	McText (12J)	MsPublishi (6J)
	PiFont (15U)	VeMath (6M)
	VeInternational (13J)	VeUS (14J)

D

Available typefaces	Symbol set name:	
<b>19 Typefaces</b> <b>Courier</b> <b>CG Times</b> <b>Universe</b> <b>Letter Gothic</b> <b>Dorit</b> <b>Malka</b> <b>Naamit</b> <b>Naskh</b> <b>Koufi</b> <b>Ryadh</b>	PsMath (5M)	Math-8 (8M)
<b>19 Typefaces</b> <b>Courier</b> <b>CG Times</b> <b>Universe</b> <b>Letter Gothic</b> <b>Dorit</b> <b>Malka</b> <b>Naamit</b> <b>Naskh</b> <b>Koufi</b> <b>Ryadh</b> <b>Line Printer</b>	ANSI ASCII (0U)	
<b>Courier</b> <b>CG Times</b> <b>Universe</b> <b>Letter Gothic</b>	Pc866Cyr (3R)	Pc866Ukr (14R)
	WinCyr (9R)	ISOCyr (10N)
	Pc8Grk (12G)	Pc851Grk (10G)
	WinGrk (9G)	ISOGrk (12N)
	Greek8 (8G)	
<b>Courier</b> <b>Letter Gothic</b> <b>Dorit</b> <b>Malka</b> <b>Naamit</b> <b>Line Printer</b>	8859-8 ISO (7H)	Hebrew7 (0H)
	Hebrew8 (8H)	
<b>Courier</b> <b>Letter Gothic</b> <b>Dorit</b> <b>Malka</b> <b>Naamit</b>	Pc862Heb (15H)	

Available typefaces	Symbol set name:	
<b>Naskh Koufi Ryadh</b>	Pc864Ara (10V)	HPWARA (9V)
<b>Naskh Koufi Ryadh Line Printer</b>	Arabic8 (8V)	
<b>Courier Line Printer</b>	PcHe862 (15Q)	PcGk437 (32G)
	PcIcelandic (32I)	PcLt774 (32L)
	PcCy855 (32R)	PcTurk1 (32T)
	PcAr864 (32V)	PcGk851 (33G)
	PcPortuguese (33I)	PcEt850 (33L)
	PcCy866 (33R)	PcTurk2 (33T)
	PcGk869 (34G)	PcCanFranch (34I)
	PcSl437 (34L)	PcLt866 (34R)
	PcNordic (35I)	PcUkr866 (35R)
	PcLit771 (36R)	8859-7 ISO (40G)
	8859-5 ISO (40R)	8859-6 ISO (40V)
	8859-3 ISO (41I)	8859-4 ISO (42I)
	WiGreek (48G)	WiBaltic (48L)
	WiCyrillic (48R)	WiEstonian (49L)
	WiLatvian (50L)	Europe3 (64G)
	Mazowia (64L)	Bulgarian (64R)
	CodeMJK (65L)	BpBRASCII (66L)
	BpAbicomp (67L)	
<b>OCR A</b>	OCR A (0O)	
<b>OCR B</b>	OCR B (1O)	

The 19 typefaces refer to those listed below:

CG Omega  
Coronet  
Clarendon Condensed  
Univers Condensed  
Antique Olive  
Garamond  
Marigold  
Albertus  
Arial  
Times New  
Helvetica  
Helvetica Narrow  
Palatino  
ITC Avant Garde Gothic  
ITC Bookman  
New Century Schoolbook  
Times  
ITC Zapf Chancery Medium Italic  
CourierPS

## ***International character sets for ISO***

The following are the available international character sets for ISO.

Character sets:	ANSI ASCII (0U)	Norweg 1 (0D)
	French (0F)	HP German (0G)
	Italian (0I)	JIS ASCII (0K)
	Swedis 2 (0S)	Norweg 2 (1D)
	UK (1E)	French 2 (1F)
	HP Spanish (1S)	German (1G)
	Chinese (2K)	Spanish (2S)
	IRV (2U)	Swedish (3S)
	Portuguese (4S)	IBM Portuguese (5S)
	IBM Spanish (6S)	

## In the ESC/P 2 or FX Modes

Character Table	Available typefaces			
	OCR B	Courier	EPSON Roman EPSON Sans serif EPSON Prestige EPSON Script	Letter Gothic Arial Times New
<b>PcUSA</b>	available	available	available	available
<b>PcMultilingual</b>	not available	available	available	available
<b>PcPortuguese</b>	not available	available	available	available
<b>PcCanFrench</b>	not available	available	available	available
<b>PcNordic</b>	not available	available	available	available
<b>PcE.Europe</b>	not available	available	not available	available
<b>PcTurk2</b>	not available	available	not available	available
<b>PcIcelandic</b>	not available	available	not available	available
<b>BpBRASCI</b>	not available	available	not available	available
<b>BpAbicom</b>	not available	available	not available	available
<b>Roman-8</b>	not available	available	available	available
<b>PcEur858</b>	available	available	available	available
<b>ISO Latin1</b>	not available	available	not available	available
<b>8859-15ISO</b>	not available	available	available	available
<b>PcSI437*</b>	not available	available	not available	not available
<b>PcTurk1*</b>	not available	available	not available	not available
<b>8859-9 ISO*</b>	not available	available	not available	not available
<b>Mazowia*</b>	not available	available	not available	not available
<b>CodeMJK*</b>	not available	available	not available	not available

D

<b>PcGk437*</b>	not available	available	not available	not available
<b>PcGk851*</b>	not available	available	not available	not available
<b>PcGk869*</b>	not available	available	not available	not available
<b>8859-7 ISO*</b>	not available	available	not available	not available
<b>PcCy855*</b>	not available	available	not available	not available
<b>PcCy866*</b>	not available	available	not available	not available
<b>Bulgarian*</b>	not available	available	not available	not available
<b>PcUkr866*</b>	not available	available	not available	not available
<b>Hebrew7*</b>	not available	available	not available	not available
<b>Hebrew8*</b>	not available	available	not available	not available
<b>PcHe862*</b>	not available	available	not available	not available
<b>PcAr864*</b>	not available	available	not available	not available
<b>PcLit771*</b>	not available	available	not available	not available
<b>PcLit774*</b>	not available	available	not available	not available
<b>Estonia*</b>	not available	available	not available	not available
<b>ISO Latin 2*</b>	not available	available	not available	not available
<b>PcLat866*</b>	not available	available	not available	not available
<b>PcAr864Ara*</b>	not available	available	not available	not available
<b>PcAr720*</b>	not available	available	not available	not available

\* Available only in ESC/P2 mode.

Times New is a type face compatible with RomanT.

Letter Gothic is a type face compatible with OratorS.

Arial is a type face compatible with SansH.

## International character sets

You can select one of the following international character sets using the ESC R command:

Character sets: USA, France, Germany, UK, Japan, Denmark1, Denmark2, Sweden, Italy, Spain1, Spain2, Norway, Latin America, Korea\*, Legal\*

\* Available for ESC/P 2 emulation only

## Characters available with the ESC (^) command

To print the characters in the table below, use the ESC (^) command.

CODE	0	1	7
0			▶
1	©	←	
2	®	†	
3	™	!!	
4	•	¶	
5	•		
6	•	—	
7	·	↓	
8	■	†	
9	◊	↓	
A	◻	→	
B	◌	→	
C	◌	↳	
D	◌	↪	
E	◌	↩	
F	◌	◌	◌

---

## ***In the I239X Emulation Mode***

The available symbol sets in the I239X mode are PcUSA, PcMultilingual, PcEur858, PcPortuguese, PcCanFrench, PcNordic. See “In the ESC/P 2 or FX Modes” on page 467.

The available fonts are EPSON Sans Serif, Courier, EPSON Prestige, EPSON Gothic, EPSON Presentor, EPSON Orator, and EPSON Script.

---

## ***In the EPSON GL/ 2 Mode***

The available symbol sets in the EPSON GL/ 2 mode are the same as those in LaserJet4 emulation mode. See “In the LJ4 Emulation Mode” on page 463.

## Appendix E

---

### Postscript Font Samples

#### Courier

ABCDEFGHIJKLMNOPQRSTUVWXYZ  
abcdefghijklmnopqrstuvwxyz 1234567890

#### Courier Oblique

*ABCDEFGHIJKLMNOPQRSTUVWXYZ*  
*abcdefghijklmnopqrstuvwxyz 1234567890*

#### Courier Bold

**ABCDEFGHIJKLMNOPQRSTUVWXYZ**  
**abcdefghijklmnopqrstuvwxyz 1234567890**

#### Courier Bold Oblique

***ABCDEFGHIJKLMNOPQRSTUVWXYZ***  
***abcdefghijklmnopqrstuvwxyz 1234567890***

#### Helvetica

ABCDEFGHIJKLMNOPQRSTUVWXYZ  
abcdefghijklmnopqrstuvwxyz 1234567890

#### Helvetica Oblique

*ABCDEFGHIJKLMNOPQRSTUVWXYZ*  
*abcdefghijklmnopqrstuvwxyz 1234567890*

#### Helvetica Bold

**ABCDEFGHIJKLMNOPQRSTUVWXYZ**  
**abcdefghijklmnopqrstuvwxyz 1234567890**

#### Helvetica Bold Oblique

***ABCDEFGHIJKLMNOPQRSTUVWXYZ***  
***abcdefghijklmnopqrstuvwxyz 1234567890***

E

**Helvetica Narrow**

ABCDEFGHIJKLMNOPQRSTUVWXYZ  
abcdefghijklmnopqrstuvwxyz 1234567890

**Helvetica Narrow Oblique**

*ABCDEFGHIJKLMNOPQRSTUVWXYZ*  
*abcdefghijklmnopqrstuvwxyz 1234567890*

**Helvetica Narrow Bold**

**ABCDEFGHIJKLMNOPQRSTUVWXYZ**  
**abcdefghijklmnopqrstuvwxyz 1234567890**

**Helvetica Narrow Bold Oblique**

***ABCDEFGHIJKLMNOPQRSTUVWXYZ***  
***abcdefghijklmnopqrstuvwxyz 1234567890***

**Symbol**

ΑΒΧΔΕΦΓΗΙΘΚΛΜΝΟΠΘΡΣΤΥςΩΞΨΖ  
αβχδεφγηιφκλμνοπθρστυωξψζ 1234567890

**Times Roman**

ABCDEFGHIJKLMNOPQRSTUVWXYZ  
abcdefghijklmnopqrstuvwxyz 1234567890

**Times Italic**

*ABCDEFGHIJKLMNOPQRSTUVWXYZ*  
*abcdefghijklmnopqrstuvwxyz 1234567890*

**Times Bold**

**ABCDEFGHIJKLMNOPQRSTUVWXYZ**  
**abcdefghijklmnopqrstuvwxyz 1234567890**

**Times Bold Italic**

***ABCDEFGHIJKLMNOPQRSTUVWXYZ***  
***abcdefghijklmnopqrstuvwxyz 1234567890***

---

# Glossary

## **ASCII**

American Standard Code for Information Interchange. A standardized way of assigning codes to characters and control codes. The system is widely used by manufacturers of computers, printers, and software.

## **bitmap font**

The dot-by-dot representation of a font. Bitmap fonts are displayed on computer screens and printed on dot matrix printers. See *outline font*.

## **buffer**

See *memory*.

## **character set**

A collection of letters, numbers, and symbols used in a particular language.

## **cpi (characters per inch)**

A measure of the size of fixed-width text characters.

## **CR (carriage return)**

A control code to return the printing position to the start of the next line after printing one line.

## **default**

A value or setting that takes effect when the printer is turned on, reset, or initialized.

## **download**

To transfer information from the computer to the printer.

## **downloaded font**

A font that is loaded into the printer's memory from an outside source, such as a computer. Also called soft font.

## **dpi (dots per inch)**

The number of dots per inch is a measure of printer resolution. The higher the number of dots, the higher the resolution.

## **driver**

See *printer driver*.

**drum**

The part of the printer mechanism where the image is formed and transferred to paper.

**emulation**

See *printer emulation*.

**FF (Form Feed)**

A control code to break the page.

**fixed-width font**

A font whose characters are allotted the same amount of horizontal space, no matter the width of the character. Thus the uppercase *M* receives the same amount of space as the letter *l*.

**font**

A set of characters and symbols that share a common typographic design and style.

**font family**

The collection of all sizes and styles of a font.

**halftone**

A grayscale image that is composed of small dots. The dots can be close together to create black or more widely spaced to create gray or white areas in the image. Newspaper photographs are common examples of halftones.

**imaging cartridge**

The imaging cartridge contains a photosensitive print drum and supply of toner.

**initialization**

The act of returning the printer to its defaults (fixed set of conditions).

**interface**

The connection between the printer and the computer. A parallel interface transmits data one character or code at a time, while a serial interface transmits data one bit at a time.

**landscape**

Printing that is oriented sideways on the page. This orientation gives you a page that is wider than it is high and is useful for printing spreadsheets.

**LF (Line Feed)**

A control code to start a new line.

**memory**

The part of the printer's electronic system that is used to store information. Some information is fixed and is used to control how the printer operates. Information that is sent to the printer from the computer (such as downloaded fonts) is stored in memory temporarily. See also *RAM* and *ROM*.

**orientation**

Refers to the direction in which characters are printed on a page. This direction is either portrait, where the length of the page is longer than its width, or landscape, where the width is longer than its length.

**outline font**

A font whose outline is described mathematically, allowing it to be rendered (printed or drawn) smoothly at any size.

**PCL**

The command language built into the Hewlett-Packard® LaserJet® series printers.

**pitch**

A measure of the number of characters per inch (cpi) for fixed-width fonts.

**point size**

The height of a particular font as measured from the top of the tallest character to the bottom of the lowest. A point is a typographic unit of measure equivalent to 1/72 of an inch.

**portrait**

Printing that is oriented upright on the page (as opposed to landscape, in which printing is oriented sideways on the page). This is the standard orientation for printing letters or documents.

**ppm (pages per minute)**

The number of pages can be printed in one minute.

**printer driver**

Software that sends instructions to the printer to tell it what to do. For example, your printer driver accepts print data from your word processor application and sends instructions to the printer on how to print this data.

**printer emulation**

A set of operating commands that determines how data sent from the computer is interpreted and acted upon. Printer emulations replicate existing printers, such as the HP LaserJet 4.

**proportional font**

A font whose characters have varying amounts of horizontal space depending on the width of the character. Thus the uppercase *M* takes up more horizontal space than the lowercase *l*.

**RAM**

Random Access Memory. The portion of the printer's memory used as a buffer and for storing user-defined characters. All data stored in RAM is lost when the printer is turned off.

**reset**

To refresh the printer's memory and erase the current print jobs.

**resident font**

A font that is stored permanently in the printer's memory.

**resolution**

A measure of the fineness and clarity of images produced by the printer or monitor. Printer resolution is measured in dots per inch. Monitor resolution is measured in pixels.

**RI Tech**

Resolution Improvement Technology. A feature that smooths the jagged edges of printed lines or shapes.

**ROM**

Read Only Memory. A portion of memory that can only be read and cannot be used for data storage. ROM retains its contents when you turn off the printer.

**sans serif font**

A font lacking serifs.

**scalable font**

See *outline font*.

**serif**

The small decorative strokes that come off the main lines of a character.

**status sheet**

A report that lists the printer settings and other printer information.

**symbol set**

A collection of symbols and special characters. Symbols are assigned to specific codes in a character table.

**toner**

The black powder contained in the imaging cartridge that is used to print images on the paper.

**TrueType**

An outline font format that was developed jointly by Apple® Computer and Microsoft Corporation. TrueType fonts are outline fonts that can be easily resized for screen display or for printing.



---

# Index

## **Numerics**

### 4-Bin Mailbox

- About, 6
- Installing, 212
- Paper jam, 295
- Paper jam inside the output unit, 300
- Paper jam inside the printer, 295
- Removing, 225
- Specifications, 379
- Using, 63

### 500-Sheet Universal Paper Cassette

- Unit A3
- About, 5, 206
- Handling precautions, 206
- Installing, 207
- Removing, 212
- Specifications, 17, 378

## **A**

- Additional Driver, Using, 189
- AppleTalk, Special settings under
  - Windows 2000/NT 4.0, 137, 202

## **B**

- Balloon help, 151

## **C**

- Canceling printing, 89, 352
  - Using the Cancel Job button, 352
  - Using the Reset menu, 353
- Cleaning the printer, 269
- Consumables
  - Replacement messages, 256
  - Replacing, 256
- Contacting EPSON, 354
- Control panel
  - Accessing menus, 388

- Buttons, 390
- Menus, 388, 389
- Settings, 388
- Using the menus, 390
- Control panel menus
  - AUX menu, 413
  - Confidential Job menu, 410
  - Emulation menu, 401
  - ESCP2 menu, 420
  - FX menu, 423
  - GL2 menu, 417
  - I239X menu, 425
  - LJ4 menu, 414
  - Network menu, 413
  - Overview, 394
  - Parallel menu, 411
  - Printing menu, 401
  - PS3 menu, 419
  - Quick Print Job menu, 409
  - Reset menu, 410
  - Setup menu, 404
  - Tray menu, 399
  - USB menu, 412
- Control panel settings, When to use, 388
- Customer support
  - Australia, 355
  - Contacting, 354
  - Hong Kong, 359
  - India, 361
  - Indonesia, 358
  - Latin America, 355
  - Malaysia, 360
  - Philippines, 363
  - Singapore, 357
  - Thailand, 357

## **D**

- Duplex printing

- About, 11
- Settings, 58

Duplex Unit

- About, 6, 228
- Installing, 228
- Paper jam, 302
- Removing, 232
- Specifications, 380

## **E**

ENERGY STAR Compliance, 385

Envelopes

- Loading, 33
- Specifications, 369

EPSON BarCode fonts

- About, 439
- Formatting, 446
- Inputting, 446
- Installing, 441
- Printing, 443
- Specifications, 448
- System requirements, 441

EPSON Color Laser Transparencies, 370

EPSON Font Manager

- About, 437
- Installing, 437
- System requirements, 437

EPSON Status Monitor 3

- About, 72
- Accessing, 76
- Getting printer status, 77
- Installing, 73
- Job Management function, 81
- Monitoring preferences, 79
- Setting monitored printers, 86
- Status Alert window, 81
- Stopping monitoring, 85

Error messages, 341

Ethernet interface, Specifications, 377

## **F**

Features

- HDD Form Overlay function, 8
- PostScript 3, 7
- Reserve Job function, 7
- RI Tech, 9

Fit-to-page printing, 11

Fonts

- Adding, 435
- Available, 430
- Downloading, 436
- EPSON BarCode fonts, 439
- ESC/P2 and FX modes, 433
- I239X mode, 434
- LJ4/GL2 mode, 431
- Printing samples, 435
- PS 3 mode, 434
- Selecting, 436

Font Samples, 473

## **G**

Guides

- Network Guide, 1
- Online Help, 1
- Paper Jam Guide, 1
- Reference Guide, 1
- Setup Guide, 1

## **H**

Hard Disk Drive

- About, 6, 232
- Formatting, 242
- Installing, 232
- Removing, 242
- Specifications, 380

HDD Form Overlay function

- About, 8
- Settings, 55

## **I**

IES (Intelligent Emulation Switch), 7, 98, 140

Imaging cartridge

- About, 6

- Handling precautions, 257
- Replacing, 258
- Specifications, 381
- Installing
  - 500-Sheet Universal Paper Cassette
    - Unit A3, 207
  - Hard Disk Drive, 232
  - Interface card, 252
  - Memory module, 243
- Interface card
  - About, 252
  - Installing, 252
  - Removing, 254

## **J**

- Job Management function
  - Using, 81

## **L**

- Labels
  - About, 34
  - Driver settings, 34
  - Specifications, 369
- Loading paper
  - 500-Sheet Universal Paper Cassette
    - Unit A3, 23
  - Custom size paper, 36
  - Envelopes, 33
  - MP tray, 21
  - Standard paper cassette, 23

## **M**

- Memory module
  - About, 6, 243
  - Installing, 243
  - Removing, 251
  - Specifications, 381
- MP tray
  - Paper jam, 282
  - Specifications, 16

## **O**

- Online help, 135
- Options
  - 500-Sheet Universal Paper Cassette
    - Unit A3, 206
  - Hard Disk Drive, 232
  - Interface cards, 252
  - Memory modules, 243
- Output tray, 31
- Overlay function
  - Settings, 50
  - Using to print, 13

## **P**

- Pages per sheet printing, 12
- Paper
  - Loading the 550-Sheet Universal Lower Paper Cassette Unit A3, 23
  - Loading the MP tray, 21
  - Loading the standard paper cassette, 23
  - Printable area, 370
  - Prohibited, 367
  - Specifications, 366, 368
  - Supported media types, 366
- Paper jams
  - 4-Bin Mailbox, 295
  - Duplex Unit, 302
  - Inside the printer, 284
  - MP tray, 282
  - Precautions when clearing jams, 277
  - Standard paper cassette, 278
- Paper sources
  - 550-Sheet Universal Paper Cassette
    - Unit A3, 17
  - MP tray, 16
  - Selecting, 17
  - Single-Sheet Tray, 17
  - Standard paper cassette, 17
- Parallel interface, Specifications, 376
- PostScript 3
  - About, 7

- Font samples, 473
- PostScript printer driver
  - About, 98, 140
  - Hardware requirements, 98, 140
  - Installing for Mac OS 8.6/9.x, 142
  - Installing for Mac OS X, 164
  - Installing for Windows Me/98/95, 99
  - Installing for Windows NT 4.0, 113
  - Installing for Windows XP/2000, 123
  - System requirements, 98, 140
  - Using with Mac OS 8.6/9.x, 142
  - Using with Mac OS X, 164
  - Using with Windows Me/98/95, 99
  - Using with Windows NT 4.0, 113
  - Using with Windows XP/2000, 123
- PostScript printer driver settings
  - For Mac OS 8.6/9.x, 151
  - For Mac OS X, 177
  - For Windows Me/98/95, 103
  - For Windows NT 4.0, 115, 116, 120
  - For Windows XP/2000, 127
- PostScript problems
  - Font problems (Macintosh), 329
  - Font problems (Windows), 323
  - Problems printing PostScript documents (Macintosh), 326
  - Problems printing PostScript documents (Windows), 319
  - Problems printing via the network (Macintosh), 330
  - Problems printing via the parallel interface (Windows), 323
  - Problems printing via the USB interface (Windows), 324
  - Problems with the printer driver (Macintosh), 327
- Precautions
  - Clearing paper jams, 277
  - During operation, 382
  - Power on/off, 385
  - Replacing consumable products, 256
- Printer
  - Available optional products, 5
  - Cleaning, 269
  - Consumable products, 6
  - Finding a location, 272
  - Resetting, 353
  - Sharing, 186
  - Printer driver
    - About, 38
    - Accessing, 38
    - Basis settings, 39
    - Installing for Windows, 38
    - System requirements, 38
  - Printer driver settings
    - Using Balloon help, 151
    - Using online help, 135
  - Printer parts
    - Control panel, 4
    - Front view, 2
    - Inside the printer, 3
    - Rear view, 2
  - Printer setup
    - Changing (Mac OS 8.6/9.x), 150
    - Changing (Mac OS X), 177

## **R**

- Removing
  - 4-Bin Mailbox, 225
  - 500-Sheet Universal Paper Cassette Unit A3, 212
  - Duplex Unit, 232
  - Hard Disk Drive, 242
  - Interface card, 254
  - Memory module, 251
- Reserve Job function
  - About, 7
  - Confidential Job, 70
  - Confidential Job menu, 393, 410
  - Printing and deleting data, 392
  - Quick Print Job menu, 392, 409
  - Re-Print Job, 66
  - Stored Job, 69
  - Using, 13, 65
  - Verify Job, 67
- Reserve job function

- About, 135
- Using, 136
- Resetting the printer, 353
- RITech, 9, 108

## **S**

### **Safety**

- Precautions, 382

### **Selecting the printer (Mac OS 8.6/9.x)**

- Network connection, 148

- USB connection, 145

### **Selecting the printer (Mac OS X), 166**

### **Sharing the printer**

- About, 186

- Installing the printer driver from the

  - CD-ROM, 203

- Setting the clients, 186, 194

- Setting the clients in Windows

  - Me/98/95, 195

- Setting the clients in Windows NT

  - 4.0, 201

- Setting the clients in Windows

  - XP/2000, 197

- Setting the printer server, 186

- Setting up the printer, 187

### **Special media**

- About, 32

- Envelopes, 32

- Labels, 34

### **Specifications**

- 4-Bin Mailbox, 379

- 500-Sheet Universal Paper Cassette

  - Unit A3, 17, 378

- Duplex Unit, 380

- Envelopes, 369

- EPSON BarCode fonts, 448

- EPSON Color Laser Transparencies, 370

- Ethernet interface, 377

- Hard Disk Drive, 380

- Imaging cartridge, 381

- Labels, 369

- Memory modules, 381

- MP tray, 16

- Paper, 366, 368

- Parallel interface, 376

- Standard paper cassette, 17

- Thick paper, 369

- USB interface, 376

- SPL (Shared Printer Language), 7, 98, 140

### **Standard paper cassette**

- Paper jam, 278

- Specifications, 17

- Status messages, 341

- Status sheet, printing, 304

### **Symbol sets**

- About, 462

- EPSON GL/ 2 mode, 471

- ESC/P 2 mode, 467

- FX mode, 467

- I239X mode, 470

- international character sets, 469

- ISO sets, 466

- LJ4 mode, 463

## **T**

- Technical support, 354

### **Thick paper**

- Driver settings, 35

- Specifications, 369

### **Transparencies**

- About, 36

- Driver settings, 36

### **Transporting the printer**

- Long distances, 269

- Short distances, 270

### **Troubleshooting**

- Contacting customer support, 354

- LCD panel messages, 341

- Memory problems, 316

- Operational problems, 306

- Paper handling problems, 318

- PostScript 3 mode, 318

- Printout problems, 308

- Print quality problems, 311

- Status and error messages, 341

- USB connection, 333

Using options, 331

## **U**

Uninstalling

USB device driver, 93

USB connection, Settings, 86

USB interface, Specifications, 376

## **W**

Watermarks

About, 12

Using, 45

