



Epson Classroom Connect Operation Guide (iOS)

Notations Used in This Guide 4

Introduction to the Epson Classroom Connect App 5

Epson Classroom Connect Features 6
Intuitive Operation Experience 6
Smooth Connection to Projectors 6

Setting Up the App for the First Time 7

Installing the App 8
Epson Classroom Connect Requirements 8
Installing the Epson Classroom Connect App 8**Selecting Projector Network Settings** 9
Setting Up a Projector when Connecting by Wireless LAN 9
Setting Up a Projector when Connecting by Wired LAN 9

Connecting to the Projector and Projecting Images 11

Connecting Epson Classroom Connect For the First Time 12
Connecting To Projector Using Connection Code 12
Connecting To Projector Using IP Address 13
Connecting to a Projector by Reading a QR Code 14**Connecting To Projector From the Connection History** 16**Controlling the Projected Display** 18
Interactive Feature 18

Useful Functions 19

Using Additional Functions 20
Creating a Nickname To the Projector 20
Pinning Frequently Used Connection Environments 20

Solving Problems 21

Solving Network Connection Problems 22
Solutions When You Cannot Connect to the Internet After Connecting to the Projector 22
Solutions When You Cannot Connect Using a Connection Code 22**Solving Problems During Projection** 23
Solutions When You Cannot Connect Projectors (Wireless) 23
Solutions When You Cannot Connect Projectors (Wired) 23
Solutions When the Projected Image Does Not Move Smoothly 24
Solutions When Audio is Not Played Properly 24

Screen Summary 25

Connection Screen 26
Connecting to the Projector Using Other Connection Methods 27
Settings Screen 28

Appendix 29

Uninstalling the Epson Classroom Connect 30**Limitations** 31
Connection Limitations 31**General Notes** 32
Copyright Notice 32

Trademarks 32



Copyright Attribution 32

Notations Used in This Guide



Safety indications

The projector and its manuals use graphical symbols and labels to indicate content that tells you how to use the product safely.

Read and carefully follow the instructions that are marked with these symbols and labels to avoid injury to persons or damage to property.

 Warning	This symbol indicates information that, if ignored, could possibly result in serious personal injury or even death due to incorrect handling.
 Caution	This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

General information indications

Attention	This label indicates procedures that may result in damage or injury if sufficient care is not taken.
	This label indicates additional information that may be useful to know.
[Button name]	Indicates the buttons on the remote control or the control panel. Examples: [Esc] button
Menu/Setting name	Indicates projector menu and setting names. Examples: Select the Image menu
»»	This label indicates links to the related pages.
	This label indicates the projector's current menu level.

Introduction to the Epson Classroom Connect App

See the information here to learn more about the Epson Classroom Connect.

▶▶ Related Links

- "Epson Classroom Connect Features" [p.6](#)

Using Epson Classroom Connect, you can smoothly perform a series of actions that are useful in classes, such as projecting images using a projector connected to your device.


► Related Links

- "Intuitive Operation Experience" [p.6](#)
- "Smooth Connection to Projectors" [p.6](#)

Intuitive Operation Experience

Epson Classroom Connect allows you to perform a series of operations in simple steps.

You can also easily connect your device to the projector and project images.

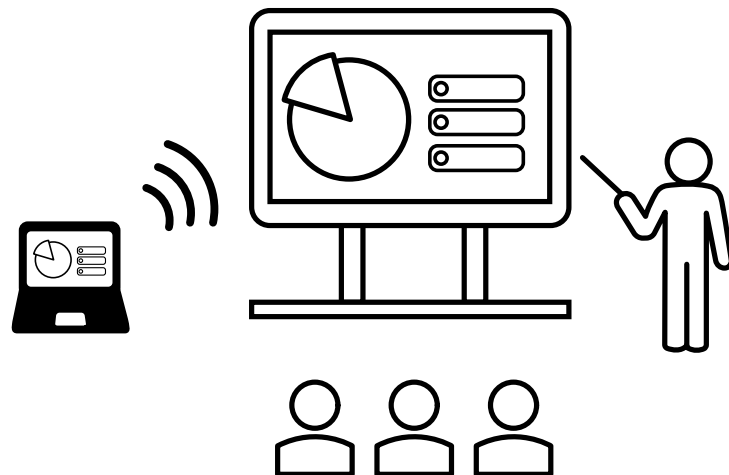

- You can also output audio for the screen being projected using mirroring from the projector.

Smooth Connection to Projectors

You can connect to the projector using the connection code, IP address, or QR code displayed on the projector's screen.

If you want to connect to the same projector, you can easily connect from the connection history displayed in Epson Classroom Connect.

Setting Up the App for the First Time

Follow these instructions before connecting a device to the projector over a network.

►► Related Links

- "Installing the App" [p.8](#)
- "Selecting Projector Network Settings" [p.9](#)

Follow these instructions to install the Epson Classroom Connect app on App Store.

► Related Links

- "Epson Classroom Connect Requirements" [p.8](#)

Epson Classroom Connect Requirements

Your device must meet the following system requirements to use the Epson Classroom Connect.

Requirement	iOS
Operating system	macOS 16.x macOS 17.x macOS 18.x iOS 16.x iOS 17.x iOS 18.x
CPU	Apple A10 processor
Amount of Memory	3 GB or more (8GB or more recommended)
Display	Resolution 1280 × 720 or more



If you use Epson Classroom Connect on an iPhone, the screen may not be displayed correctly.

► Related Links

- "Installing the Epson Classroom Connect App" [p.8](#)

Installing the Epson Classroom Connect App

Follow these instructions to install the Epson Classroom Connect app on your device.

- 1** Turn on your device.
Make sure you are signed in to an account that will use the app.
- 2** Find and install the Epson Classroom Connect app from the App Store.

If you have not made network settings for the projectors, you need to set up the projector before using Epson Classroom Connect. Follow these instructions to select a connection method between a device and the projector, and then set up the projector.

► Related Links

- "Setting Up a Projector when Connecting by Wireless LAN" [p.9](#)
- "Setting Up a Projector when Connecting by Wired LAN" [p.9](#)

Setting Up a Projector when Connecting by Wireless LAN

To connect a device to the projector using a wireless LAN, you need to select network settings on the device to the projector.



The necessary settings vary depending on your projector. See your projector's *User's Guide* for instructions.

- 1** Contact your network administrator and write down the settings for the access point, such as the SSID and security settings.
- 2** Configure the network settings so that the device can connect to the network.



If you need to set up a network connection, see the documentation supplied with your device or network adapter. See your device's *User's Guide* for details.

- 3** Install the wireless LAN unit in the projector if necessary. See your projector's *User's Guide* for instructions.
- 4** Turn on the projector.

- 5** Press the [Menu] button on the remote control or the control panel, and select the **Network** menu.
- 6** Turn on a wireless LAN.
- 7** Turn off the **Simple AP** setting. The necessary settings vary depending on your projector. See your projector's *User's Guide* for instructions.
- 8** Select other options as necessary for your network. See your projector's *User's Guide* for instructions.
- 9** Select security settings as necessary for your network. Check with your network administrator for more information on choosing the correct settings.
- 10** When you have finished making settings, save your settings and exit the menus.

Setting Up a Projector when Connecting by Wired LAN

To connect a device to the projector using a wired LAN, you need to select network settings on the device and the projector.



The necessary settings vary depending on your projector. See your projector's *User's Guide* for instructions.

- 1** Configure the network settings so that the device can connect to the network.



If you need to set up a network connection, see the documentation supplied with your device or network adapter. See your device's *User's Guide* for details.

- 2** Connect a LAN cable to the projector.
- 3** Turn on the projector.
- 4** Press the [Menu] button on the remote control or the control panel, and select the **Network** menu.
- 5** Set **DHCP** to **Off** and enter the projector's IP Address, Subnet Mask, and Gateway Address values as necessary.
- 6** When you have finished making settings, save your settings and exit the menus.

Connecting to the Projector and Projecting Images

Follow these instructions to connect the device and the projector over a network, and to project images from your device's screen using the projector.

► Related Links

- "Connecting Epson Classroom Connect For the First Time" [p.12](#)
- "Connecting To Projector From the Connection History" [p.16](#)
- "Controlling the Projected Display" [p.18](#)

The first time you use Epson Classroom Connect, use one of the following methods to connect to your projector:

- Connect using a connection code.
- Connect using an IP address.
- Connect using a QR code.



If you enter the incorrect connection code 10 times in a row, the screen will lock. Wait for a while, and then try to enter again.

► Related Links


- "Connecting To Projector Using Connection Code" [p.12](#)
- "Connecting To Projector Using IP Address" [p.13](#)
- "Connecting to a Projector by Reading a QR Code" [p.14](#)

Connecting To Projector Using Connection Code

Enter the connection code displayed on the projector in Epson Classroom Connect to connect to the projector.

- 1** Turn on the projector.
- 2** Start Epson Classroom Connect.
- 3** Press the Home button on the projector remote control to display the Home screen.

- 4** Enter the four or six digit number displayed at the top of the projector's Home screen, and then tap **Connect**.

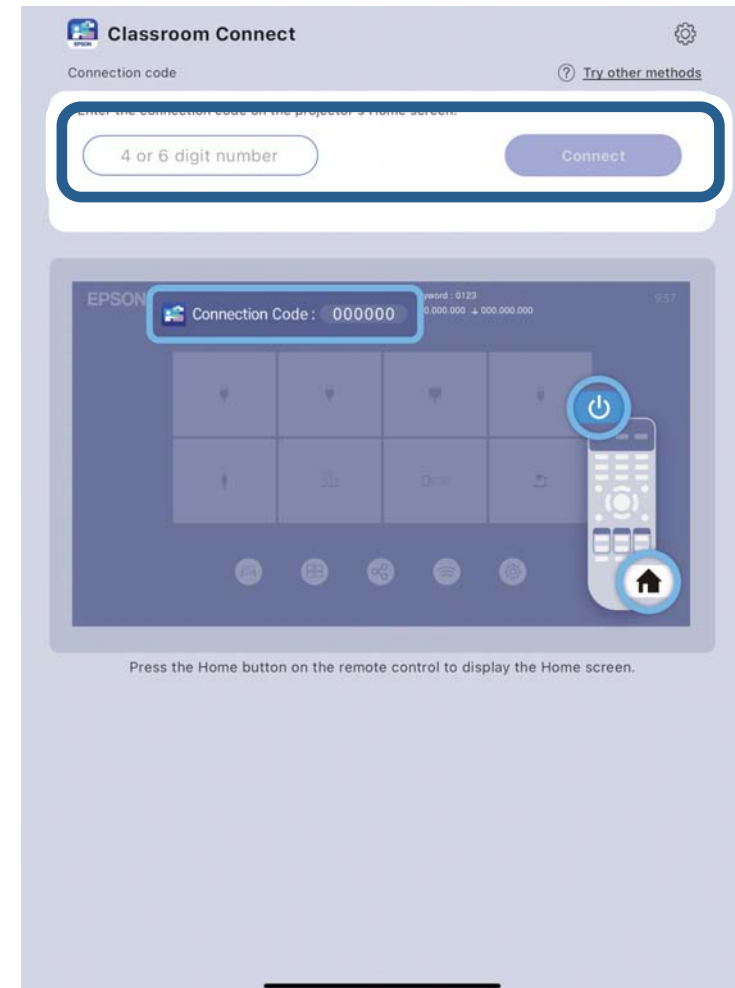

- 5** When the screen confirming that you want to start screen sharing is displayed, tap **Start Broadcast**.

► Related Links

- "Connection Screen" [p.26](#)
- "Settings Screen" [p.28](#)

Connecting To Projector Using IP Address

Enter the IP address displayed on the projector to Epson Classroom Connect if you cannot connect using a connection code or if you want to connect to a projector on a different network.




When the projector keyword is on, you will be prompted to enter a keyword when connecting from an IP address or when connecting from the history.

See your projector's *User's Guide* for instructions.

- 1** Turn on the projector.
- 2** Start Epson Classroom Connect.
- 3** Press the Home button on the projector remote control to display the Home screen.
- 4** Press **Try other methods** displayed on Epson Classroom Connect. Select **Connect using IP address** to display the IP address input screen.

- 5** Enter one of the IP address displayed at the top of the projector's Home screen, and then tap **Connect**.

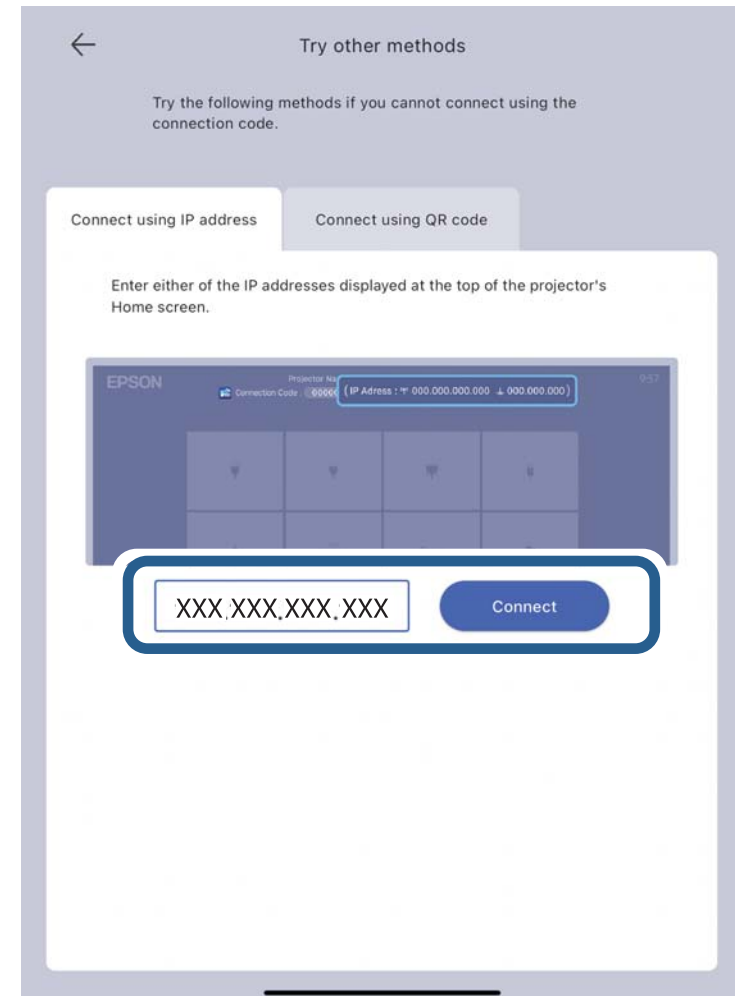

- 6** When the screen confirming that you want to start screen sharing is displayed, tap **Start Broadcast**.

► Related Links

- "Connection Screen" [p.26](#)
- "Connecting to the Projector Using Other Connection Methods" [p.27](#)
- "Settings Screen" [p.28](#)

Connecting to a Projector by Reading a QR Code

If you cannot connect using a connection code or if you want to connect to a projector on a different network, read the QR code displayed by the projector in Epson Classroom Connect.


- 1** Turn on the projector.
- 2** Start Epson Classroom Connect.
- 3** Press the Home button on the projector remote control to display the Home screen.
- 4** Select LAN as the input source to project on the projector's home screen.



The QR code can also be displayed on the projector's guide screen.

- 5** Tap **Try other methods** displayed in Epson Classroom Connect. Select **Connect using QR code** to display the QR code input screen.

- 6** Connect by reading the QR code displayed on the projector's LAN screen.

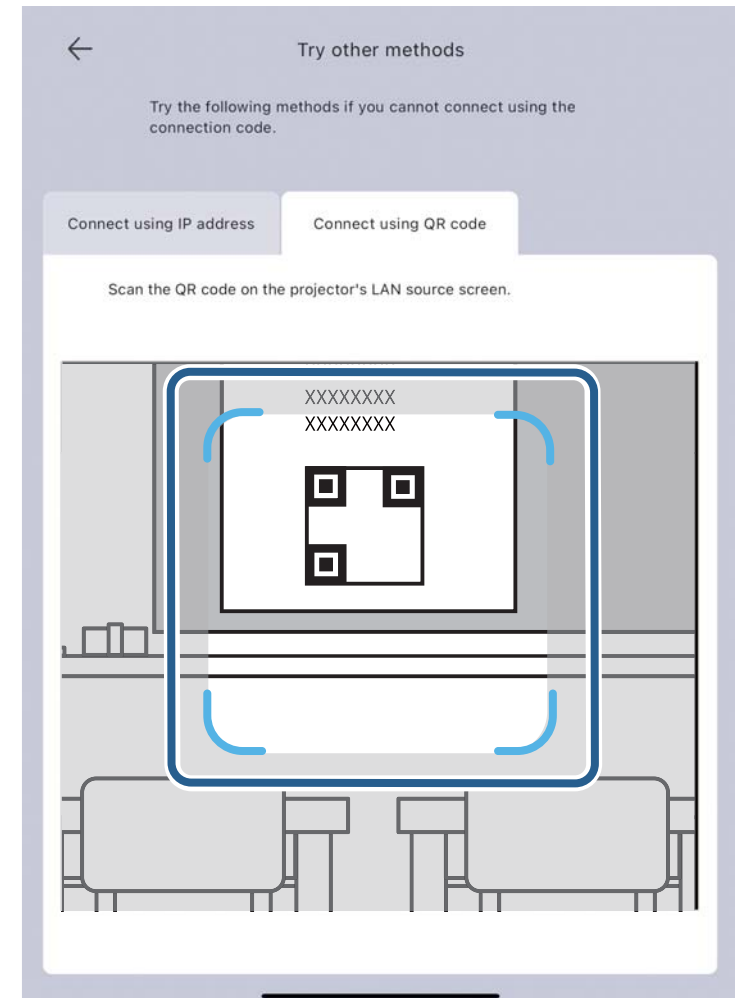

- 7** When the screen confirming that you want to start screen sharing is displayed, tap **Start Broadcast**.

►► Related Links

- "Connection Screen" [p.26](#)
- "Connecting to the Projector Using Other Connection Methods" [p.27](#)
- "Settings Screen" [p.28](#)

When you connect to a projector you have already connected to, you can connect to the projector via the connection history displayed in Epson Classroom Connect.




When the projector keyword is on, you will be prompted to enter a keyword when connecting from an IP address or when connecting from the history.

See your projector's *User's Guide* for instructions.

- 1** Turn on the projector.
- 2** Start Epson Classroom Connect.
- 3** Select the projector you want to connect to from **Connection History**.

- 4** Tap **Connect**.

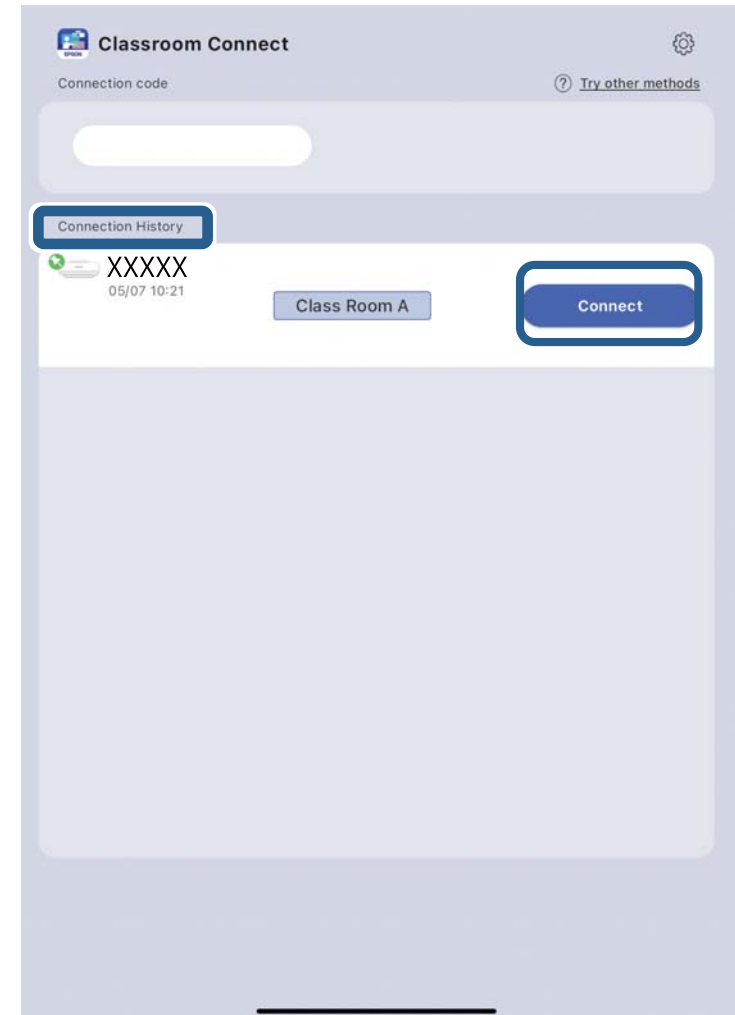

- 5** When the screen confirming that you want to start screen sharing is displayed, tap **Start Broadcast**.

►► Related Links

- "Pinning Frequently Used Connection Environments" [p.20](#)
- "Connection Screen" [p.26](#)
- "Settings Screen" [p.28](#)

You can control the projecting images by using the toolbar.


►► **Related Links**


- "Interactive Feature" [p.18](#)

Interactive Feature

You can annotate on the projected screen by using the interactive pen or your finger.

See your projector's *User's Guide* for instructions.

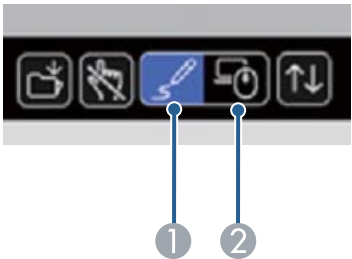

①	Switches to drawing mode. Set the Annotation Mode or Whiteboard Mode setting to On, and then write or draw on the projection surface.
②	Switches to computer interactive mode. Set the PC Interactivity setting to On to control the device using the interactive pen or your finger. <div>The Epson Classroom Connect app displays buttons to switch to computer interactive mode, but you cannot use a pen or your finger to operate the device on the projected screen.</div>

Useful Functions

Follow these instructions to use the additional Epson Classroom Connect functions.

▶▶ Related Links

- "Using Additional Functions" [p.20](#)

See the features of Epson Classroom Connect that will be useful in class.

►► Related Links

- "Creating a Nickname To the Projector" [p.20](#)
- "Pinning Frequently Used Connection Environments" [p.20](#)

Creating a Nickname To the Projector

Once you have connected, you can set a unique name (nickname) and manage the projector.

- 1** Start the Epson Classroom Connect.
- 2** Select the projector you want to give a nickname from **Connection History**.

►► Related Links

- "Connection Screen" [p.26](#)
- "Settings Screen" [p.28](#)

Pinning Frequently Used Connection Environments

You can pin the connection environment of a projector that you frequently connect to and fix the display position.

- 1** Start the Epson Classroom Connect.
- 2** Select the projector you want to fix the position in the **Connection History** and tap the pin icon.

When the pin icon turns yellow-green, the setup is complete.



You can pin it up to 4 projectors.

►► Related Links

- "Connection Screen" [p.26](#)
- "Settings Screen" [p.28](#)

Solving Problems

See the following sections to check for solutions to problems you encounter when using Epson Classroom Connect.

►► Related Links

- "Solving Network Connection Problems" [p.22](#)
- "Solving Problems During Projection" [p.23](#)

Try these solutions depending on your network environment.

► Related Links

- "Solutions When You Cannot Connect to the Internet After Connecting to the Projector" [p.22](#)
- "Solutions When You Cannot Connect Using a Connection Code" [p.22](#)

- "Connecting To Projector Using IP Address" [p.13](#)
- "Connecting to a Projector by Reading a QR Code" [p.14](#)
- "Connection Screen" [p.26](#)

Solutions When You Cannot Connect to the Internet After Connecting to the Projector

When connecting the projector in Simple AP mode, you may not be able to connect to the Internet.

Make sure the projectors are connected to a wired LAN or wireless LAN access point.

► Related Links

- "Setting Up a Projector when Connecting by Wired LAN" [p.9](#)
- "Setting Up a Projector when Connecting by Wireless LAN" [p.9](#)

Solutions When You Cannot Connect Using a Connection Code

Try one of the following if you cannot connect using a connection code.

- Enter the IP address into the Epson Classroom Connect app and connect.
Enter one of the IP addresses displayed at the top of the projector's Home screen.
- Scan the QR code with the Epson Classroom Connect app and connect.
Connect by reading the QR code displayed on the projector's LAN screen.

► Related Links

- "Connecting To Projector Using Connection Code" [p.12](#)

Try these solutions depending on your situation.

► Related Links

- "Solutions When You Cannot Connect Projectors (Wireless)" [p.23](#)
- "Solutions When You Cannot Connect Projectors (Wired)" [p.23](#)
- "Solutions When the Projected Image Does Not Move Smoothly" [p.24](#)
- "Solutions When Audio is Not Played Properly" [p.24](#)

Solutions When You Cannot Connect Projectors (Wireless)

When you cannot connect the device and the projector over a wireless network, try the following solutions. If you cannot solve the problem, contact your network administrator.

- Check the status of the external devices used for the network connection or the projector's setting environment.
 - Connect the specified wireless LAN unit to the projector securely, if necessary. See your projector's *User's Guide* for details.
 - Check for any obstacles between the access point and the device or projector, and change their position to improve communication. Sometimes the indoor environment prevents the projector from being found in a search.
- Make sure that the access point and the device or projector are not too far apart. Move them closer together and try to connect again.
- Check for interference from other equipment, such as a Bluetooth device or microwave. Move the interfering device farther away or expand your wireless bandwidth.
- Set the radio strength for the network devices to the maximum.
- Set the IP address, the subnet mask, and the gateway address for the access point correctly.

- Make sure the wireless LAN system of the access point supports the projector's wireless LAN system.
- Check the projector's network settings.
 - Set the device, the access point, and the projector to the same SSID.
 - Set the IP address, the subnet mask, and the gateway address for the projector correctly.
 - Turn on the wireless LAN setting, if necessary.
 - Set the wireless LAN system to meet the standards supported by the access point.
 - When you enable the security setting, set the same passphrase for the access point, the device, and the projector.
 - Close network settings on the projector.
- Check the device's network settings.
 - Make sure you are using a device that can connect to a wireless LAN.
 - Turn on the wireless LAN setting, if necessary.
 - Connect to the same access point to which the projector is connected.
- Set connection permission at the access point to allow projectors to connect if any functions that block connections, such as MAC Address restrictions and port restrictions, are set to the access point.
- Check the software settings.
 - If connection to the projector using the connection code fails, select **Try other methods** from this screen.

Solutions When You Cannot Connect Projectors (Wired)

When you cannot connect the device and the projector over a wired network, try the following solutions. If you cannot solve the problem, contact your network administrator.

- Connect the network cable securely.
- Check the projector's network settings.
 - Set the IP address, the subnet mask, and the gateway address for the projector correctly.
 - Close network settings on the projector.
- Check the device's network settings.
 - Turn on the wireless LAN setting, if necessary.
- Check the software settings.
 - If connection to the projector using the connection code fails, select **Try other methods** from this screen.

Solutions When the Projected Image Does Not Move Smoothly

If the projected image freeze or does not move smoothly, try the following solutions.

- Select the **Use Bandwidth** you want to use from the setting.
- Connect the device and the projectors using LAN cables.

Solutions When Audio is Not Played Properly

If the audio output from the projector is interrupted or there is a large delay between the image and audio of the projected image, adjust the A/V Sync setting of the projector.

See your projector's *Projector Manual Update Information* or *User's Guide* for details.


Screen Summary

See these sections for more information about the Epson Classroom Connect screens.

►► Related Links

- "Connection Screen" [p.26](#)
- "Connecting to the Projector Using Other Connection Methods" [p.27](#)
- "Settings Screen" [p.28](#)

When you start the Epson Classroom Connect, the select connection screen is displayed.

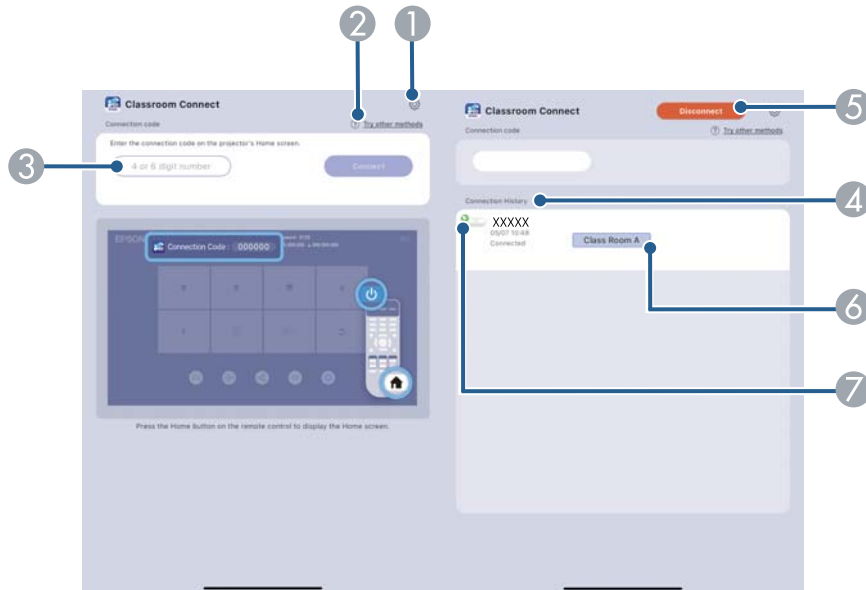



►► Related Links

- "Connecting To Projector Using Connection Code" [p.12](#)
- "Connecting To Projector Using IP Address" [p.13](#)
- "Connecting to a Projector by Reading a QR Code" [p.14](#)
- "Connecting To Projector From the Connection History" [p.16](#)
- "Creating a Nickname To the Projector" [p.20](#)
- "Pinning Frequently Used Connection Environments" [p.20](#)

①	Opens the Settings screen.
②	Allows you to select another connection method if connecting to the projector using the connection code fails.
③	Enter the connection code (four or six digit number) displayed at the top of the projector's Home screen.
④	Displays the projectors that you have connected to in the past.
⑤	If you press this button while connected to a projector, the connection will be disconnected.
⑥	Enter a nickname to manage your projector.
⑦	Frequently used projectors can be pinned to the top of the connection history. Tap the pin again to unpin it. You can pin up to four projectors.


If connection to the projector using the connection code fails, select other connection method from this screen.

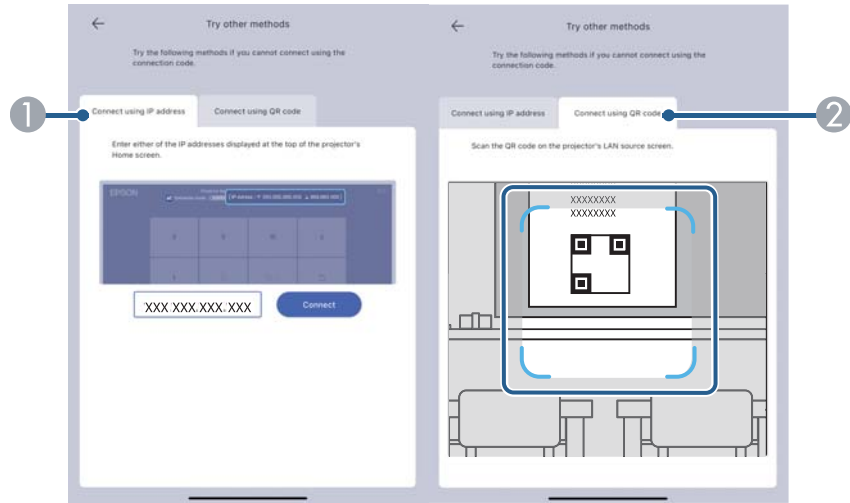

①	Enter one of the IP address (wired or wireless) displayed at the top of the projector's Home screen, and then connect the projector.
②	Connect by reading the QR code displayed on the projector's LAN screen. <div> The QR code can also be displayed on the projector's guide screen.</div>


►► **Related Links**

- "Connection Screen" [p.26](#)
- "Connecting To Projector Using IP Address" [p.13](#)
- "Settings Screen" [p.28](#)

Tap the gear icon  in the connection screen to display the settings screen.



The settings can be changed without connecting to a projector.

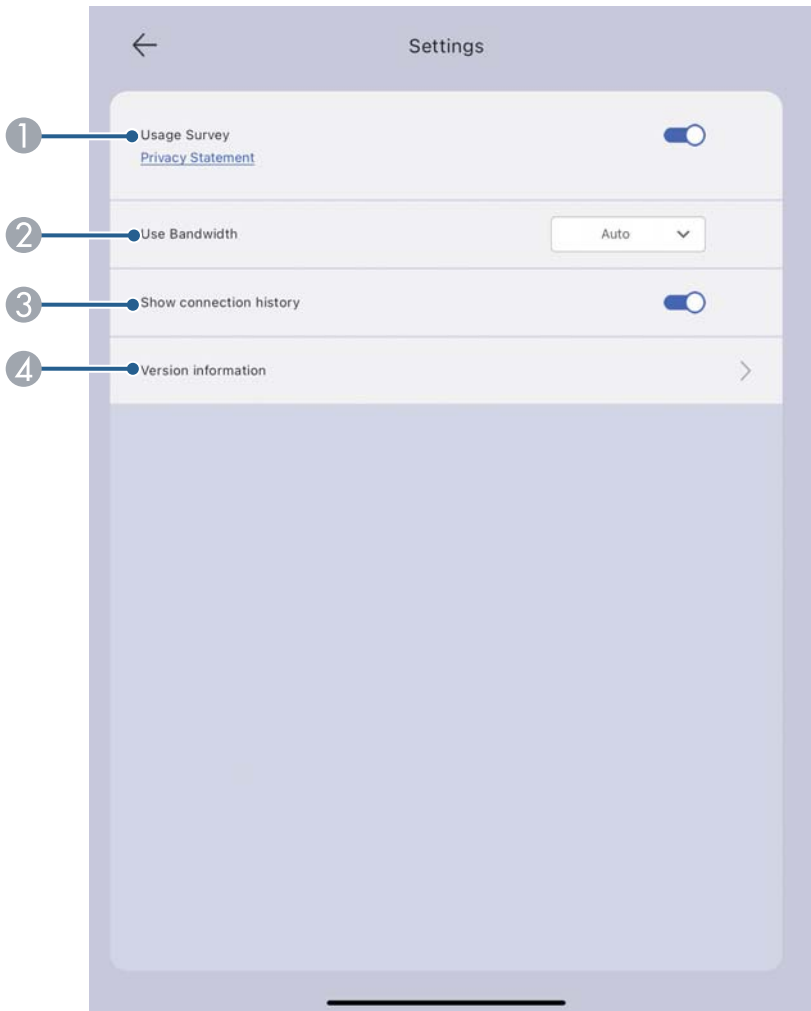

①	Turn this on to allow Epson to acquire application usage information.
②	Controls the bandwidth for the data transfer. When you select a narrower bandwidth, the projected image quality may decline but the network load is reduced.
③	Switch between displaying/hiding the connection history for previously connected projectors.
④	Displays Epson Classroom Connect version information.

▶▶ **Related Links**

- "Connection Screen" [p.26](#)
- "Connecting to the Projector Using Other Connection Methods" [p.27](#)

Appendix

See these sections to learn more about Epson Classroom Connect.

►► Related Links

- "Uninstalling the Epson Classroom Connect" [p.30](#)
- "Limitations" [p.31](#)
- "General Notes" [p.32](#)

Follow the instructions below to uninstall Epson Classroom Connect.

- 1** Turn on your device.
- 2** Tap and hold the Epson Classroom Connect icon.
- 3** Tap **Remove App** or the delete icon displayed in the top left corner of the app icon.
- 4** When the confirmation screen is displayed, tap **Delete**.
- 5** Tap **Finish**.

Check these sections for restrictions applied when projecting device images while using Epson Classroom Connect. Check the following.

► **Related Links**

- "Connection Limitations" [p.31](#)

Connection Limitations

Note the following limitations when using the Epson Classroom Connect.

- If the transmission speed of the wireless LAN is low, the network might be cut off unexpectedly.
- There are times when the image on the device screen and the image projected by the projector may not match exactly.
- Movies are not played as smoothly as they are on a device

Check these sections for important notices.

» **Related Links**

- "Copyright Notice" [p.32](#)
- "Trademarks" [p.32](#)
- "Copyright Attribution" [p.32](#)

Copyright Notice

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice. Illustrations in this guide and the actual projector may differ.

Trademarks

iPad, iPadOS, and iOS are registered trademarks of Apple Inc.
The App Store is a service mark of Apple Inc.

"QR Code" is a registered trademark of DENSO WAVE INCORPORATED.

Software Copyright: This product uses free software as well as software to which this company holds the rights.

Copyright Attribution

This information is subject to change without notice.

© 2025 Seiko Epson Corporation

2025.6 EN